

**CODE LOCATIONS:** 1962-65, top front center of block. 1966-67 plate located on left front door hinge pillar 1968-73 top left of instrument panel pad, visible through windshield. 1966-73 5th digit on vehicle Identification Plate is eng. code.

ENGINE CODE										ENGINE				ENGINE CODE										ENGINE			
1973	1972	1971	1970	1969	1968	1967	1966	1965		CYL.	C.I.D.	BBL.	HP.	1973	1972	1971	1970	1969	1968	1967	1966	1965		CYL.	C.I.D.	BBL.	HP.
	K									V-8	360	2V	175		M									V-8	400	2V	190
										V-8	361	2V	265									A-413		V-8	413	4V	340, 360
						G	G	A-383		V-8	383	2V	270											V-8	413	8V	390
	L									V-8	383	2V	275		T									V-8	440	4V	230
		L	G	G						V-8	383	2V	290		T									V-8	440	4V	275
										V-8	383	2V	305			T								V-8	440	4V	335
										V-8	383	4V	300				T	K	K	K	J			V-8	440	4V	350
	N							A-383		V-8	383	4V	315		U									V-8	440	4VHP	280
						H	G			V-8	383	4V	375									J		V-8	440	4V HP	365
		I	H	H						V-8	383	4V	330			U								V-8	440	4V HP	370
		N								V-8	383	4V HP	365				U	L	L	L				V-8	440	4V HP	375
M										V-8	400	2V	185														

DODGE

**CODE LOCATIONS:** 6 cyl.—1962-65, top right side of block. V-8—1962-65 273, 318 eng. top left front of block. 1962-65 361, 383, 413, 426 eng. top front center of block. 1966-67 plate located on left front door hinge pillar. 1968-73, top left of instrument panel pad, visible through windshield. 1966-73- 5th digit on Vehicle Identification Plate is eng. code.

ENGINE CODE										ENGINE				ENGINE CODE										ENGINE			
1973	1972	1971	1970	1969	1968	1967	1966	1965		CYL.	C.I.D.	BBL.	HP.	1973	1972	1971	1970	1969	1968	1967	1966	1965		CYL.	C.I.D.	BBL.	HP.
							A	A-170		6	170	1V	101							H	G			V-8	383	4V	325
				A	A	A				6	170	1V	115	V-38			L	H	H			A-383		V-8	383	4V	330
B										6	198	1V	95				N	H						V-8	383	4V HP	335
	B									6	198	1V	100	M										V-8	400	2V	185
		B	B							6	198	1V	125		M									V-8	400	2V	190
C										6	225	1V	105		P									V-8	400	4V	255
		C								6	225	1V	110	P										V-8	400	4V	260
			C	C	B	B	B	A-225		6	225	1V	145			T								V-8	440	4V	230
						D	D	A-273		V-8	273	2V	180, 190	T										V-8	440	4V	275
						D	D			V-8	273	2V	190	U										V-8	440	4V H.P.	275
						E	D	A-273		V-8	273	4V	235		U									V-8	440	4V HP	280
G	G									V-8	318	2V	150		V									V-8	440	3-2V	330
			G	G	F	F	F	A-318		V-8	318	2V	230									A-413		V-8	413	4V	340
H	H									V-8	340	4V	240									A-426		V-8	426	4V	365
		H	H	P	P					V-8	340	4V	275										H	V-8	462	4V	415
		J								V-8	340	6V	275											V-8	426	4V	425
K										V-8	360	2V	170			R	R	J	J	J				V-8	426	8V	425
										V-8	360	2V	175				T	K	K	K	J			V-8	440	4V	350
	K									V-8	360	2V	255											V-8	440	4V	335
							F	A-361		V-8	361	2V	265				U	L	L	L				V-8	440	4V HP	375
			L	L	G	G	G	A-383		V-8	383	2V	270, 290											V-8	440	4V HP	370
										V-8	383	2V	305					V						V-8	440	6V	390
										V-8	383	4V	300											V-8	440	6V	385

