
GROUP 2.000

CHASSIS

ELECTRICAL SYSTEM

ILLUSTRATION INDEX

Description	Page
STARTING MOTOR CHARTS	CHT 1- 7
DELCOTRON CHARTS	CHT 1- 9
DISTRIBUTOR CHARTS	CHT 1-17
1967-68 ELECTRICAL PARTS — FRONT END WIRING AND ENGINE COMPARTMENT	1- 3

STARTING MOTORS


LISTED BELOW ARE STARTING MOTOR ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts

PRODUCTION NO.	SERVICE NO.	APPLICATION	PAGE NO. CHART
1108329	1108329	1967-69 6 Cyl. Eng.	2-3
1108328	1108224	1967-68 8 Cyl./2 BC/Eng.	4-5
1108335	1108383	1967-69 8 Cyl./4 BC/Eng.	2-3
1107293	1108498	1969 8 Cyl./2 BC/Eng.	2-3
1108439	1108366	1970 6 Cyl. Eng.	2-3-6-7
1108434	1108224	1970 350 Eng.	2-3
1108435	1108435	1970 400 Eng. — EXC RAM AIR	2-3
1108436	1108225	1970 400 Eng. W/RAM AIR	4-5
1108365	1108366	1971-74 6 Cyl. Eng.	4-5
1108445	1108498	1971 350 Eng.	4-5
1108446	1108225	1971 400 & 455 Eng. — EXC HO	4-5
1108498	1108224	1972-74 350 Eng.	4-5
1108436	1108225	1971-72 455 HO Eng.	4-5
1108495	1108225	1972 400 & 455 Eng. — EXC HO	4-5
1108500	1108225	1973-74 400 & 455 Eng. EXC S.D.	4-5
1108495	1108225	1973 455 S.D. Eng.	4-5
1108500	1108225	1974 455 S.D. Eng.	4-5
1108366	1108366	1975 6 Cyl. Eng. ST	6-7
1108429	1108429	1975 6 Cyl. Eng. AT	6-7
1108758	1108758	1975 350 Eng.	6-7
1108759	1108759	1975 400 Eng.	6-7
1108774	1108774	1976 6 Cyl. Eng. ST	6-7
1108778	1108778	1976 6 Cyl. Eng. AT	6-7

1967-70 STARTING MOTOR COMPONENT PARTS

(FOR STARTING MOTOR ASSY. APPLICATION REFER TO STARTING MOTOR CHART PAGE 1)

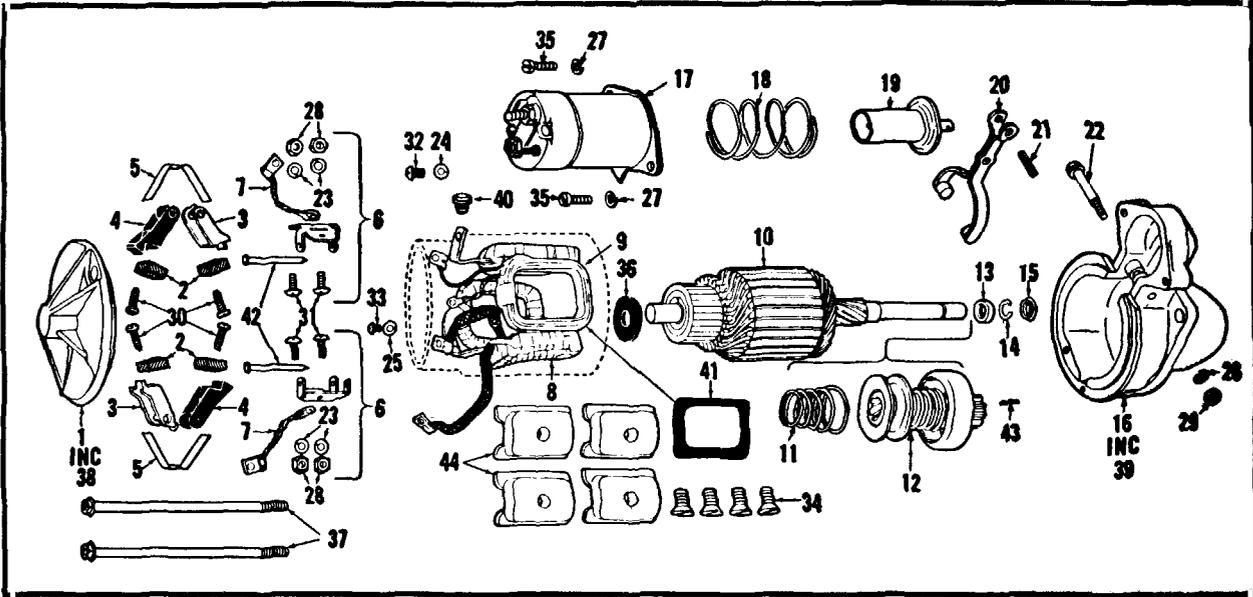

MAJOR PARTS

Starting Motor Assembly Number	Frame C.E.	Brush	Holder Ground	Holder Insul.	Spring Brush	Support Package	Lead Ground	Coil	Coil Shunt	Armature	Spring Assist
	1	2	3	4	5	6	7	8	9	10	11
1108498	1928966	1906945	1940477	1926618	1926622	1928015	1900864	1935128	1935131	1955937	-
1108328	"	"	"	"	"	"	"	"	"	"	-
1108329	"	"	"	"	"	"	"	1967968	-	1966228	-
1108335	"	"	"	"	"	"	"	1965730	-	1940624	-
1108434	"	"	"	"	"	"	"	1935128	1935131	1971568	-
1108435	"	"	"	"	"	"	"	1965730	-	1970548	-
1108436	"	"	"	"	"	"	"	"	-	"	-
1108439	"	"	"	"	"	"	"	1967968	-	1971568	-

Starting Motor Assembly Number	Drive Assembly	Collar Stop	Ring Retaining	Collar Thrust	Housing Drive	Switch	Spring Plunger	Plunger	Lever Shift	Pin Lever	Stud Lever
	12	13	14	15	16	17	18	19	20	21	22
1108498	1954842	1927849	1927848	1927850	1969156	1114356	1958679	1941113	1951567	456652	1945804
1108328	"	"	"	"	"	"	"	"	"	"	"
1108329	"	"	"	"	1965554	"	"	"	"	"	"
1108335	"	"	"	"	1969156	"	"	"	"	"	"
1108434	"	"	"	"	801227	"	"	"	801433	"	"
1108435	"	"	"	"	"	"	"	"	"	"	"
1108436	"	"	"	"	"	1114348	"	"	"	"	"
1108439	"	"	"	"	1968122	"	"	"	1951567	"	"



1967-70 STARTING MOTOR COMPONENT PARTS

MINOR PARTS


KEY	DESCRIPTION	ASSEMBLIES							
		1108445	1108328	1108329	1108335	1108434	1108435	1108436	1108439
23	LOCKWASHER, Brush Holder Support Screw	453435	*	*	*	*	*	*	*
24	LOCKWASHER, Field Lead Screw—To Switch	121801	*	*	*	—	—	—	—
25	LOCKWASHER, Field Lead Screw—To Ground	—	—	—	—	—	—	—	—
26	LOCKWASHER, Shift Lever Stud	—	—	—	—	—	—	—	—
27	LOCKWASHER, Switch Attach. Screw	9421423	*	*	*	*	*	*	*
28	NUT, Support Screw—Pkg. of 100	5721822	*	*	*	*	*	*	*
29	NUT, Shift Lever Stud	—	—	—	—	—	—	—	—
30	SCREW, Brush	448015	*	*	*	*	*	*	*
31	SCREW, Support	274738	*	*	*	*	*	*	*
32	SCREW, Field Lead	—	9427815	9427815	9427815	9427815	9427815	9427815	9427815
33	SCREW	—	—	—	—	—	—	—	—
34	SCREW, Pole Shoe	1970469	*	*	*	*	*	*	*
35	SCREW, Switch Attach.	132255	*	*	*	—	—	—	—
36	WASHER, Brake—C.E.	818265	*	*	*	*	*	*	*
37	BOLT, Thru—With Extension	1941111	*	—	—	*	*	*	—
	BOLT, Thru—Less Extension	1939970	*	*	*	*	*	*	*
39	BUSHING, D.E.	1923907	*	*	*	1932190	1932190	1932190	—
40	GROMMET (In Field Frame)	1966391	*	*	1965047	*	1846097	1946097	*
41	INSULATOR, Field Coil	1927853	*	*	—	*	—	—	*
42	PIN, Support	1966923	1938058	1938058	*	1938058	1938058	1938058	*
43	PIN, Dowel—D.E.	817313	*	*	*	*	*	*	*
44	SHOE, Pole	1931129	*	*	810601	*	810601	810601	*
	RING, Shaft Lever Retaining	9416878	*	*	*	*	*	*	*

SOLENOID SWITCH PARTS	SWITCH ASSEMBLY	
	1114348	1114356
STUD, Term (3/8-16) — Motor	—	1950120
STUD, Term (8-32) — Switch	822205	*
CLIP, Term	—	1937381
COVER	—	1963525
GASKET, Cover	—	1966034
WASHER, Cover Screw	—	1923935
SCREW, Cover	—	453468
STUD, Term (8-32) — Resistor	822205	*
CONTACT, Term (8-32)	—	1935645
CONTACT & PUSH ROD	1956226	*
WASHER, Term Stud (3/8-16) Rubber	—	1950064
WASHER, Term Stud (3/8-16) Plain	3765135	*
WASHER, Term Stud (8-32) Rubber	—	1950071
WASHER, Term Stud (8-32) Plain	—	1914476
NUT, Term Stud (3/8-16)	1904419	*
SPRING, Contact Return	1853342	*
SCREW, Field Lead To Term (10-32)	9427815	*
SPRING, Plunger Return	1958679	*

* — PART NUMBER SAME AS NUMBER IN FIRST COLUMN

1971-74 STARTING MOTOR COMPONENTS PARTS

(FOR STARTING MOTOR ASSY. APPLICATION REFER TO STARTING MOTOR CHART PAGE 1)

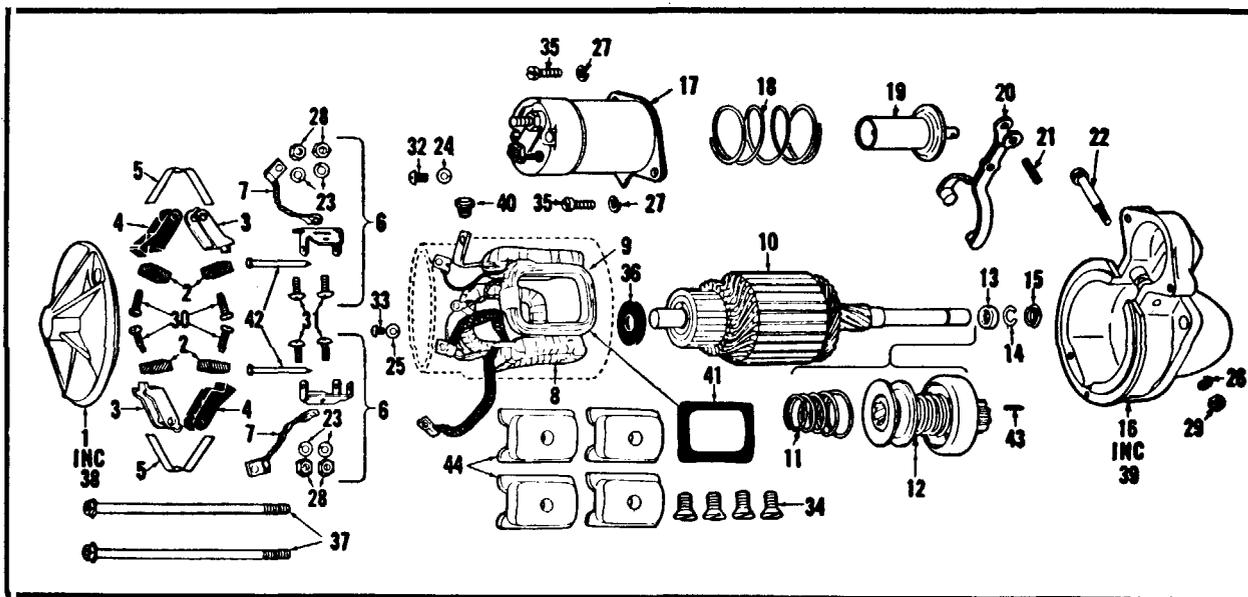
MAJOR PARTS

Starting Motor Assembly Number	Frame C.E.	Brush	Holder Ground	Holder Insul.	Spring Brush	Support Package	Lead Ground	Coil Field	Coil Shunt	Armature	Spring Assist
	1	2	3	4	5	6	7	8	9	10	11
1108365	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1967968	—	1966228	—
1108366	"	"	"	"	"	"	"	"	—	"	—
1108446	"	"	"	"	"	"	"	1877306	—	1970548	—
1108495	"	"	"	"	"	"	"	1877306	—	"	—
1108498	"	"	"	"	"	"	"	1935128	1935131	1971568	—
1108500	"	"	"	"	"	"	"	1877306	"	1970548	—


Starting Motor Assembly Number	Drive Assembly	Collar Stop	Ring Retaining	Collar Thrust	Housing Drive	Switch	Spring Plunger	Plunger	Lever Shift	Pin Lever	Stud Lever
	12	13	14	15	16	17	18	19	20	21	22
1108365	1954842	1927849	1927848	1927850	1968122	1114356	1958679	1941113	1951567	456652	1945804
1108366	"	"	"	"	"	"	"	"	"	"	"
1108446	"	"	"	"	801227	"	"	"	801433	"	"
1108495	"	"	"	"	"	1114378	"	"	"	"	"
1108498	"	"	"	"	"	1114379	"	"	"	"	"
1108500	"	"	"	"	"	1114356	"	"	"	"	1945804

1971-74 STARTING MOTOR COMPONENTS PARTS
MINOR PARTS

KEY	DESCRIPTION	ASSEMBLIES					
		1108365	1108366	1108446	1108495	1108498	1108500
23	LOCKWASHER, Brush Holder Support Screw	453435	*	*	*	*	*
24	LOCKWASHER, Field Lead Screw—To Switch	—	—	—	—	—	—
25	LOCKWASHER, Field Lead Screw—To Ground	—	—	—	—	—	—
26	LOCKWASHER, Shift Lever Stud	—	—	—	—	—	—
27	LOCKWASHER, Switch Attach. Screw	9421423	*	*	*	*	*
28	NUT, Support Screw—Pkg. of 100	5721822	*	*	*	*	*
29	NUT, Shift Lever Stud	1926640	—	—	—	—	—
30	SCREW, Brush	448015	*	*	*	*	*
31	SCREW, Support	274738	*	*	*	*	*
32	SCREW, Field Lead	9427815	*	*	*	*	*
33	SCREW	—	—	—	—	—	—
34	SCREW, Pole Shoe	1970469	*	*	*	*	*
35	SCREW, Switch Attach.	132255	*	—	—	—	—
36	WASHER, Brake—C.E.	818265	*	*	*	*	*
37	BOLT, Thru—With Extension	—	—	1941111	1941111	1941111	1941111
	BOLT, Tru—Less Extension	1941070	1939970	1939970	1939970	1939970	1939970
39	BUSHING, D.E.	1923907	*	1932190	1932190	1932190	1932190
40	GROMMET (In Field Frame)	1966391	*	1965047	1846097	*	1946097
41	INSULATOR, Field Coil	1927853	*	—	—	—	—
42	PIN, Support	1966923	*	1938058	1938058	1938058	1938058
43	PIN, Dowel—D.E.	817313	*	*	*	*	*
44	SHOE, Pole	1931129	*	*	*	*	810601
	RING, Shaft Lever Retaining	274676	*	*	*	*	*

SOLENOID SWITCH PARTS	1114356	1114378	1114379
STUD, Term (3/8-16) — Motor	1950120	1949890	—
STUD, Term (8-32) — Switch	822205	*	1950069
CLIP, Term	1937381	*	*
COVER	1963525	—	6258043
GASKET, Cover	1966034	—	—
WASHER, Cover Screw	1923935	—	—
SCREW, Cover	453468	—	453468
STUD, Term (8-32) — Resistor	822205	*	1935644
CONTACT, Term (8-32)	1935645	*	*
CONTACT & PUSH ROD	1956226	*	*
WASHER, Term Stud (3/8-16) Rubber	1950064	—	—
WASHER, Term Stud (3/8-16) Plain	3765135	*	—
WASHER, Term Stud (8-32) Rubber	1950071	—	—
WASHER, Term Stud (8-32) Plain	1914476	—	—
NUT, Term Stud (3/8-16)	1904419	*	—
SPRING, Contact Return	1853342	*	*
SCREW, Field Lead To Term (10-32)	9427815	—	—
SPRING, Plunger Return	1956679	—	—

1975-76 STARTING MOTOR COMPONENTS (REFER TO GROUP 2.041 FOR APPLICATION ASSEMBLIES)

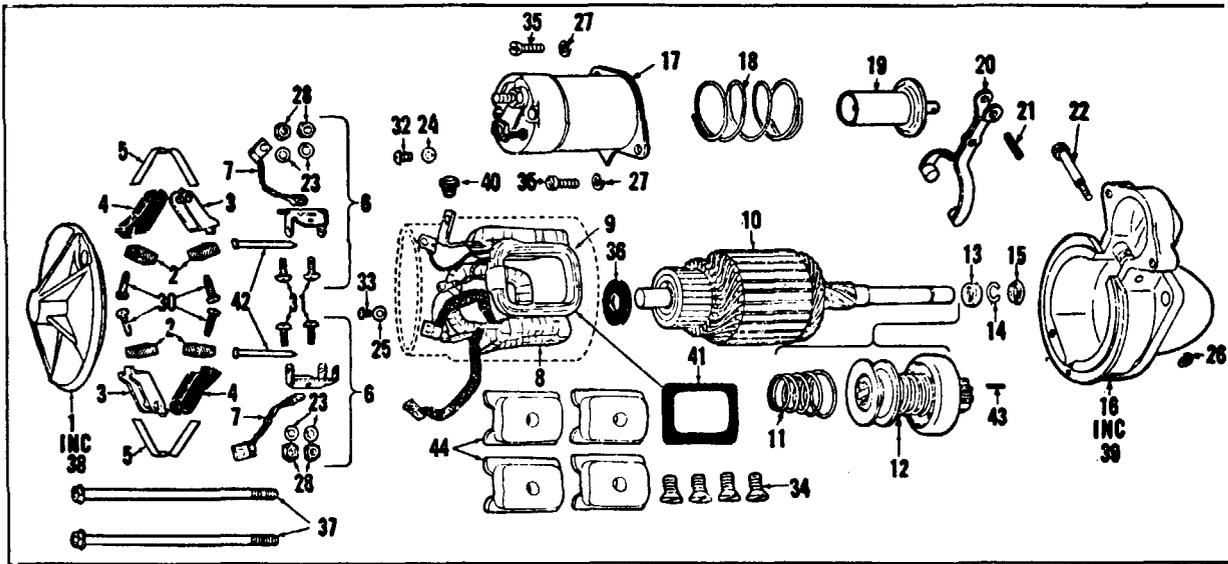

Illustrations are of Typical Parts only. For Parts not Illustrated or in Columns See Minor Parts Section.

Model	Frame C.E.	Brush	Holder Ground	Holder Insul.	Spring Brush	Support Package	Lead Ground	Field Coil Assembly	Coil Shunt	Armature	Spring Assist
Assembly	1	2	3	4	5	6	7	8	9	10	11
1108366	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1967968	—	1966228	—
1108429	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1965730	—	1970548	—
1108758	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1877291	1935131	1971568	—
1108759	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1877306	—	1970548	—
1108774	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1891314	—	1970548	—
1108778	1928966	1906945	1940477	1926618	1926622	1928015	1960864	1891314	—	1970548	—

Model	Drive Assembly	Collar Stop	Ring Retainer	Collar Thrust	Housing Drive	Switch	Spring Plunger	Plunger	Lever Shift	Pin Lever	Stud Lever
Assembly	12	13	14	15	16	17	18	19	20	21	22
1108366	1954842	1927849	1927848	1927850	1968122	1114356	1958679	1941113	1951567	455106	1945804
1108429	1954842	1927849	1927848	1927850	801188	1114356	1958679	1941113	801433	456652	1945804
1108758	1954842	1927849	1927848	1927850	801227	1114395	1958679	1941113	801433	455106	1945804
1108759	1954842	1927849	1927848	1927850	801227	1114395	1958679	1941113	801433	455106	1945804
1108774	1954842	1927849	1927848	1927850	1876881	1114395	1958679	1941113	801433	455106	1945804
1108778	1954842	1927849	1927848	1927850	801188	1114395	1958679	1941113	801433	455106	1945804

1975-76 STARTING MOTOR COMPONENTS

MINOR PARTS SECTION

KEY	DESCRIPTION	1108366	1108429	1108758	1108759	1108774	1108778
23	LOCKWASHER — Brush Holder Support Screw	453435	453435	453435	453435	453435	453435
24	LOCKWASHER — Field Lead Screw — To Switch	—	—	—	—	—	—
25	LOCKWASHER — Field Lead Screw — To Ground	—	—	—	—	—	—
26	LOCKWASHER — Shift Lever Stud	—	—	—	—	—	—
27	LOCKWASHER — Switch Attaching Screw	9421423	9421423	—	—	9421423	9421423
28	NUT — Brush Holder Support Screw	N.L.A.	N.L.A.	N.L.A.	N.L.A.	N.L.A.	N.L.A.
30	SCREW — Brush Attaching	N.L.A.	N.L.A.	N.L.A.	N.L.A.	N.L.A.	N.L.A.
31	SCREW — Brush Holder Support Attaching	274738	274738	274738	274738	274738	274738
32	SCREW — Field Lead Attaching — To Switch	9427815	9427815	9427815	9427815	9427815	9427815
33	SCREW — Field Lead Attaching — To Ground	—	—	—	—	—	—
34	SCREW — Pole Shoe	1970469	1970469	1968396	1968396	1968396	1968396
35	SCREW — Switch Attaching	132255	9413260	9413260	9413260	132255	132255
36	WASHER — Brake — C.E.	818265	818265	818265	818265	818265	818265
37	BOLT — Thru	1939970	1939970	—	—	1939970	1939970
37	BOLT — Thru (W/Extension)	—	1941111	1941111	1941111	—	—
38	BUSHING — C.E.	—	—	—	—	—	—
39	BUSHING — D.E.	1923907	1932190	1932190	—	1932190	1932190
40	GROMMET — In Field Frame	1966391	1965047	1966391	1846097	1966391	1966391
41	INSULATOR — Field Coil	1927853	—	1927853	—	—	1927853
42	PIN — Brush Holder	1966923	1966923	1966923	1966923	1938058	1938058
43	PIN — Dowel — D.E.	817313	817313	817313	817313	817313	817313
44	SHOE — Pole	1931129	1931129	1931129	810601	1931129	1931129

DELCOTRON

LISTED BELOW ARE DELCOTRON ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts

PRODUCTION NO.	SERVICE NO.	APPLICATION	CHART PAGE NO.
1100761	1100842	1967-69 6 Cyl. Eng. — STD.	3
1100781	"	1967-69 6 Cyl. Eng. W/P.S. — Exc. A.C.	3
1100760	1100694	1967-69 6 Cyl. Eng. W/A.C. — Exc. P.S.	3
1100745	"	1967-69 6 Cyl. Eng. W/A.C. — T/W P.S.	3
1100782	"	1967 6 Cyl. Eng. W/A.C. — T/W A.I.R.	3
1100704	1100842	1967-69 V-8 Eng. STD.	3
1100770	1100694	1967 V-8 Eng. W/A.C. — Exc. P.S.	3
1100768	"	1967 V-8 Eng. W/A.I.R.	3
1100700	"	1967 V-8 Eng. W/A.C. T/W P.S.	3
"	"	1968-69 V-8 Eng. W/A.C.	3
1100782	"	1969 55 Amp W/P.S.	3
1100830	1102849	1969 55 Amp — 400 Sports Option — W/A.C.	4
"	1102849	1969 55 Amp Self-Regulating Delcotron Option	4
1100832	1102848	1969 37 Amp — 400 Sports Option — Exc. A.C.	4
1100833	1102848	1969 42 Amp — 400 Sports Option	4
1100902	1102848	1970 37 Amp — 6 Cyl. Eng. — Exc. P.S. — Exc. A.C. — Exc. Electric Rear Window Defogger	4
"	1102848	1970 37 Amp — V-8 Eng. — Exc. C.S.I. — Exc. A.C. — Exc. Electric Rear Window Defogger	4
1100919	1102848	1970 37 Amp — 6 Cyl. Eng. W/P.S. — Exc. A.C.	4
1100903	1102849	1970 55 Amp — 6 Cyl. Eng. — Exc. P.S.	4
"	1102849	1970 55 Amp — V-8 Eng. W/C.S.I. T/W A.C. or Electric Rear Window Defogger	4
1100920	1102849	1970 55 Amp — 6 Cyl. Eng. W/P.S. T/W A.C.	4
1100911	1102849	1970 55 Amp — 6 Cyl. Eng. W/P.S. T/W Electric Rear Window Defogger	4
1100904	1102849	1970 61 Amp — V-8 Eng. W/A.C. T/W Electric Rear Window Defogger	4
1100927	1102848	1971-72 37 Amp — STD.	5
1100550	1102848	1971-72 37 Amp — 6 Cyl. Eng. W/P.S.	5
1100928	1102847	1971-74 55 Amp — All W/A.C. or Electrically Heated Rear Window	5
1101015	1101030	1971-74 80 Amp — All W/A.C. T/W Electrically Heated Rear Window	6
1100497	1102848	1973-74 37 Amp — 6 Cyl. Exc. H.D. Delcotron	7
1100927	1102848	1973-74 37 Amp — 8 Cyl. Exc. H.D. Delcotron or Air Cond. or Electric Rear Window Defogger	7

DELCOTRONS

LISTED BELOW ARE DELCOTRON ASSEMBLIES AND USAGES.

Refer To The Charts On The Following Pages For Component Parts.


PRODUCTION NO. — AMPS	SERVICE NO. — AMPS	APPLICATION	CHART PAGE NO.
1100497-37 AMP	1100543-42 AMP	1975 6 Cyl. Eng. Exc. Air Cond.	8
1102481-37 AMP	1100543-42 AMP	1975 8 Cyl. Eng. Exc. Air Cond.	8
1102482-55 AMP	1100554-63 AMP	1975 All W/Electric Defogger Exc. Air Cond.	8
1102482-55 AMP	1100554-63 AMP	1975 8 Cyl. Eng. W/Air Cond.	8
1102347-61 AMP	1100554-63 AMP	1975 6 Cyl. Eng. W/Air Cond.	8
1101027-80 AMP	1101019-80 AMP	1975 All — 80 Amp	8
1102491-37 AMP	1102848-42 AMP	1976 6 Cyl. Eng. Exc. Air Cond.	9
1102846-61 AMP	1102849-63 AMP	1976 6 Cyl. Eng W/Air Cond.	9
1102384-37 AMP	1102848-42 AMP	1976 8 Cyl. Eng. Exc. Air Cond., RR Window Defogger, HD Delcotron	9
1102385-55 AMP	1102849-63 AMP	1976 8 Cyl. Eng. W/RR Window Defogger Exc. Air Cond. or HD Delcotron	9
1102385-55 AMP	1102849-63 AMP	1976 8 Cyl. Eng. W/Air Cond. Exc. HD Delcotron	9
1101016-80 AMP	1101030-80 AMP	1976 All — 80 Amp	9



1967-69 DELCOTRON COMPONENT PARTS

(FOR THE FOLLOWING DELCOTRONS: 1100694, 1100700, 1100704, 1100745, 1100760, 1100761, 1100768, 1100770, 1100781, 1100782, 1100842)

For Delcotron Usage Refer To Delcotron Chart Page 1

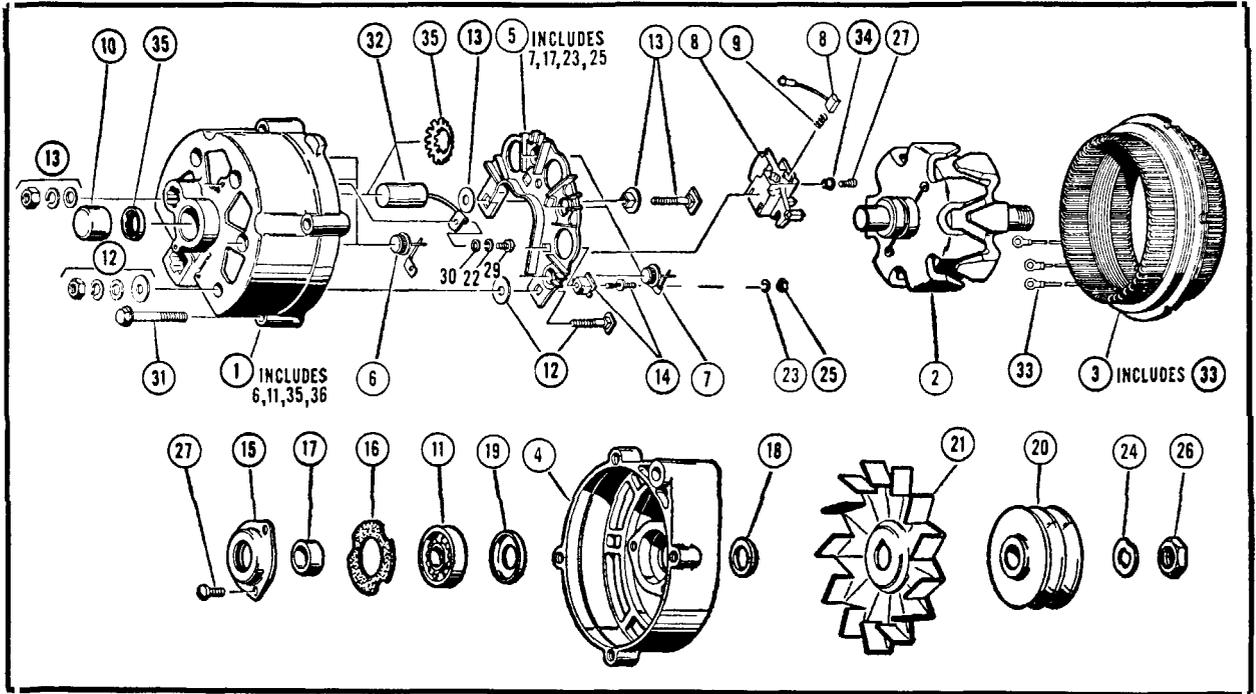


KEY	DESCRIPTION	PART NO.
1	FRAME, S.R.E. — Includes Key 32	800396
2	ROTOR	1958565
3	STATOR — For 1100694 - 700 - 745 - 760 - 770 - 782	1959531
	— For 1100704 - 761 - 768 - 781 - 842	1959381
4	FRAME, Drive End	1959917
5	HEAT SINK	1959828
6	DIODE, Negative	1959830
7	DIODE, Positive	1959829
8	BRUSH AND HOLDER	1964682
9	SPRING, Brush	1964117
10	BEARING, S.R.E.	9418076
11	BEARING, D.E.	5728798
12	TERMINAL, Battery	1959832
13	TERMINAL, Ground	1959833
14	TERMINAL, Diode Junction	1959834
15	RETAINER, Bearing	1971993
16	GASKET	1912008
17	COLLAR, Inside	1963139
18	COLLAR, Outside	1959991
19	SLINGER, Grease	1947344
20	PULLEY — See Data Section Group 2.274	—
21	FAN — For 1100700 - 704 - 745 - 760 - 761 - 768 - 770 - 781 - 782	1966990
22	LOCKWASHER, Capacitor Terminal	N.L.A.
23	LOCKWASHER, Diode Junction Terminal	N.L.A.
24	LOCKWASHER, Shaft Nut — D.E.	1941978
25	NUT, Diode Junction Terminal — Pkg. of 100	5721820
26	NUT, Shaft — D.E.	1915172
27	SCREW, Bearing Retainer Attaching	1965104
28	SCREW, Brush Holder Attaching	1957501
29	SCREW, Capacitor Terminal	1826031
—	WASHER, Capacitor Screw Insulator	1959523
30	WASHER, Capacitor Terminal Screw — Plain	815540
—	WASHER, Brush Holder Screw — Spring	1847933
31	BOLT, Thru	1956975
32	CAPACITOR	1959455
33	CLIP, Stator Lead Terminal	1846548
34	INSULATOR, Brush Holder Screw	—
—	INSULATOR, Capacitor Terminal Screw	1959389
35	RETAINER, S.R.E.	1959790
36	SPRING, Capacitor Retaining	1960750

1969-70 DELCOTRON COMPONENT PARTS

(FOR THE FOLLOWING DELCOTRONS: 1100543, 1100554, 1100830, 1100832, 1100833, 1100855, 1100884,
1100900, 1100902, 1100903, 1100904, 1100911, 1100919, 1100920)

For Delcotron Usage Refer To Delcotron Chart Page 1

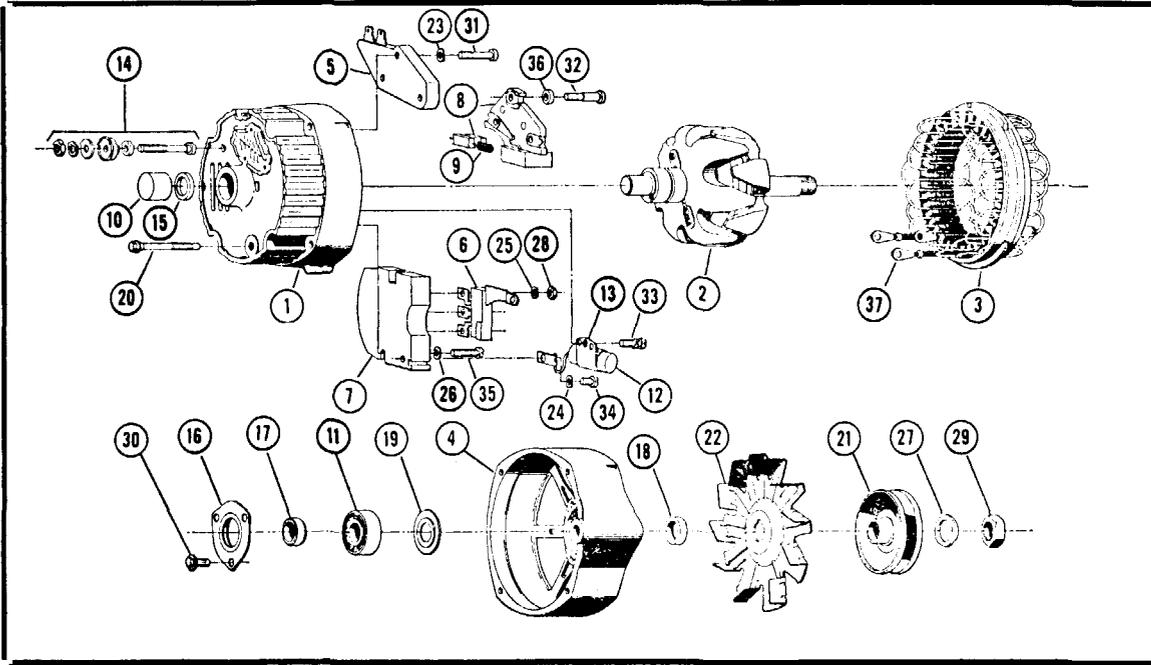


KEY	DESCRIPTION	PART NO.
1	FRAME, S.R.E. — Incl. Keys 10 & 15 — For 1100830 - 832 - 833 - 855	801309
	— For 1100543-554-884-900-902-903-904-911-919-920	1852101
2	ROTOR	1971990
3	STATOR — Includes Key 37	1971639
	— For all Exc. 1100543-832-833-900-902-919	1971986
	— For 1100543 - 832 - 833 - 900 - 902 - 919	800135
4	FRAME, D.E.	1116384
5	REGULATOR	1971528
6	DIODE, Trio	1875627
7	BRIDGE, Rectifier	801466
8	BRUSH AND HOLDER — Includes Key 9	1964117
9	SPRING, Brush	9418076
10	BEARING, S.R.E.	907998
11	BEARING, D.E.	1971411
12	CAPACITOR — For All — Exc. 1100911 - 919 - 920	801824
	— For 1100543 - 554 - 911 - 919 - 920	1869573
13	BRACKET, Capacitor	1971704
14	TERMINAL, Battery	1961323
15	SEAL, Bearing	1971993
16	RETAINER, Bearing — D.E.	1963139
17	COLLAR, Inside	1959991
18	COLLAR, Outside — For All — Exc. 1100911 - 919 - 920	1970474
	— For 1100911 - 919 - 920	800832
19	SLINGER, Grease	1956975
20	BOLT, Thru	—
21	PULLEY — See Data Section Group 2.274	1966990
22	FAN — For 1100830 - 832 - 902 - 903 - 904 - 911 - 919 - 920	N.L.A.
23	LOCKWASHER, Brush Holder Attach. Screw	N.L.A.
24	LOCKWASHER, Capacitor Lead Screw	N.L.A.
25	LOCKWASHER, Rectifier Bridge Nut	N.L.A.
26	LOCKWASHER, Rectifier Bridge Screw	1941978
27	LOCKWASHER, Shaft Nut — D.E.	S.S.
28	NUT, Rectifier Bridge	1915172
29	NUT, Shaft D.E.	1965104
30	SCREW, Bearing Retainer	1971519
31	SCREW, Brush Holder	1876681
32	SCREW, Brush Holder	S.S.
33	SCREW & LOCKWASHER, Capacitor Bracket — # 8 - 32 x 3/8	N.L.A.
34	SCREW, Capacitor Lead — For 1100884 - 900 - 902 - 903 - 904 - 911 - 914 - 920	5677852
35	SCREW, Rectifier Bridge	1970149
36	WASHER, Brush Holder Insul. Screw	1846548
37	CLIP, Stator Lead	S.S. — STANDARD STOCK

1971-74 DELCOTRON COMPONENT PARTS

FOR THE FOLLOWING DELCOTRONS: 1100543, 1100550, 1100554, 1100927, 1100928


For Delcotron Usage Refer To Delcotron Chart Page 1

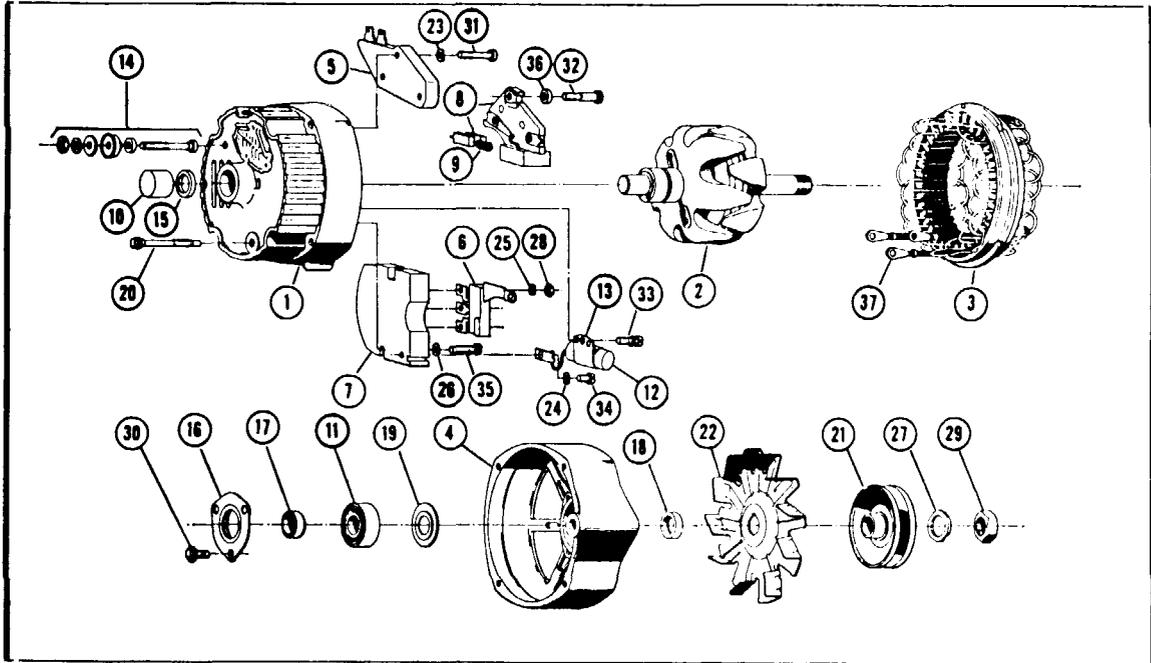

KEY	DESCRIPTION	PART NO.
1	FRAME, S.R.E. — Includes Key 10 & 15	1852101
2	ROTOR	1846657
3	STATOR — Includes Key 37 — For 1100543 — 500 — 927	1971986
	— For 1100554 — 928	1971639
4	FRAME, D.E.	800135
5	REGULATOR	1116387
6	DIODE, Trio	1971528
7	BRIDGE, Rectifier	1875627
8	BRUSH AND HOLDER — Includes Key 9	801466
9	SPRING, Brush	1964117
10	BEARING, S.R.E.	9427225
11	BEARING, D.E.	907998
12	CAPACITOR	801824
13	BRACKET, Capacitor	1869573
14	TERMINAL, Battery	1846900
15	SEAL, Bearing	1961323
16	RETAINER, Bearing	1971993
17	COLLAR, Inside	1963139
18	COLLAR, Outside — For 1100543 — 554	1959991
	— For 1100550 — 927 — 928	1970474
19	SLINGER, Grease	800832
20	BOLT, Thru	1956975
21	PULLEY — See Data Section Group 2.274	—
22	FAN — See Data Section Group 2.274	—
23	LOCKWASHER, Brush Holder Attach. Screw	N.L.A.
24	LOCKWASHER, Capacitor Lead Attach. Screw	—
25	LOCKWASHER, Rectifier Bridge Nut	N.L.A.
26	LOCKWASHER, Rectifier Bridge Screw	N.L.A.
27	LOCKWASHER, Shaft Nut — D.E.	1941978
28	NUT, Rectifier Bridge	453434
29	NUT, Shaft — D.E.	1915172
30	SCREW, Bearing Retainer	1965104
31	SCREW, Brush Holder — Ground	1971519
32	SCREW, Brush Holder — Insulator	1876681
33	SCREW & LOCKWASHER, Capacitor Bracket — #8-32 x 3/8	S.S.
34	SCREW, Capacitor Lead	—
35	SCREW, Rectifier Bridge — For 1100543 — 554	5677852
	— For 1100550 — 927 — 928	436698
36	WASHER, Brush Holder Insul. Screw — For 1100927 — 928 — 934	1970149
37	CLIP, Stator Lead	1864548
	S.S. — STANDARD STOCK	

GM FIREBIRD PARTS CATALOGUE

1971-74 DELCOTRON COMPONENT PARTS FOR THE FOLLOWING DELCOTRONS: 1101015, 1101019 For Delcotron Usage Refer To Delcotron Chart Page 1

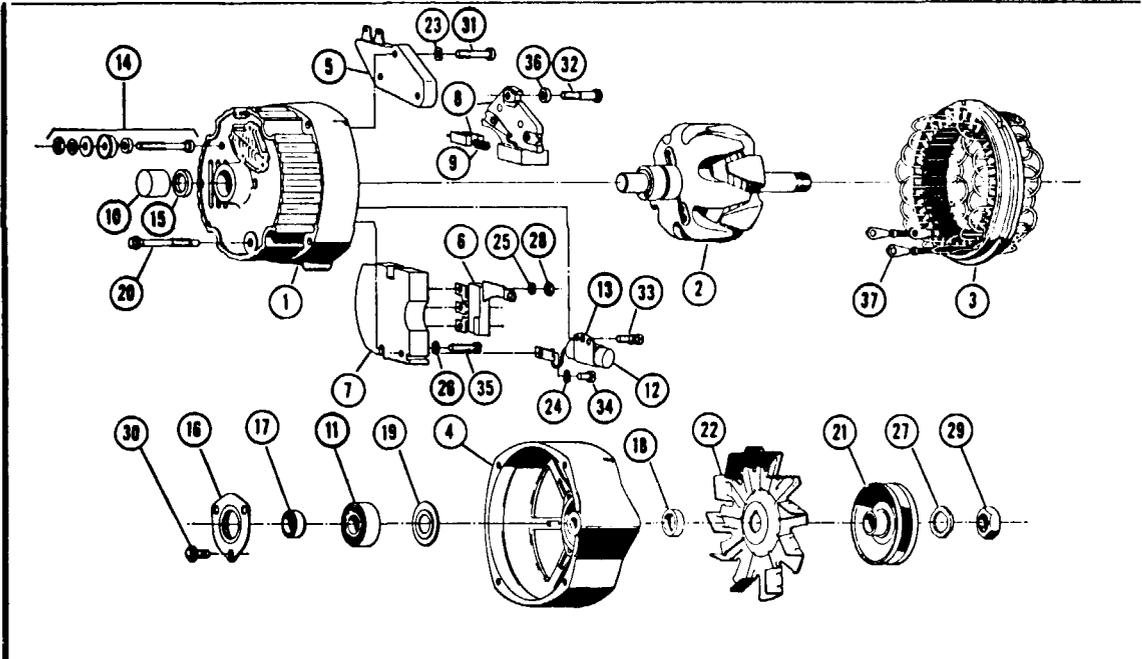


KEY	DESCRIPTION	PART NO.
1	FRAME, S.R.E. — Includes Key 10 & 15	801813
2	ROTOR	801792
3	STATOR — Includes Key 37	801818
4	FRAME, D.E.	801806
5	REGULATOR	1116387
6	DIODE, Trio	830891
7	BRIDGE, Rectifier	1875645
8	BRUSH AND HOLDER — Includes Key 9	801466
9	SPRING, Brush	1964177
10	BEARING, S.R.E.	9427225
11	BEARING, D.E.	907998
12	CAPACITOR	801824
13	BRACKET, Capacitor	1869573
14	TERMINAL, Battery	1846901
15	SEAL, Bearing	1961323
16	RETAINER, Bearing	1971993
17	COLLAR, Inside	1963139
18	COLLAR, Outside	1959991
19	SLINGER, Grease	800832
20	BOLT, Thru	801810
21	PULLEY — See Data Section Group 2.274	—
22	FAN — See Data Section Group 2.274	—
23	LOCKWASHER, Brush Holder Attach. Screw	N.L.A.
24	LOCKWASHER, Capacitor Lead Attach. Screw	—
25	LOCKWASHER, Rectifier Bridge Nut	N.L.A.
26	LOCKWASHER, Rectifier Bridge Screw	N.L.A.
27	LOCKWASHER, Shaft Nut — D.E.	1941978
28	NUT, Rectifier Bridge	453434
29	NUT, Shaft — D.E.	1915172
30	SCREW, Bearing Retainer	1965104
31	SCREW, Brush Holder — Ground	1971519
32	SCREW, Brush Holder — Insulator	1876681
33	SCREW & LOCKWASHER, Capacitor Bracket — #8-32 x 3/8	S.S.
34	SCREW, Capacitor Lead	—
35	SCREW, Rectifier Bridge — For 1101015	5677852
	— For 1101019	5677852
36	WASHER, Brush Holder Insul. Screw — For 1101015	1970149
37	CLIP, Stator Lead	801828
—	BUSHING, S.R.E. Mounting Hinge	1846578
—	CONNECTOR, Battery Terminal To Rectifier Bridge	801815
—	LOCKWASHER, Battery Terminal Connector Screw	1847933
—	SCREW, Battery Terminal Connector	N.L.A.

S.S. — STANDARD STOCK

1973-74 DELCOTRON COMPONENT PARTS

FOR THE FOLLOWING DELCOTRONS: 1100543, 1100554, 1100927, 1100928, 1100497.
For Delcotron Usage Refer To Delcotron Chart Page 1

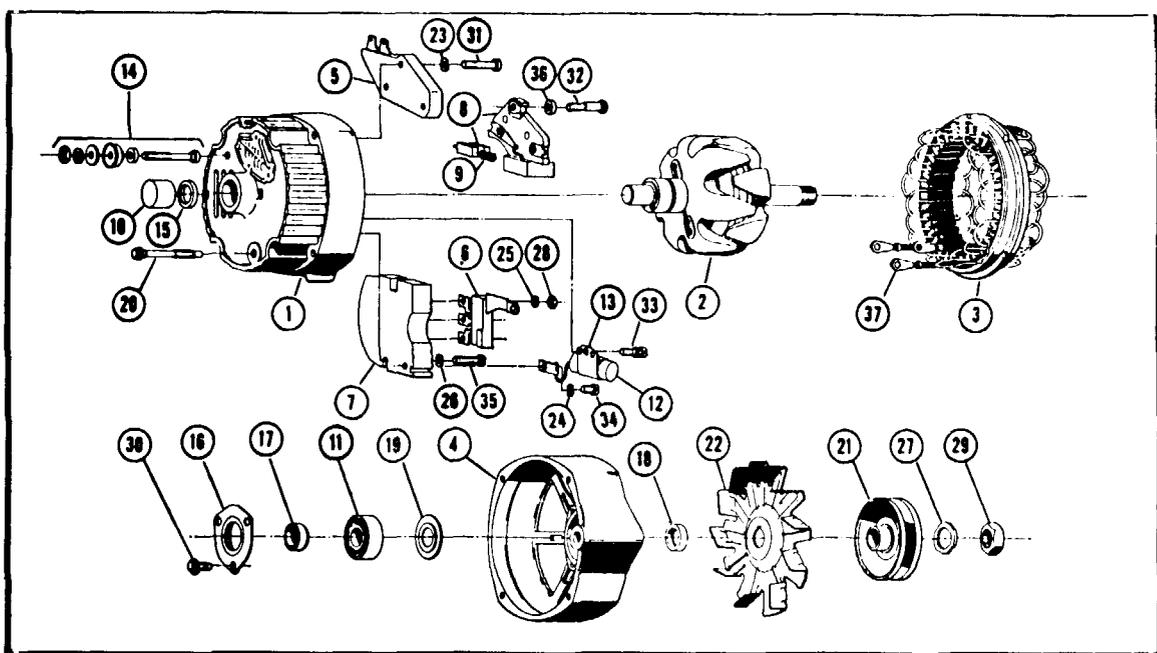


KEY	DESCRIPTION	PART NO.
1	FRAME, S.R.E. — Includes Key 10 & 15	1852101
2	ROTOR	1846657
3	STATOR — Includes Key 37 — For 1100543 — 927—497 — For 1100554 — 928	1971986 1971639
4	FRAME, D.E.	800135
5	REGULATOR	1116387
6	DIODE, Trio	1971528
7	BRIDGE, Rectifier	1867531
8	BRUSH AND HOLDER — Includes Key 9	801466
9	SPRING, Brush	1964117
10	BEARING, S.R.E.—For 1100543—554—927—928 —For 1100497	9427225 7451991 943683!
11	BEARING, D.E.	907998
12	CAPACITOR	801824
13	BRACKET, Capacitor	1869573
14	TERMINAL, Battery	1846900
15	SEAL, Bearing—For 1100543—554 —For 1100927—928	1961323 9427225
16	RETAINER, Bearing	1971993
17	COLLAR, Inside	1963139
18	COLLAR, Outside	1959991
19	SLINGER, Grease	800832
20	BOLT, Thru	1956975
21	PULLEY — See Data Section Group 2.274	—
22	FAN — See Data Section Group 2.274	—
23	LOCKWASHER, Brush Holder Attach. Screw	N.L.A.
24	LOCKWASHER, Capacitor Lead Attach. Screw	—
25	LOCKWASHER, Rectifier Bridge Nut	N.L.A.
26	LOCKWASHER, Rectifier Bridge Screw	N.L.A.
27	LOCKWASHER, Shaft Nut — D.E.	1941978
28	NUT, Rectifier Bridge	453434
29	NUT, Shaft — D.E.	1915172
30	SCREW, Bearing Retainer	1965104
31	SCREW, Brush Holder — Ground	1971519
32	SCREW, Brush Holder — Insulator	1876661
33	SCREW & LOCKWASHER, Capacitor Bracket — #8-32 x 3/8	N.L.A.
34	SCREW, Capacitor Lead	—
35	SCREW, Rectifier Bridge — For 1100543 — 554	N.L.A.
36	WASHER, Brush Holder Insul. Screw — For 1100927 — 928	1970149
37	CLIP, Stator Lead	1846548

S.S. — STANDARD STOCK

1975 DELCOTRON COMPONENT PARTS

(FOR GENERATOR ASSEMBLY APPLICATION REFER TO DELCOTRON CHART PAGE 2)

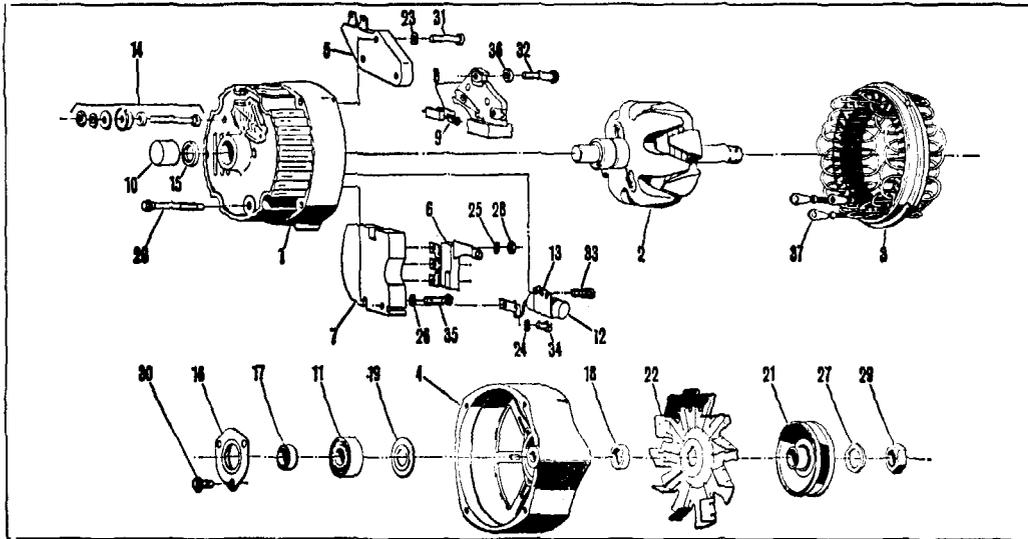

MAJOR PARTS

Model No.	#Frame S.R.E.	Rotor Assem.	Stator Assem.	Frame D.E.	Regu- lator	Diode Trio	Recti- fier Bridge	*Brush & Holder Assem.	Spring Brush	Bearing S.R.E.	Bearing D.E.
Assembly	1	2	3	4	5	6	7	8	9	10	11
1100497	1852101	1946657	1971986	800135	1116387	1971528	1852009	801466	1964117	9427225	907998
1100543	1852101	1971990	1971986	800135	1116387	1971528	1852009	801466	1964117	9427225	907998
1100554	1852101	1846657	1971639	800135	1116387	1971528	1852009	801466	1964117	9427225	907998
1101019	801813	801792	801818	801806	1116387	801817	801816	801466	1964117	7451931	907998
1101027	801813	801792	801818	801806	1116387	830891	1875645	801466	1964117	7451931	907998
1102347	1852101	1846657	1971639	800135	1116387	1971528	1875627	801466	1964117	7451931	907998
1102481	1852101	1846657	1971986	800135	1116387	1971528	1875627	801466	1964117	7451931	907998
1102482	1852101	1846657	1971639	800135	1116387	1971528	1875627	801466	1964117	7451931	907998


Model No.	Capaci- tor	Bracket Cap.	Term. Pkg. Battery	Seal Bear.	Bear. Retainer Assem.	Collar Inside	Collar Outside	Slinger Grease	Bolt Thru	Pulley	Fan
Assembly	12	13	14	15	16	17	18	19	20	21	22
1100497	801824	1869573	1846900	—	1971993	1963139	1959991	800832	1956975	1969433	800594
1100543	801824	1869573	1846900	1961323	1971993	1963139	1959991	800832	1956975	—	—
1100554	801824	1969573	1846900	1961323	1971993	1963139	1959991	800832	1956975	—	—
1101019	801824	1869573	1846901	1961323	1971993	1963139	1959991	800832	801810	—	801808
1101027	801824	1869573	1846901	1961323	1971993	1963139	1963139	800832	801810	1949357	801808
1102347	801824	1869573	1846900	—	1971993	1963139	1959991	800832	1956975	1949357	800594
1102481	801824	1869573	1846900	—	1971993	1963139	1959991	800832	1956975	1949357	800594
1102482	801824	1869573	1846900	—	1971993	1963139	1959991	800832	1956975	1949357	800594

MINOR PARTS

KEY	DESCRIPTION	1100497	1100543	1100554	1101019	1101027	1102347	1102481	1102482
23	Lockwasher - Brush Holder Attaching Screw	N.L.A.							
25	Lockwasher - Rectifier Bridge Nut	N.L.A.							
26	Lockwasher - Rectifier Bridge Attaching Screw	N.L.A.							
27	Lockwasher - Shaft Nut - D.E.	1941978	1941978	1941978	1941978	1941978	1941978	1941978	1941978
28	Nut - Rectifier Bridge	453434	453434	453434	453434	453434	453434	453434	453434
29	Nut - Shaft D.E.	1915172	1915172	1915172	1915172	1915172	1915172	1915172	1915172
30	Screw - Ball Bearing Retainer Attaching	1965104	1965104	1965104	1965104	1965104	1965104	1965104	1965104
31	Screw - Brush Holder Attaching Ground	1971519	1971519	1971519	1876682	1876682	1971519	1876682	1876682
32	Screw (insulated) - Brush Holder Attaching	1876681	1876681	1876681	1876681	1876681	1876681	1876681	1876681
33	Screw & Lockwasher - Capacitor Bracket Atta.	1851612	1851612	453849	1851612	1851612	1851612	1851612	1851612
35	Screw - Rectifier Bridge Attaching	1970145	1970145	5677852	1851612	1851612	1970145	1876668	1876668
37	Clip, Stator Lead	1846548	1846548	1846548	801828	801828	1846548	1846548	1846548



1976 DELCOTRON COMPONENT PARTS
(For Delcotron Assembly Application Refer to Delcotron Chart Page 2)

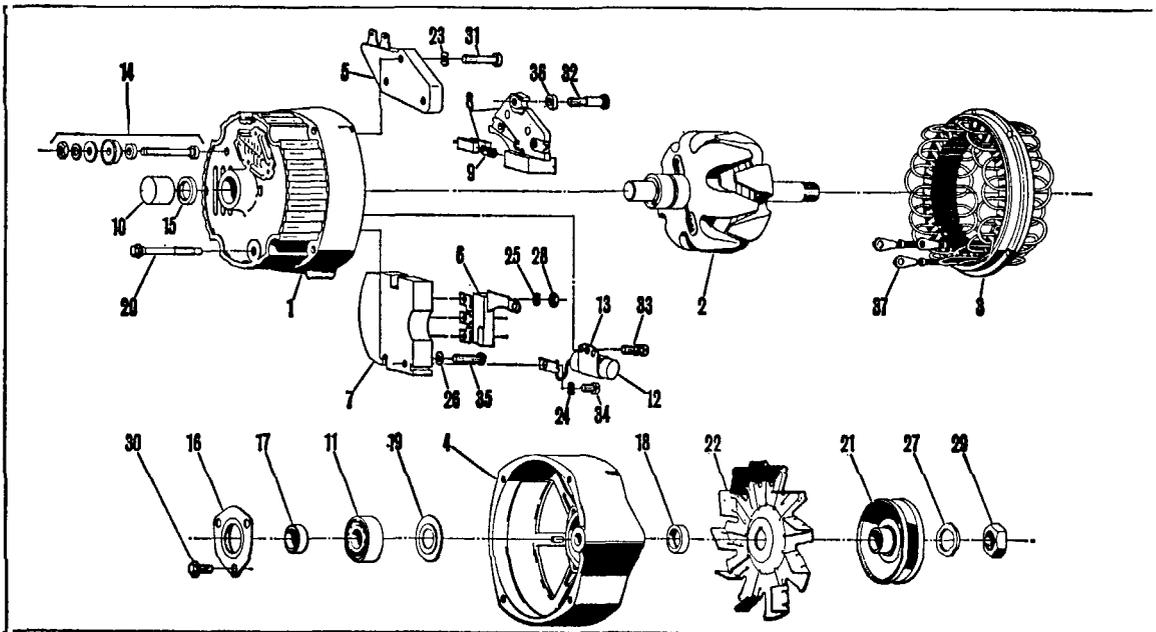

MAJOR PARTS

Model Number	Frame S.R.E.	Rotor Assy.	Stator Assy.	Frame D.E.	Regulator	Diode Trio	Rectifier Bridge	Brush & Holder Assy.	Spring Brush	Bearing S.R.E.	Bearing D.E.
Assembly	1	2	3	4	5	6	7	8	9	10	11
1101016	801830	1877057	801818	801806	1116387	830891	1875645	801466	1964117	9432068	907998
1101030	"	"	"	"	"	"	"	"	"	7451931	"
1102384	1852101	1876163	1971986	800135	"	1971528	1875627	"	"	9432068	"
1102385	"	"	1971639	"	"	"	"	"	"	"	"
1102486	"	"	"	"	"	"	"	"	"	"	"
1102491	"	"	1971986	"	"	"	"	"	"	"	"
1102848	"	"	"	"	"	"	"	"	"	7451931	"
1102849	"	"	1971639	"	"	"	"	"	"	"	"

Model Number	Capacitor	Bracket Capacitor	Term. Pkg. Battery	Seal Bearing	Brg. Ret. Assy.	Collar Inside	Collar Outside	Slinger Grease	Bolt Thru	Pulley	Fan
Assembly	12	13	14	15	16	17	18	19	20	21	22
1101016	801824	1869573	1846901	—	1971993	1963139	—	800832	801810	1949357	801808
1101030	"	—	"	—	"	"	—	"	"	—	"
1102384	"	"	1846900	—	"	"	1959991	"	1956975	"	800594
1102385	"	"	"	—	"	"	"	"	"	"	"
1102486	"	"	"	—	"	"	"	"	"	1949355	"
1102491	"	"	"	—	"	"	"	"	"	"	"
1102848	"	"	"	—	"	"	"	"	"	—	—
1102849	"	"	"	—	"	"	"	"	"	—	—

MINOR PARTS

Key	Description	1101016	1101030	1102384	1102385	1102486	1102491	1102848	1102849
23	Lockwasher, Brush Holder Attach Screw	—	—	—	—	—	—	—	—
25	Lockwasher, Rectifier Bridge Nut	—	—	—	—	—	—	—	—
26	Lockwasher, Rectifier Bridge Attach Screw	—	—	—	—	—	—	—	—
27	Lockwasher, Shaft Nut—D.E.	1941978	"	"	"	"	"	"	—
28	Nut—Rectifier Bridge	—	453434	—	—	—	—	453434	"
29	Nut—Shaft—D.E.	1915172	—	—	—	—	—	—	"
30	Screw—Ball Bearing Retainer Attaching	1965104	"	"	"	"	"	"	"
31	Screw—Brush Holder Attach—Ground	1876682	"	"	"	"	"	1876681	"
32	Screw—(Insulated)—Brush Holder Attach.	1876681	"	"	"	"	"	1876682	"
33	Screw—Capacitor Bracket Attach.	N.L.A.	1851612	N.L.A.	"	"	"	1851612	"
35	Screw—Capacitor Lead Attach.	1876668	1851612	1876668	"	"	"	"	"
37	Clip—Stator Lead	—	801828	1846548	"	"	"	"	"

DISTRIBUTORS

LISTED BELOW ARE DISTRIBUTOR ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts.

PRODUCTION NO.	SERVICE NO.	APPLICATION		CHART PAGE NO.
1110396	1110396	1967	230 6 Cyl. Engine – Standard	3
1110397	1110397	1967	230/4BC/6 Cyl. Engine	3
1111164	1111164	1967	326/2BC/V-8 Engine	4
1111165	1111165	1967	326/4BC/V-8 Engine	4
1111242	1111242	1967	400 V-8 Engine – Low Compression	4
1111253	1111253	1967	400 V-8 Engine – High Compression	4
1110430	1110430	1968	250/1BC/6 Cyl. Engine	3
1110431	1110431	1968	250/4BC/6 Cyl. Engine ST	3
1110449	1110449	1968	250/4BC/6 Cyl. Engine AT	3
1111281	1111281	1968	350 V-8 Engine – Standard	4
1111447	1111447	1968	350 V-8 Engine – High Output ST	4
1111282	1111282	1968	350 V-8 Engine – High Output AT	4
1111449	1111449	1968	400 V-8 Engine ST	4
1111270	1111270	1968	400 V-8 Engine AT	4
1110475	1110475	1969	250/1BC/6 Cyl. Engine	3
1110474	1110474	1969	250/4BC/6 Cyl. Engine	3
1111960	1111960	1969	350/2BC/V-8 Engine ST	5
1111942	1111942	1969	350/2BC/V-8 Engine AT	5
1111966	1111966	1969	350/4BC/H.O. Engine ST	5
1111965	1111965	1969	350/4BC/H.O. Engine AT	5
1111952	1111952	1969	400 V-8 Engine ST – Exc. RAM AIR	5
1111940	1111940	1969	400/2BC/V-8 Engine TH	5
1111946	1111946	1969	400/4BC/V-8 Engine TH	5
1111941	1111941	1969	RAM AIR IV	5
1110463	1110463	1970	250 6 Cyl. Engine ST	6
1110464	1110464	1970	250 6 Cyl. Engine AT	6
1112008	1112008	1970	350 V-8 Engine	7
1111176	1111176	1970	400 V-8 Engine ST – Exc. RAM AIR	7
1111148	1111148	1970	400 V-8 Engine TH – Exc. RAM AIR	7
1112010	1112010	1970	RAM AIR III ST	7
1112009	1112009	1970	RAM AIR III AT	7
1112011	1112011	1970	RAM AIR IV	7
1110489	1110489	1971	250 6 Cyl. Engine	6
1112083	1112083	1971	350 Engine ST – First Jobs*	8
1112069	1112069	1971	350 Engine AT – First Jobs*	8
1112090	1112090	1971	350 Engine – After Jobs*	8
1112068	1112068	1971	400/2BC/Engine – First Jobs*	8
1112089	1112089	1971	400/2BC/Engine – After Jobs*	8
1112070	1112070	1971	400/4BC/Engine	8
1112071	1112071	1971	455/2BC/Engine	8
1112072	1112072	1971	455/4BC/Engine – Exc. HO	8
1112073	1112073	1971	455/4BC/HO Engine	8

* PRODUCTION NUMBER IS STAMPED ON UNIT



DISTRIBUTORS

LISTED BELOW ARE DISTRIBUTOR ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts.

PRODUCTION NO.	SERVICE NO.	APPLICATION	CHART PAGE NO.
1110489	1110489	1972 250 6 Cyl. Eng.	6
1112140	1112140	1972 350 Pont. Eng. S.T.	9
1112118	1112118	1972 350 Pont. Eng. A.T. — 1st Type*	9
1112143	1112143	1972 350 Pont. Eng. A.T. — 2nd Type*	9
1112183	1112143	1972 350 Pont. Eng. A.T. — 3rd Type*	9
1112189	1112189	1972 400/2BC/Eng.	9
1112121	1112121	1972 400/4BC/Eng.	9
1112126	1112126	1972 455 HO Eng. Exc. Unitized Distributor	9
1112127	1112127	1972 455 Eng. Exc. HO w/Unitized Distributor	10
1112133	1112133	1972 455 HO Eng. w/Unitized Distributor	10
1110499	1110499	1973 250 6 Cyl. Eng.	6
1112202	1112202	1973 350 Eng. S.T. Exc. Eng. Code X.W.	11
1112140	1112140	1973 350 Eng. S.T. with Eng. Code X.W.	11
1112510	1112510	1973 350 Eng. A.T.	11
1112511	1112511	1973 400/2BC/Eng. Exc. Eng. Code Y.J.	11
1112189	1112189	1973 400/2BC/Eng. with Eng. Code Y.J.	11
1112231	1112231	1973 400/4BC/Eng. Exc. Unitized Distributor or Eng. Codes W.H., Y.H.	11
1112121	1112121	1973 400/4BC/Eng. Codes W.H., Y.H. Exc. Unitized Distributor	11
1112233	1112233	1973 400/4BC/Eng. with Unitized Distributor	12
1112191	1112191	1973 455 Eng. Exc. Unitized Distributor or S.D. or Eng. Codes W.B., Y.B.	11
1112126	1112126	1973 455 Eng. with Eng. Code W.B., Y.B. Exc. Unitized Distributor or S.D.	11
1112203	1112203	1973 455 Eng. with Unitized Distributor Exc. S.D. or Eng. Codes W.E., Y.E.	12
1112133	1112133	1973 455 Eng. with Eng. Code W.E., Y.E. with Unitized Distributor or S.D.	12
1112218	1112218	1973 455 S.D. Eng.	11
1110499	1110499	1974 6 Cyl. Engine	6
1112236	1112236	1974 350/2BC/Eng. S.T.	13
1112234	1112234	1974 350/2BC/Eng. A.T.	13
1112237	1112237	1974 400/2BC/Eng.	13
1112239	1112239	1974 400/4BC/Eng. S.T. — Engine Code WT	13
1112812	1112812	1974 400/4BC/Eng. with Unitized Dist.	14
1112512	1112512	1974 400/4BC/Eng. A.T. Exc. Unitized Dist.	13
1112513	1112513	1974 455 Eng. Exc. Unitized Dist. & S.D.	13
1112810	1112810	1974 455 Eng. with Unitized Dist. Exc. S.D.	14
1112243	1112243	1974 455 Eng. S.D.	13

*Production Number is Stamped on Unit.

DISTRIBUTORS


LISTED BELOW ARE DISTRIBUTOR ASSEMBLIES AND USAGES

Refer To The Charts On The Following Pages For Component Parts.

PRODUCTION NUMBER	SERVICE NUMBER	APPLICATION	CHART PAGE NO.
1112863	1112863	1975-76 6 Cyl. Eng.	15
1112950	1112950	1975 350/2 BC/Eng — 1st Type	16
1112497	1112497	1975 350/2 BC/Eng — 2nd Type	16
1112946	1112946	1975 350/4 BC/ Eng ST	16
1112498	1112498	1975 350/4 BC/Eng AT W/Catalytic Converter	16
1112947	1112947	1975 350/4 BC/Eng AT Exc Catalytic Converter	16
1112495	1112495	1975-76 400/4 BC/ Eng ST	16
1112928	1112928	1975-76 400/4 BC/ Eng AT	16
1112947	1112497	1976 350/2BC/Eng	16
1112923	1112923	1976 455 Eng. ST	17

1967-69 6 CYLINDER ENGINE DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 1)

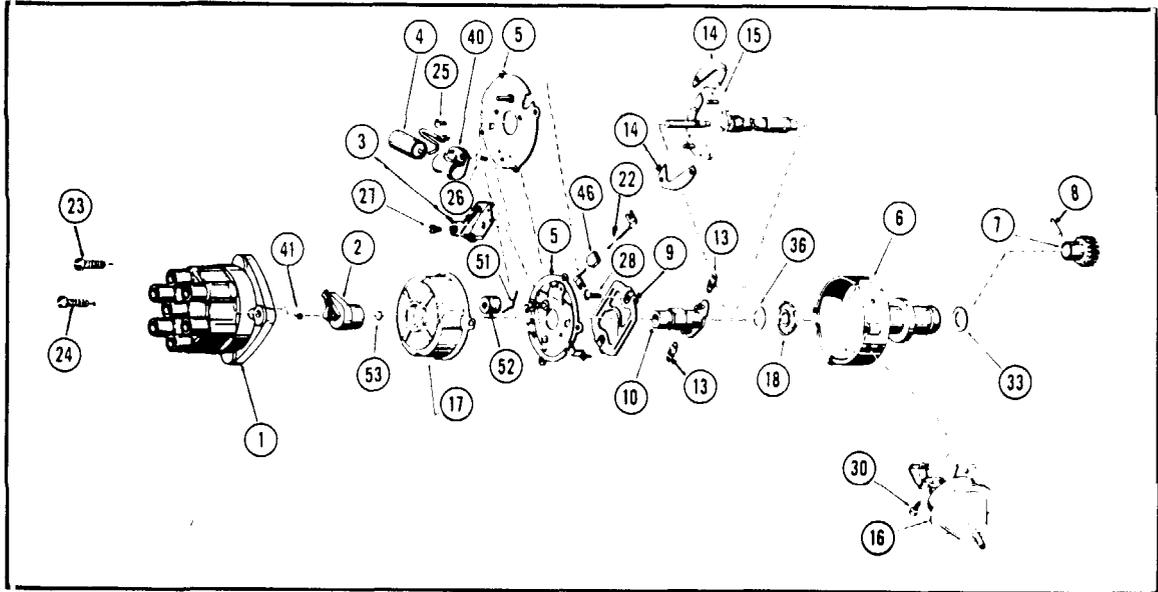

MAJOR PARTS

Distributor Assembly	Cap	Rotor	Contact Assy.	Condenser	Plate Breaker	Housing	Collar Coupling or Gear	Pin
	1	2	3	4	5	6	7	8
1110396	1971324	1954566	1954557	1928111	1961428	1967589	1966045	274795
1110397	"	"	"	"	"	"	"	"
1110430	"	800056	"	"	"	1969746	"	"
1110431	"	"	"	"	"	1967589	"	"
1110449	"	"	"	"	"	"	"	"
1110474	"	"	"	"	"	"	"	"
1110475	"	"	"	"	"	"	"	"

Distributor Assembly	Plate Hold Down	Cam	Spring Weight	Weight	Shaft	Vacuum Control	Seal, Housing	Lead Primary
	9	10	13	14	15	16	18	22
1110396	1954548	1969163	1969326	1881371	1969158	1115369	1920463	1954563
1110397	"	1969152	1951743	1924737	1969151	"	"	"
1110430	"	1970471	N.L.A.	1965843	1968561	1973413	"	"
1110431	"	1969163	1970937	1881371	1969158	1973414	"	"
1110449	"	"	"	"	"	1973413	"	"
1110474	"	"	800653	"	"	1973419	"	"
1110475	"	1970471	N.L.A.	1965843	1968561	"	"	"


MINOR PARTS

KEY	DESCRIPTION	1110396	1110397	1110430	1110431	1110449	1110474	1110475
23	SCREW, Cap Attaching - # 8-32	1954571	*	*	*	*	*	*
24	SCREW, Cap Attaching - # 10-32	1957573	*	*	*	*	*	*
25	SCREW, Capacitor Bracket Attaching	454458	*	*	*	*	*	*
26	SCREW, Circuit Breaker Plate Attaching	159582	*	*	*	*	*	*
27	SCREW, Contact Adjusting	1914916	*	*	*	*	*	*
28	SCREW & LOCKWASHER, Hold Down Plate	453647	*	*	*	*	*	*
30	SCREW, Vacuum Control Attaching	1917123	*	*	*	*	*	*
33	WASHER - Under Gear or Collar - Space	-	-	811912	811912	-	811912	811912
36	WASHER - Under Weight Plate - Thrust	817051	*	*	*	*	*	*
40	BRACKET, Capacitor	1944118	*	*	*	*	*	*
41	BUTTON, Carbon	1938193	*	*	*	*	*	*
46	GROMMET	1954564	*	*	*	*	*	*
51	SPRING, Circuit Breaker Plate	1956213	*	*	*	*	*	*
52	WICK, Cam Lubricator	1852935	*	*	*	*	*	*

* PART NUMBER IS SAME AS NUMBER IN FIRST COLUMN.

1967-68 8 CYLINDER ENGINE DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 1)

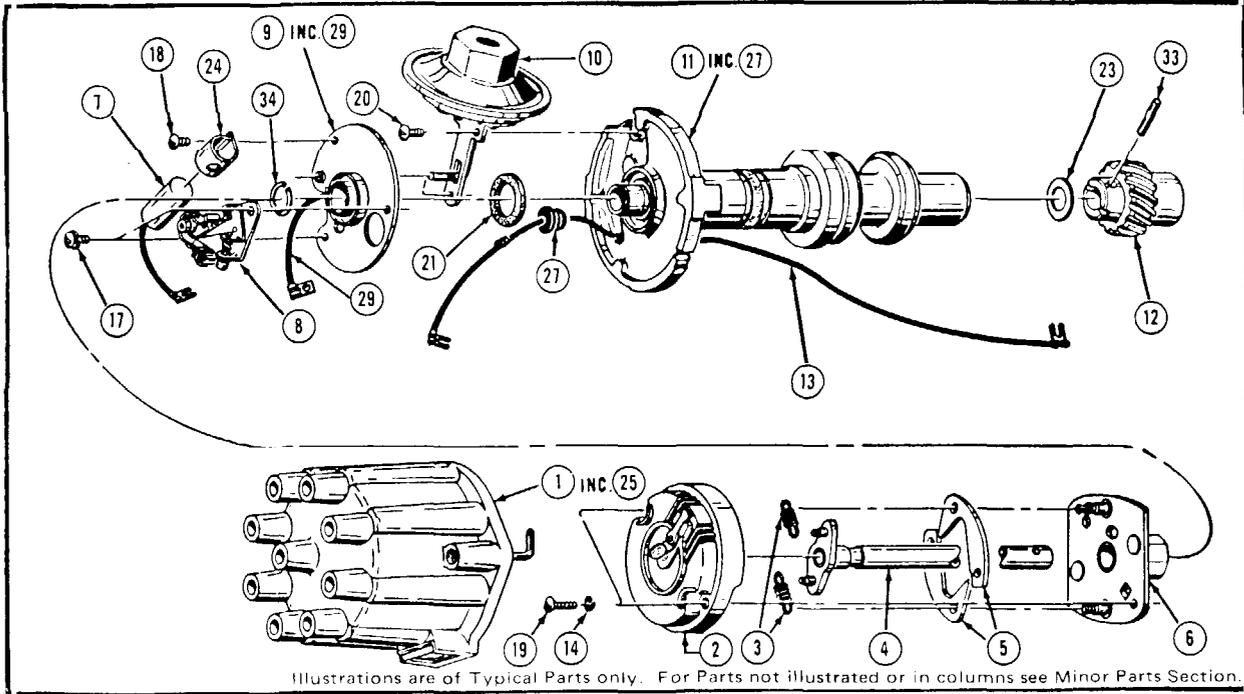

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

MAJOR PARTS

Distributor Assembly	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con- denser	Contact Assem.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1111164	800061	1971247	1958213	1968282	1881371	1965844	1932004	1931988	1962141	1115364	1967562	801200	1942518
1111165	1971244	"	1968353	1968284	"	1967914	"	"	"	1115365	"	"	"
1111242	800061	"	1963965	1968437	1924737	"	"	"	"	1115364	"	"	"
1111253	1971244	"	"	"	"	"	"	"	"	1115374	"	"	"
1111270	"	"	"	1968265	"	"	"	"	"	1973412	1966407	1958599	"
1111281	"	"	1968353	1969325	1881371	"	1932004	"	"	1973411	1967562	801200	1942518
1111282	"	"	"	1970605	1924737	1945210	"	"	"	"	"	801200	"
1111447	"	"	1957483	"	"	"	"	"	"	"	"	"	"
1111449	"	"	1970926	1970924	1881371	1967914	"	"	"	"	"	"	"


MINOR PARTS

KEY	DESCRIPTION	1111164	1111165	1111242	1111253	1111270	1111281	1111282	1111447	1111449
14	LOCKWASHER, Rotor Attaching Screw	453435	*	—	—	—	—	—	—	—
17	SCREW & LOCKWASHER, Contact Assembly — Pkg. of 50	N.L.A.	*	*	*	*	*	*	*	*
18	SCREW, Condenser Clamp Attaching	453647	*	*	*	*	*	*	*	*
19	SCREW, Rotor Attaching	9416183	*	—	—	—	—	—	—	—
21	WASHER — Under Breaker Plate — Felt	1951099	*	*	*	*	*	*	*	*
23	WASHER—Between Gear & Base—Space	1837617	*	*	*	*	*	*	*	*
	WASHER—Between Gear & Base—Tang	—	—	—	—	—	—	—	1965864	—
24	BRACKET, Condenser	1869573	*	*	*	*	*	*	*	*
25	BRUSH — In Cap	1938193	*	*	*	*	*	*	*	*
27	GROMMET — For Primary Lead	1932023	*	*	*	*	*	*	*	*
29	LEAD, Breaker Plate Ground	1932002	*	*	*	*	*	*	*	*
33	PIN, Gear Attaching	456652	*	*	*	*	*	*	*	*
	SEAL, Lubrication	1950569	*	*	*	*	*	*	*	*
	SLEEVE, Spring Post — Rubber	1945548	*	*	*	*	*	*	*	*
34	SPRING, Breaker Plate Retainer	1932024	*	*	*	*	*	*	*	*

* PART NUMBER IS SAME AS NUMBER IN FIRST COLUMN.

1969 8 CYLINDER ENGINE DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 1)

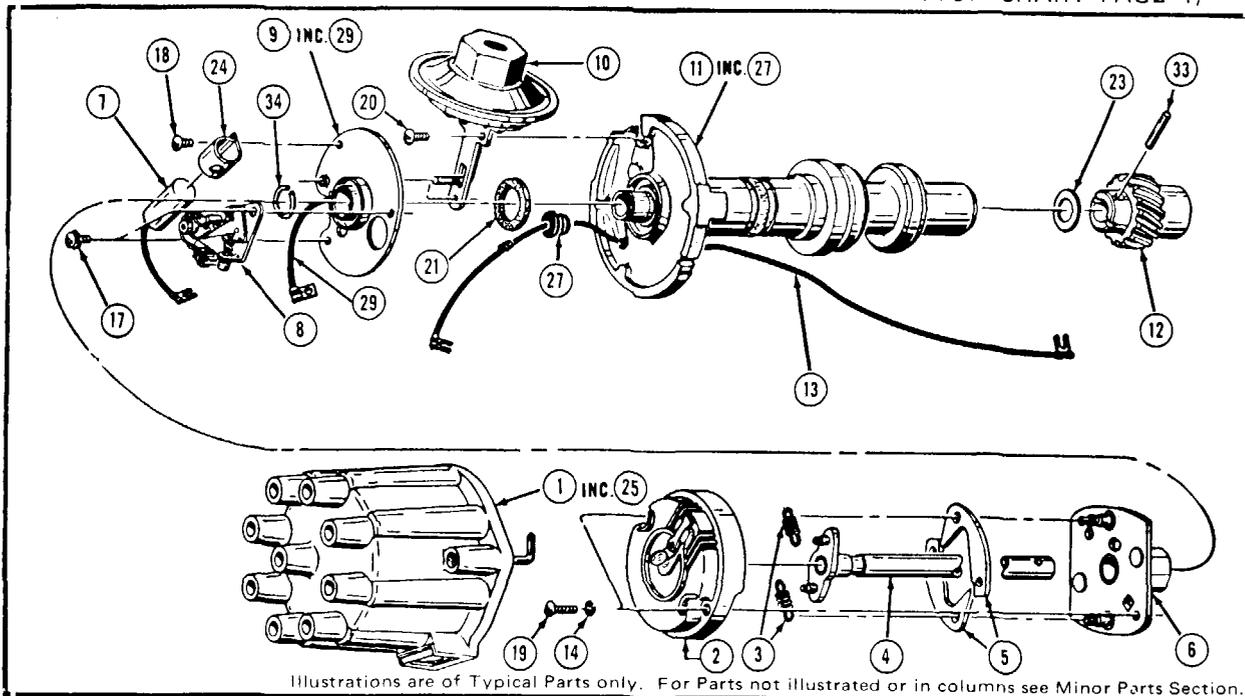

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

MAJOR PARTS


Distributor Assembly	Cap 1	Rotor 2	Spring Weight 3	Shaft 4	Weight 5	Cam 6	Con- denser 7	Contact Assem. 8	Plate Breaker 9	Control Vacuum 10	Housing 11	Gear 12	Lead Primary 13
1111940	1971244	1971247	1941524	1971768	1881371	1961654	1932004	1931988	1962141	1115364	1967562	801200	1942518
1111941	"	"	800036	800037	"	1965844	"	1966294	"	1115365	"	"	"
1111942	"	"	1968353	1968284	"	1967914	"	1931988	"	1115364	"	"	"
1111946	"	"	1963965	1968437	1924737	"	"	1966294	"	1115364	"	"	"
1111952	"	"	1970926	800415	1881371	"	"	"	"	1115365	"	"	"
1111960	"	"	1970935	800412	"	1847825	"	1931988	"	"	"	"	"
1111965	"	"	1942615	801105	1924737	1965066	"	1966294	"	"	"	"	"
1111966	"	"	1941964	"	"	"	"	"	"	"	"	"	"

MINOR PARTS

KEY	DESCRIPTION	1111940	1111941	1111942	1111946	1111952	1111960	1111965	1111966
17	SCREW & LOCKWASHER, Contact Assembly - Pkg. of 50	-	-	-	-	-	-	-	-
18	SCREW, Condenser Clamp Attaching	453647	*	*	*	*	*	*	*
21	WASHER - Under Breaker Plate - Felt	1951099	*	*	*	*	*	*	*
23	WASHER - Between Gear & Base - Space	1837617	*	*	*	*	*	*	*
24	BRACKET, Condenser	1869573	*	*	*	*	*	*	*
25	BRUSH - In Cap	1938193	*	*	*	*	*	*	*
	FELT, Cam Oiler	-	1949084	-	1949084	1949084	-	1949084	1949084
27	GROMMET - For Primary Lead	1932023	*	*	*	*	*	*	*
29	LEAD, Breaker Plate Ground	1932002	*	*	*	*	*	*	*
33	PIN, Gear Attaching	456652	*	*	*	*	*	*	*
	RETAINER, Felt Wick	-	1935621	-	1935621	1935621	-	1935621	1935621
	SEAL, Lubrication	1950569	*	*	*	*	*	*	*
	SLEEVE, Spring Post - Rubber	1945548	*	*	*	*	*	*	*
34	SPRING, Breaker Plate Retainer	1932024	*	*	*	*	*	*	*
	* PART NUMBER IS SAME AS NUMBER IN FIRST COLUMN.								

1970-74 6 CYL. DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR APPLICATION SEE DISTRIBUTOR CHART PAGES 1 AND 2)

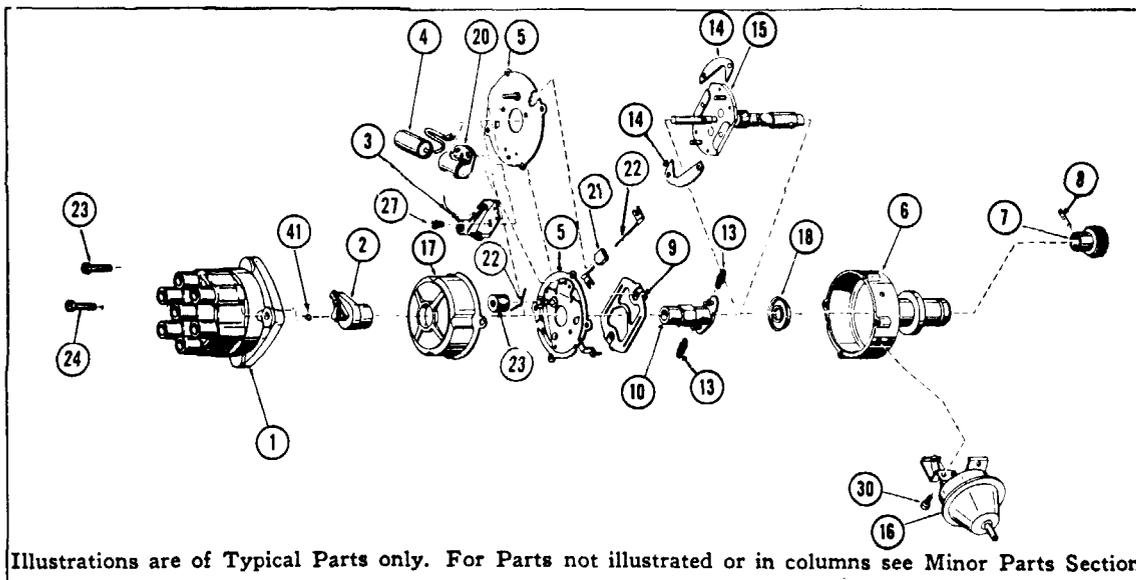

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

MAJOR PARTS

Distributor Assembly	Cap 1	Rotor 2	Contact Assem. 3	Condenser 4	Plate Breaker 5	Housing 6	Collar Coupling or Gear 7	Pin 8	Plate Hold Down 9
1110463	1971324	800056	1954557	1928111	1961428	1954539	1962052	456652	1954548
1110464	"	"	"	"	"	"	"	"	"
1110465	"	"	"	"	"	"	"	"	"
1110466	"	"	"	"	"	"	"	"	"
1110489	"	"	"	"	"	1846069	"	"	"
1110499	"	"	"	"	"	"	"	454512	"

Distributor Assembly	Cam 10	Spring Weight 13	Weight 14	Shaft 15	Vacuum Control 16	Dust Seal Cover 17	Seal Housing 18	Lead Primary 22
1110463	1970841	1922381	1881371	1970840	1116217	-	-	1954563
1110464	1970537	1970536	"	1966436	"	-	-	"
1110465	1970841	1922381	"	1970840	"	1960325	-	"
1110466	1970537	1970536	"	1966436	"	"	-	"
1110489	1966901	1912886	"	1876248	1973434	-	1950569	"
1110499	"	"	"	"	1973428	-	"	"


MINOR PARTS

KEY	DESCRIPTION	1110463	1110464	1110465	1110466	1110489	1110499
23	SCREW, Cap Attaching - # 8-32	1954571	*	*	*	*	*
24	SCREW, Cap Attaching - # 10-32	1957573	*	*	*	*	*
25	SCREW, Capacitor Bracket Attaching	454458	*	*	*	*	*
26	SCREW, Circuit Breaker Plate Attaching	159582	*	*	*	*	*
27	SCREW, Contact Adjusting	1914916	*	*	*	*	*
28	SCREW & LOCKWASHER, Hold Down Plate	453647	*	*	*	*	*
30	SCREW, Vacuum Control	1917123	*	*	*	*	*
40	BRACKET, Condenser	1944118	*	*	*	*	*
41	BUTTON, Carbon	1938193	*	*	*	*	*
46	GROMMET	1954564	*	*	*	*	*
51	SPRING, Breaker Plate	1956213	*	*	*	*	*
52	WICK, Cam Lub.	1852935	*	*	*	1852935	1852935

*Part Number is Same As Number In First Column.

1970 8 CYL. DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR APPLICATION SEE DISTRIBUTOR CHART PAGE 1)

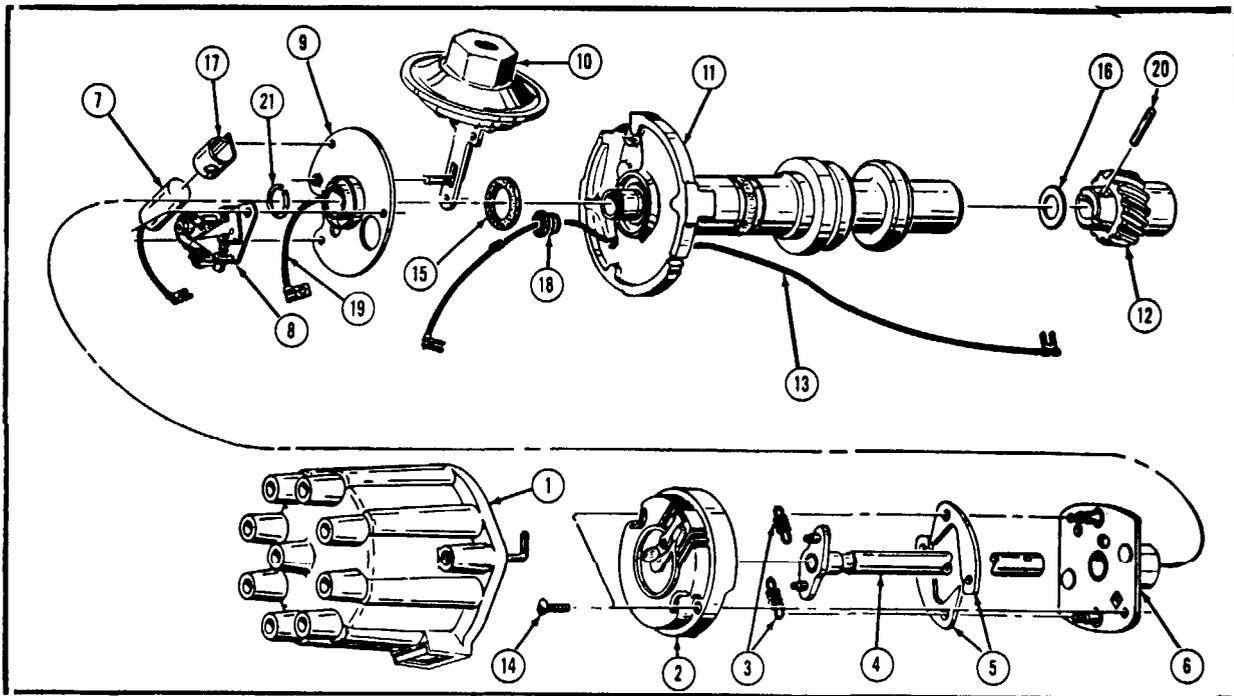
MAJOR PARTS


Distributor Stamping	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Con-denser	Contact Assy.	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
ASSEMBLY	1	2	3	4	5	6	7	8	9	10	11	12	13
1111148	800061	1971247	1970937	800271	1924737	1965066	1932004	1966294	1846122	1115365	1967562	801200	1846199
1111176	"	"	1963965	800037	1881371	"	"	"	"	"	"	"	"
1112008	"	"	"	"	"	1967914	"	1931988	"	1115364	"	801200	"
1112009	"	"	1946990	800655	"	1847825	"	1966294	"	1115365	"	801200	"
1112010	"	"	1942615	"	1960203	"	"	"	"	"	"	"	"
1112011	"	"	800036	800037	1881371	1965844	"	"	"	"	"	"	"

MINOR PARTS

Key	Description	1111148	1111176	1112008	1112009	1112010	1112011
14	SCREW & LOCKWASHER, Rotor Attach.	N.L.A.	*	*	*	*	*
15	WASHER, /Felt/ Under Plate	1951099	*	*	*	*	*
16	WASHER, /Tang/ Under Gear	1837617	*	*	*	*	*
17	BRACKET, Condenser	1869573	*	*	*	*	*
18	GROMMET, for Primary Lead	1932023	*	*	*	*	*
19	LEAD, Breaker Plate Ground	1932002	*	*	*	*	*
20	PIN, Gear Attach.	456652	*	*	*	*	*
21	SPRING, Breaker Plate Retainer	1932024	*	*	*	*	*
	SEAL, Housing	1950569	*	*	*	*	*
	SCREW, Shield Attach.	1846215	*	*	*	*	*
	SHIELD PKG., Radio Frequency Interference	1846216	*	*	*	*	*
	SLEEVE, Spring Post	1945548	*	*	*	*	*
	WICK, Cam Lub	1852935	*	—	*	*	*
	RETAINER, Wick	1935621	*	—	*	*	*

* Part Number Same As Number In First Column.

1971 8 CYLINDER ENGINE DISTRIBUTOR COMPONENT PARTS (FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 1)

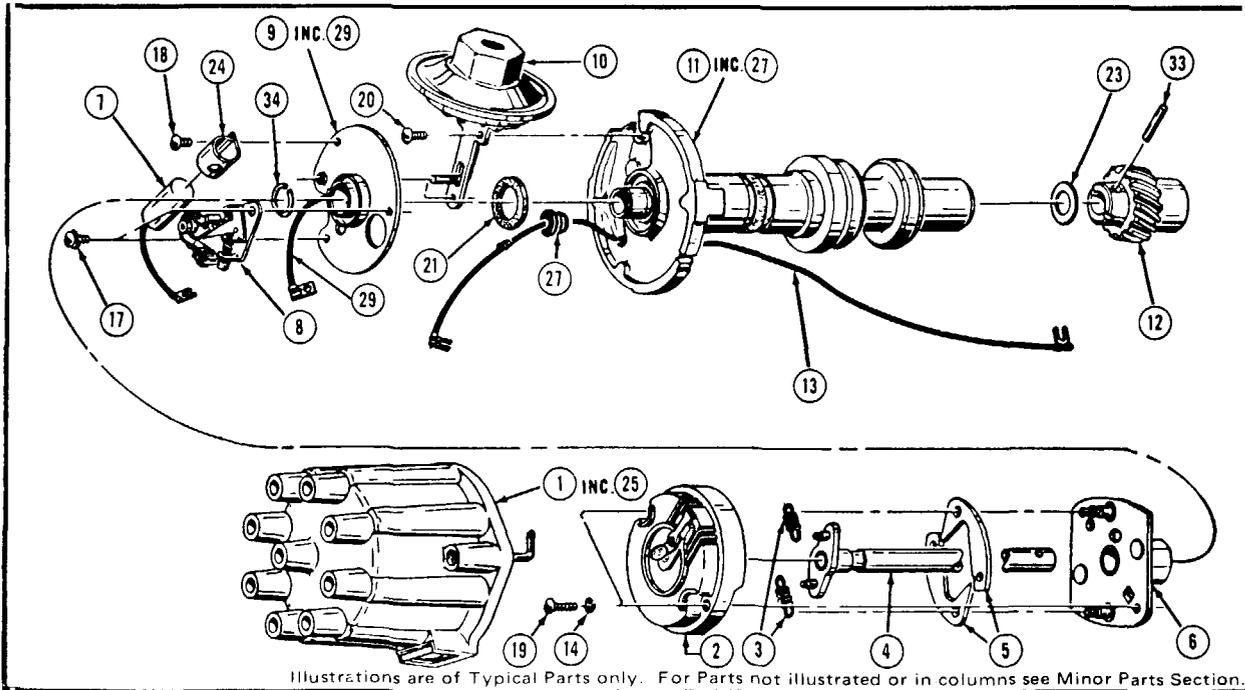

MAJOR PARTS


Distributor Assembly	Cap 1	Rotor 2	Spring Weight 3	Shaft 4	Weight 5	Cam 6	Con- denser 7	Contact Assem. 8	Plate Breaker 9	Control Vacuum 10	Housing 11	Gear 12	Lead Primary 13
1112068	800061	1971247	1851288	1851286	1881371	1965066	1932004	1931988	1876641	1115364	1967562	801200	1846199
1112069	"	"	1851343	1851341	"	1941849	"	"	"	"	"	"	"
1112070	"	"	1851056	1851431	"	1847825	"	1966294	"	"	"	801200	"
1112071	"	"	1851432	1851274	1880902	1961654	"	1931988	"	1115365	"	801200	"
1112072	"	"	1851056	1851431	1881371	1847825	"	1966294	"	"	"	801200	"
1112073	"	"	□	1852004	"	1965066	"	"	"	1115364	"	801200	"
1112083	"	"	800036	800037	"	1847825	"	1931988	"	"	"	801200	"
1112089	1971244	"	1851771	1851767	"	1951654	"	"	"	"	"	"	"
1112090	"	"	1851772	1851810	"	801314	"	"	"	"	"	"	"
□ PART OF SHAFT & SPRING PACKAGE 1852004													

MINOR PARTS

KEY	DESCRIPTION	1112068	1112069	1112070	1112071	1112072	1112073	1112083	1112089	1112090
-	SCREW & LOCKWASHER, R.F.I. Shield	1846215	*	*	*	*	*	*	*	*
19	SCREW & LOCKWASHER, Rotor Attach.	N.L.A.	*	*	*	*	*	*	*	*
21	WASHER - Under Breaker Plate - Felt	1961099	*	*	*	*	*	*	*	*
23	WASHER - Under Gear - Space	1837617	*	*	*	*	*	*	*	*
24	BRACKET, Condenser	1869573	*	*	*	*	*	*	*	*
	FELT, Cam Oiler	1852935	*	*	*	*	*	*	*	*
27	GROMMET, Housing	1932023	*	*	*	*	*	*	*	*
29	LEAD, Ground	1932002	*	*	*	*	*	*	*	*
33	PIN, Gear Attaching	456652	*	*	*	*	*	*	*	*
	RETAINER, Felt Wick	1963858	*	*	*	*	*	*	*	*
	SEAL, Lubrication	1950569	*	*	*	*	*	*	*	*
	SHIELD PKG., Radio Frequency Interference	1846216	*	*	*	*	*	*	*	*
	SLEEVE, Spring Post	1945548	*	*	*	*	*	*	*	*
34	SPRING, Breaker Plate Retainer	1932024	*	*	*	*	*	*	*	*
* PART NUMBER IS SAME AS NUMBER IN FIRST COLUMN.										

1972 8 CYLINDER ENGINE DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR APPLICATION SEE DISTRIBUTOR CHART PAGE 2)

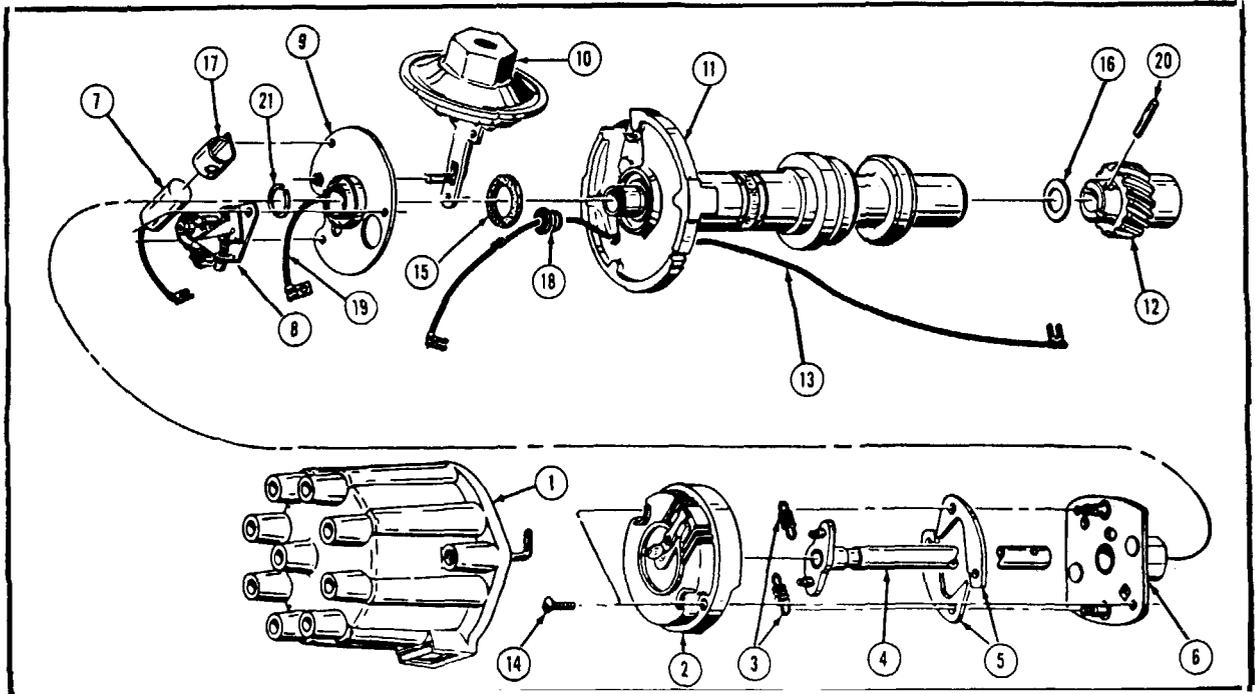

MAJOR PARTS

Distributor	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Condenser	Assem. Contact	Breaker Plate	Vacuum Control	Housing	Gear	Primary Lead
Assembly	1	2	3	4	5	6	7	8	9	10	11	12	13
1112118	800061	1971247	1851772	1851810	1881371	801314	1932004	1931988	1876641	1115364	1967562	801200	1852969
1112121	"	"	1852741	1852396	"	"	"	1966294	"	1115364	"	"	"
1112126	"	"	1959443	1852400	"	"	"	"	"	"	"	"	"
1112140	"	"	1851343	1851341	"	1941849	"	1931988	"	"	"	"	"
1112143	"	1852722	1970935	1852955	"	801314	"	"	"	"	"	"	"
1112183	1967562	"	"	"	"	"	#	#	1851537	"	"	"	"
1112189	1971244	"	1846802	800665	"	1956066	1932004	1931988	1876641	1115365	"	"	"

#Use Condenser and Point Set 1876600.


MINOR PARTS

Key	Description	1112118	1112121	1112126	1112140	1112143	1112183	1112189
14	SCREW & LOCKWASHER, Rotor Attach.	N.I.A.			*	*	—	*
15	WASHER, /Felt/ Under Plate				*	*	*	*
16	WASHER, / Space / Under Gear				*	*	*	*
17	BRACKET, Condenser	1009373			*	*	*	*
18	GROMMET, for Primary Lead	1922023	*	*	*	*	*	*
19	LEAD, Breaker Plate Ground	1932002	*	*	*	*	*	*
20	PIN, Gear Attach.	456652	*	*	*	*	*	*
21	SPRING, Breaker Plate Retainer	1932024	*	*	*	*	*	*
	SEAL, Housing	1950569	*	*	*	*	*	*
	SCREW, Shield Attach.	1846215	*	*	*	*	*	*
	SHIELD PKG., Radio Frequency Interference	1846216	*	*	*	*	—	*
	SLEEVE, Spring Post	1945548	*	*	*	*	*	*
	WICK, Cam Lub	1852935	*	*	*	*	*	*
	RETAINER, Wick	1963858	*	*	*	*	*	*

* Part Number Same As Number In First Column.

1972 UNITIZED DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 2)

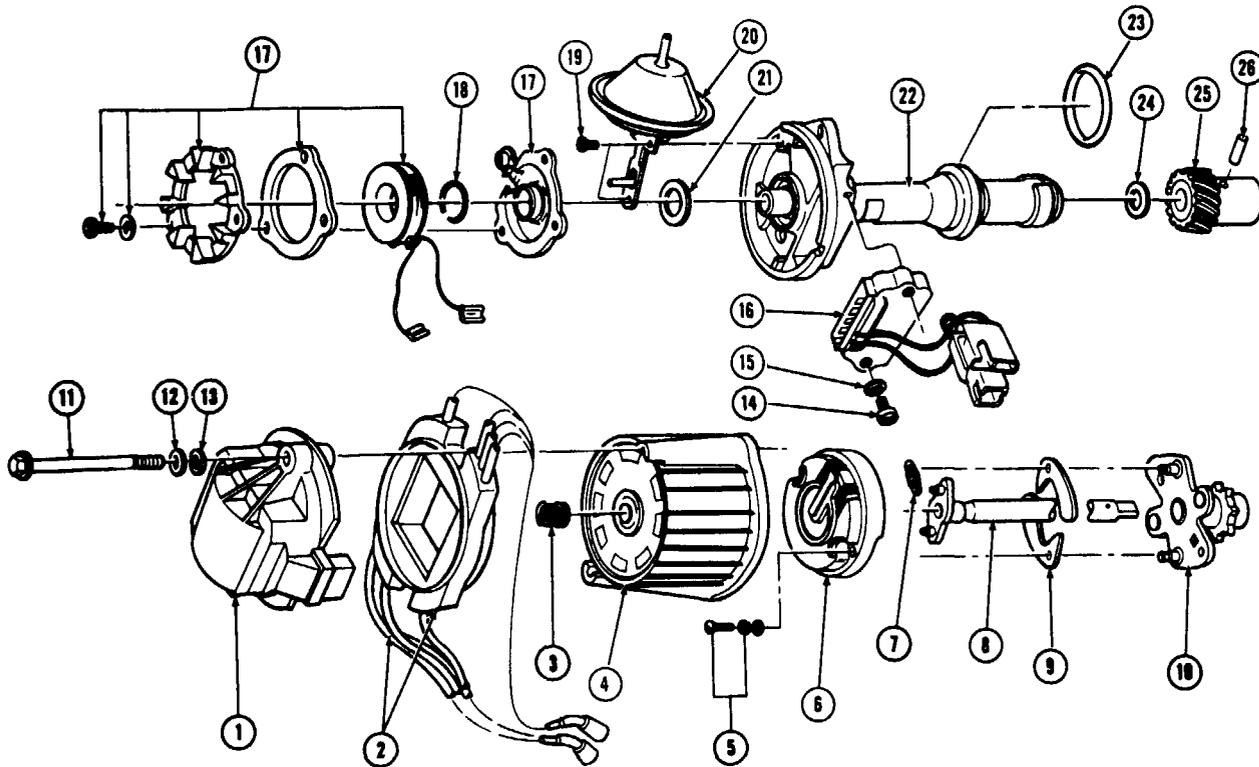


Key	Description	DISTRIBUTOR ASSEMBLY		Key	Description	DISTRIBUTOR ASSEMBLY	
		1112133	1112127			1112133	1112127
1	COIL ASM., Ignition	1847953	*	15	Lockwasher, Module Attaching Screw (#6)	S.S.	S.S.
2	CAP & HARNESS ASM., Distributor	8912126	*		WASHER, Module Attaching Screw (Plain)	810794	*
3	SPRING, Shell Contactor	1847942	*	16	MODULE, Ignition Control	1870953	*
4	SHELL, Distributor	1847978	*	17	POLE PIECE & PLATE ASM., Distributor	1847943	*
5	SCREW & LOCKWASHER, Rotor	N.L.A.	*	18	RETAINER, Pole Piece & Plate	1932024	*
6	ROTOR, Distributor	1847993	*	19	SCREW, Vacuum Control (#8x32 x 7/16")	S.S.	S.S.
7	SPRING, Dist. Weight	1968543	1852908	20	CONTROL ASM., Distributor Vacuum	1115364	1115365
8	SHAFT & CAM, Distributor	1852736	1852528	21	WASHER, Under Pole Piece & Plate — Felt	1951099	*
9	WEIGHT, Distributor	1881371	*	22	HOUSING, Distributor	1847997	*
10	POLE PIECE & WEIGHT BASE, Distributor	1852737	1852794	23	GASKET, Distributor to Block	1950569	*
11	BOLT, Coil to Base	1847941	*	24	WASHER, Distributor Thrust	1837617	*
12	WASHER, Coil Attaching Bolt	807295	*	25	GEAR, Distributor Driven	801200	*
13	LOCKWASHER, Coil Attaching Bolt	138479	*	26	PIN, Distributor Gear Attaching	456652	*
14	SCREW, Module Attaching (#6-32 x 3/4")	S.S.	S.S.				

* — Part Number is same as number in First Column

S.S. — Standard Stock.

1973 8 CYLINDER ENGINE DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 2)

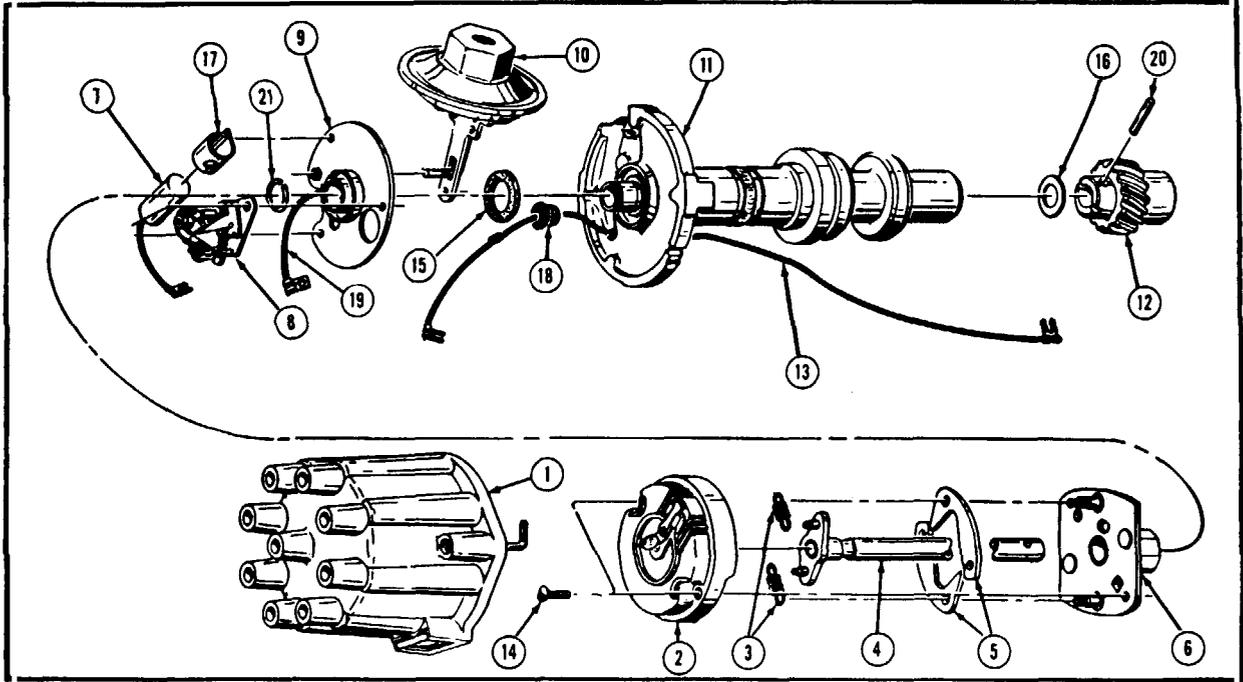

MAJOR PARTS

Distributor Assembly	Cap 1	Rotor 2	Spring Weight 3	Shaft 4	Weight 5	Cam 6	Con- denser 7	Contact Assem. 8	Plate Breaker 9	Control Vacuum 10	Housing 11	Gear 12	Lead Primary 13
1112121	800061	1971247	1912886	1852396	1852741	1961654	1932004	1966294	1876641	1115364	1967562	801200	1852969
1112126	"	"	1959443	1852400	1881371	1966244	"	"	"	"	"	"	"
1112140	"	1852722	1951343	1851341	"	1941849	"	1931988	"	"	"	"	"
1112189	"	"	1846802	800655	"	1965066	"	"	"	1115365	"	"	"
1112191	"	"	1852394	1851635	"	1945210	"	1966294	"	1973470	"	"	"
1112202	"	"	1851439	1870859	"	1966244	"	1931988	"	1973451	"	"	"
1112205	1971244	"	1875862	1875692	"	1847825	"	1966294	"	1973458	801752	801318	1875613
1112218	800061	"	1875862	1875692	1965843	1847825	"	"	"	1973458	"	"	1852969
1112231	"	"	1875862	1875692	1881371	1847825	"	"	"	1973458	"	801200	1875613
1112510	"	"	1969107	1852955	"	1961654	"	1931988	"	1973471	"	"	"
1112511	"	"	"	"	"	"	"	"	"	1973455	"	"	"


MINOR PARTS

Key	Description	1112121	1112126	1112140	1112189	1112191	1112202	1112205	1112218	1112231	1112510	1112511
14	Screw and Lockwasher, Rotor	N.L.A.	*	*	*	1852783	—	*	—	—	*	*
15	Washer - Felt/Under Plate/	1951099	*	*	*	*	*	*	*	*	*	*
16	Washer - Tang/Under Gear/	1837617	*	*	*	*	*	*	*	*	*	*
17	Bracket, Condenser	1869573	*	*	*	*	*	*	*	*	*	*
18	Grommet, Primary Lead	1932023	*	*	*	*	—	*	—	—	—	—
19	Lead, Breaker Plate Ground	1932002	*	*	*	*	*	*	*	*	*	*
20	Pin, Gear Attaching	456652	*	*	*	*	*	*	*	*	*	*
21	Spring, Greaser Plate Retainer	1932024	*	*	*	*	*	*	*	*	*	*
	Seal, Housing	1950569	*	*	*	*	*	*	*	*	*	*
	Screw, Shield Attaching	1846215	*	*	*	*	*	*	*	*	*	*
	Shield Pkg., Radio Freq. Attaching	1846216	*	*	*	*	*	*	*	*	*	*
	Sleeve, Spring Post	1945548	*	*	*	*	—	*	—	—	—	—
	Wick, Cam Lub.	1852935	*	*	*	*	*	*	*	*	*	*
	Retainer, Wick	1963858	*	*	*	*	*	*	*	*	*	*

* PART NUMBER IS SAME IN FIRST COLUMN.

1973 UNITIZED DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 2)

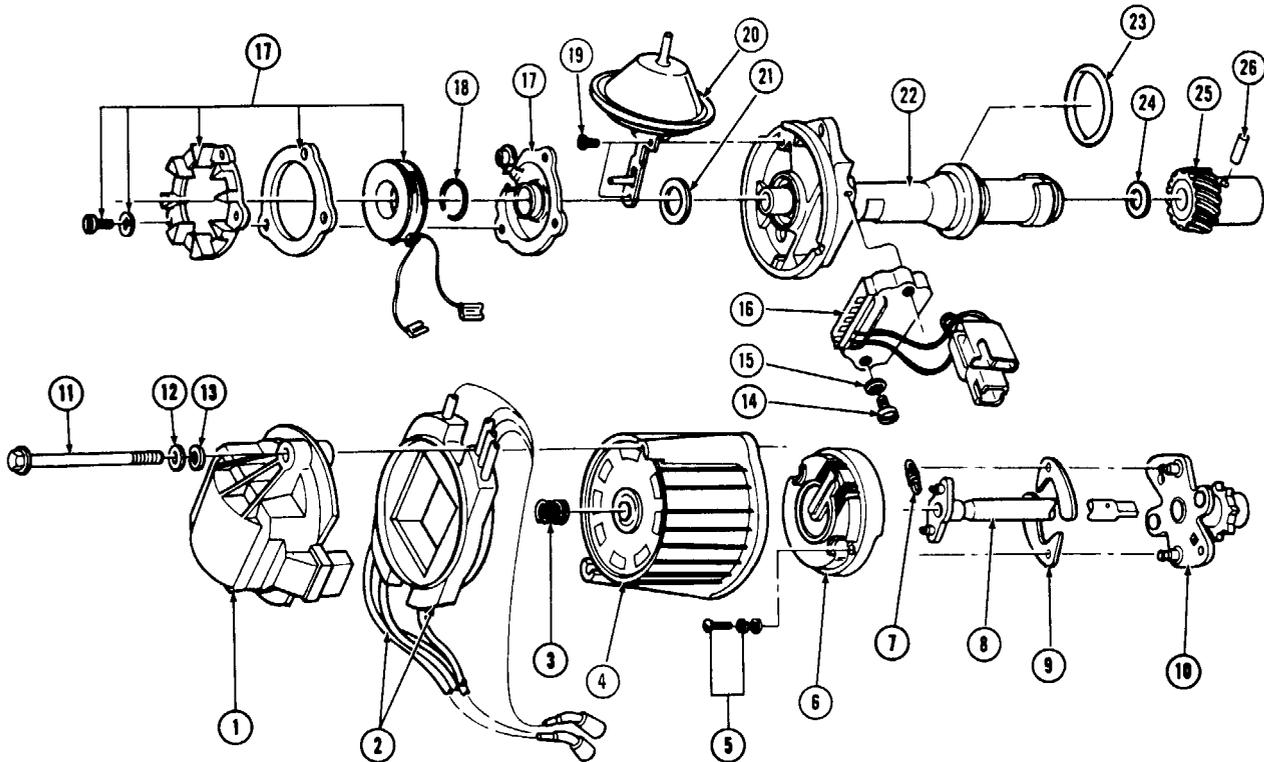


Key	Description	ASSEMBLY DISTRIBUTOR			Key	Description	DISTRIBUTOR ASSEMBLY		
		1112133	1112203	1112233			1112133	1112203	1112233
1	COIL ASM., Ignition	1847953	*	*	15	LOCKWASHER, Module Attaching Screw (#6)	456413	*	*
2	CAP & HARNESS ASM., Distributor	8912126	*	*		WASHER, Module Attaching Screw (Plain)	801200	*	*
3	SPRING, Shell Contactor	1847942	*	*	16	MODULE, Ignition Control	1847334	1870953	1870953
4	SHELL, Distributor	1847978	*	*	17	POLE PIECE & PLATE ASM., Distributor	1847943	*	*
5	SCREW & LOCKWASHER, Rotor	N.L.A.	*	*	18	RETAINER, Pole Piece & Plate	1932024	*	*
6	ROTOR, Distributor	1847993	*	*	19	SCREW, Vacuum Control (#8-32x ⁷ / ₁₆)	454408	*	*
7	SPRING, Dist. Weight	1968543	1867460	1875865	20	CONTROL ASM., Distributor Vacuum	1115364	1973470	1973458
8	SHAFT & CAM, Distributor	1852736	1870957	1870957	21	WASHER, Under Pole Piece & Plate — Felt	1951099	*	*
9	WEIGHT, Distributor	1881371	*	*	22	HOUSING, Distributor	1847997	*	*
10	POLE PIECE & WEIGHT BASE, Distributor	1852737	1875804	1875625	23	GASKET, Distributor to Block	1950569	*	*
11	BOLT, Coil to Base	1847941	*	*	24	WASHER, Distributor Thrust	1837617	*	*
12	WASHER, Coil Attaching Bolt	807295	*	*	25	GEAR, Distributor Driven	801200	*	*
13	LOCKWASHER, Coil Attaching Bolt	138479	—	—	26	PIN, Distributor Gear Attaching	456652	*	*
14	SCREW, Module Attaching (#6-32x ³ / ₄ "')	S.S.	S.S.	S.S.					

* — Part Number is same as number in First Column

S.S. — Standard Stock.

1974 8 CYLINDER ENGINE DISTRIBUTOR COMPONENT PARTS (FOR DISTRIBUTOR APPLICATION SEE DISTRIBUTOR CHART PAGE 2)

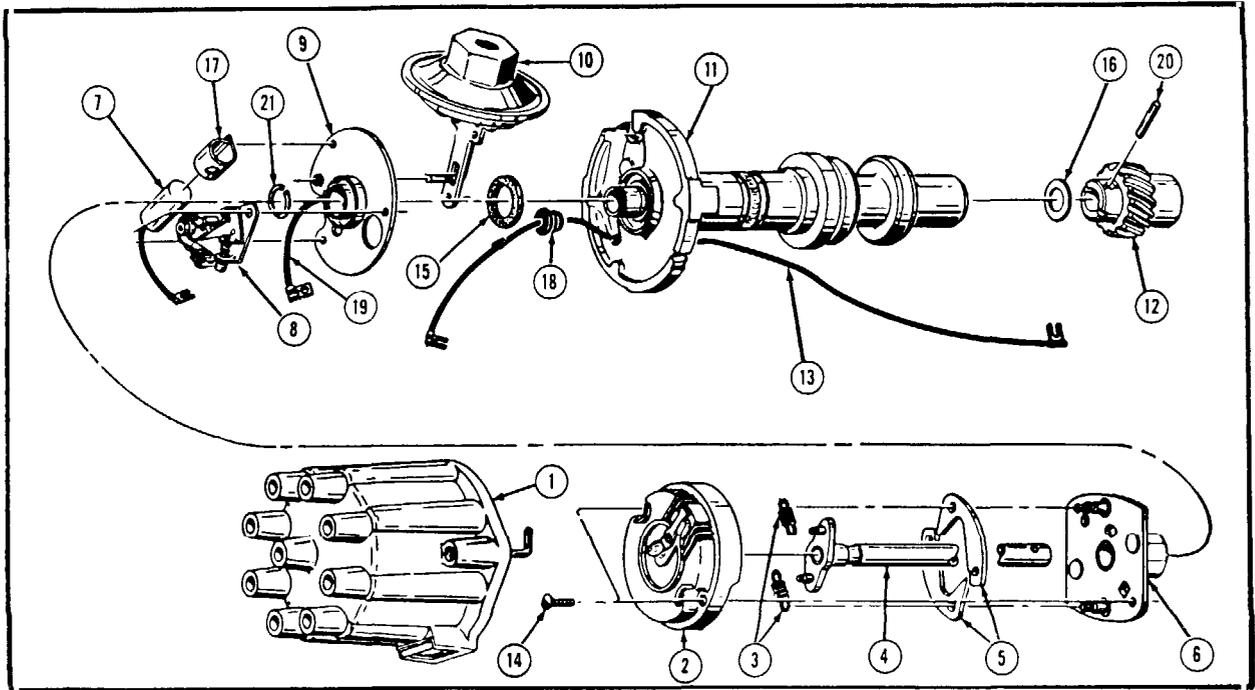

MAJOR PARTS

Distributor Assembly	Cap	Rotor	Spring Weight	Shaft	Weight	Cam	Condenser	Contact Assembly	Plate Breaker	Control Vacuum	Housing	Gear	Lead Primary
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112234	800061	1852722	See Note A	1875838	See Note A	See Note A	See Note B	1875838	1876641	1115364	1967562	801200	1875613
1112236	"	"	"	1870858	"	"	"	1870858	"	"	"	"	"
1112237	"	"	"	1870896	"	"	"	1870896	"	1115365	"	"	"
1112239	"	"	"	1875861	"	"	"	1875861	"	1973458	"	"	"
1112243	"	"	"	"	"	"	"	N.L.A.	"	"	801752	801318	"
1112512	"	"	"	"	"	"	"	N.L.A.	"	1115365	1967562	801200	"
1112513	"	"	"	1875608	"	"	"	N.L.A.	"	"	"	"	"

Note A — Incl. in Key #4.

Note B — Incl. in Key #8.


MINOR PARTS

Key	Description	1112234	1112236	1112237	1112239	1112243	1112512	1112513
14	SCREW & LOCKWASHER, Rotor	N.L.A.	*	*	*	—	*	*
15	WASHER, Felt, Under Plate	1951099	*	*	*	*	*	*
16	WASHER, Tang, Under Gear	—	—	—	—	—	—	—
17	BRACKET, Condenser	—	—	—	—	—	—	—
18	GROMMET, Primary Lead	1932023	*	*	*	*	*	*
19	LEAD, Breaker Plate Ground	1932002	*	*	*	*	*	*
20	PIN, Gear Attaching	455862	*	*	*	*	456652	456652
21	SPRING, Breaker Plate Retaining	1932024	*	*	*	*	*	*
	SEAL, Housing	1950569	*	*	*	*	*	*
	WICK, Cam Lub	1852935	*	*	*	*	*	*
	RETAINER, Felt Wick	1963858	*	*	*	*	*	*
	WASHER, Thrust, Under Gear	1837617	*	*	*	*	*	*

*—Part Number is same as number in first column.

1974 UNITIZED DISTRIBUTOR COMPONENT PARTS

(FOR DISTRIBUTOR ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 2)

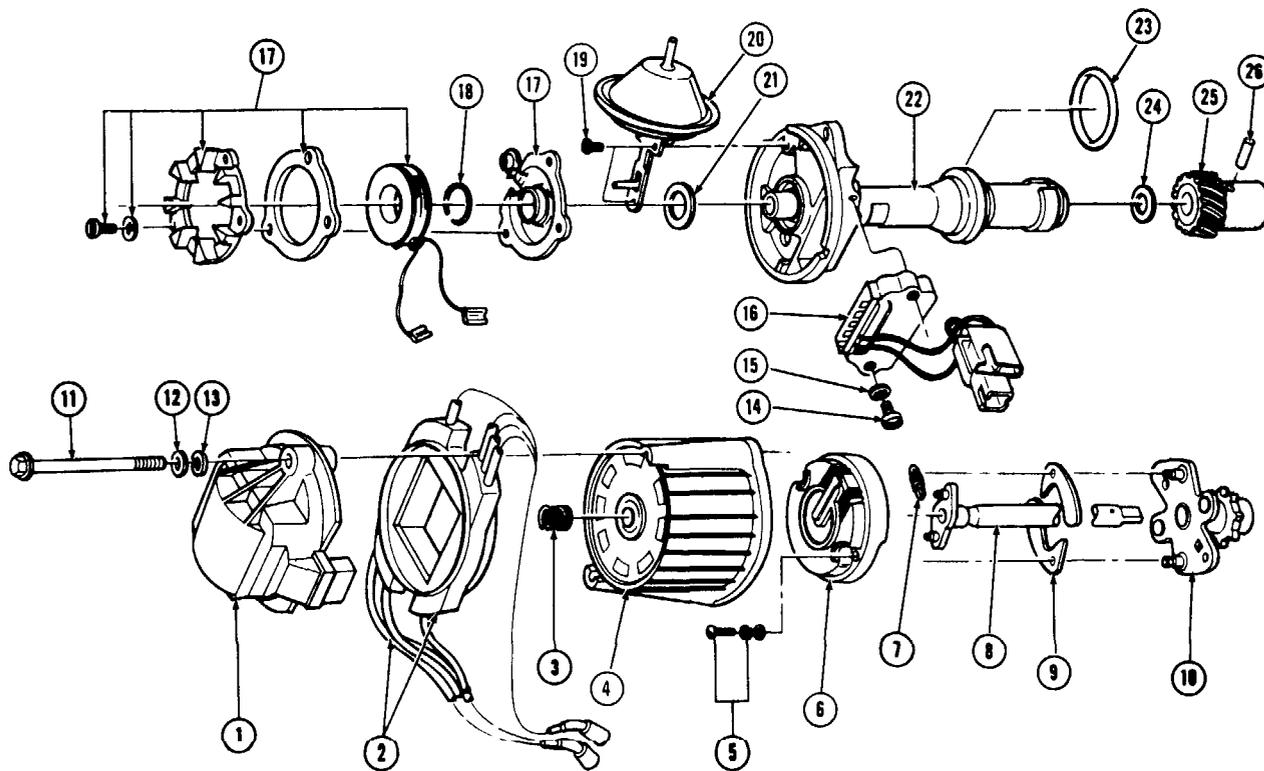


Key	Description	Distributor Assembly		Key	Description	Distributor Assembly	
		1112810	1112812			1112810	1112812
1	COIL ASSEMBLY, Ignition	1847953	*	16	MODULE, Ignition Control	1870953	*
2	CAP & HARNESS ASSY., Dist.	8912126	*	17	POLE PIECE & PLATE ASSEMBLY	1847943	*
3	SPRING, Shell Contactor	1847942	*	18	RETAINER, Pole Piece & Plate	1932024	*
4	SHELL, Distributor	1847978	*	19	SCREW, Vacuum Control	—	—
5	SCREW & LOCKWASHER, Rotor	N.L.A.	N.L.A.	20	CONTROL ASSEMBLY, Distributor Vacuum	1115365	*
6	ROTOR, Distributor	1847993	*	21	WASHER, Felt, Under Pole Piece & Plate ..	1951099	*
7	SPRING, Distributor Weight	1867460	1875865	22	HOUSING, Distributor	1847997	*
8	SHAFT & CAM, Distributor	1870957	*	23	GASKET, Distributor to Block	1950569	*
9	WEIGHT, Distributor	1881371	*	24	WASHER, Distributor Thrust	1837617	*
10	POLE PIECE & WEIGHT BASE, Dist.	1875804	1875625	25	GEAR, Distributor Driven	801200	*
11	BOLT, Coil to Base	1847941	*	26	PIN, Distributor Gear Attaching	456652	*
12	WASHER, Coil Attaching Bolt	807295	*		PLUNGER & SPRING, Cap	1847981	*
13	LOCKWASHER, Coil Attaching Bolt	138479	*		BUTTON, Nylon	1957329	*
14	SCREW, Module Attaching	S.S.	S.S.		SLEEVE, Spring Post	1961234	—
15	LOCKWASHER, Module Attaching Screw ..	—	—		WASHER, Shim, Under Base	1912129	—
	WASHER, Module Attaching Screw - Plain	810794	*				

*—Part Number is same as number in first column.
 S.S.—Standard Stock.

1975-76 DISTRIBUTOR COMPONENT PARTS

(FOR SERVICE ASSEMBLY APPLICATION REFER TO DISTRIBUTOR CHART PAGE 2A)

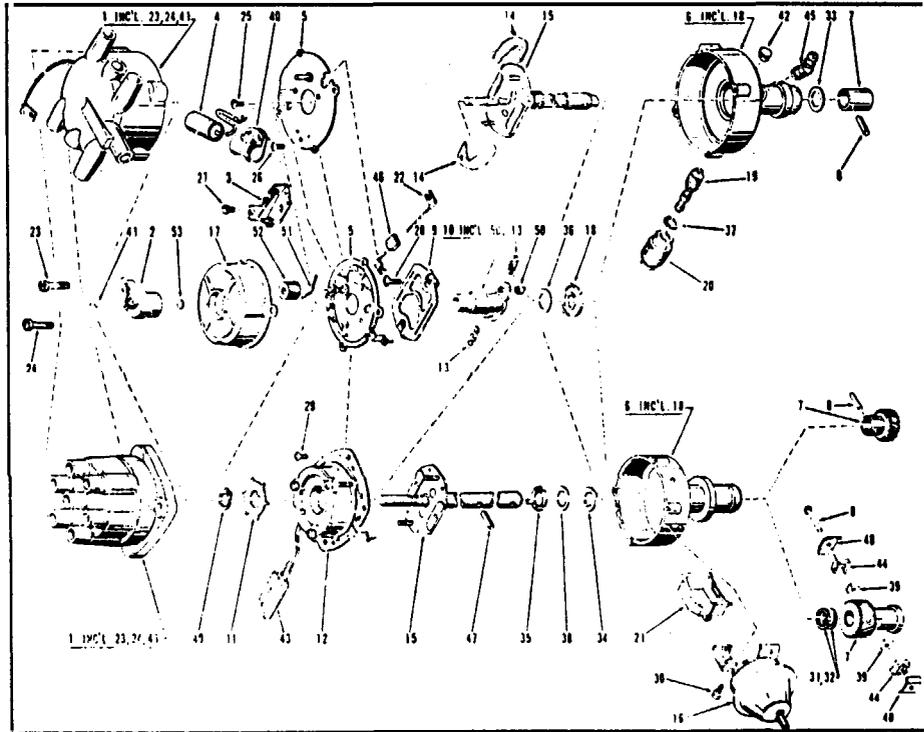

Illustrations are of Typical Parts only. For Parts not illustrated or in columns see Minor Parts Section.

Assembly No.	Cap	Rotor	Contact Assembly	Con-denser	Plate Breaker	Housing	Coupling Collar or Gear	Pin	Plate Weight Hold Down	Cam	Pole Piece Rotor
	1	2	3	4	5	6	7	8	9	10	11
1112863	1880042	1880011	—	1876154	—	1880038	1955676	455862	—	—	—


Assembly No.	Coil Assembly	Spring Weight	Weight	Shaft	Vacuum Control	Dust Seal Cover	Seal Housing	Gear & Shaft Tach.	Coupling Tach.	Boot Vacuum Control	Lead Primary
	12	13	14	15	16	17	18	19	20	21	22
1112863	1880040	1891100	1891100	1891100	1973517	—	1950569	—	—	—	—

MINOR PARTS SECTION

KEY	DESCRIPTION	1112863
23	SCREW, Cap Attaching (# 8-32)	—
24	SCREW, Cap Attaching (# 10-32)	—
25	SCREW, Capacitor Bracket Attaching	1876639
26	SCREW, Circuit Breaker Plate Attaching	—
27	SCREW, Contact Adjusting	—
28	SCREW, (& L.W.), Hold Down Plate Attaching	—
30	SCREW, Vacuum Control Attaching	1891239
36	WASHER, Under Weight Base	—
40	BRACKET, Capacitor	1869573
41	BUTTON, Carbon	1938193
46	GROMMET, Rubber-In Housing	—
50	SLEEVE, Rubber-Spring Post	—
51	SPRING, Circuit Breaker Plate	—
52	WICK, Oil — Cam Lubricator	—
53	WICK — In Rotor	—
—	HARNESSES, Module to Coil	1880021
—	MODULE	1875990
—	RETAINER, Harness	1891074
—	RETAINER, Pole Piece & Plate Assy.	830446



1975-76 DISTRIBUTOR COMPONENT PARTS

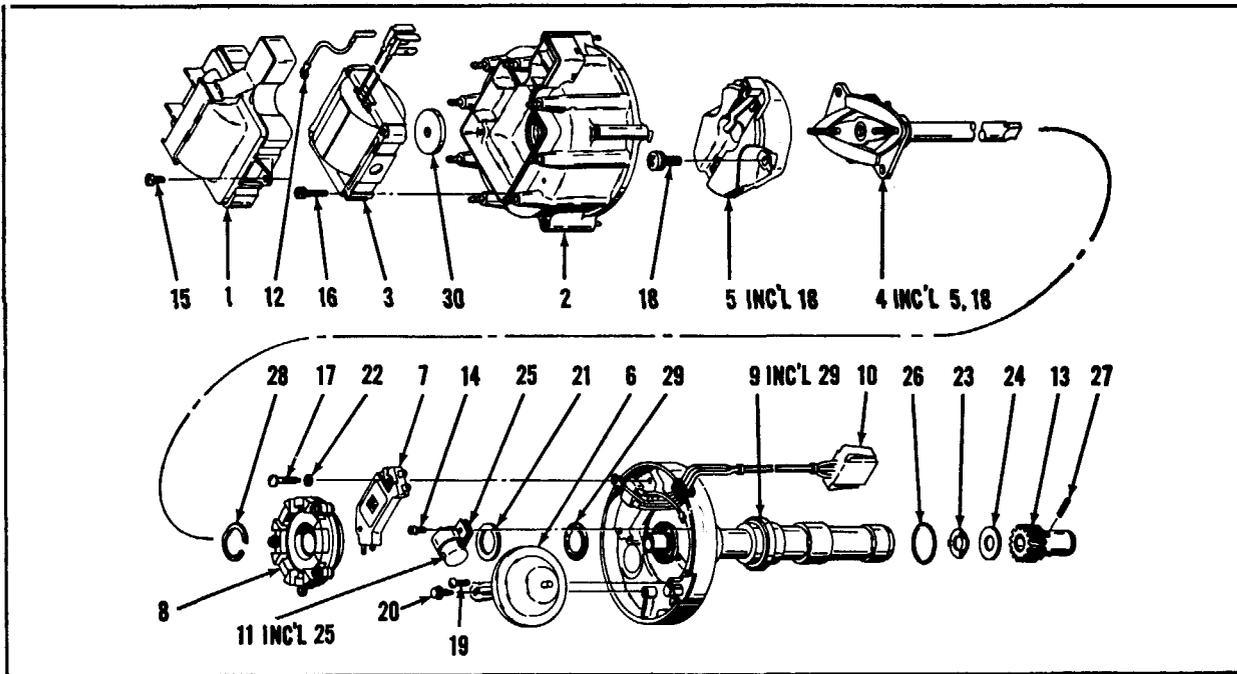


Illustrations are of Typical Parts only. For parts not illustrated or in columns see Minor Parts Section.

Model	Cover — Cap	* Cap	Coil Assem.	Shaft Assem.	Rotor	Control — Vacuum	Module	Pole Pc. & Plate	Housing	Harness	Capacitor	Lead — Ground	Gear
	1	2	3	4	5	6	7	8	9	10	11	12	13
1112495	1875960	1875963	1876209	830902	1891080	1973493	1875990	1876495	1876517	830282	1876154	1876155	801200
1112497	1875960	1875963	1876209	1891060	1891080	1973514	1875990	1876495	1876517	830282	1876154	1876155	801200
1112498	1875960	1875963	1876209	1891057	1891080	1973546	1875990	1876495	1876517	830282	1876154	1876155	801200
1112928	1875960	1875963	1876209	1891064	1891080	1973496	1875990	1876495	1876517	830282	1876154	1876155	801200
1112946	1875960	1875963	1876209	1891058	1891080	1973561	1875990	1876495	1876517	830282	1876154	1876155	801200
1112947	1875960	1875963	1876209	1891058	1891080	1973562	1875990	1876495	1876517	830282	1876154	1876155	801200
1112950	1875960	1875963	1876209	1891060	1891080	1973556	1875990	1876495	1876517	830282	1876154	1876155	801200

MINOR PARTS SECTION

KEY	DESCRIPTION	1112495	1112497	1112498	1112928	1112946	1112947	1112950
14	SCREW, Capacitor Bracket Attaching	1876639	1876639	1876639	1876639	1876639	1876639	1876639
15	SCREW, Distributor Cap Cover Attaching	1876153	1876153	1876153	1876153	1876153	1876153	1876153
16	SCREW, Ignition Coil Attaching	1875961	1875961	1875961	1875961	1875961	1875961	1875961
17	SCREW, Module Attaching	1891234	1891234	1891234	1852934	1871234	1871234	1871234
18	SCREW, Rotor Attaching	1875948	1875948	1875948	1875948	1875948	1875948	1875948
19	SCREW, Vacuum Control Attaching	—	—	—	—	—	—	—
20	SCREW, Vacuum Control Attaching	1891239	1891239	1891239	1891239	1891239	1891239	1891239
21	WASHER, Felt-Under Pole Piece & Plate	1951099	1951099	1951099	1951099	1951099	1951099	1951099
23	WASHER, Tang-Under Distributor Housing	—	—	—	1965864	—	—	—
24	WASHER, Thrust-Under Distributor Housing	1837617	1837617	1837617	1837617	1837617	1837617	1837617
25	BRACKET, Capacitor	1869573	1869573	1869573	1869573	1869573	1869573	1869573
—	BRUSH — Resistor — In Cap	1875967	1875967	1875967	1875967	1875967	1875967	1875967
26	O RING, Distributor Housing Stem	—	—	—	—	—	—	—
27	PIN, Gear Attaching	456652	456652	456652	—	456652	456652	456652
28	RETAINER, Pole Piece & Plate	830446	830446	830446	830446	830446	830446	830446
29	SEAL, Distributor Housing	1950569	1950569	1950569	1950569	1950569	1950569	1950569
30	SEAL, Under Ignition Coil	1875962	1875962	1875962	1875962	1875962	1875962	1875962

1976 DISTRIBUTOR COMPONENT PARTS
(For Distributor Assembly Application Refer to Distributor Chart 2A)

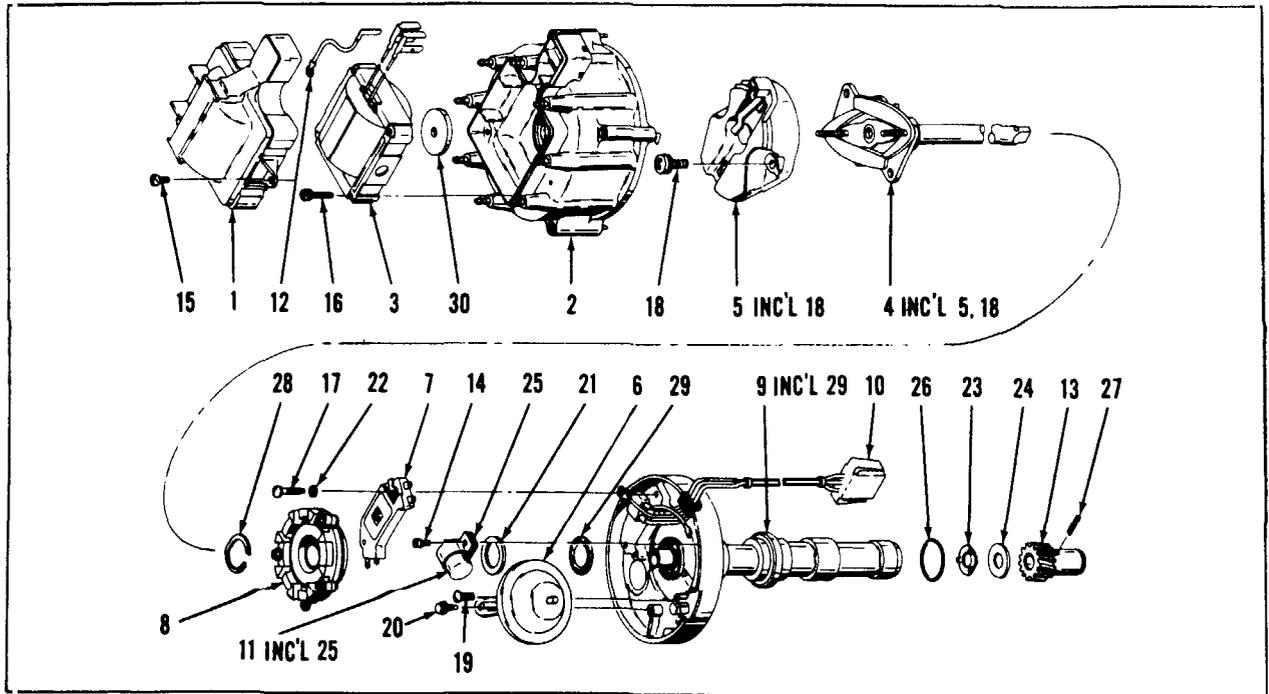


Illustrations are of Typical Parts Only. For Parts not illustrated or in columns see Minor Parts Section.

Model	Cover Cap	Cap	Coil Assy.	Shaft Assy.	Rotor	Control Vacuum	Module	Plate Assy. Pole Piece	Housing	Harness	Capacitor	Lead Ground	Gear
Assembly	1	2	3	4	5	6	7	8	9	10	11	12	13
1112923	1875960	1875963	1876209	830787	1891080	1973493	1875990	1876495	1876517	830282	1876154	1876155	801200


MINOR PARTS SECTION

Key	Description	1112923
14	Screw—Capacitor Bracket Attach	1876639
15	Screw—Dist. Cap Cover Attach	1876153
16	Screw—Ignition Coil Attach	1875961
17	Screw—Module Attach	1891234
18	Screw—Rotor Attach	1875948
19	Screw—Vacuum Control Attach	1891239
20	Screw—Vacuum Control Attach	1891239
21	Washer—Felt—Under Pole Piece & Plate	1951099
22	Washer—Plain—Module Attach Screw	—
23	Washer—Tang—Under Dist. Hsg.	1965864
24	Washer—Thrust—Under Dist. Hsg.	1837617
25	Bracket—Capacitor	1869573
	Brush—Resistor—In Cap	1875967
26	“O” Ring—Dist. Hsg. Stem	—
27	Pin—Gear Attach	456652
28	Retainer—Pole Piece and Plate	830446
29	Seal—Distributor Housing	1950569
30	Seal—Under Ignition Coil—(Rubber)	1875962

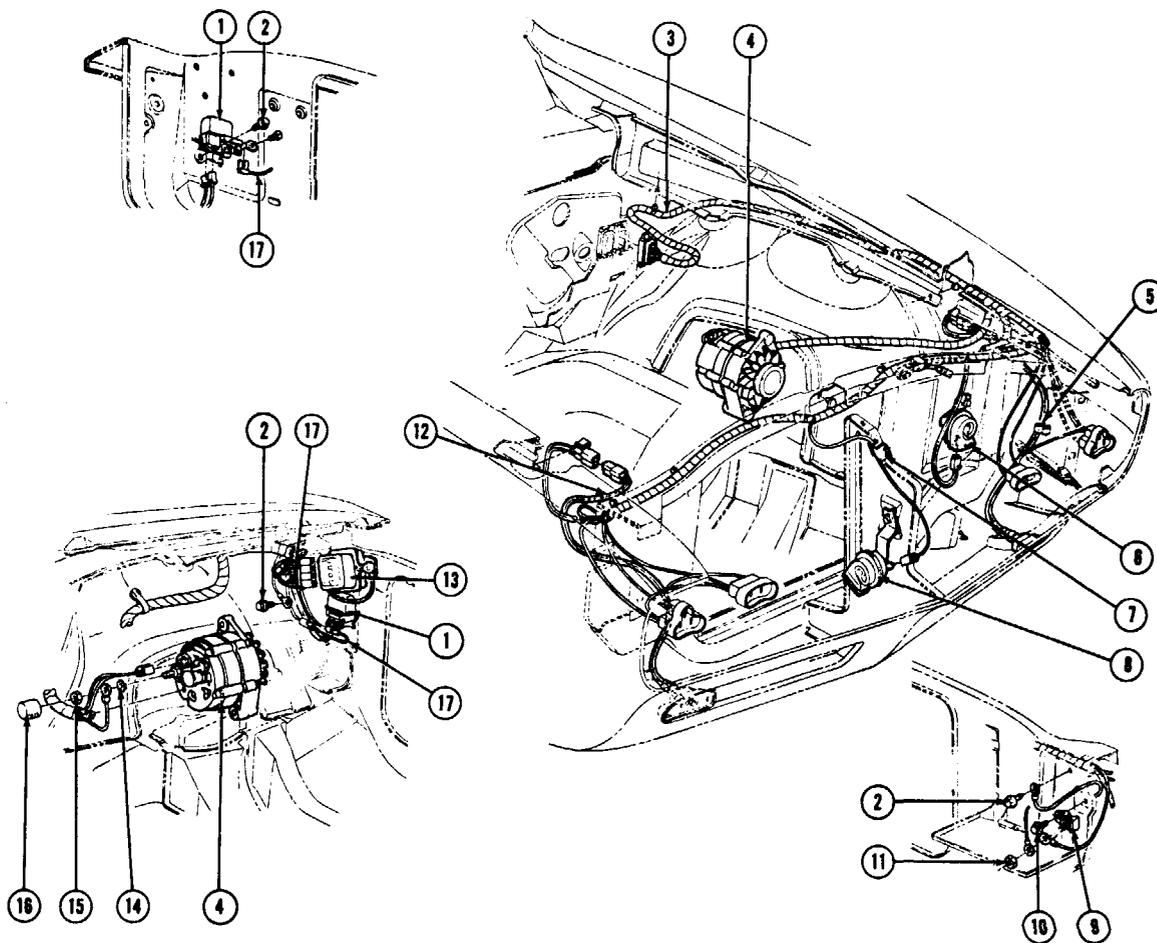


1967-68 FIREBIRD ELECTRICAL PARTS—FRONT END WIRE HARNESS

Key	Part Name	Group No.
1	RELAY ASM., Horn	2.815
2	SCREW, Relay to Support (1/4"-14 x 5/8")	N.S.
3	HARNESS, Front End	2.480
4	DELCOTRON ASSEMBLY	2.275
5	CLIP, Parking Lamp Wire to Supt.	N.S.
6	HORN ASM., High Note - L.H.	2.810
7	CLIP, Wire to Support	2.559
8	HORN ASM., Low Note - R.H.	2.810
9	BLOCK ASM., Junction	2.483
10	SCREW, Junction Block to Support (#8-18 x 1/2")	8.977
11	NUT & WASHER ASM., Circuit Wire to Block (#10-24)	N.S.
12	LAMP ASM., Parking	2.585
13	REGULATOR ASM., Voltage	2.500
14	LOCKWASHER, Harness to Delcotron (#12 Ext.)	N.S.
15	NUT, Harness to Delcotron (#12-24)	8.915
16	COVER, Delcotron Battery Protective	2.313
17	WIRE, Fusible Link	2.480

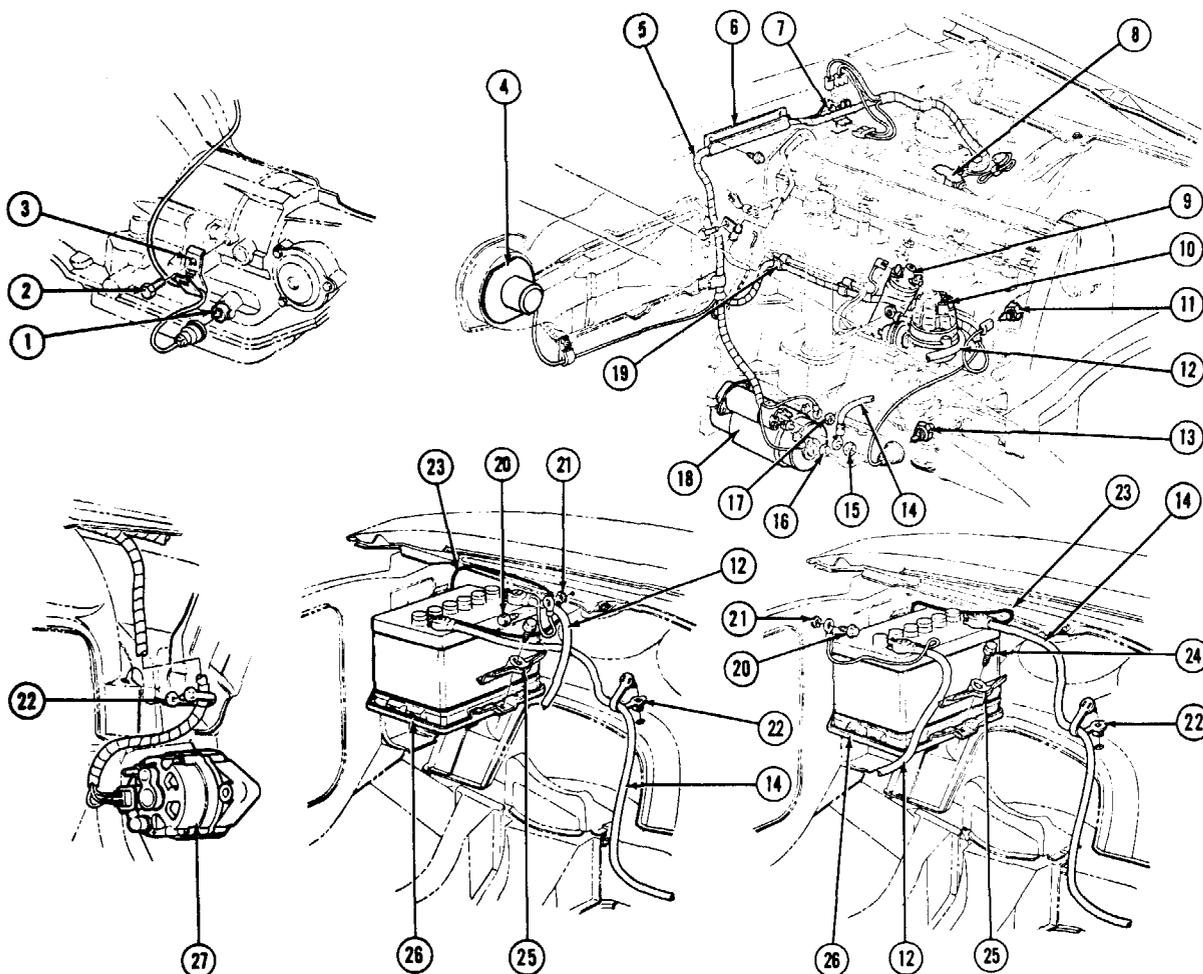


1967-68 FIREBIRD O.H.C. 6 CYLINDER ENGINE ELECTRICAL PARTS— ENGINE COMPARTMENT

Key	Part Name	Group No.	Key	Part Name	Group No.
1	CONNECTOR, Downshift Solenoid Valve	4.216	16	NUT, Starter Motor Terminal (#10-32)	8.916
2	SCREW, Downshift Lead Clip to Hsg. (#10-24 x 3/8")		17	NUT, Starter Motor Terminal (#8-32)	8.915
3	CLIP, Downshift Lead	4.060	18	MOTOR ASM., Starter	2.041
4	MOTOR ASM., Heater Blower	8.855	19	CLIP, Engine Wire Harness	2.482
5	HARNES, Engine	2.480	20	SCREW, Ground to Fender (1/4"-14 x 5/8")	N.S.
6	RETAINER, Engine Wire Harness	N.S.	21	LOCKWASHER, Ground to Fender (1/4" Int.-Ext.)	N.S.
7	MOTOR ASM., Windshield Wiper	10.150	22	CLIP, Harness to Cross Brace & Baffle (2-1/4" Plastic)	2.482
8	DISTRIBUTOR & SWITCH ASM., Brake Pipe	4.874	23	WIRE, Fusible Link	2.480
9	COIL ASM., Ignition	2.170	24	SCREW, Battery Clamp to Tray (5/16"-18 x 1")	8.977
10	DISTRIBUTOR, Ignition	2.361	25	CLAMP, Battery Retainer	2.335
11	SWITCH, Engine Water Thermo. - 248°	1.150	26	TRAY ASM., Battery	2.333
12	CABLE ASM., Battery Ground	2.341	27	DELCO TRON ASSEMBLY	2.227
13	SWITCH ASM., Oil Pressure	1.800			
14	CABLE ASM., Battery to Starter Motor	2.342			
15	NUT, Starter Motor Terminal (3/8"-16)	8.915			

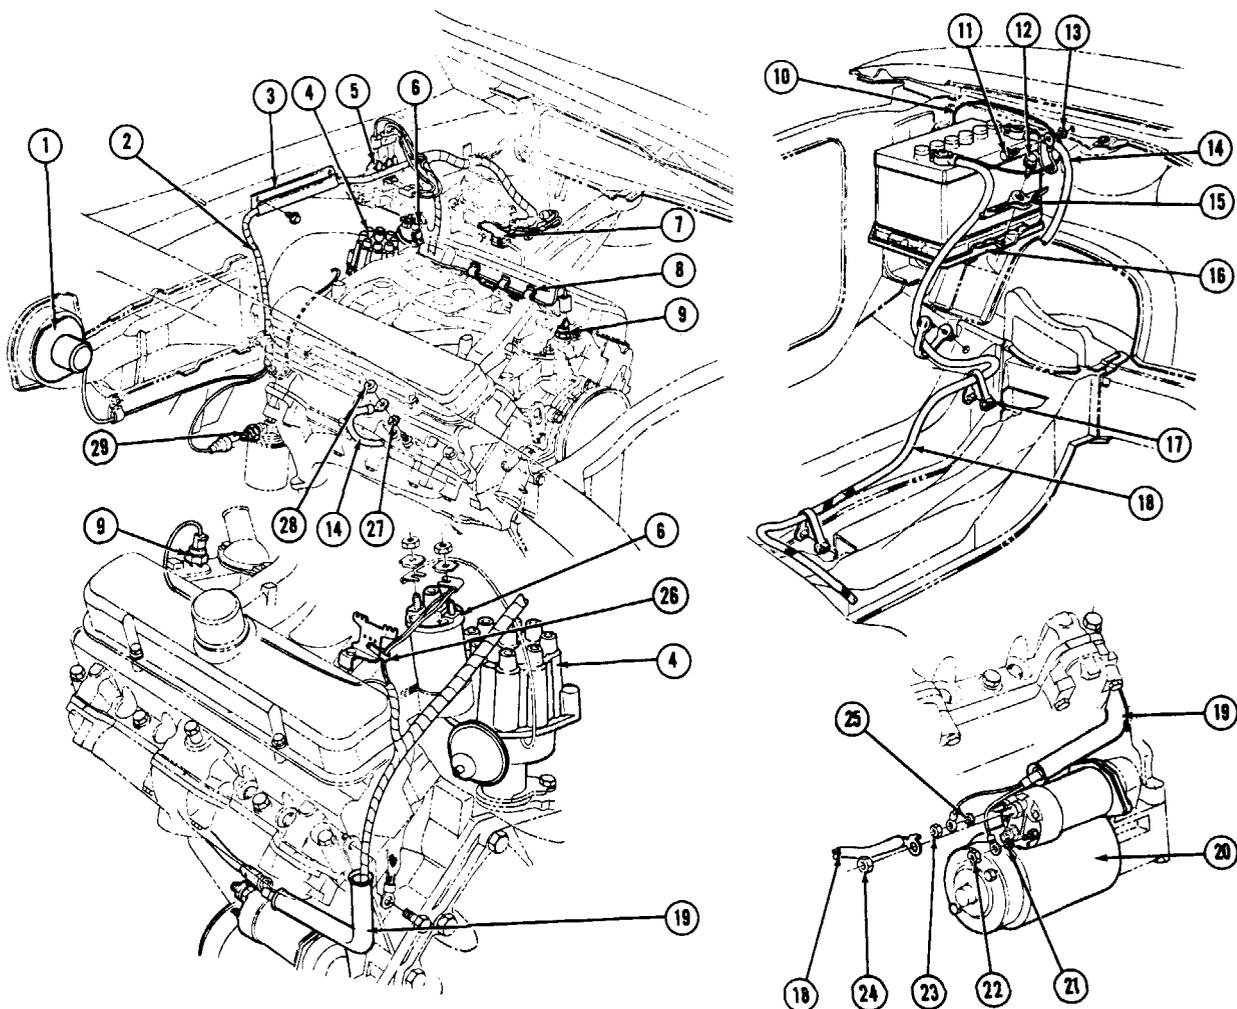

1967-68 FIREBIRD 8 CYLINDER ELECTRICAL PARTS—ENGINE COMPARTMENT

Key	Part Name	Group No.	Key	Part Name	Group No.
1	MOTOR ASM., Heater Blower	8.855	16	TRAY ASM., Battery	2.333
2	HARNES, Engine	2.480	17	CLIP, Harness to Cross Brace & Baffle (2-1/4" Plastic)	2.482
3	RETAINER, Engine Wire Harness	N.S.	18	CABLE, Battery to Starter Motor	2.342
4	DISTRIBUTOR, Ignition	2.361	19	SHIELD ASM., Starter Motor Wire	2.343
5	MOTOR ASM., Windshield Wiper	10.150	20	MOTOR ASM., Starter	2.041
6	COIL ASM., Ignition	2.170	21	LOCKWASHER, Starter Motor Terminal (#8 Ext.)	8.932
7	DISTRIBUTOR & SWITCH ASM., Brake Pipe	4.874	22	NUT, Starter Motor Terminal (#8-32)	8.915
8	RETAINER, Delcotron Wires to Rocker Arm Cover	2.482	23	NUT, Starter Motor Terminal (#10-32)	8.916
9	SWITCH, Engine Water Thermo. - 248°	1.150	24	NUT, Starter Motor Terminal (3/8"-16)	8.915
10	WIRE, Fusible Link	2.480	25	LOCKWASHER, Starter Motor Terminal (#10 Ext.)	8.932
11	SCREW, Ground to Fender (1/4"-14 x 5/8")	N.S.	26	RETAINER, Engine Wire to Bracket	N.S.
12	SCREW, Battery Clamp to Tray (5/16"-18 x 1")	8.977	27	LOCKWASHER, Ground Cable to Block (3/8" Ext.)	8.932
13	LOCKWASHER, Ground to Fender (1/4" Int.-Ext.)	N.S.	28	NUT, Ground Cable to Block (3/8"-16)	8.915
14	CABLE ASM., Battery Ground	2.341	29	SWITCH ASM., Oil Pressure	1.800
15	CLAMP, Battery Retainer	2.335			

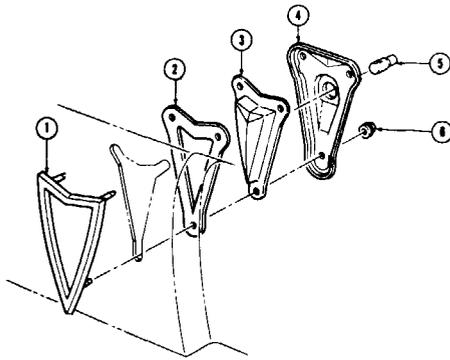


1968 REAR QUARTER SIDE MARKER LAMPS

Key	Description	Group
1	Bezel, Rear Side Marker Lamp	2.575
2	Gasket, Rear Side Marker Lamp Mounting	2.575
3	Lens, Rear Side Marker Lamp	2.575
4	Housing, Rear Side Marker Lamp	2.575
5	Bulb (#194)	8.991
6	Nut—#10	8.921

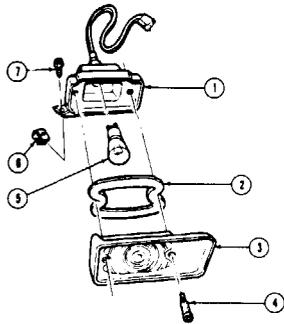


1967-68 PARKING AND SIGNAL LAMP

Key	Description	Group
1	Housing, Parking and Signal Lamp	—
2	Gasket, Parking Lamp Lens	2.590
3	Lens, Parking Lamp	2.589
4	Screw, Parking Lamp Lens	2.594
5	Bulb (#1157A)	8.991
6	Nut, Parking Lamp to Valance Panel	2.587
7	Screw, Parking Lamp to Valance— #10-16 x 1/2 Hex.	8.977

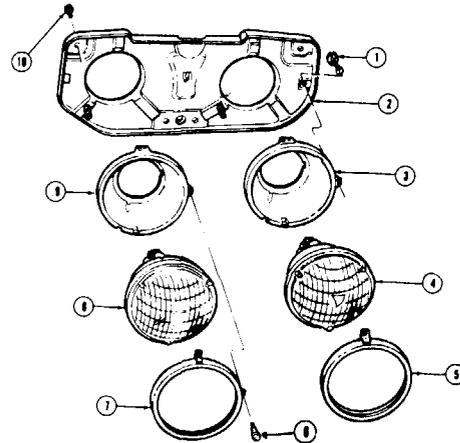


1967-68 HEADLAMPS

Key	Description	Group
1	Screw Assy., Headlamp Adjuster	2.737
2	Body Assy., Headlamp	—
3	Ring, Headlamp Mounting—Outboard	2.726
4	Sealed Beam Unit, Headlamp—Type 2	2.727
5	Ring, Headlamp Retaining	2.731
6	Screw, Headlamp Mounting Ring	2.736
7	Ring, Headlamp Retaining	2.731
8	Sealed Beam Unit, Headlamp—Type 1	2.727
9	Ring, Headlamp Mounting—Inboard	2.726
10	Screw, Headlamp Mounting—1/4-20 x 3/8 Hex.	—

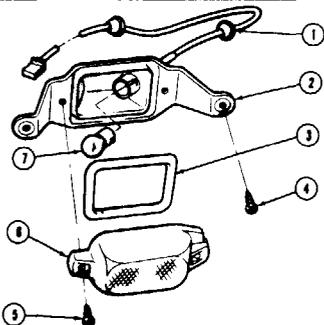


1967-68 LICENSE LAMPS

Key	Description	Group
1	Grommet, License Lamp Wire to Bracket	2.708
2	Housing, License Lamp	—
3	Gasket, License Lamp Lens	2.707
4	Screw, License Lamp Mounting— #10-16 x 3/4	8.977
5	Screw, License Lamp Lens— #8-18 x 3/8	8.977
6	Lens, License Lamp	2.709
7	Bulb, License Lamp (#67)	8.991

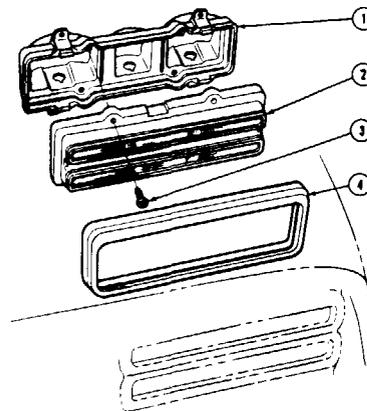

1967-68 TAIL LAMPS


Key	Description	Group
1	Housing, Tail Lamp	2.681
2	Lens, Tail Lamp	2.682
3	Screw, Tail Lamp Lens	2.688
4	Gasket, Tail Lamp Lens	2.684

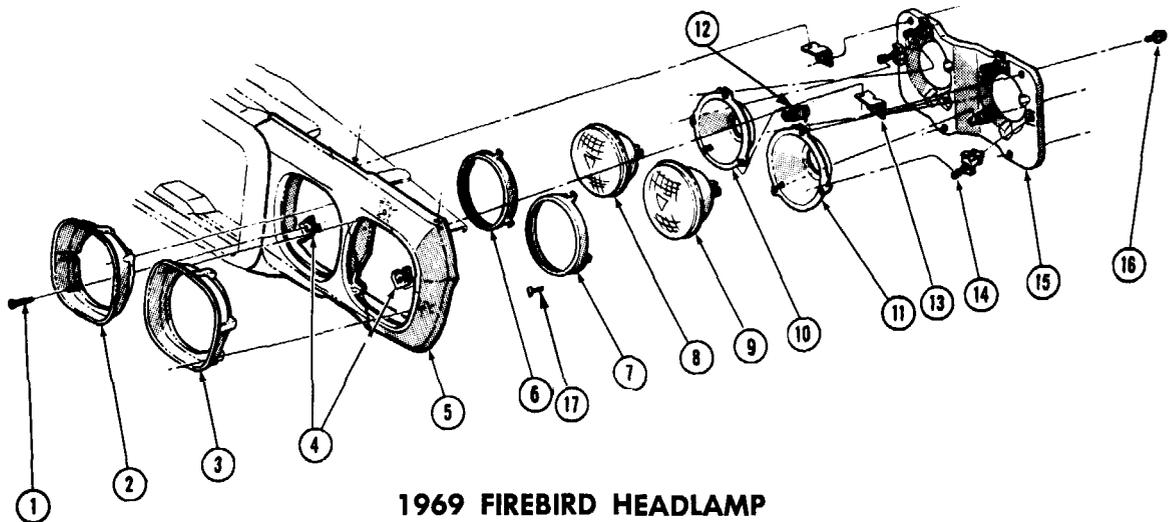

1969 FIREBIRD HEADLAMP


Key	Description	Group
1	Screw	Cat907-A
2	Bezel, Headlamp—Inner	2.728
3	Bezel, Headlamp—Outer	2.728
4	Nut, Headlamp—Inner and Outer Bezel	2.729
5	Bar, Front Bumper Impact—Outer	7.831
6	Ring, Headlamp Retaining—Inner	2.731
7	Ring, Headlamp Retaining—Outer	2.731
8	Sealed Beam Unit, Headlamp—Inboard	2.727
9	Sealed Beam Unit, Headlamp—Outboard	2.727

Key	Description	Group
10	Ring, Headlamp Mounting—Inner	2.726
11	Ring, Headlamp Mounting—Outer	2.726
12	Spring, Headlamp Adjusting	2.737
13	Bracket, Headlamp Body Mounting	2.726
14	Screw Assy., Headlamp Adjuster —With Nut	2.737
15	Body, Headlamp	2.726
16	Screw	S.S.
17	Screw, Headlamp Retaining Ring	2.736

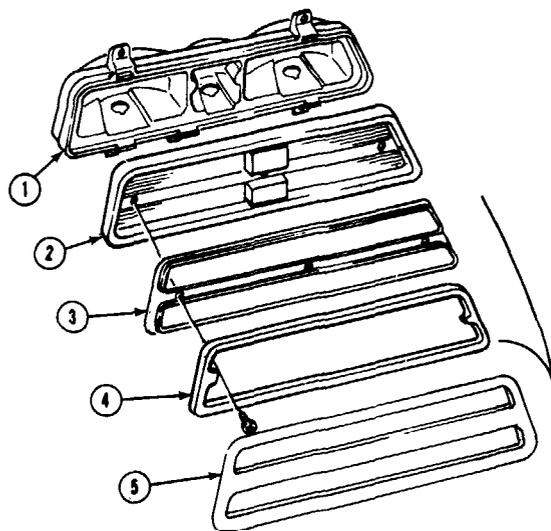


1969 FIREBIRD TAIL LAMPS


Key	Description	Group
1	Housing, Tail Lamp—Right	2.681
	—Left	2.681
2	Lens, Tail Lamp	2.682
3	Ornament, Tail Lamp Lens	2.680
4	Gasket, Tail Lamp Mounting	2.660
5	Screw, Tail Lamp Lens Ornament	2.680

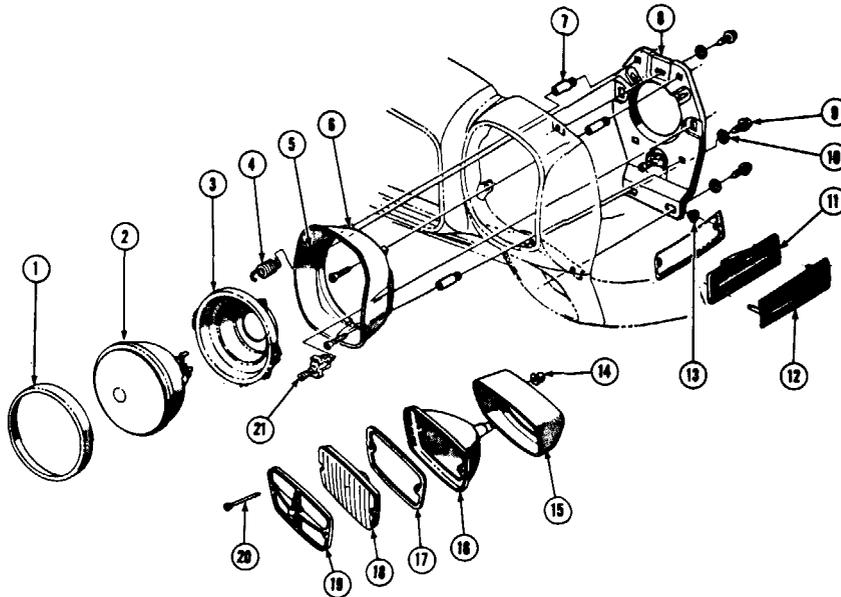
1970-73 FIREBIRD FRONT LAMPS

Key	Description	Group	Key	Description	Group
1	Ring, Headlamp Retaining	2.731	12	Bezel, Front Side Marker Lamp	2.575
2	Sealed Beam Unit, Headlamp	2.727	13	Nut	
3	Ring, Headlamp Mounting	2.726	14	Nut, Parking Lamp to Valance Panel ...	2.587
4	Spring, Headlamp Adjusting	2.737	15	Filler, Parking Lamp	2.587
5	Screw, Headlamp Bezel Retaining		16	Reflector & Wiring Assy., Parking Lamp...	
6	Bezel, Headlamp	2.728	17	Gasket, Parking Lamp Lens	2.590
7	Nut, Headlamp Inner & Outer Bezel	2.729	18	Lens, Parking Lamp	2.589
8	Body Assy., Headlamp	2.726		—1973, Part of Housing and Lens	—
9	Screw, Headlamp Body to Panel		19	Bezel, Parking Lamp	2.593
10	Washer, Headlamp Body Screw		20	Screw, Parking Lamp Lens	2.594
11	Lamp Assy., Side Marker	2.575	21	Screw Assy., Headlamp Adjuster	2.737

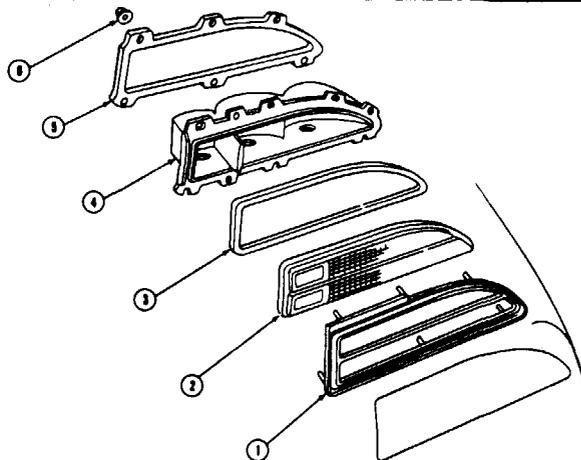
1970-73 FIREBIRD TAIL LAMP


Key	Description	Group
1	Bezel, Tail Lamp	2.681
2	Lens, Tail Lamp — 1970	2.682
	— 1971-73	2.682
3	Gasket, Tail Lamp Lens	2.684
4	Housing, Tail Lamp—1970-72—Part of Lamp Assy., 917946-5	
	—1973	2.681
5	Gasket, Tail Lamp Mounting	2.660
6	Nut — for 1/4 in. Stud	

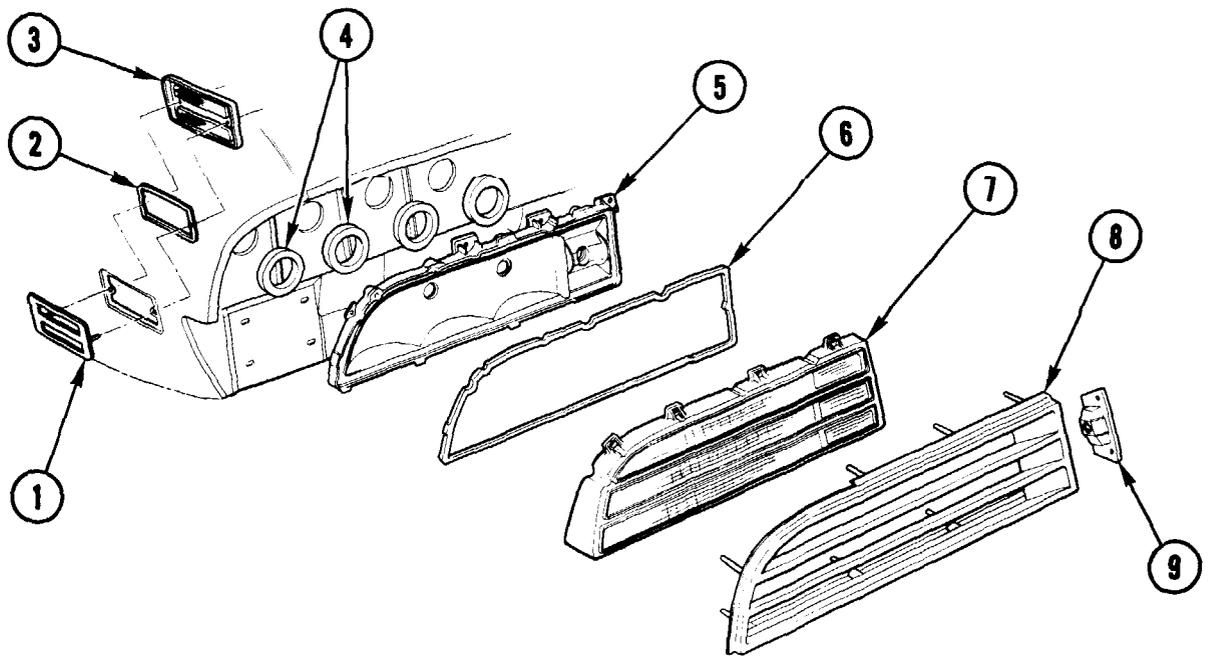

1976 — REAR LAMPS

Key	Description	Group
1	BEZEL, Rear Side Marker Lamp	2.575
2	GASKET, Rear Side Marker Lamp Mounting	2.575
3	LAMP, Side Marker—Rear	2.575
4	GASKET, Tail Lamp Mounting	2.660
5	HOUSING, Tail Lamp	2.681
6	GASKET, Tail Lamp Lens	2.684
7	LENS, Tail Lamp	2.682
8	BEZEL ASSEMBLY, Tail Lamp	2.681
9	LAMP ASSEMBLY, Rear License	2.700


1974-76 FIREBIRD FRONT LAMPS

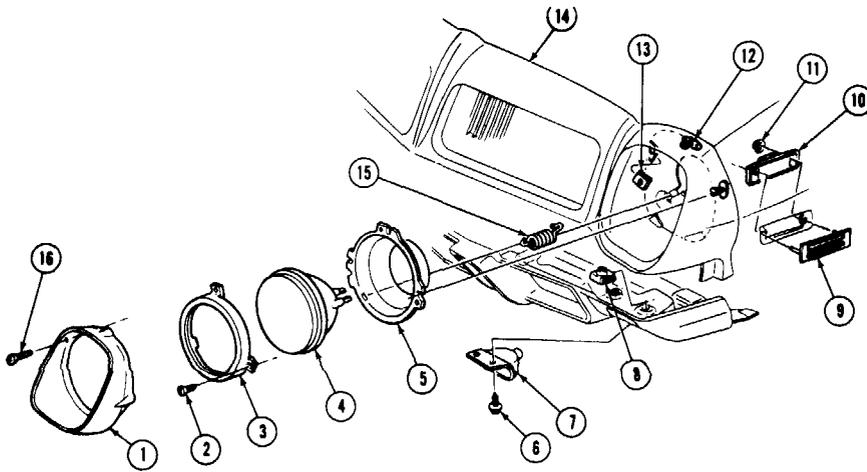



Key	Description	Group
1	BEZEL, Headlamp	2.728
2	SCREW, Mounting Ring	2.736
3	RING, Lamp Retaining	2.731
4	SEALED BEAM UNIT, Headlamp	2.727
5	RING, Lamp Mounting	2.726
6	SCREW, Lamp to Valance (#8-18 x 3/4")	8.977
7	LAMP ASM., Parking	2.585
8	NUT, Lamp to Valance (#8-18 "U")	8.921
9	BEZEL, Front Marker Lamp	2.575

Key	Description	Group
10	LAMP ASM., Front Side Marker	2.575
11	NUT, Lamp to Fender (3/16")	8.921
12	BRACKET & SCREW, Headlamp Adjusting	2.737
13	NUT, Lamp to Panel (#8-18 "U")	2.729
14	PANEL, Grille & Headlamp Mounting	1.266
15	SPRING, Headlamp Adjusting	2.737
16	SCREW, Bezel to Panel (#8-18 x 1 1/4")	8.977

1974 FIREBIRD REAR LAMPS


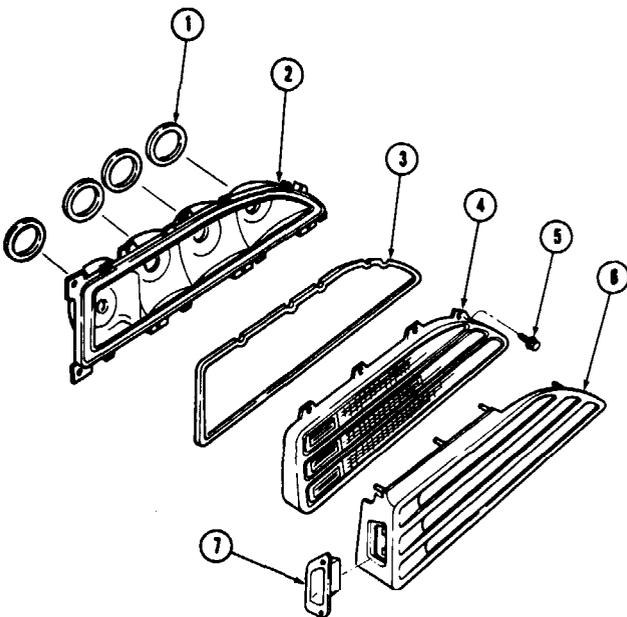


Key	Description	Group
1	GASKET(S), Tail Lamp Mounting	2.660
2	HOUSING, Tail Lamp (Incl. #1 & 3) ..	2.681
3	GASKET, Tail Lamp Lens	2.684
4	LENS, Tail Lamp	2.682
5	SCREW, Lens Mounting	2.688
6	BEZEL, Tail Lamp	2.681
7	LAMP, License	2.700

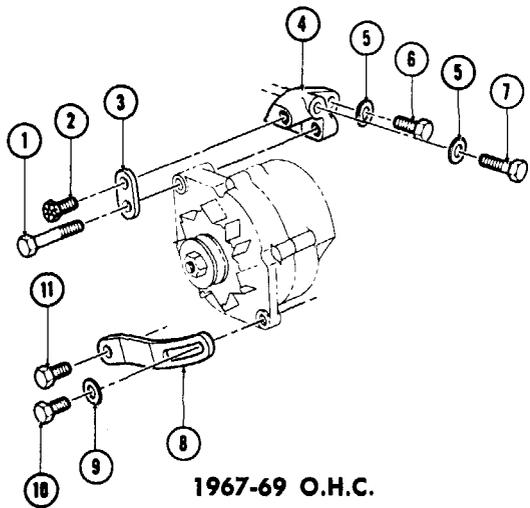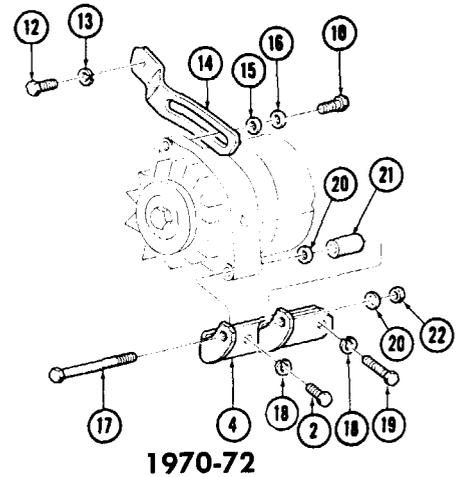
1967-69 O.H.C.

1970-72
6 CYL. ENGINE DELCOTRON MOUNTING


Key	Description	Group
1	Bolt - $\frac{5}{16}$ - 16 x 3	8.900
2	Bolt - $\frac{3}{8}$ - 16 x 1	8.900
3	Plate, Delcotron Bracket Extension	2.277
4	Bracket, Delcotron Mounting	2.277
5	Washer, Mounting Bracket to Cylinder Block	2.277
6	Bolt - $\frac{3}{8}$ - 16 x 1 $\frac{1}{2}$	8.900
7	Bolt - $\frac{3}{8}$ - 16 x 2 $\frac{1}{2}$	8.900
8	Strap, Delcotron Belt Adjusting	2.317
9	Washer, Adjusting Strap to Delcotron	2.317
10	Bolt - $\frac{5}{16}$ - 18 x 1	8.900
11	Bolt - $\frac{5}{16}$ - 18 x $\frac{3}{4}$	8.900

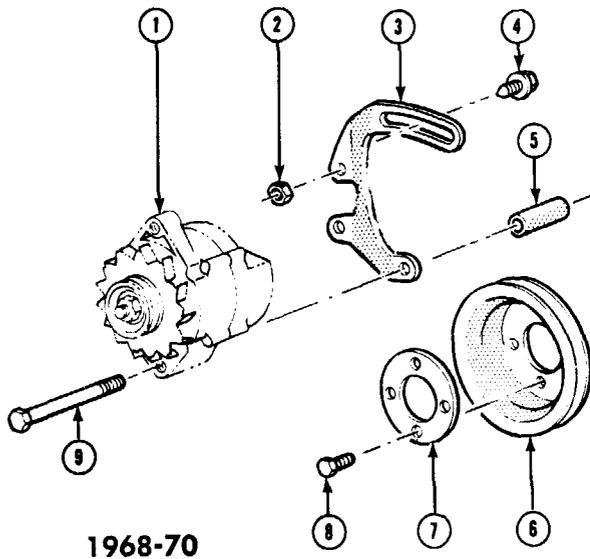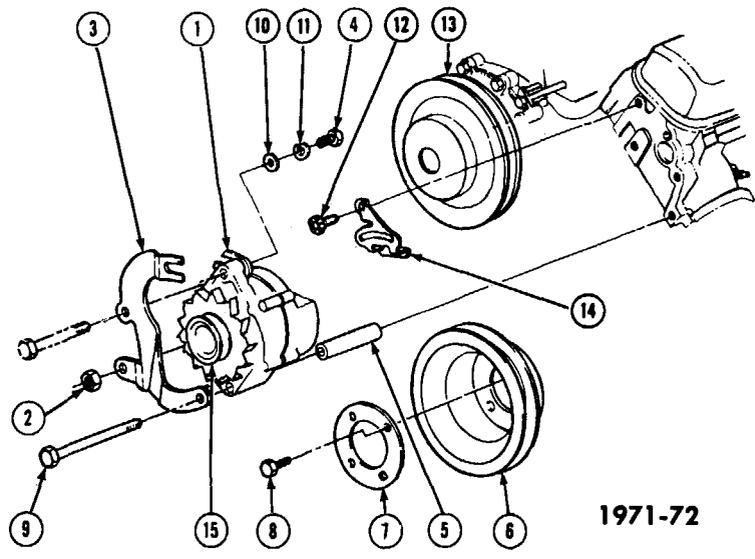Key	Description	Group
12	Bolt - $\frac{5}{16}$ - 18 x $\frac{3}{8}$	8.900
13	Washers, Brace to Water Pump	8.929
14	Brace, Delcotron	2.277
15	Washer - $\frac{23}{64}$ I.D. x $\frac{3}{8}$ O.D.	N.S.
16	Washer - $\frac{5}{16}$	8.929
17	Bolt - $\frac{3}{8}$ - 16 x 4	8.900
18	Lockwasher - $\frac{3}{8}$	8.931
19	Bolt - $\frac{3}{8}$ - 16 x 1 $\frac{1}{4}$	8.900
20	Washer, Delcotron to Mounting Bracket	2.277
21	Bushing, Mounting Bracket Spacer	2.277
22	Nut - $\frac{5}{8}$ - 16	8.915


1968-70

1971-72
8-CYL. ENGINE DELCOTRON MOUNTING


Key	Description	Group
1	Delcotron & Pulley Assy.	2.275
2	Nut, Delcotron Mounting Plate to Cyl. Head ($\frac{3}{8}$ " - 24)	8.917
3	Plate, Delcotron Mounting	2.277
4	Screw, Delcotron to Plate - ($\frac{3}{16}$ " - 18 x 1 $\frac{1}{4}$ ").	8.977
5	Spacer, Delcotron to Plate & Cyl. Head ($3\frac{7}{16}$ " long)	2.277
6	Pulley, C/Shaft-(7 $\frac{1}{4}$ " dia.) Single	0.659
7	Plate, C/Shaft Pulley Reinforcement Plate to Pulley ($\frac{5}{16}$ "-24 x $\frac{3}{4}$ "	2.275

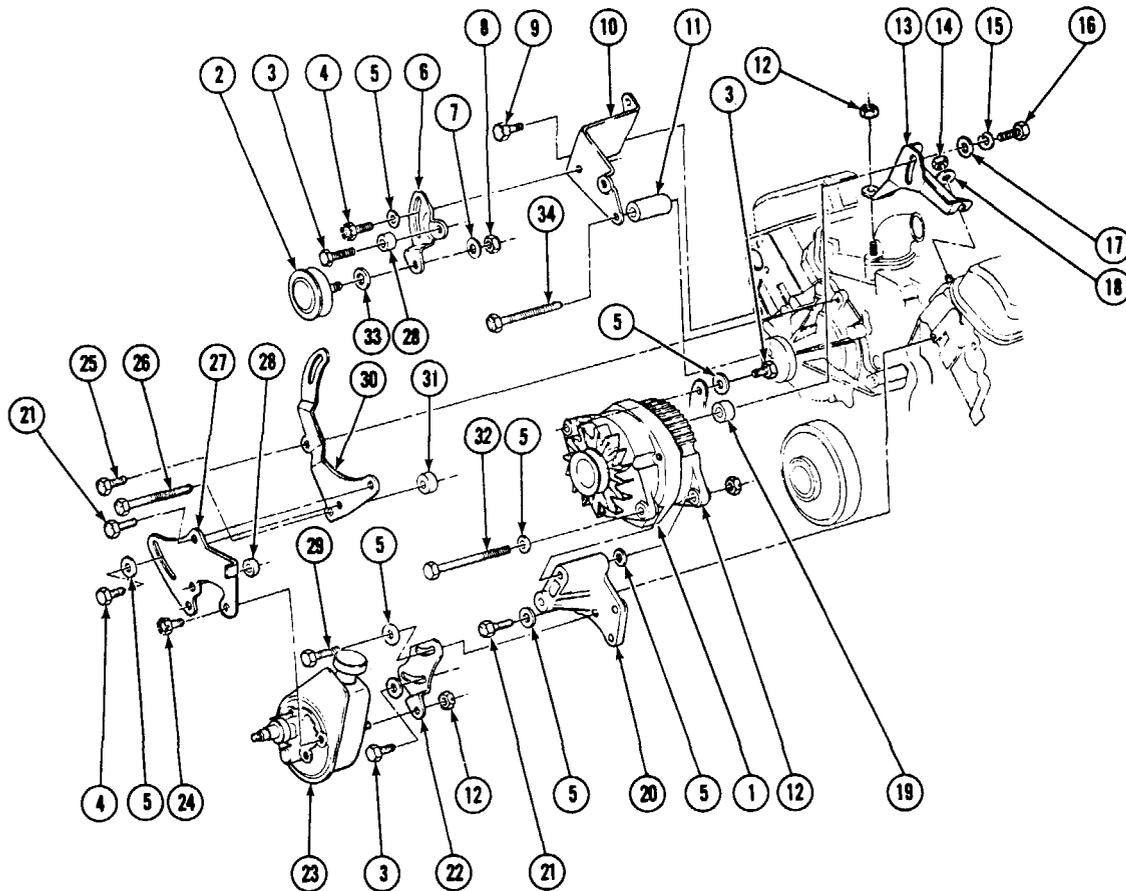Key	Description	Group
8	Bolt, Plate to Shaft Pulley ($5/16$ "-24 x $3/4$ "	8.900
9	Bolt, Delcotron to Plate & Cyl. Head ($3/8$ "-16 x 6")	2.275
10	Washer, Plate to Delcotron ($11/32$ " I.D. x $3/4$ " O.D.)	N.S.
11	Lockwasher, Plate to Delcotron ($5/16$ "	8.931
12	Bolt, Brace to Cyl. Head ($3/8$ "-16 x $3/4$ "	8.900
13	Pulley, Water Pump & Fan	1.062
14	Brace, Delcotron Rear	2.277
15	Pulley, Delcotron	2.274




1971-74 80 AMP. (SELF-REGULATED) DELCOTRON MOUNTINGS

Key	Part Name	Group No.
1	DELCO TRON ASM.	2.275
2	PULLEY ASM., Idler	2.274
3	BOLT, P/S Pump Rear Plate to Brkt. (3/8"-16 x 1 1/8")	8.900
4	BOLT, P/S Pump Frt. Plate Adj. (3/8"-16 x 7/8")	8.900
5	WASHER, P/S Pump Frt Plate Adj. Hole (3/8" I.D. x 3/4" O.D.)	8.929
6	PLATE, Idler Pulley Adj.	2.277
7	WASHER, Idler Pulley Shaft - Rear (15/32" I.D. 1" O.D.)	7.831
8	NUT, Idler Pulley Shaft to Brkt. (7/16"-20)	8.917
9	BOLT, Idler Pulley Mtg. Brkt. to Head (3/8"-16 x 5/8")	8.900
10	BRACKET, Idler Pulley Mtg.	2.277
11	SPACER, Idler Pulley Mtg. Brkt. to Block	9.171
12	NUT, Alt. to Mtg. Brkt. (3/8"-16)	8.915
13	BRACE, Alt. - Rear	2.277
14	NUT, Alt. Rear Adj. Brace to Head (5/16"-18)	8.915
15	LOCKWASHER, Alt. to Rear Adj. Brkt. (5/16")	8.931
16	BOLT, Alt. to Rear Brace (5/16"-18 x 1 3/8")	8.900
17	WASHER, Alt. to Mtg. Plate (5/16" I.D. x 3/4" O.D.)	8.929
18	WASHER, Alt. Rear Adj. Brace to Head (5/16")	8.929
19	SPACER, Alt. to Rear Brace (13/32" Long)	2.277
20	BRACKET, Strg. Pump & Alternator Mtg.	6.606
21	BOLT, Pump & Alt. Mtg. Brkt. to Cyl. Hd. (3/8"-16 x 1 1/2")	8.900
22	PLATE, P/S Pump - Rear	6.606
23	PUMP ASM., Power Steering	6.605
24	BOLT, P/S Pump to Front Plate (3/8"-16 x 3/4")	8.900
25	BOLT, Water Pump to Timing Chain Cover (5/16"-18 x 1/2")	8.900
26	BOLT, Timing Chain Cover to Block (3/8"-16 x 4 1/2")	8.900
27	PLATE, Steering Pump Mtg. - Front	6.606
28	SPACER, Steering Pump to Front Plate	9.171
29	BOLT, Pump Rear Plate to Brkt. & Cyl. Head (3/8"-16 x 1 3/4")	8.900
30	PLATE ASM., Alternator Mtg.	2.277
31	SPACER, Alt. Mtg. Plate (17/32" Long)	2.277
32	BOLT, Alt. to Mtg. Brkt. (3/8"-16 x 5")	8.900
33	WASHER, Idler Pulley Asm. to Plate (7/16" I.D. x 1" O.D.)	8.929
34	BOLT, Timing Chain Cover & Idler Mtg. Brkt. to Block (3/8"-16 x 4 1/4")	8.900

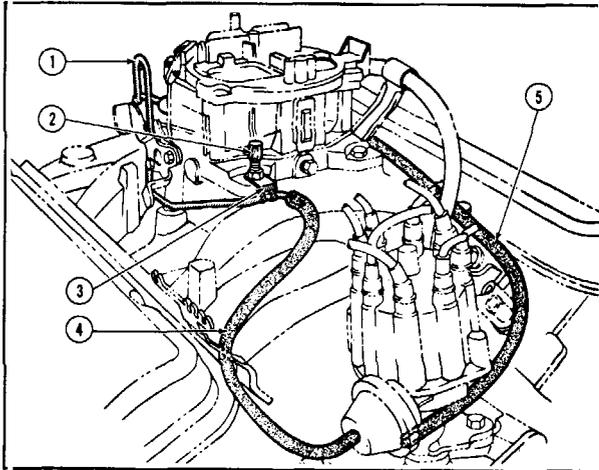


MANUAL TRANS. WITH AIR INJECTION

Key	Part Name	Group No.
1	PIPE, Carb. to Dist. Vacuum (3/16" I.D.-Steel)	8.964
2	CAP, Vacuum Stud	3.764
3	CLIP, Dist. Vacuum Pipe to Carb.	N.S.
4	HOSE, Carb. to Dist. Vac. (5/32" x 14 3/4")	2.420
5	HOSE, Dist. to Carb. (5/32" x 18")	2.420

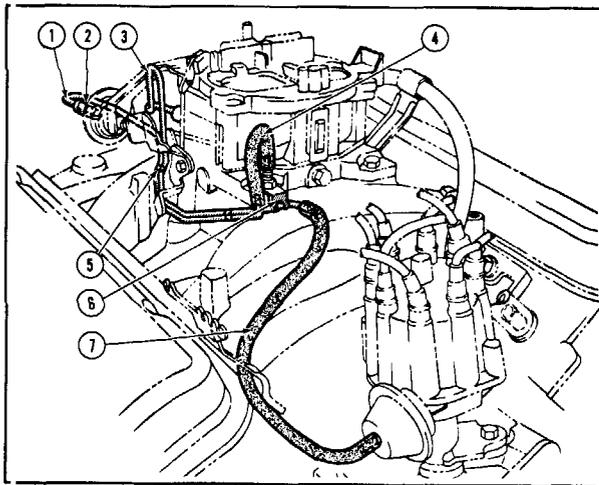

MANUAL TRANS. EXC. AIR INJECTION

Key	Part Name	Group No.
1	PIPE, Diaphragm Asm. Vacuum (3/16" I.D.-Steel)	8.964
2	HOSE, Diaphragm Pipe to Diaphragm (5/32" x 1 3/8")	3.765
3	PIPE, Carb. to Dist. Vacuum (3/16" I.D.-Steel)	8.964
4	HOSE, Vac. Pipe to Carb. Stud (5/32" x 6 13/32")	3.765
5	CLIP, Diaphragm Pipe to Dist. Vac. Pipe	2.420
6	CLIP, Dist. Vacuum Pipe to Carb.	N.S.
7	HOSE, Carb. to Dist. (5/32" x 14 3/4")	2.420

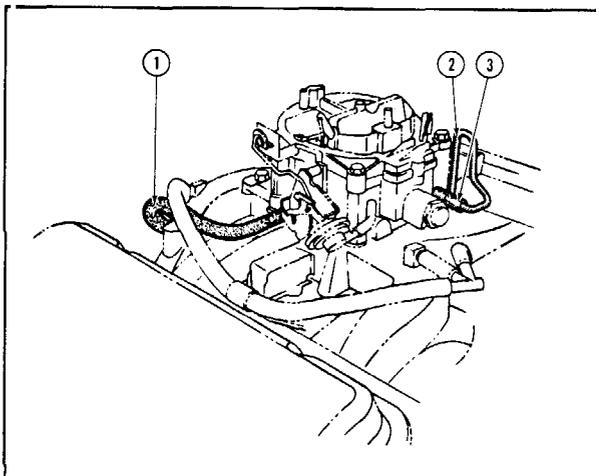


REAR VIEW

Key	Part Name	Group No.
1	HOSE, Dist. to Carb. (5/32" x 18)	2.420
2	PIPE, Carb. to Dist. Vacuum (3/16" I.D.-Steel)	8.964
3	HOSE, Diaphragm to Vac. Pipe (5/32" x 1 3/8")	3.765


**1967 FIREBIRD 8-CYL. ENG. CARBURETOR & DISTRIBUTOR VACUUM
4-BBL. ROCHESTER CARB.**

AUTOMATIC TRANS.

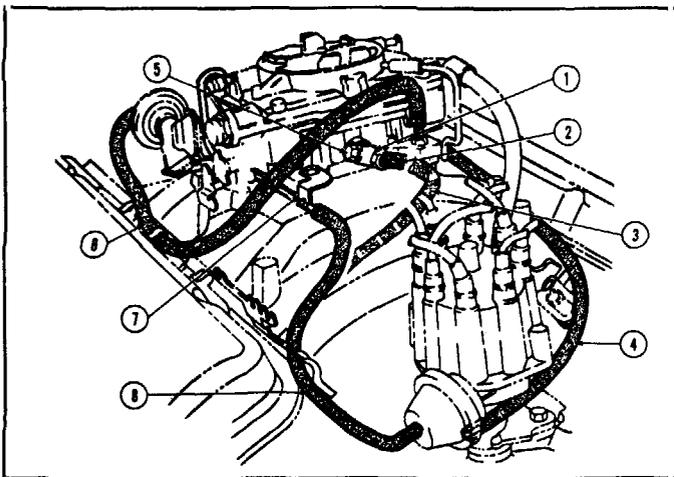


Key	Part Name	Group No.
1	CONNECTOR, Carb. Vacuum	3.278
2	CAP, Vacuum Stud	3.764
3	HOSE, Carb. to Dist. (Exc. A.I.R.) (5/32" x 18")	2.420
4	HOSE, Carb. to Dist. (W/A.I.R.) (5/32" x 30")	2.420
5	PLUG, Carb. Vacuum Fitting	3.278
6	HOSE, Carb. to Mfld. (5/32" x 25")	3.765
7	CLIP, Dist. Vacuum Pipe to Carb.	N.S.
8	HOSE, Carb. Pipe to Dist. (5/32" x 13-1/2")	2.420

MANUAL TRANS.

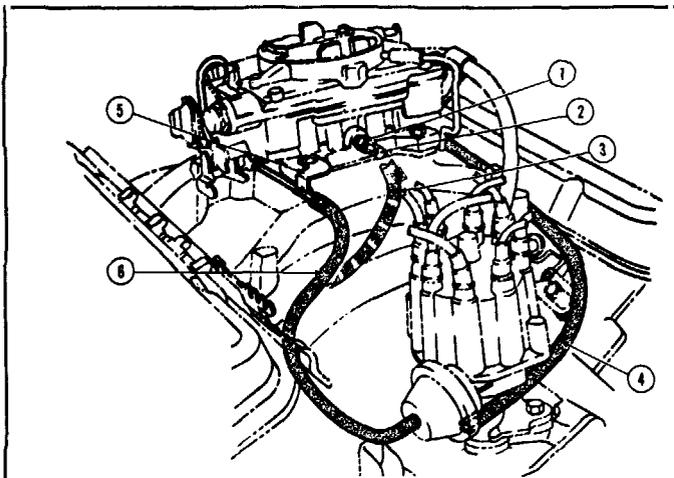

Key	Part Name	Group No.
1	FITTING, Carb. to Dist. Vac. Hose	3.278
2	CAP, Vacuum Stud	3.764
3	HOSE, Carb. to Dist. Vac. (Exc. A.I.R.) (5/32" x 16-1/2")	2.420
4	HOSE, Carb. to Dist. (W/A.I.R.) (5/32" x 30")	2.420
5	CLIP, Dist. Vacuum Pipe to Carb.	N.S.
6	HOSE, Carb. Pipe to Dist. (5/32" x 13-1/2")	2.420


REAR VIEW

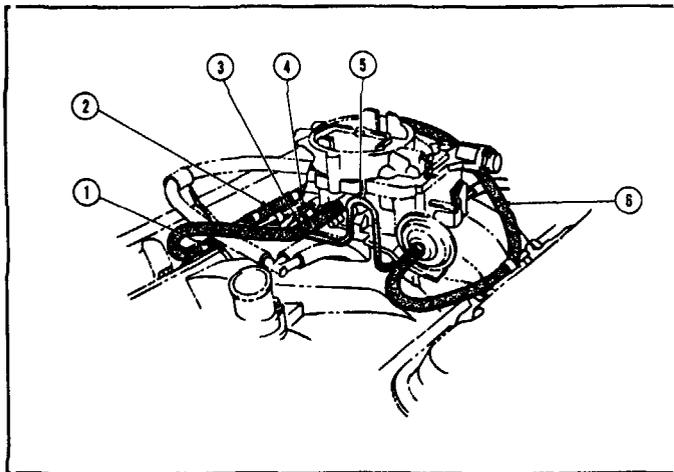


Key	Part Name	Group No.
1	RETAINER, Wires to Rocker Arm Cover.	2.482
2	HOSE, Carb. to Dist. (5/32" x 30")	2.420
3	NUT, Carb. to Dist. Vac. Pipe (3/16")	8.963
4	CONNECTOR, Carb. to Dist. Vac. Pipe (3/16")	8.963
5	PIPE, Carb. to Dist. Vacuum (3/16" I.D. - Steel)	8.964
6	HOSE, Carb. to Mfld. (5/32" x 25")	3.765

**1967 FIREBIRD 8-CYL. ENG. CARBURETOR & DISTRIBUTOR VACUUM
4-BBL. CARTER CARB.**

MANUAL TRANSMISSION

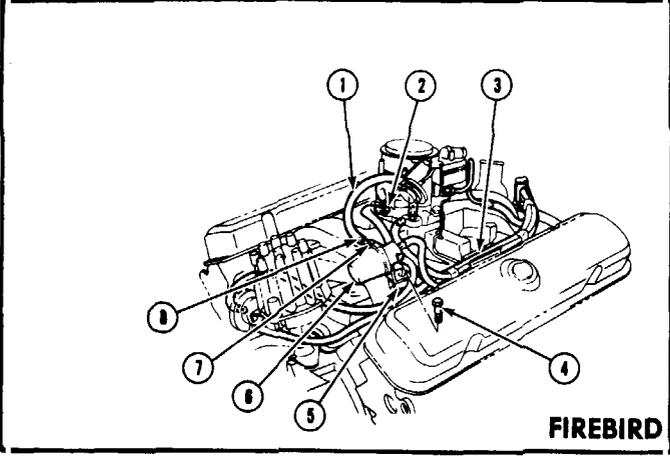


Key	Part Name	Group No.
1	HOSE, Carb. Stud to Advance Valve (5/32" x 6")	2.420
2	FITTING, Carb. to Dist. Vacuum Hose	3.278
3	HARNESS ASM., Engine Thermo. Vac. Switch	2.420
4	BOLT, Valve to Mfld. (5/16"-18 x 1-3/8")	8.900
5	SPACER, Dist. Vac. Valve to Manifold	2.420
6	VALVE ASM., Dist. Vacuum Advance	2.410
7	HOSE, Valve Asm. to Nipple (7/32" x 1-1/4")	2.420
8	NIPPLE, Vent Hose to Block	1.745

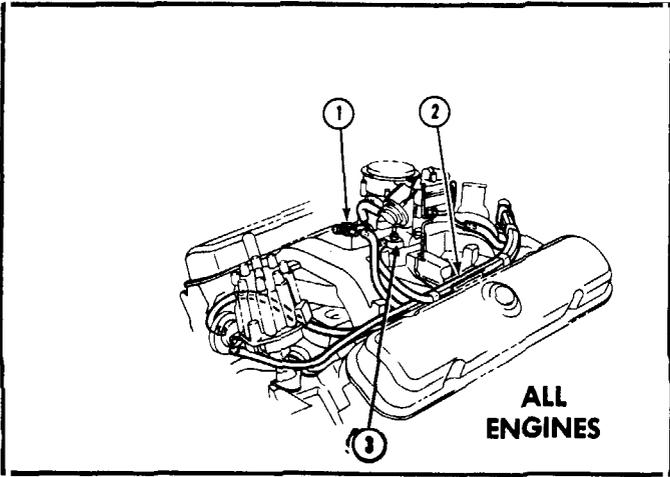

AUTOMATIC TRANSMISSION

Key	Part Name	Group No.
1	FITTING, Carb. Vacuum Connector	3.278
2	HARNESS ASM., Engine Thermo. Vac. Switch	2.420
3	CAP, Vacuum Stud	3.764

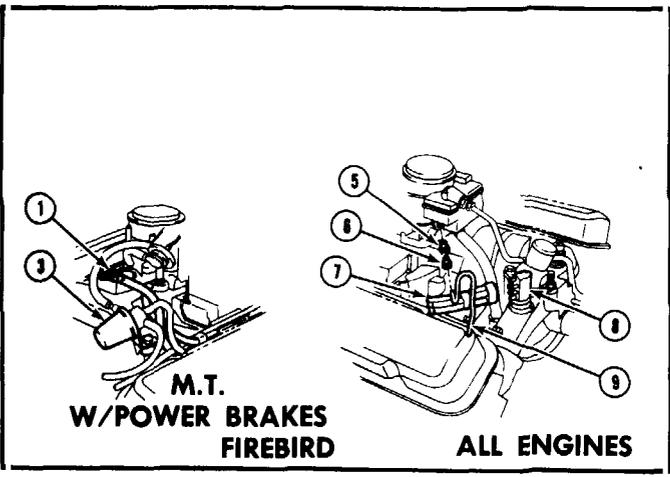


MISCELLANEOUS VIEWS

Key	Part Name	Group No.
1	FITTING, Vacuum Hose to Carb.	3.278
3	VALVE ASM., Dist. Vacuum Advance	2.410
5	NUT, Vacuum Pipe to Carb.	3.278
6	CONNECTOR, Carb. to Dist. Vacuum Pipe	3.278
7	HARNESS ASM., Engine Thermo Vac. Switch	2.420
8	SWITCH, Thermo. Vacuum	2.410
9	PIPE, Carb. to Dist. Vacuum	8.964


1968 8-CYL. ENG. CARBURETOR & DISTRIBUTOR VACUUM 2-BBL. CARBURETORS

MANUAL TRANSMISSION

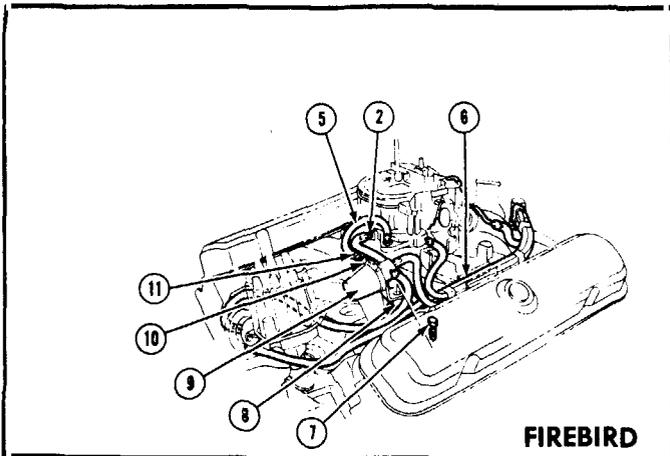

FIREBIRD


Key	Part Name	Group No.
2	FITTING, Carb. to Thermo Vac. Switch Harness.....	3.278
5	HOSE, Carb. Stud to Advance Valve (5/32" x 6").....	2.420
6	HARNESS ASM., Engine Thermo Vac. Switch...	2.420
7	BOLT, Valve to Mfld. (5/16"-18 x 1-3/4")....	8.900
8	SPACER, Dist. Vac. Valve to Manifold.....	2.420
9	VALVE ASM., Dist. Vacuum Advance.....	2.410
10	NIPPLE, Crankcase Vent Hose to Block.....	1.745
11	HOSE, Advance Valve to Reducer (7/32" x 1-1/4").....	2.420

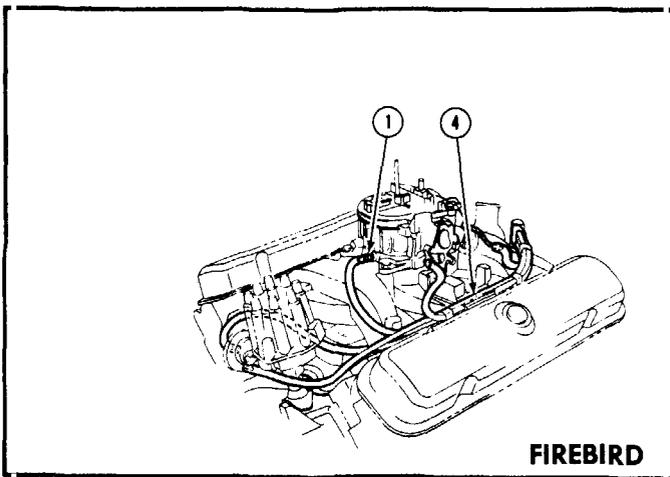

FIREBIRD

AUTOMATIC TRANSMISSION


Key	Part Name	Group No.
1	FITTING, Carb. to Thermo Vac. Switch Harness.....	3.278
4	HARNESS ASM., Engine Thermo Vac. Switch...	2.420

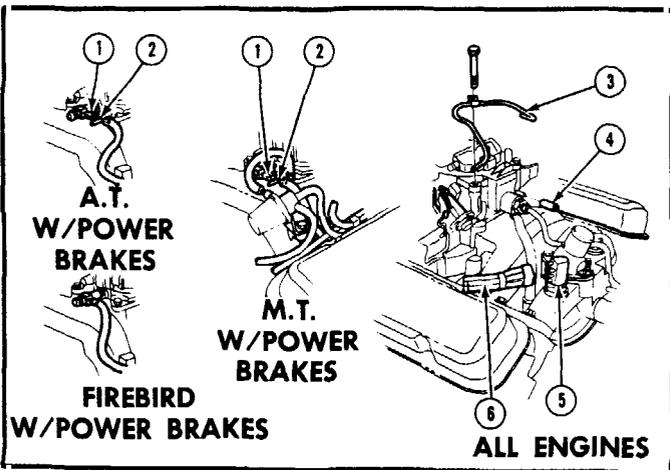

MISCELLANEOUS VIEWS


Key	Part Name	Group No.
1	HOSE, Carb. Fitting to Thermo Vac. Switch Harness Tee (5/32" x 1").....	2.420
2	TEE, Carb. Fitting Hose to Thermo Vac. Switch.....	3.440
3	PIPE, Carb. to Dist. Vacuum.....	8.964
4	HOSE, Carb. to Dist. Vacuum Pipe (5/32" x 1-3/8").....	2.420
5	SWITCH, Thermo Vacuum.....	2.410
6	HARNESS ASM., Engine Thermo Vac. Switch.....	2.420

1970-74 TRANSMISSION CONTROLLED SPARK SYSTEM

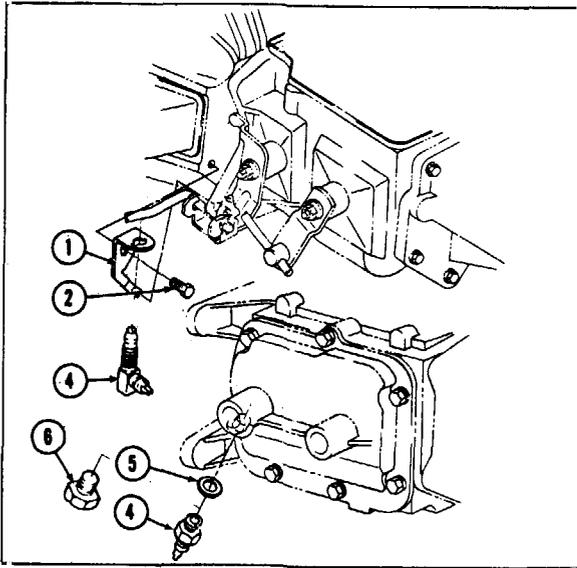


1970-74 MANUAL

Key	Part Name	Group No.
1	BRACKET, Spark Switch Mounting	4.075
2	BOLT, Brkt. to Flywheel Hsg. (1/2"-13 x 7/8")	8.900
4	SWITCH ASM., Trans. Controlled Spark	4.075
5	GASKET, Spark Control Switch to Trans. Side Cover Mtg.	4.075
6	PLUG, Trans. Cont. Spark Switch Hole (455 H.O.) (1971)	4.010

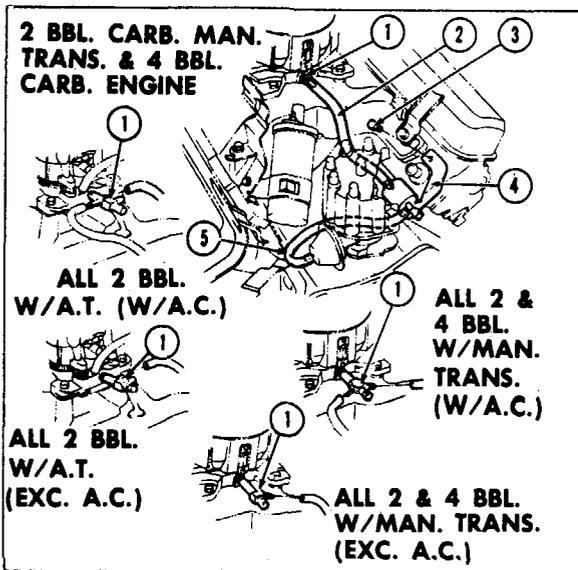


ALL 8-CYLINDER

Key	Part Name	Group No.
1	FITTING, Vacuum Hose Conn. to Carb.	3.278
2	HOSE, Vac. Fitting to Valve Asm. (3/16" I.D.)	8.962
3	BOLT, Brkt. to Cyl. Head (3/8"-16 x 5/8")	8.900
4	VALVE & BRACKET ASM., Solenoid	2.408
5	HOSE, Diaphragm to Solenoid Valve (3/16" I.D.)	8.962

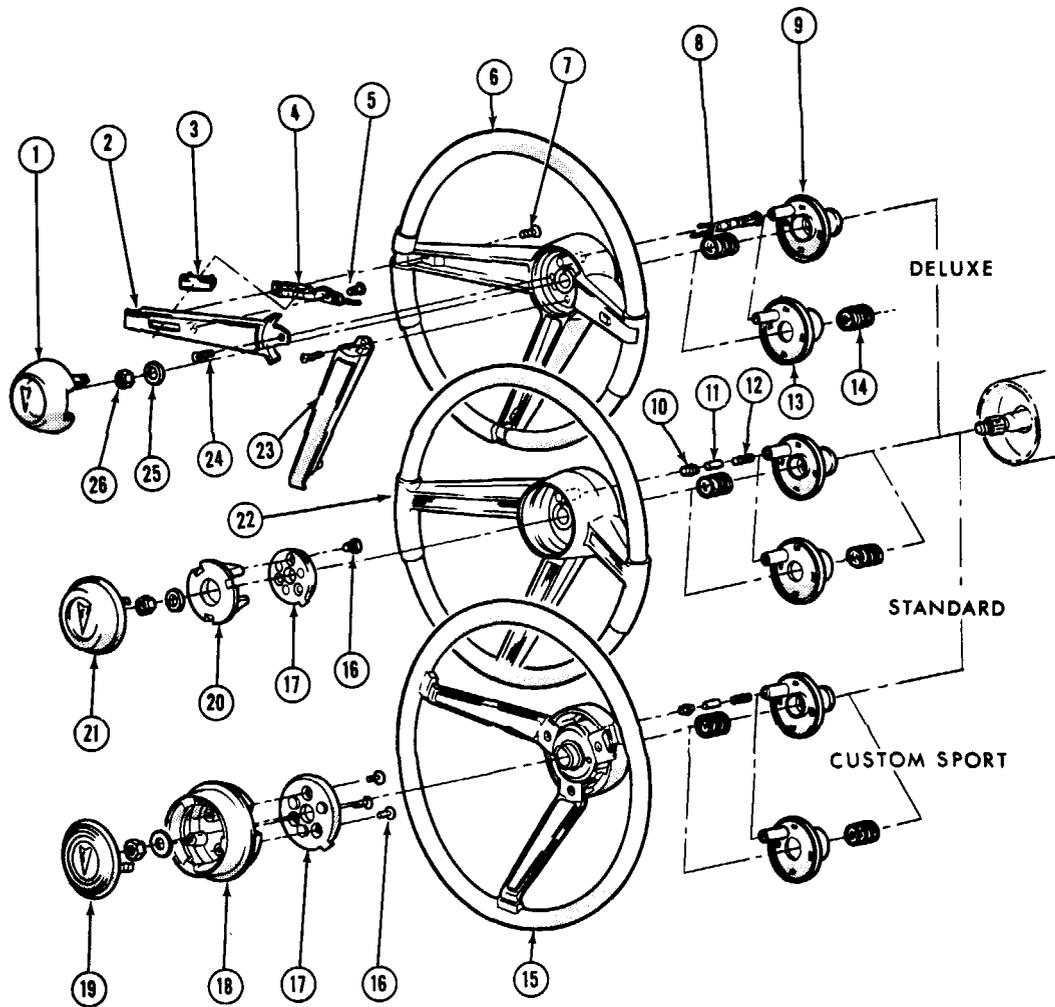

1967-68 FIREBIRD STEERING WHEELS

Key	Part Name	Group No.
1	BEZEL ASM., Steering Wheel Ornament	2.820
2	COVER, Steering Wheel Spoke Trim & Horn Switch	6.512
3	BUTTON ASM., Horn	2.819
4	SWITCH ASM., Steering Wheel Horn	2.819
5	SCREW, Switch to Hub (#8-32 x 7/16")	N.S.
6	WHEEL ASM., Steering - Deluxe	6.513
7	SCREW, Cover to Spoke (#8-32 x 11/16")	N.S.
8	SPRING, Steering Shaft Upper Bearing (Exc. Tilt Wheel) - 7/8" Long	6.526
9	CAM ASM., Direction Signal Cancelling (Exc. Tilt Wheel)	2.896
10	INSULATOR, Horn Contact	2.819
11	EYELET, Steering Wheel Horn Contact	2.819
12	SPRING, Horn Contact	2.819
13	CAM ASM., Direction Signal Cancelling (With Tilt Wheel)	2.896
14	SPRING, Direction Signal Cancelling Cam Retainer (With Tilt Wheel)	2.896
15	WHEEL ASM., Steering - Custom Sport (Wood)	6.513
16	SCREW, Switch to Housing (#8-18 x 1/2")	8.977
17	SWITCH ASM., Steering Wheel Horn (Copper)	2.819
18	HOUSING, Horn Switch	2.819
19	BEZEL ASM., Horn Button	2.820
20	EXTENSION, Horn Button Cap	2.820
21	CAP ASM., Horn Button	2.820
22	WHEEL ASM., Steering - Standard	6.513
23	COVER, Steering Wheel Spoke Trim	6.512
24	SCREW, Cover to Hub (#8-32 x 7/16")	N.S.
25	WASHER, Steering Wheel to Shaft	6.515
26	NUT, Steering Wheel to Shaft (1/2"-20)	8.916

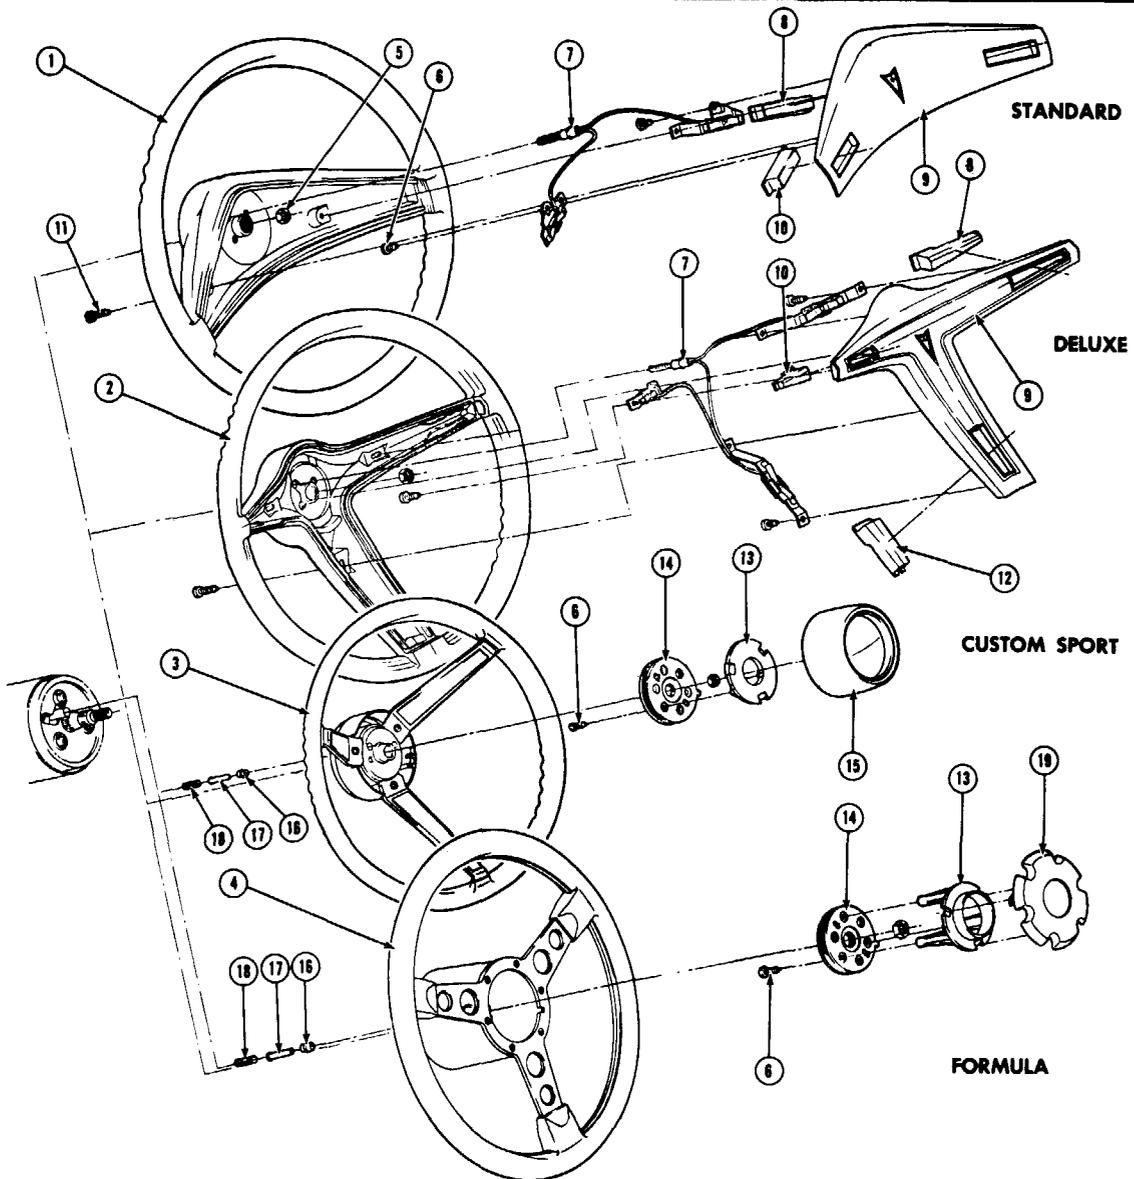

1969-72 ALL STEERING WHEELS

Key	Part Name	Group No.
1	WHEEL ASM., Steering - Standard	6.513
2	WHEEL ASM., Steering - Deluxe	6.513
3	WHEEL ASM., Steering - Custom Sport (Wood)	6.513
4	WHEEL ASM., Steering - Formula	6.513
5	NUT, Wheel to Shaft (1 1/2" x 20)	8.916
6	SCREW, Switch to Hub (#8-32 x 3/8")	8.977
7	SWITCH ASM., Steering Wheel Horn	2.819
8	BUTTON, Wheel Horn - RH	2.819
9	COVER, Wheel Spoke Trim	6.512
10	BUTTON, Wheel Horn - LH	2.819
11	SCREW, Cover to Spoke (#8-32 x 11/16")	N.S.
12	BUTTON, Wheel Horn - Center	2.819
13	EXTENSION, Horn Button	2.820
14	SWITCH ASM., Steering Wheel Horn	2.819
15	BEZEL, Horn Button	2.820
16	INSULATOR, Horn Contact	2.819
17	EYELET, Horn Contact	2.819
18	SPRING, Horn Contact	2.819
19	BUTTON ASM., Horn (Formula)	2.819

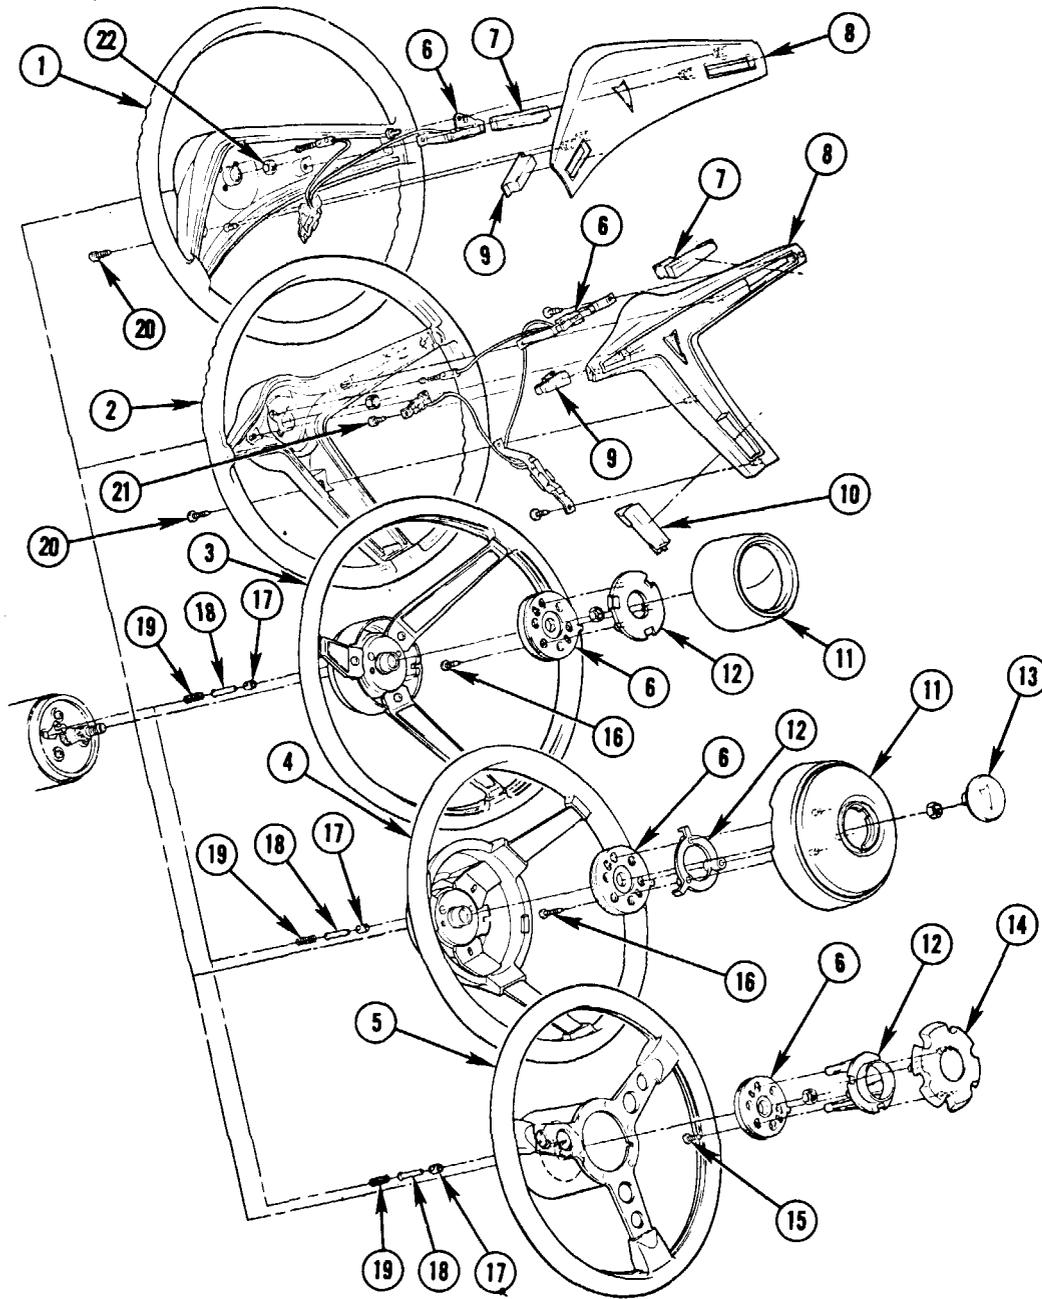

1973-75 ALL STEERING WHEELS

Key	Part Name	Group No.	Key	Part Name	Group No.
1	WHEEL ASM., Steering-Standard	6.512	13	ORNAMENT, Steering Wheel Horn Button	2.820
2	WHEEL ASM., Steering-Deluxe	6.513	14	BUTTON, Horn (Formula)	2.819
3	WHEEL ASM., Steering-Custom Sport (Wood)	6.513	15	SCREW, Switch to Hub (#8-32 x 3/8")	8.977
4	WHEEL ASM., Steering-Custom Sport (Padded)	6.513	16	SCREW, Switch to Cover (#8-18 x 7/8")	8.977
5	WHEEL ASM., Steering-Formula	6.513	17	INSULATOR, Horn Contact	2.819
6	SWITCH, Steering Wheel Horn	2.819	18	EYELET, Horn Contact	2.819
7	BUTTON, Wheel Horn-R.H.	2.819	19	SPRING, Horn Contact	2.819
8	COVER, Wheel Spoke Trim	6.512	20	SCREW, Wheel to Cover (#8-18 x 5/8")	8.977
9	BUTTON, Wheel Horn-L.H.	2.819	21	SCREW, Switch to Cover (#8-32 x 3/8")	8.977
10	BUTTON, Wheel Horn-Center	2.819	22	NUT, Wheel to Shaft (1/2" x 20)	8.916
11	BEZEL, Horn Button	2.820			
12	EXTENSION, Horn Button Cap	2.820			




KEY USAGE CHART

YEAR	PART NUMBER	CODED UNCODED	OVAL HEAD SQUARE HEAD	STAMPED					
					IGNITION	FRONT DOORS	GLOVE BOX	CONSOLE DOOR	TRUNK LID
1967	7027275	Uncoded	Square	A	X	X			
1967	1027281	Uncoded	Oval	B			X		X
1968	7024229	Uncoded	Square	C	X	X			
1968	7024235	Uncoded	Oval	D			X		X
1969	725785	Coded	Square	E	X	X			
1969	7025014 115268 ^c	Uncoded	Square	E	X	X			
1969	725777	Coded	Oval	H			X		X
1969	7025019	Uncoded	Oval	H			X		X
1970	726057	Coded	Square	J	X	X			
1970	7025282	Uncoded	Square	J	X	X			
1970	726058	Coded	Oval	K			X	X	X
1970	7025288	Uncoded	Oval	K			X	X	X
1971	726325	Coded	Square	A	X	X			
1971	7027275	Uncoded	Square	A	X	X			
1971	726326	Coded	Oval	B			X	X	X
1971	7027281	Uncoded	Oval	B			X	X	X
1972	726681	Coded	Square	C	X	X			
1972	7024229	Uncoded	Square	C	X	X			
1972	726680	Coded	Oval	D			X	X	X
1972	7024235	Uncoded	Oval	D			X	X	X
1973	725785	Coded	Square	E	X	X			
1973	7025014 115460 ^c	Uncoded	Square	E	X	X			
1973	725777	Coded	Oval	H			X	X	X
1973	7025019	Uncoded	Oval	H			X	X	X
1974	726057	Coded	Square	J	X				
1974	7025282	Uncoded	Square	J	X				
1974	726058	Coded	Oval	K		X	X	X	X
1974	7025288	Uncoded	Oval	K		X	X	X	X
1975	726325	Coded	Square	A	X				
1975	7027275	Uncoded	Square	A	X				
1975	726326	Coded	Oval	B		X	X	X	X
1975	7027281	Uncoded	Oval	B		X	X	X	X

KEY USAGE CHART

YEAR	PART NUMBER	CODED UNCODED	OVAL HEAD SQUARE HEAD	STAMPED					
					IGNITION	FRONT DOORS	GLOVE BOX	CONSOLE DOOR	TRUNK LID
1976	726681	Coded	Square	C	X				
1976	7024229	Uncoded	Square	C	X				
1976	726680	Coded	Oval	D		X	X	X	X
1976	7024235	Uncoded	Oval	D		X	X	X	X

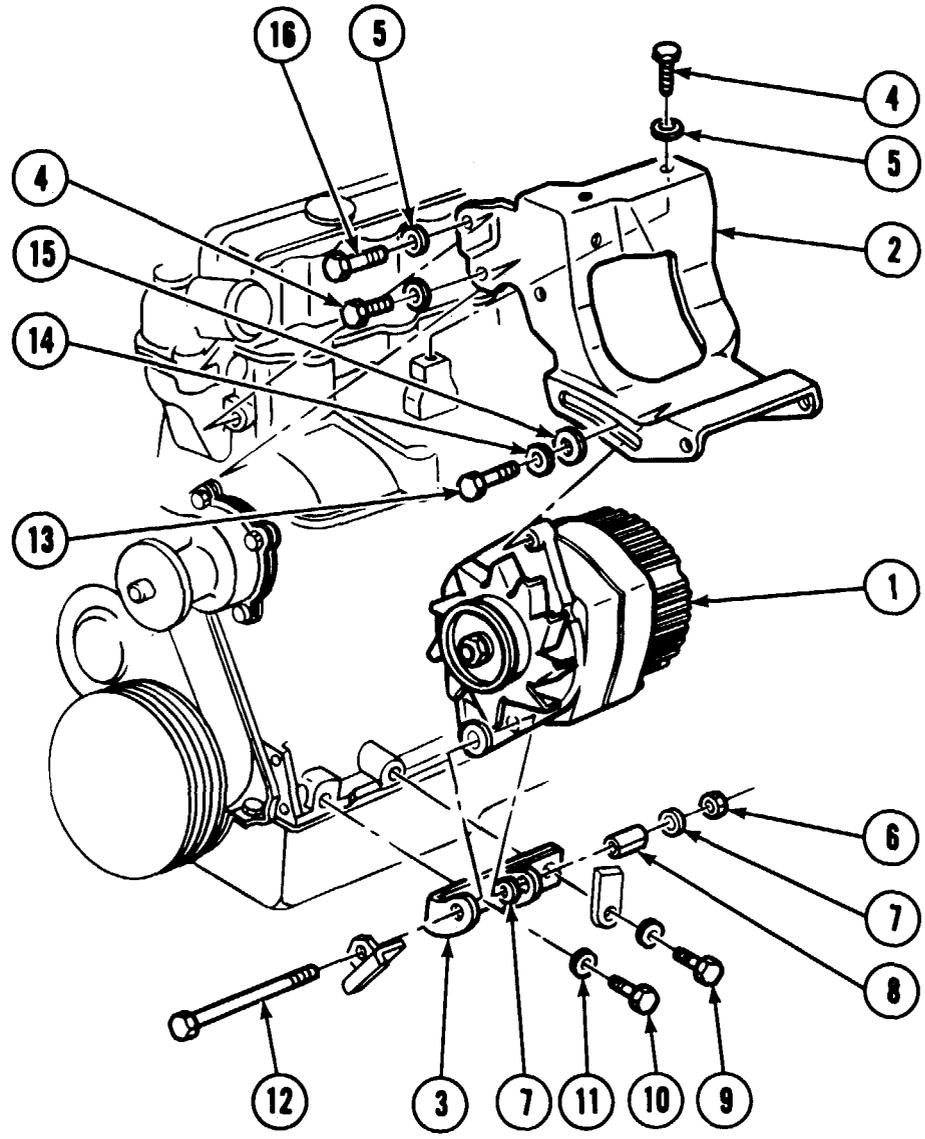

1976 6 CYL. ENGINE DELCOTRON MOUNTING

Key	Description	Group
1	DELCO TRON	2.275
2	BRACKET, Delcotron Alternator Mounting—Upper	2.277
3	BRACKET, Delcotron Alternator Mounting—To Lower Block	2.277
4	BOLT, Bracket to Engine Block (3/8-16 x 3/8 In.) ..	8.900
5	LOCKWASHER, Bracket to Engine Block (3/8 In.) ..	8.931
6	NUT, Delcotron to Bracket (3/8-16)	8.915
7	WASHER, Delcotron to Bracket (1 1/2 I.D. x 3/4 O.D.)	8.929
8	SPACER, Delcotron to Brace	2.277


Key	Description	Group
9	ROIT, Bracket to Engine Block (3/8-16 x 1 1/2 In.)	8.900
10	BOLT, Bracket to Engine Block (3/8-16 x 1 In.)	8.900
11	LOCKWASHER, Bracket to Engine Block (3/8 In.) ..	8.932
12	BOLT, Delcotron to Bracket (3/8-16 x 4 In.)	8.900
13	BOLT, Delcotron Adjusting (3/8-18 x 1 In.)	8.900
14	LOCKWASHER, Delcotron Adjusting (3/8 In.)	8.931
15	WASHER, Delcotron Adjusting (1 1/2 I.D. x 3/4 O.D. x 1/2 In.)	N.S.
16	BOLT, Bracket to Engine (3/8-16 x 1 1/4 In.)	8.900



1975-76 EMISSION VALVES AND SWITCHES


NOTE: Refer to the Data Section for Model Years and Application.

**Switch, EGR Valve
Vacuum Control**

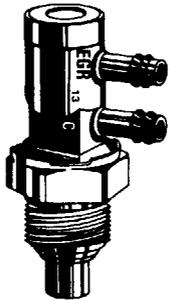


Part No. 355960
Group 2.408
Group 3.670

**Switch, EGR Valve
Vacuum Control**

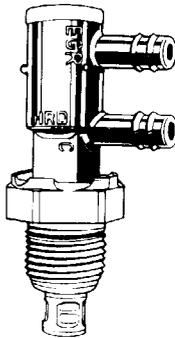


Part No. 357100
Group 2.408
Group 3.670

**Switch, EGR Valve
Vacuum Control**

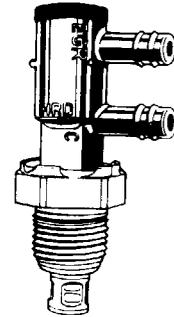


Part No. 3031385
Group 2.408
Group 3.670

**Valve, Distributor
Vacuum Advance**

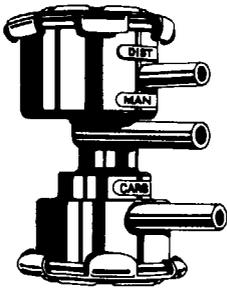


Part No. 497610
Group 2.410

Switch, Thermal Vacuum

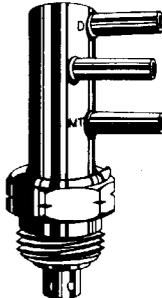


Part No. 413473
Group 2.408
Group 2.410

Valve, Spark Retard Delay

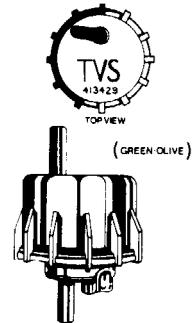

Part No. 498289
Group 2.410

**Valve, Thermal Check
and Delay**

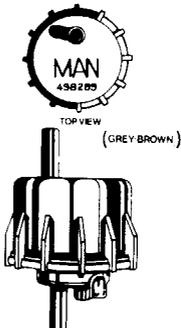


Part No. 413429
Group 2.408
Group 3.440

Switch, Thermal Override



Part No. 6490898
Group 2.408
Group 2.410

**Switch, Thermal Delay
(TCS & EGR)**

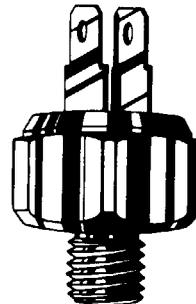

Part No. 6490377
Group 2.408
Group 2.410
Group 3.408