

FIREBIRD ALPHABETICAL INDEX

K

KNOB
TRANSMISSION CONTROL LEVER 4.006

L

LEVER
STEERING COLUMN LOWER SHIFT 4.030
TRANSMISSION CONTROL 4.006
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER 4.040
TRANSMISSION SHIFTER /ON TRANSMISSION/ 4.045

LOCK
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER
LEVER 4.040

M

MOUNTING ASSEMBLY
TRANSMISSION SUPPORT 4.081

N

NUT
GEARSHIFT KNOB RETAINING 4.006
TRANSMISSION CONTROL LEVER AND BRACKET SUPPORT 4.008
TRANSMISSION CONTROL ROD SWIVEL ADJUSTER 4.037
TRANSMISSION IDLER LEVER SUPPORT TO FRAME 4.040

P

PIN
TRANSMISSION CONTROL LEVER PIVOT 4.008
TRANSMISSION DETENT CAM RETAINING 4.311

PLATE
GEARSHIFT LEVER BOWL 4.010
STEERING HOUSING AND SHAFT DETENT LOCK 4.027
TRANSMISSION CONTROL LEVER HOLE TRIM 4.017
TRANSMISSION CONTROL LEVER TRIM 4.107

PLATE OR KEY
TRANSMISSION SYNCHRONIZER 4.384

PLUG
SPEEDOMETER CABLE DASH HOLE 4.342
TRANSMISSION CASE DRAIN PIPE 4.103
TRANSMISSION CONTROL SPARK SWITCH HOLE 4.010
TRANSMISSION FILLER 4.103
TRANSMISSION REVERSE IDLER SHAFT HOLE 4.103
TRANSMISSION SIDE COVER FRONT SHIFTER SHAFT BOSS 4.105

R

RAIL
PIN AND SPRING PACKAGE, TRANSMISSION SHIFTER 4.309

RELAY
TRANSMISSION CONTROL SPARK 4.075

RETAINER
DRIVEN GEAR SLEEVE 4.338
GEARSHIFT CONTROL ROD TO STEERING COLUMN 4.037
SHIFTER RODS TO SHIFTER 4.037
SPEEDOMETER CABLE TO SPEEDOMETER 4.342
STABILIZER SHAFT GROMMET 4.015
TRANSMISSION CABLE DETENT 4.054
TRANSMISSION CLUTCH GEAR BEARING 4.356
TRANSMISSION CONTROL LEVER SEAL 4.015
TRANSMISSION SYNCHRONIZER RING 4.383
UNDERBODY CONTROL LEVER SEAL 4.015

RETAINER AND SEAL PACKAGE
TRANSMISSION INPUT SHAFT GEAR BEARING 4.356

RING
SPEEDOMETER DRIVE GEAR TO SHAFT 4.345
STEERING COLUMN SHIFT TUBE RETAINING 4.027
TRANSMISSION CLUTCH GEAR BEARING LOCATING 4.376
TRANSMISSION CLUTCH GEAR BEARING RETAINING 4.376

R (Cont'd.)

RING (Cont'd.)
TRANSMISSION CLUTCH GEAR BEARING TO TRANSMISSION
CASE 4.376
TRANSMISSION DETENT CAM RETAINER 4.311
TRANSMISSION FIRST AND REVERSE SYNCHRONIZER HUB
TO SHAFT 4.384
TRANSMISSION MAIN DRIVE GEAR BEARING 4.376
TRANSMISSION MAIN DRIVE GEAR FRONT BEARING 4.376
TRANSMISSION MAIN DRIVE GEAR REAR BEARING
RETAINER 4.412
TRANSMISSION MAIN DRIVE GEAR REAR BEARING TO
SHAFT 4.412
TRANSMISSION REAR BEARING 4.412
TRANSMISSION REAR BEARING TO MAINSHAFT 4.412
TRANSMISSION REVERSE IDLER GEAR RETAINING 4.435
TRANSMISSION SECOND AND THIRD SYNCHRONIZER HUB
TO SHAFT 4.384
TRANSMISSION SECOND AND THIRD SYNCHRONIZER TO
MAINSHAFT 4.384
TRANSMISSION SYNCHRONIZER BLOCKING 4.383
TRANSMISSION SYNCHRONIZER BLOCKING RING TO SHAFT 4.419
TRANSMISSION SYNCHRONIZER RETAINING 4.383

ROD
STEERING COLUMN LOCK 4.035
TRANSMISSION GEARSHIFT CONTROL 4.035

ROLLER
TRANSMISSION COUNTERSHAFT GEAR BEARING 4.422
TRANSMISSION MAINSHAFT BEARING 4.352

S

SCREW
CONVERTER COVER PAN TO CASE 4.115
GEARSHIFT LEVER BOWL PLATE 4.012
STEERING COLUMN HOUSING DETENT 4.027
STEERING COLUMN SHIFT LEVER DETENT PLATE 4.012
TRANSMISSION ACCESS COVER TO CASE 4.105
TRANSMISSION CONTROL ROD TO LEVER 4.037
TRANSMISSION SHIFTER FORK TO RAIL 4.312

SEAL
DRIVEN GEAR FITTING 4.338
SPEEDOMETER PINION 4.338
STEERING COLUMN SHAFT 4.030
TRANSMISSION CLUTCH GEAR BEARING OIL 4.354
TRANSMISSION CONTROL LEVER 4.015
TRANSMISSION EXTENSION OIL 4.318
TRANSMISSION SHIFT LEVER ROD TO FLOOR 4.015
TRANSMISSION SHIFTER SHAFT 4.313
UNDERBODY CONTROL LEVER 4.015

SEAL ASSEMBLY
TRANSMISSION MAIN DRIVE GEAR BEARING OIL 4.318

SHAFT
SPEEDOMETER FLEXIBLE 4.342
TRANSMISSION CONTROL LEVER AND BRACKET
STABILIZER 4.010
TRANSMISSION INPUT 4.351
TRANSMISSION MAIN 4.403
TRANSMISSION REVERSE IDLER GEAR 4.433
TRANSMISSION SHIFTER 4.309

SHAFT AND WASHER PACKAGE
TRANSMISSION OUTPUT 4.403

SHIELD
TRANSMISSION CONTROL SPLASH 4.067
TRANSMISSION MOUNTING ASSEMBLY HEAT 4.083

SHIFTER ASSEMBLY
TRANSMISSION CONTROL 4.004

SHROUD
STEERING COLUMN BOWL 4.010

SHROUD AND BOWL
STEERING COLUMN 4.010

SLEEVE
TRANSMISSION SHIFTER INTERLOCK 4.307

FIREBIRD ALPHABETICAL INDEX

S (Cont'd.)

SLINGER	
TRANSMISSION CLUTCH GEAR BEARING OIL	4.374
SPACER	
TRANSMISSION COUNTER GEAR BEARING	4.423
TRANSMISSION LOWER SHIFT LEVER ANTI RATTLE	4.032
TRANSMISSION MAINSHAFT PILOT BEARING	4.353
TRANSMISSION MOUNT TO TRANSMISSION	4.085
SPRING	
GEARSHIFT LEVER DETENT	4.010
STEERING COLUMN DETENT	4.027
STEERING COLUMN SHIFT TUBE RETURN	4.027
TRANSMISSION DETENT CAM	4.311
TRANSMISSION GEARSHIFT LEVER BOWL	4.008
TRANSMISSION SHIFT LEVER POPPET	4.311
TRANSMISSION SYNCHRONIZER	4.413
SUPPORT	
TRANSMISSION CONTROL ROD IDLER LEVER	4.040
TRANSMISSION LOCK ROD IDLER LEVER	4.040
SUPPORT ASSEMBLY	
TRANSMISSION	4.081
TRANSMISSION CONTROL	4.010
SWITCH ASSEMBLY	
TRANSMISSION CONTROLLED SPARK	4.075
TRANSMISSION NEUTRAL START	4.054
SWIVEL	
TRANSMISSION CONTROL ROD OR LOCK ROD	4.037
SYNCHRONIZER ASSEMBLY	
TRANSMISSION	4.380

T

TRANSMISSION ASSEMBLY	
THREE SPEED	4.003
TRUNNION	
TRANSMISSION CONTROL ROD TO SHIFTER LEVERS	4.037
TUBE ASSEMBLY	
STEERING COLUMN SHIFT	4.025
TRANSMISSION SHIFT	4.025

V

VENT	
TRANSMISSION EXTENSION	4.317
VENTILATOR ASSEMBLY	
TRANSMISSION CASE	4.104

W

WASHER	
BOWL SPRING THRUST	4.012
GEARSHIFT LEVER HOUSING BEARING WAVE	4.012
STEERING COLUMN BOWL	4.012
STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST	4.027
STEERING COLUMN SUPPORT THRUST	4.012
TRANSMISSION CONTROL LEVER AND BRACKET TO SUPPORT	4.004
TRANSMISSION CONTROL ROD OR LOCK ROD	4.037
TRANSMISSION CONTROL RODS OR LOCK ROD TO COLUMN AND LEVERS	4.037
TRANSMISSION COUNTER GEAR BEARING	4.423
TRANSMISSION COUNTER GEAR THRUST	4.423
TRANSMISSION COUNTERSHAFT BEARING	4.423
TRANSMISSION FIRST GEAR THRUST	4.419
TRANSMISSION GEARSHIFT CONTROL RODS OR LOCK ROD TO LEVERS	4.037
TRANSMISSION MAIN DRIVE GEAR BEARING	4.376
TRANSMISSION MAINSHAFT REAR BEARING	4.412
TRANSMISSION REVERSE GEAR THRUST	4.419
TRANSMISSION REVERSE IDLER GEAR THRUST	4.437
TRANSMISSION SUPPORT MOUNTING TO BRACKET	4.085

W (Cont'd.)

WASHER PACKAGE	
TRANSMISSION	4.005
WEIGHT	
DRIVE LINE DAMPER	4.083
WIRE ASSEMBLY	
NEUTRAL SAFETY SWITCH AND SEAT BELT RELAY	4.054
TRANSMISSION NEUTRALIZER SWITCH	4.054

.000

ST 3 SPEED TRANSMISSION

4.003 TRANSMISSION ASSEMBLY, THREE SPEED

1	9789553	67	ALL 6 CYL - WITH 2.85 1ST GEAR - CODED /FK/
1	N.L.A.	67	8 CYL /STD/ - 2.54 1ST GEAR - CODED /RJ/ /SUP 3860097/
1	3890533	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 2.42 1ST GEAR - CODED /ST/
1	9793095	68-69	ALL 6 CYL - WITH COLUMN SHIFT - WITH 2.85 1ST GEAR
1	N.L.A.	68	8 CYL COLUMN SHIFT WITH 2.54 1ST GEAR /SUP 3919355/
1	9791989	68-69	ALL 6 CYL - WITH FLOOR SHIFT
1	9793425	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT
1	6273289	69	ALL 8 CYL - WITH COLUMN SHIFT - 2.54 1ST GEAR /SUP 3919358- 3968036/
1	352298	70-71	6 CYL COLUMN SHIFT /SUP 3974484-6273282/
1	6273289	70	8 CYL COLUMN SHIFT - 2.54 1ST GEAR /SUP 3974485/
1	477781	70	8 CYL FLOOR SHIFT - 2.42 1ST GEAR MUNCIE
1	3952657	71-72	ST 3 SPD HD
1	N.L.A.	71	350 ENG /SUP 3987909/
1	6273289	72	8 CYL COLUMN SHIFT - CODED TN /SUP 3974485/
		73	350 ENG - CODED TN
1	352298	73	6 CYL ENG - CODED QZ /SUP 6273282/
1	332556	73	350 ENG - CODED TA
1	346312	74	6 CYL ENG - CODED BA
1	346313	74	350 ENG - CODED BB
1	355543	75-76	6 CYL ENG - CODED CH

4.004 BEARING UNIT, TRANSMISSION THRUST WASHER

1	3958615	72	ALL HD - INCLUDES NEEDLE
---	---------	----	--------------------------

4.004 SHIFTER ASSEMBLY, TRANSMISSION CONTROL

1	3934284	67	ALL - WITH FLOOR SHIFT /SUP 3917582/ - /ILL. 4-1/
1	9792436	68	ALL - WITH FLOOR SHIFT - /ILL. 4-1/

4.004 SHIFTER ASSEMBLY, TRANSMISSION CONTROL (Cont'd)

1	9798723	69	ALL - WITH FLOOR SHIFT - /ILL. 4-1/
1	494575	70-76	ALL FLOOR SHIFT /STD-SAGINAW/ /SUP 478178/
1	405765	70-71	ALL FLOOR SHIFT /HD-MUNCIE/

4.004 WASHER, TRANSMISSION CONTROL LEVER AND BRACKET TO SUPPORT

1	382105	67	ALL - WITH FLOOR SHIFT - 3/8 ID X 3/4 OD - /ILL. 4-1/ /SUP 3825452/
---	--------	----	---

4.005 GASKET PACKAGE, TRANSMISSION

1	3886338	67-76	ALL /STD/
1	3870814	67	ALL 8 CYL /HD/ WITH FLOOR SHIFT
1	9772958	68-69	ALL 8 CYL /HD/ WITH FLOOR SHIFT
1	3958616	72	ALL HD 3 SPD /MUNCIE/

4.005 WASHER PACKAGE, TRANSMISSION

1	3886339	67-68	ALL /STD/ - INCLUDES THRUST WASHERS AND NEEDLE BEARINGS
		72-73	ALL /STD/ - INCLUDES THRUST WASHERS AND NEEDLE BEARINGS

4.006 KNOB, TRANSMISSION CONTROL LEVER

1	3973042	67	ALL - WITH COLUMN SHIFT - BLACK /SUP 3899067/
1	3899064	67	ALL - WITH COLUMN SHIFT - MEDIUM BRIGHT BLUE - TRIM 255-265
1	3921146	67	ALL - WITH FLOOR SHIFT /SUP 3895202/
1	9792623	68-72	ALL - WITH COLUMN SHIFT
1	357702	68-69	ALL - WITH FLOOR SHIFT - BLACK /SUP 9781840- 9794506/
1	9794301	69-70	ALL - WITH FLOOR SHIFT - WALNUT
1	482346	70-76	ALL FLOOR SHIFT - SIMULATED LEATHER /SUP 481594/

4.006 LEVER, TRANSMISSION CONTROL

1	3928321	67	ALL - WITH COLUMN SHIFT / SUP 3905559/ - /ILL. 4-1/
1	9790723	68	ALL - WITH COLUMN SHIFT - /ILL. 4-1/
1	9792435	68-69	ALL - WITH FLOOR SHIFT - SHIFTER - /ILL. 4-1/
1	546356	69-72	COLUMN SHIFT - INCL PIN - /ILL. 4-1/
1	478175	70-76	ALL FLOOR SHIFT /STD-SAGINAW/
1	479048	70-72	ALL FLOOR SHIFT /HD-MUNCIE/

4.006 NUT, GEARSHIFT KNOB RETAINING

1	9794299	68-71	ALL W/SIMULATED LEATHER OR WALNUT KNOB - TO SHIFT LEVER
		72-76	ALL - TO SHIFT LEVER

4.008 NUT, TRANSMISSION CONTROL LEVER AND BRACKET SUPPORT

1	3901372	67	ALL - WITH FLOOR SHIFT - 1 HOLE - /ILL. 4-1/
1	3901371	67	ALL - WITH FLOOR SHIFT - 2 HOLES - /ILL. 4-1/

FIREBIRD

4.008 PIN, TRANSMISSION CONTROL LEVER PIVOT

- 1 3793014 67-72 ALL - WITH COLUMN SHIFT / SUP 387315/ - /ILL. 4-1/
- 1 9425112 69 ALL - WITH COLUMN SHIFT - 7/32 X 15/16 SLOTTED SPRING - /ILL. 4-1/

4.008 SPRING, TRANSMISSION GEARSHIFT LEVER BOWL

- 1 7800604 67-68 ALL - WITH COLUMN SHIFT
- 1 7804624 69-72 ALL - WITH COLUMN SHIFT - / ILL. 6-1/

4.010 BRACKET, TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER SHAFT

- 1 3920249 67 ALL /STD/ - WITH FLOOR SHIFT /SUP 3901375/ - /ILL. 4-1/
- 1 3920250 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - NOTE. HOLE MAY HAVE TO BE ENLARGED /SUP 3901382/ - /ILL. 4-1/

4.010 BOWL, TRANSMISSION GEARSHIFT LEVER

- 1 5698512 67-68 ALL - WITH COLUMN SHIFT
- 1 7812064 69-72 COLUMN SHIFT - /ILL. 6-1/ / SUP 7806071/

4.010 BOWL, STEERING COLUMN

- 1 7800262 67-68 ALL - WITH TILT WHEEL - WITH FLOOR SHIFT
- 1 7810762 69-76 FLOOR SHIFT EXC TILT WHEEL /SUP 7804436/

4.010 PLATE, GEARSHIFT LEVER BOWL

- 1 7807691 69-70 ALL - WITH COLUMN SHIFT / SUP 7806853/ - /ILL. 6-1/
- 1 7807229 69-70 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL

4.010 PLUG, TRANSMISSION CONTROL SPARK SWITCH HOLE

- 1 3906448 71 455 HO ENG ST 3 SPD
- 72 350 AND 400 /4BC/ ENG ST 3 SPD
- 75-76 ALL

4.010 SHAFT, TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER

- 1 3901377 67 ALL /STD/ - WITH FLOOR SHIFT - /ILL. 4-1/
- 1 3922531 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT /SUP 3901378/ - /ILL. 4-1/

4.010 SHROUD, STEERING COLUMN BOWL

- 1 7811350 69-75 ALL - EXC TILT WHEEL - UPPER /SUP 7804473/
- 1 7806002 69 ALL - WITH FLOOR SHIFT - WITH TILT WHEEL - /ILL. 6-1/
- 1 7809375 70-74 ALL - WITH FLOOR SHIFT - WITH TILT WHEEL

4.010 SHROUD AND BOWL, STEERING COLUMN

- 1 5699057 67-68 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL

4.010 SPRING, GEARSHIFT LEVER DETENT

- 1 7806110 69 ALL - EXC TILT WHEEL
- 70 ALL COLUMN SHIFT

4.010 SUPPORT ASSEMBLY, TRANSMISSION CONTROL

- 1 3895261 67 ALL - WITH FLOOR SHIFT - LEVER BRACKET - /ILL. 4-1/
- 1 9791899 68-69 ALL - WITH FLOOR SHIFT - SHIFTER - /ILL. 4-1/
- 1 3975595 70-76 ALL - WITH FLOOR SHIFT - SHIFTER

4.012 BOLT, TRANSMISSION CONTROL LEVER AND BRACKET

- 1 3922533 67 ALL - WITH FLOOR SHIFT /SUP 3895263/ - /ILL. 4-1/

4.012 SCREW, GEARSHIFT LEVER BOWL PLATE

- 2 7810242 69-70 ALL EXC TILT WHEEL /SUP 7808198/

4.012 SCREW, STEERING COLUMN SHIFT LEVER DETENT PLATE

- 2 7804407 73-76 ST 3 SPD EXC TILT WHEEL

4.012 WASHER, BOWL SPRING THRUST

- 1 7800579 67-68 ALL - WITH COLUMN SHIFT - 1-7/16 ID X 1-3/4 OD

4.012 WASHER, GEARSHIFT LEVER HOUSING BEARING WAVE

- 1 7806732 69-73 ALL COLUMN SHIFT
- 1 7804447 74 ALL COLUMN SHIFT

4.012 WASHER, STEERING COLUMN BOWL

- 1 7804447 69-70 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL - WAVE - / ILL. 6-1/
- 1 7805159 69-73 ALL - WITH TILT WHEEL - WAVE - /ILL. 6-1/
- 1 7804906 69-73 ALL - WITH TILT WHEEL - THRUST - /ILL. 6-1/

4.012 WASHER, STEERING COLUMN SUPPORT THRUST

- 1 3886319 73-76 ALL W/TILT WHEEL

4.015 COVER, UNDERBODY CONTROL LEVER SEAL

- 1 3929982 67 ALL - WITH CONSOLE /SUP 3903522/ - /ILL. 10-1/

4.015 RETAINER, TRANSMISSION CONTROL LEVER SEAL

- 1 3893872 67 ALL - WITH CONSOLE - RIGHT - /ILL. 10-1/
- 1 3899870 67 ALL - WITH CONSOLE - LEFT - /ILL. 10-1/

4.015 RETAINER, STABILIZER SHAFT GROMMET

- 2 5544049 67 ALL - WITH FLOOR SHIFT - / ILL. 4-1/

4.015 RETAINER, UNDERBODY CONTROL LEVER SEAL

- 1 3893877 67 ALL - WITH FLOOR SHIFT /SUP -9789971- / - /ILL. 4-1, 10-1/
- 1 3973970 70-76 ALL FLOOR SHIFT - TO UNDERBODY

4.015 SEAL, TRANSMISSION CONTROL LEVER

- 1 3921896 67 ALL - WITH CONSOLE /SUP - 3893870- / - /ILL. 10-1/
- 1 483812 70-76 FLOOR SHIFT - LOWER
- 1 3973966 70-76 FLOOR SHIFT - UPPER /SUP 9795213/

4.015 SEAL, TRANSMISSION SHIFT LEVER ROD TO FLOOR

1 9795407 68-69 ALL - WITH FLOOR SHIFT - / ILL. 10-1/

4.015 SEAL, UNDERBODY CONTROL LEVER

1 3974526 67 ALL - WITH FLOOR SHIFT - 3893877 RETAINER MUST BE INSTALLED WITH THIS SEAL / SUP 9789944-3893873/ - /ILL. 4-1, 10-1/

4.017 ESCUTCHEON, CONSOLE GEARSHIFT OPENING

1 478571 70-76 F STD FLOOR SHIFT - CONSOLE

4.017 PLATE, TRANSMISSION CONTROL LEVER HOLE TRIM

1 3893855 67 ALL FLOOR SHIFT EXC CONSOLE - CHROME
1 3921895 67 ALL - WITH CONSOLE /SUP 3899869-3921892/ - /ILL. 10-1/
1 9780054 68-69 ALL - WITH CONSOLE - BLACK - /ILL. 10-1/
1 9780055 68-69 ALL 8 CYL - WITH FLOOR SHIFT - EXC CONSOLE - CHROME

4.025 TUBE ASSEMBLY, TRANSMISSION SHIFT

1 7806298 67-68 ALL COLUMN SHIFT /SUP 7801425/

4.025 TUBE ASSEMBLY, STEERING COLUMN SHIFT

1 7805116 69 ALL - WITH COLUMN SHIFT - / ILL. 6-1/
1 N.L.A. 69 ALL - WITH FLOOR SHIFT - WITH TILT WHEEL - /ILL. 6-1/ /SUP 7805163/
1 7804498 69 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL - /ILL. 6-1/
1 7805114 70-72 ALL COLUMN SHIFT
1 7808563 70-75 ALL FLOOR SHIFT EXC TILT WHEEL
1 7808908 70-75 ST EXC TILT WHEEL ALL FLOOR SHIFT W/TILT WHEEL

4.027 GROMMET, TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER SHAFT

AR 6270704 67 ALL - WITH FLOOR SHIFT - / ILL. 4-1/ /SUP 3910700/

4.027 PLATE, STEERING HOUSING AND SHAFT DETENT LOCK

1 5698603 67-68 ALL - EXC TILT WHEEL

4.027 RING, STEERING COLUMN SHIFT TUBE RETAINING

1 7804907 69-75 ALL - WITH TILT WHEEL - /ILL. 6-1/

4.027 SCREW, STEERING COLUMN HOUSING DETENT

1 7806109 69 ALL - EXC TILT WHEEL
70 ALL COLUMN SHIFT EXC TILT WHEEL

4.027 SPRING, STEERING COLUMN DETENT

1 N.L.A. 69 ALL - WITH FLOOR SHIFT - WITH TILT WHEEL /SUP 7806054/

4.027 SPRING, STEERING COLUMN SHIFT TUBE RETURN

1 7804446 69-70 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL - /ILL. 6-1/
1 7810567 71-74 ALL W/FLOOR SHIFT EXC TILT WHEEL
75-76 ALL EXC TILT WHEEL

4.027 WASHER, STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST

1 7807427 69-74 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL - /ILL. 6-1/ / SUP 7804548/
75 EXC TILT WHEEL

4.030 LEVER, STEERING COLUMN LOWER SHIFT

1 7801423 67-68 ALL - WITH COLUMN SHIFT - 1ST AND REVERSE
1 7805084 69 ALL - WITH COLUMN SHIFT - 1ST AND REVERSE - /ILL. 6-1/
1 7808568 70-72 ALL - WITH COLUMN SHIFT - 1ST AND REVERSE

4.030 SEAL, STEERING COLUMN SHAFT

1 7807007 70 FLOOR SHIFT

4.032 SPACER, TRANSMISSION LOWER SHIFT LEVER ANTI RATTLE

1 5698382 67-68 ALL - WITH COLUMN SHIFT
1 7805818 69-72 ALL - WITH COLUMN SHIFT - / ILL. 6-1/

4.035 ROD, STEERING COLUMN LOCK

1 9795688 69 ALL 6 CYL - WITH FLOOR SHIFT - LOWER - /ILL. 4-1/
1 N.L.A. 69 ALL 8 CYL - WITH FLOOR SHIFT - LOWER - /ILL. 4-1/ / SUP 9795690/
1 N.L.A. 69 FLOOR SHIFT - UPPER - /ILL. 4-1/ /SUP 977795/
1 3975607 70-76 FLOOR SHIFT - UPPER
1 479628 70-71 8 CYL FLOOR SHIFT /MUNCIE/ - LOWER
2 479628 70-76 8 CYL FLOOR SHIFT / SAGINAW/ - LOWER

4.035 ROD, TRANSMISSION GEARSHIFT CONTROL

1 3930051 67 ALL /STD/ - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/ /SUP 3895253/
1 3930053 67 ALL /STD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/ /SUP 3895255/
1 3930055 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/ /SUP 3899041/
1 3930057 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/ /SUP 3899043/
1 9777775 67-69 ALL - WITH COLUMN SHIFT - 1ST AND REVERSE - /ILL. 4-1/
1 N.L.A. 70-72 6 CYL COLUMN SHIFT - 1ST AND REVERSE /SUP 3975591/
1 N.L.A. 70-72 6 CYL COLUMN SHIFT - 2ND AND 3RD /SUP 3975589/
1 3975611 70-76 8 CYL STD FLOOR SHIFT / SAGINAW/ - 1ST AND REVERSE
1 3975612 70-76 8 CYL STD FLOOR SHIFT / SAGINAW/ - 2ND AND 3RD

FIREBIRD

4.035 ROD, TRANSMISSION GEARSHIFT CONTROL *(Cont'd)*

- 1 479626 70-71 8 CYL HD FLOOR SHIFT / MUNCIE/ - 1ST AND REVERSE
1 479627 70-71 8 CYL HD FLOOR SHIFT / MUNCIE/ - 2ND AND 3RD

4.037 BUSHING, SHIFT ROD /IN SHIFTER UNIT/

- AR 1234418 70-72 FLOOR SHIFT
74-76 FLOOR SHIFT

4.037 BUSHING, STEERING COLUMN LOWER LEVER TO LOCK ROD

- 1 9798861 69-70 ALL - WITH FLOOR SHIFT - INNER - 5/16 ID - /ILL. 4-1/
1 9798862 69-70 ALL - WITH FLOOR SHIFT - OUTER - 1/2 ID - /ILL. 4-1/

4.037 BUSHING, TRANSMISSION CONTROL ROD OR LOCK ROD TO LEVERS

- AR 382102 67-75 ALL - /ILL. 4-2/

4.037 BUSHING AND SLEEVE KIT, TRANSMISSION SHIFT LEVER

- AR 1394293 67-76 ALL - INCL 1-5/16 ID SLEEVE AND 1-7/16 ID BUSHING

4.037 CLAMP, TRANSMISSION CONTROL ROD OR LOCK ROD

- AR 382103 67-68 ALL - WITH COLUMN SHIFT - 13/32 ID X 25/32 OD - /ILL. 4-1/
69-74 ALL - /ILL. 4-2/

4.037 CLIP, TRANSMISSION CONTROL ROD OR LOCK ROD TO SHIFT LEVERS

- AR 3749084 67-69 ALL - /ILL. 4-2/

4.037 GROMMET, TRANSMISSION GEARSHIFT CONTROL ROD TO GEARSHIFT LEVERS

- AR 3975131 67-68 ALL - WITH COLUMN SHIFT - /ILL. 4-1/
69-70 ALL - /ILL. 4-1/ /SUP 3833108/
AR 3975131 71-76 ALL - 1/2 ID X 3/4 OD X 5/16 THK

4.037 GROMMET, TRANSMISSION LOCK ROD TO IDLER LEVER

- 1 3975131 69-70 ALL - /ILL. 4-1/ /SUP 3833108/
1 3975131 71-76 ALL

4.037 NUT, TRANSMISSION CONTROL ROD SWIVEL ADJUSTER

- AR 3840137 67 ALL - WITH FLOOR SHIFT - /ILL. 4-1/
70-76 ALL - WITH FLOOR SHIFT - 7/16-20 X .240 IN THICK

4.037 RETAINER, GEARSHIFT CONTROL ROD TO STEERING COLUMN

- AR 1244707 68 ALL COLUMN SHIFT
70-72 ALL COLUMN SHIFT
AR 1244707 75 ALL

4.037 RETAINER, SHIFTER RODS TO SHIFTER

- AR 1244707 70-73 ALL FLOOR SHIFT /SUP 1351769/

4.037 SCREW, TRANSMISSION CONTROL ROD TO LEVER

- AR 3989433 73-76 ALL - 5/16-18 X 1/2

4.037 SWIVEL, TRANSMISSION CONTROL ROD OR LOCK ROD

- AR 382104 67-68 ALL - WITH COLUMN SHIFT - /ILL. 4-1/
AR 3895244 67 ALL - WITH FLOOR SHIFT - /ILL. 4-1/
AR 382104 69-74 ALL - /ILL. 4-2/
AR 477721 70-76 ALL W/STD FLOOR SHIFT / SAGINAW/ - REVERSE
AR 1385607 73-75 ALL - TO LEVER

4.037 TRUNNION, TRANSMISSION CONTROL ROD TO SHIFTER LEVERS

- AR 9786896 68-69 ALL 8 CYL /HD/ WITH FLOOR SHIFT - /ILL. 4-1/
2 491086 70-72 ALL 8 CYL /HD/ WITH FLOOR SHIFT - INCLUDES PIN /SUP 477821/
AR 491086 73-74 ALL WITH FLOOR SHIFT - INCL PIN

4.037 WASHER, TRANSMISSION CONTROL ROD OR LOCK ROD

- AR 334533 73-76 ALL - 5/16 ID X 1-1/16 OD
AR 3903516 74-75 ALL - 7/64 FREE HEIGHT X 13/32 ID

4.037 WASHER, TRANSMISSION CONTROL RODS OR LOCK ROD TO COLUMN AND LEVERS

- 1 580379 67-68 ALL - WITH COLUMN SHIFT
69-75 ALL - /ILL. 4-1/

4.037 WASHER, TRANSMISSION GEARSHIFT CONTROL RODS OR LOCK ROD TO LEVERS

- AR 382105 68-76 ALL - 25/64 IN ID X 3/4 IN OD - /ILL. 4-2/
AR 334533 73-75 ALL - 5/16 ID X 1-1/16 OD

4.040 BRACKET, TRANSMISSION CONTROL ROD IDLER LEVER

- 1 3998691 70-73 ALL - NOTE. WHEN USING ON 1970-71 JOBS DISCARD ATTACHING SCREW

4.040 BUSHING, LOCK ROD IDLER LEVER TO SUPPORT

- 2 3792168 69-76 ALL - /ILL. 4-1/

4.040 BUSHING, TRANSMISSION CONTROL IDLER LEVER TO SUPPORT

- 2 3792168 67-72 ALL - WITH COLUMN SHIFT - /ILL. 4-1/

4.040 BUSHING, TRANSMISSION CONTROL ROD, SHAFT OR EQUALIZER

- AR 1377083 67-76 ALL - 1/2 ID X 1/4 IN THICK

4.040 LEVER, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER

- 1 9789815 67-68 ALL - WITH COLUMN SHIFT - /ILL. 4-1/
69 ALL - /ILL. 4-2/
1 3975606 70-76 ALL

4.040 LOCK, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER

- 1 3685801 67-69 ALL - /ILL. 4-2/
70-76 FLOOR SHIFT

4.040 NUT, TRANSMISSION IDLER LEVER SUPPORT TO FRAME

- 3 3792287 67 ALL - 5/16-18 - /ILL. 4-1/

4.040 SUPPORT, TRANSMISSION CONTROL ROD IDLER LEVER

- 1 3895291 67-69 ALL - WITH COLUMN SHIFT - /ILL. 4-1/
- 1 3975604 70-76 ALL FLOOR SHIFT

4.040 SUPPORT, TRANSMISSION LOCK ROD IDLER LEVER

- 1 3895291 69 ALL - /ILL. 4-1/

4.045 LEVER, TRANSMISSION SHIFTER /ON TRANSMISSION/

- 1 3922528 67 ALL /STD/ - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/ /SUP 3895249/
- 1 3895251 67 ALL /STD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/
- 1 3899045 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/
- 1 3899047 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/
- 1 9777773 67-68 ALL - WITH COLUMN SHIFT - 1ST AND REVERSE - /ILL. 4-1/
- 1 9777773 69 ALL - WITH COLUMN SHIFT - 1ST AND REVERSE - /ILL. 4-1/
- 1 9795691 69 ALL 6 CYL - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/
- 1 409870 69 ALL 6 CYL - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/ /SUP 405830/
- 1 3975590 70-72 6 CYL COLUMN SHIFT - 2ND AND 3RD
- 1 479687 70-71 STD FLOOR SHIFT /SAGINAW/ - 1ST AND REVERSE
- 1 479625 70-71 8 CYL HD FLOOR SHIFT /MUNCIE/ - 1ST AND REVERSE
- 1 479687 72-76 FLOOR SHIFT - 1ST AND REVERSE FIRST TYPE /LEFT AND UP/
- 1 378245 76 F WITH STD 3 SPD - FIRST AND REVERSE - SECOND TYPE LEFT AND DOWN
- 1 3975609 70-76 FLOOR SHIFT - 2ND AND 3RD

4.047 BRACKET, TRANSMISSION CONTROL CABLE MOUNTING

- 1 9795915 74-75 ST FLOOR SHIFT W/CONSOLE - LOWER

4.054 BRACKET, TRANSMISSION NEUTRAL START SWITCH

- 1 3961589 70-76 ALL - CLUTCH OPERATED

4.054 FASTENER PACKAGE, TRANSMISSION NEUTRAL, BACK UP LAMP AND SEAT BELT WARNING SWITCH

- 1 3981828 69-76 ALL WITH COLUMN SHIFT - TO COLUMN /SUP 7806573/

4.054 RETAINER, TRANSMISSION CABLE DETENT

- 1 404087 70-76 ALL

4.054 SWITCH ASSEMBLY, TRANSMISSION NEUTRAL START

- 1 1993486 69 ALL - INCLUDES BRACKET
- 1 3983965 70-76 ALL - CLUTCH OPERATED

4.054 WIRE ASSEMBLY, NEUTRAL SAFETY SWITCH AND SEAT BELT RELAY

- 1 8910504 72-73 ALL

4.054 WIRE ASSEMBLY, TRANSMISSION NEUTRALIZER SWITCH

- 1 6299268 69-70 ALL

4.067 SHIELD, TRANSMISSION CONTROL SPLASH

- 1 N.L.A. 67 ALL - WITH COLUMN SHIFT
- 68 ALL - EXC RAM AIR OR 400 HO - WITH COLUMN SHIFT - ATTACH WITH IDLER SUPPORT BOLTS /SUP 9792574/

4.075 BRACKET, TRANSMISSION CONTROLLED SPARK SWITCH MOUNTING

- 1 487162 72 ST 3 SPD W/FLOOR SHIFT

4.075 GASKET, TRANSMISSION CONTROLLED SPARK SWITCH

- 1 3906462 70-72 ALL
- 1 3929530 73-76 ALL

4.075 RELAY, TRANSMISSION CONTROL SPARK

- 1 3990843 71 6 CYL - DELAY
- 1 3990842 71 6 CYL - REVERSING
- 1 3996296 72 6 CYL ENG - DELAY

4.075 SWITCH ASSEMBLY, TRANSMISSION CONTROLLED SPARK

- 1 480308 70 ALL
- 1 3996286 72-74 6 CYL ENG ST 3 SPD
- 1 486978 72 8 CYL ENG ST 3 SPD
- 1 490751 73 8 CYL ENG ST 3 SPD - 1ST TYPE - STAMPED 490751
- 1 494366 73 8 CYL ENG ST 3 SPD - 2ND TYPE - STAMPED 494366
- 74 8 CYL ENG

4.081 MOUNTING ASSEMBLY, TRANSMISSION SUPPORT

- 1 3913498 67-74 ALL /SUP 3792133/
- 1 498129 75 ALL
- 1 525620 76 ALL

4.081 SUPPORT ASSEMBLY, TRANSMISSION

MOVED TO GROUP 7.011 AND NAME CHANGED TO CROSSMEMBER

4.083 SHIELD, TRANSMISSION MOUNTING ASSEMBLY HEAT

- 1 498160 75 8 CYL ENG

4.083 WEIGHT, DRIVE LINE DAMPER

- 1 9789563 67-69 ALL 6 CYL

4.085 SPACER, TRANSMISSION MOUNT TO TRANSMISSION

- 2 497737 76 ALL

4.085 WASHER, TRANSMISSION SUPPORT MOUNTING TO BRACKET

- 2 3818180 67-70 ALL - 15/32 X 1-1/4 X 3/16 THICK

4.103 CASE, TRANSMISSION

- 1 9798432 68-69 8 CYL /HD/ WITH FLOOR SHIFT - /ILL. 4-1/ /SUP 9793424/

FIREBIRD

4.103 CASE AND MAGNET, TRANSMISSION

1	3987952	67-72	ALL /STD-SAGINAW/ /SUP 3925642/ - /ILL. 4-1/
1	3870787	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	6273263	70-72	ALL /HD-MUNCIE/ /SUP 3974479-3987947/
1	471707	73-76	ALL

4.103 PLUG, TRANSMISSION CASE DRAIN PIPE

1	9776585	68	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1/2-14 - /ILL. 4-1/
---	---------	----	--

4.103 PLUG, TRANSMISSION FILLER

1	444746	67-69	ALL - 1/2-14
---	--------	-------	--------------

4.103 PLUG, TRANSMISSION REVERSE IDLER SHAFT HOLE

1	117612	68-70	ALL - 11/16 - /ILL. 4-1/
---	--------	-------	--------------------------

4.104 VENTILATOR ASSEMBLY, TRANSMISSION CASE

1	389668	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
---	--------	----	---

4.105 BOLT, TRANSMISSION COVER TO CASE

2	9776626	67	ALL 8 CYL /HD/ - 5/16-18 X 3/ 4 /SUP 3871520/
---	---------	----	--

4.105 COVER, TRANSMISSION CASE

1	3919365	67-69	ALL /STD/ - /ILL. 4-1/
1	3870808	67	ALL 8 CYL /HD/
1	9776577	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - ACCESS COVER - / ILL. 4-1/
1	338287	70-72	ALL - SAGINAW /SUP 3952645/
1	3977508	70	ALL - HD MUNCIE
		72	ALL - HD MUNCIE
1	3952645	73	6 CYL ENG - SAGINAW
1	338288	73	350 ENG - SAGINAW - WITH TRANS CODED TA
1	338287	73-76	ALL W/TRANS CODED TN

4.105 GASKET, TRANSMISSION SIDE COVER PLUG

1	3929530	73-76	ALL
---	---------	-------	-----

4.105 PLUG, TRANSMISSION SIDE COVER FRONT SHIFTER SHAFT BOSS

1	3906448	73	ALL 8 CYL
		75-76	ALL - 9/16-18 X 3/16

4.105 SCREW, TRANSMISSION ACCESS COVER TO CASE

7	9776578	68-69	ALL 8 CYL - WITH FLOOR SHIFT - 5/16-18 X 5/8 - /ILL. 4-1/
2	9776579	68-69	ALL 8 CYL - WITH FLOOR SHIFT - 5/16-18 X 1 - /ILL. 4- 1/

4.107 PLATE, TRANSMISSION CONTROL LEVER TRIM

1	9780055	68	ALL WITH FLOOR SHIFT - EXC CONSOLE - CHROME
---	---------	----	--

4.109 GASKET, TRANSMISSION COVER

1	3858990	67-76	ALL /STD-SAGINAW/ - /ILL. 4- 1/
1	3870806	67	ALL 8 CYL /HD/
1	9776584	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	3952621	70-72	ALL /HD-MUNCIE/

4.115 SCREW, CONVERTER COVER PAN TO CASE

1	9784860	73-74	ALL - #12-11 X 1 IN
---	---------	-------	---------------------

4.128 CLIP, TRANSMISSION OIL COOLER PIPES

AR	3710497	72-73	ALL
----	---------	-------	-----

4.303 FORK, TRANSMISSION SHIFTER

1	3870795	67	ALL 8 CYL /HD/ - 1ST AND REVERSE
1	3746272	67	ALL 8 CYL /HD/ - 2ND AND 3RD
2	3858997	67-76	ALL /STD/ - 1ST AND REVERSE AND 2ND AND 3RD - /ILL. 4-1/
1	9781835	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/
1	9776591	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/
2	3831717	70-74	ALL /HD-MUNCIE/ - 1ST AND REVERSE AND 2ND AND 3RD

4.307 SLEEVE, TRANSMISSION SHIFTER INTERLOCK

1	360089	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1.0085 /SUP 3709313/
1	N.L.A.	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1.0235 /SUP 3709314/

4.309 RAIL, PIN AND SPRING PACKAGE, TRANSMISSION SHIFTER

1	9785718	68-69	ALL 8 CYL - WITH FLOOR SHIFT
---	---------	-------	---------------------------------

4.309 SHAFT, TRANSMISSION SHIFTER

2	370480	67	ALL /STD/ - FIRST TYPE HAS 1/8 IN FROM GROOVE IN SHAFT TO END OF SHAFT / SUP 3858994/
2	3932234	67	ALL /STD/ - SECOND TYPE HAS 1/16 IN FROM GROOVE IN SHAFT TO END OF SHAFT - /ILL. 4-1/ /SUP 3915043/
1	3893612	67	ALL 8 CYL /HD/ - 1ST AND REVERSE
1	3893611	67	ALL 8 CYL /HD/ - 2ND AND 3RD
2	3932234	68-70	ALL /STD/ - /ILL. 4-1/ /SUP 3915043/
2	9776587	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
AR	3932234	70-72	ALL /HD/ FIRST AND REVERSE /MUNCIE/ 71-72 ALL /STD/ - FIRST AND REVERSE /SAGINAW/
1	3952650	70-73	ALL /HD/ - SECOND AND THIRD /MUNCIE/
1	3952649	71-76	ALL /STD/ - SECOND AND THIRD /SAGINAW/
1	3932234	73-76	6 CYL ENG - FIRST AND REVERSE
1	3952650	73	350 ENG - FIRST AND REVERSE - WITH TRANS CODED TA

4.311 CAM, TRANSMISSION DETENT

2	3911919	67-69	ALL - /ILL. 4-1/
		70-74	ALL /STD-SAGINAW/
1	3911948	70-72	ALL /HD-MUNCIE/
2	346399	75-76	ALL

4.311 PIN, TRANSMISSION DETENT CAM RETAINING			
1	3831715	67-76	ALL /STD/ - /ILL. 4-1/
4.311 RING, TRANSMISSION DETENT CAM RETAINER			
1	274676	67-69	ALL /STD/ - 5/16 - /ILL. 4-1/
4.311 SPRING, TRANSMISSION DETENT CAM			
1	3831718	67-70	ALL /STD/ 70 ALL /HD-MUNCIE/ 71-76 ALL /SUP 3853804/
4.311 SPRING, TRANSMISSION SHIFT LEVER POPPET			
1	3709310	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT /SUP 3877015/
4.312 SCREW, TRANSMISSION SHIFTER FORK TO RAIL			
2	9776596	68-69	ALL 8 CYL - WITH FLOOR SHIFT - 5/16-24 X 15/16 SET - /ILL. 4-1/
4.313 SEAL, TRANSMISSION SHIFTER SHAFT			
2	3844036	67-70	ALL /STD/ - /ILL. 4-1/
2	3845164	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /O/ RING
2	9776598	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - OIL
AR	3831716	70-73	ALL /HD-MUNCIE/ 71-76 ALL /STD-SAGINAW/ - SECOND AND THIRD SHIFTER
1	3844036	71-72	ALL /STD-SAGINAW/ - FIRST AND REVERSE SHIFTER
		73	6 CYL ENG - FIRST AND REVERSE SHIFTER / SAGINAW/ 5/8 IN X 1/16 IN
		74-76	ST - FIRST AND REVERSE SHIFTER /SAGINAW/ - 5/8 IN X 1/16 IN
1	6255517	73	350 ENG WITH TRANS CODED TA - FIRST AND REVERSE SHIFTER /SAGINAW/
1	3844036	73	350 ENG WITH TRANS CODED TN - FIRST AND REVERSE SHIFTER /SAGINAW/
4.317 EXTENSION ASSEMBLY, TRANSMISSION			
1	N.L.A.	67	ALL /STD/ - /ILL. 4-1/ /SUP 9789554/
1	N.L.A.	68-69	6 CYL COLUMN SHIFT / SAGINAW/ /SUP 9789554/
1	N.L.A.	68-69	6 CYL FLOOR SHIFT / SAGINAW/ /SUP 9791990/
1	9777227	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	352253	70-74	ALL /SAGINAW/ /SUP 3860041-3873885-6261883/
1	3911941	70-72	ALL /HD-MUNCIE/
1	326557	75-76	ALL /SAGINAW/ /SUP 360002/
4.317 VENT, TRANSMISSION EXTENSION			
1	3738462	67-76	ALL - METAL - /ILL. 4-1/
4.318 GASKET, TRANSMISSION REAR EXTENSION			
1	3876752	67-76	ALL /STD/ - /ILL. 4-1/
1	3870807	67	ALL 8 CYL /HD/
1	9776583	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - TO CASE - /ILL. 4-1/
1	3911943	70-72	ALL /HD-MUNCIE/

4.318 SEAL, TRANSMISSION EXTENSION OIL			
1	1243402	67-70	ALL /STD/ - /ILL. 4-1/ 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/ /SUP 3871649/
1	1386231	71-74	ALL - 1-1/2 ID X 2-3/8 OD
1	1243402	75-76	ALL
4.318 SEAL ASSEMBLY, TRANSMISSION MAIN DRIVE GEAR BEARING OIL			
1	9776620	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
4.319 BUSHING, TRANSMISSION REAR EXTENSION			
1	6260048	67-69	ALL /STD/ - /ILL. 4-1/ 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT /SUP 3786292/
1	392971	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	6260048	70-76	ALL /STD-SAGINAW/
4.329 ADAPTER, SPEEDOMETER DRIVEN GEAR			
1	9775436	67-69	ST 3 SPD USED WITH 3.55 AXLE RATIO - 20 TOOTH DRIVEN GEAR - BLUE
1	535614	67	ST 3 SPD USED WITH 3.90 AXLE RATIO - 18 TOOTH DRIVEN GEAR - RED
1	535614	67	ST 3 SPD USED WITH 3.90 AXLE RATIO - 19 TOOTH DRIVEN GEAR - RED
1	535614	67	ST 3 SPD USED WITH 4.33 AXLE RATIO - 20 TOOTH DRIVEN GEAR - RED
1	6477964	71-72	ST 3 SPD USED WITH 3.73 AXLE RATIO - 17 TOOTH DRIVEN GEAR -
4.337 GEAR, SPEEDOMETER DRIVEN			
1	3987918	70	ALL - 18 TEETH - BROWN /SUP 3860341/
1	3987919	70	ALL - 19 TEETH - NATURAL / SUP 3860342/
1	3987917	67-69	ST 3 SPD - 17 TEETH - PURPLE
		71-72	ST 3 SPD - 17 TEETH - PURPLE
1	3987921	70	ALL - 21 TEETH - RED /SUP 3860344/
1	3987918	67-70	ST 3 SPD - 18 TEETH - BROWN
1	3987919	67-76	ST 3 SPD - 19 TEETH - NATURAL
1	3987920	67-70	ST 3 SPD - 20 TEETH - BLUE
		73-75	ST 3 SPD - 20 TEETH - BLUE
1	3987921	67-76	ST 3 SPD - 21 TEETH - RED
1	3987922	71-76	ST 3 SPD - 22 TEETH - SILVER FOR 1967-69 SEE SPEEDO CHARTS IN THE GROUP 4.000 ST 3 SPD ILLUSTRATION SECTION.
4.338 FITTING, SPEEDOMETER DRIVEN GEAR			
1	3860357	67	ALL
		68	ALL /STD/
1	345215	68-70	8 CYL /HD/ WITH FLOOR SHIFT - INCL SEAL /SUP 3869912/
1	3860357	69-70	ALL 6 CYL
1	345215	71-76	ALL - INCL SEAL /SUP 3869912-6258100/
4.338 RETAINER, DRIVEN GEAR SLEEVE			
1	3708148	67-76	ALL
4.338 SEAL, DRIVEN GEAR FITTING			
1	6264903	67-76	ALL -O- RING - .647 ID X .103 / SUP 3708146/

FIREBIRD

4.338 SEAL, SPEEDOMETER PINION

1 3869910 67-72 ALL - STEEL AND RUBBER

4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE

1 6478128 67-68 ALL /-37/ WITH COLUMN SHIFT - TYPE #CC-511 - CABLE 68-5/8, CASING 67-1/2

1 6478128 67-68 ALL /-67/ WITH COLUMN SHIFT - TYPE #CC-299 - CABLE 68-1/2, CASING 67 /SUP 6476724/

1 6478121 67 ALL /-37/ WITH FLOOR SHIFT - UPPER - TYPE #CC-292 - CABLE 46-1/8, CASING 45 / SUP 6454482/

1 6476725 67 ALL /-67/ WITH FLOOR SHIFT - UPPER - TYPE #CC-300 - CABLE 44-1/8, CASING 43

1 6454481 67 ALL WITH FLOOR SHIFT - LOWER - #CC-291 - CABLE 25-1/8, CASING 24

1 6478121 68 ALL /-37/ 6 CYL WITH FLOOR SHIFT - UPPER - TYPE #CC-292 - CABLE 46-1/8, CASING 45 /SUP 6454482/

6454481
1 6476725 68 ALL /-67/ 6 CYL WITH FLOOR SHIFT - UPPER - TYPE #CC-300 - CABLE 44-1/8, CASING 43

1 6454481 68-69 ALL 6 CYL WITH FLOOR SHIFT - LOWER - TYPE #CC-291 - CABLE 25-1/8, CASING 24

1 6478126 68 ALL 8 CYL WITH FLOOR SHIFT - TYPE #CC-267 /SUP 6454835/

1 6478175 69 ALL - WITH COLUMN SHIFT - TYPE #CC534

69 ALL 8 CYL - WITH FLOOR SHIFT - TYPE #CC-363 /SUP 6477544/

1 6477421 69 ALL 6 CYL WITH FLOOR SHIFT - UPPER - TYPE #CC-342

1 6478176 70 6 CYL FLOOR SHIFT - TYPE #CC535 /SUP 6477547/

1 6478170 70 8 CYL FLOOR SHIFT /STD-SAGINAW/ - UPPER - TYPE #CC350 /SUP 6477531/

1 6454481 70 8 CYL FLOOR SHIFT /STD-SAGINAW/ - LOWER - TYPE #CC414 /SUP 6478245/

1 6478177 70 8 CYL FLOOR SHIFT /MUNCIE/ - TYPE #CC-536

1 6478181 70 6 CYL - TYPE #CC540

71-72 6 CYL COLUMN SHIFT - TYPE #CC540

1 6478170 70-71 8 CYL COLUMN SHIFT - UPPER - TYPE #CC529

1 6454481 70-71 8 CYL COLUMN SHIFT - LOWER - TYPE #CC291

1 6478177 71-72 8 CYL FLOOR SHIFT /MUNCIE/ - TYPE #CC536 - 68 IN LONG

1 6478732 72 350 ENG W/FLOOR SHIFT - LOWER - TYPE #CC425

1 6454481 72 6 CYL FLOOR SHIFT - TYPE #CC291

1 6478171 72-76 ALL 3 SPD ST FLOOR SHIFT - UPPER - TYPE #CC530 - 44 IN LONG

1 6454481 71-72 6 CYL 3 SPD ST FLOOR SHIFT - LOWER - TYPE #CC291

1 6478170 71 6 CYL 3 SPD ST FLOOR SHIFT - UPPER - TYPE #CC529

4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE (Cont'd)

1 6454481 73-76 6 CYL OR 350 ENG 3 SPD ST FLOOR SHIFT - LOWER - 24 IN LONG - TYPE #CC291

1 6478880 73-74 ALL W/CRUISE CONTROL - TYPE #CC430

4.342 CABLE KIT /LESS CASING/, SPEEDOMETER FLEXIBLE

NOTE. KIT INCLUDES CABLE, TIP AND STAKING TOOL.

1 6477499 67-70 ALL - 81 IN OL - TYPE #615 / SUP 846890/

4.342 CLIP, SPEEDOMETER CABLE TO FRAME OR UNDERBODY

1 3825340 67 ALL - WITH FLOOR SHIFT /SUP 3881339/

2 3772324 68-69 ALL 8 CYL - WITH FLOOR SHIFT

4.342 CLIP, SPEEDOMETER CABLE

AR 1380949 68-69 ALL

1 477704 70-76 ALL W/FLOOR SHIFT - TO TRANS

1 487120 72-74 ALL W/FLOOR SHIFT - TO CROSS SHAFT BRACKET

75-76 ALL - TO CROSS SHAFT

1 3935970 76 ST - J TYPE

4.342 GROMMET, SPEEDOMETER FLEXIBLE SHAFT

1 332650 74-75 ST - USED IN 1 IN DIA HOLE - USE SEALANT MATERIAL AS REQD AROUND HOLE IN GROMMET

4.342 PLUG, SPEEDOMETER CABLE DASH HOLE

1 4410574 68 ALL 8 CYL /HD/ - WITH FLOOR SHIFT

1 4859119 67-69 ALL - CRUISE CONTROL SPEEDO CABLE HOLE - FOR 1-1/2 IN HOLE

1 4410574 71-74 ALL - FOR 1 IN HOLE

4.342 RETAINER, SPEEDOMETER CABLE TO SPEEDOMETER

1 6491006 69-71 ALL - SPRING CLIP

4.342 SHAFT, SPEEDOMETER FLEXIBLE

SEE CABLE, GROUP 4.342

4.343 GEAR, SPEEDOMETER DRIVE

1 9785023 67-69 ALL - 7 TOOTH

1 3708144 67 ALL 8 CYL - 8 TEETH

1 9777230 68 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 8 TEETH

1 3708144 68-70 ALL /STD/ -- 8 TEETH

1 9776653 69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 8 TEETH

1 9785023 70 8 CYL /HD-MUNCIE/ - 7 TEETH

1 3708144 71-74 ALL - 8 TEETH

1 3905494 75-76 ALL - 9 TEETH

4.345 CLIP, SPEEDOMETER DRIVE GEAR RETAINER

1 6261781 69-70 ALL

72-76 ALL /SUP 6261353/

4.345 RING, SPEEDOMETER DRIVE GEAR TO SHAFT

1 6256599 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - SNAP /SUP 9776615/

4.351 GEAR, TRANSMISSION CLUTCH

1 3859030 67-74 ALL 6 CYL /SAGINAW/ - 19-30 TEETH - /ILL. 4-1/
1 3859035 67-74 ALL 8 CYL /STD-SAGINAW/ - 19 TEETH - /ILL. 4-1/
1 3870794 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1 3932210 70-72 ALL /HD-MUNCIE/
1 346354 75-76 6 CYL ENG

4.351 SHAFT, TRANSMISSION INPUT

1 9781064 68-69 ALL 8 CYL - WITH FLOOR SHIFT - /ILL. 4-1/

4.352 BEARING, TRANSMISSION MAINSHAFT FRONT ROLLER

14 3743449 67-76 ALL /STD-SAGINAW/ - /ILL. 4-1/

4.352 BEARING, TRANSMISSION MAINSHAFT PILOT

16 9423039 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - ROLLER - /ILL. 4-1/ / SUP 9423050-7451735/

4.352 ROLLER, TRANSMISSION MAINSHAFT BEARING

15 9419284 68-69 ALL 8 CYL - WITH FLOOR SHIFT - /ILL. 4-1/ /SUP 9776618/
16 9423039 70-72 ALL /HD-MUNCIE/ /SUP 7451735/

4.353 SPACER, TRANSMISSION MAINSHAFT PILOT BEARING

1 389677 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT

4.354 SEAL, TRANSMISSION CLUTCH GEAR BEARING OIL

1 3987936 67-76 ALL /SUP 3761933/ - /ILL. 4-1/

4.355 BEARING, TRANSMISSION CLUTCH GEAR

1 907929 67-72 ALL 6 CYL /SUP 907762/ - /ILL. 4-1/
1 725765 67-72 ALL 8 CYL /STD/ /SUP 907930-907764/ - /ILL. 4-1/
1 907913 70-74 8 CYL ENG /HD-MUNCIE/
1 907929 73-76 ALL /STD-SAGINAW/

4.355 BEARING, TRANSMISSION MAIN DRIVE

1 9423834 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - WITH SNAP RING - /ILL. 4-1/
1 907528 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - GEAR BALL - FRONT - /SUP 9776600/ /ILL. 4-1/

4.356 BOLT, TRANSMISSION MAIN DRIVE GEAR BEARING RETAINER TO CASE

4 9776626 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

4.356 RETAINER AND SEAL PACKAGE, TRANSMISSION INPUT SHAFT GEAR BEARING

1 9777073 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

4.356 RETAINER, TRANSMISSION CLUTCH GEAR BEARING

1 3859032 67-76 ALL /STD-SAGINAW/ - /ILL. 4-1/
1 3786024 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1 3911976 70 ALL /HD-MUNCIE/
72 ALL /HD-MUNCIE/

4.358 GASKET, TRANSMISSION CLUTCH GEAR BEARING RETAINER

1 3916113 67-70 ALL /STD-SAGINAW/ - /ILL. 4-1/
1 3915017 70-72 ALL /HD-MUNCIE/
1 3916113 72-76 ALL /STD SAGINAW/

4.358 GASKET, TRANSMISSION INPUT SHAFT BEARING RETAINER

1 9776603 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

4.358 GASKET, TRANSMISSION MAIN SHAFT DRIVE GEAR BEARING RETAINER

AR 3709317 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .010 THICK
AR 1359473 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .015 THICK

4.374 SLINGER, TRANSMISSION CLUTCH GEAR BEARING OIL

1 3932213 70-72 ALL /HD-MUNCIE/

4.376 RING, TRANSMISSION CLUTCH GEAR BEARING LOCATING

1 590849 67-76 ALL /STD/ - /ILL. 4-1/

4.376 RING, TRANSMISSION CLUTCH GEAR BEARING RETAINING

1 3709351 67-71 ALL /STD/
72-76 ALL /HD-MUNCIE/ - .086-.088 - SNAP PLAIN
1 3709352 73-76 ALL - .089-.091 - SNAP BLUE
1 3709354 74-76 ALL - .095-.097 - SNAP GREEN
1 3709353 74-76 ALL - .092-.094 - SNAP ORANGE

4.376 RING, TRANSMISSION CLUTCH GEAR BEARING TO TRANSMISSION CASE

1 2830050 73-76 8 CYL /MUNCIE/ - SNAP RING - 3-1/32 ID X 3-15/32 OD X 1/16 THK

4.376 RING, TRANSMISSION MAIN DRIVE GEAR BEARING

1 3709351 67 ALL 8 CYL /HD/ - WASHER SNAP - .087
1 3709352 67 ALL 8 CYL /HD/ - WASHER SNAP - .090
1 3709353 67 ALL 8 CYL /HD/ - WASHER SNAP - .093
1 3709354 67 ALL 8 CYL /HD/ - WASHER SNAP - .096
1 3709355 67 ALL 8 CYL /HD/ - WASHER SNAP - .099
1 3709356 67 ALL 8 CYL /HD/ - WASHER SNAP - .102

4.376 RING, TRANSMISSION MAIN DRIVE GEAR FRONT BEARING

1 9776613 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - RETAINER SNAP
1 3866346 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - TO SHAFT - SNAP / SUP 9776614/

4.376 WASHER, TRANSMISSION MAIN DRIVE GEAR BEARING

1 3709350 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

4.380 SYNCHRONIZER ASSEMBLY, TRANSMISSION

2 3924766 67-76 ALL /STD SAGINAW/ - 1ST AND REVERSE, 2ND AND 3RD /SUP 3859021/ - /ILL. 4-1/

1 3870785 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/

1 3870789 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/

1 9776631 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1ST AND REVERSE - /ILL. 4-1/

1 9776641 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-1/

2 3911968 70-72 ALL /HD-MUNCIE/ - 1ST AND REVERSE, 2ND AND 3RD

4.383 RETAINER, TRANSMISSION SYNCHRONIZER RING

2 3859025 67-76 ALL /STD-SAGINAW/ - /ILL. 4-1/

4.383 RING, TRANSMISSION SYNCHRONIZER BLOCKING

3 3859027 67-76 ALL /STD-SAGINAW/ - /ILL. 4-1/

1 3870805 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1ST - /ILL. 4-1/

2 3709348 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 2ND AND 3RD - /ILL. 4-2/

2 9776640 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 1ST AND REVERSE, 2ND AND 3RD - /ILL. 4-2/

3 3911974 70-72 ALL /HD-MUNCIE/

4.383 RING, TRANSMISSION SYNCHRONIZER RETAINING

1 3870812 67 ALL 8 CYL /HD/ - 1ST AND REVERSE - 7/32 THICK

1 3870813 67 ALL 8 CYL /HD/ - 1ST AND REVERSE - 1/4 THICK

1 3870811 67 ALL 8 CYL /HD/ - 1ST AND REVERSE - 3/8 THICK

1 3911973 70-72 ALL /HD-MUNCIE/

2 3859025 73-76 ALL

4.384 PLATE OR KEY, TRANSMISSION SYNCHRONIZER

3 3870804 67 ALL 8 CYL /HD/ - 1ST AND REVERSE SHIFTING

3 3870793 67 ALL 8 CYL /HD/ - 2ND AND 3RD SHIFTING

6 3871250 67-76 ALL /STD-SAGINAW/

6 3911972 70-72 ALL /HD-MUNCIE/

4.384 RING, TRANSMISSION FIRST AND REVERSE SYNCHRONIZER HUB TO SHAFT

1 9776612 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - SNAP - /ILL. 4-1/

4.384 RING, TRANSMISSION SECOND AND THIRD SYNCHRONIZER HUB TO SHAFT

1 6256599 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - SNAP /SUP 9776615/

4.384 RING, TRANSMISSION SECOND AND THIRD SYNCHRONIZER TO MAINSHAFT

1 3709351 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .087

1 3709352 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .090

1 3709353 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .093

1 3709354 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .096

1 3709355 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .099

1 3709351 70-72 ALL /HD-MUNCIE/ - .086-.088

4.395 GEAR, TRANSMISSION SECOND SPEED

1 3859019 67-76 ALL /STD-SAGINAW/ - 24 TEETH - /ILL. 4-1/

1 3870823 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - CLUTCH TEETH 36, HELICAL TEETH 28 - /ILL. 4-1/

1 9776608 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

1 3911962 70-72 ALL /HD-MUNCIE/ - 27 TEETH

4.403 SHAFT, TRANSMISSION MAIN

1 3870788 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT

1 3915014 67-76 ALL /STD/ /SUP 3860044/

1 3911960 70-72 ALL /HD-MUNCIE/

4.403 SHAFT AND WASHER PACKAGE, TRANSMISSION OUTPUT

1 9785698 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

4.408 BEARING, TRANSMISSION MAIN SHAFT / REAR/

1 725756 67-69 ALL 6 CYL /STD/ /SUP 907763/

1 907765 67-72 ALL 8 CYL /STD/

1 907372 67 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - LESS SNAP RING / SUP 9428650/

1 954606 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT /SUP 9776601/

1 907913 70-72 ALL /HD-MUNCIE/

1 725756 70-76 ST 3 SPD /SAGINAW/ - INCL SNAP RING

4.412 RING, TRANSMISSION REAR BEARING

1 2830050 67-72 ALL /HD-MUNCIE/ WITH FLOOR SHIFT - SNAP - 3-1/32 X 3-15/32 X 1/16

1 3911967 67 ALL /HD-MUNCIE/ WITH FLOOR SHIFT - LOCATING /SUP 3725439/

1 3707174 67-76 ST 3 SPD /SAGINAW/ - LOCATING - TO CASE - 2-11/16 ID

1 3911967 70-72 ALL /HD-MUNCIE/ - LOCK - .073 THICK

4.412 RING, TRANSMISSION MAIN DRIVE GEAR REAR BEARING RETAINER

1 9776611 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

4.412 RING, TRANSMISSION MAIN DRIVE GEAR REAR BEARING TO SHAFT

1 6256599 68-69 ALL 8 CYL /HD/ - WITH FLOOR SHIFT - SNAP /SUP 9776615/

4.412 RING, TRANSMISSION REAR BEARING TO MAINSHAFT

1	3707189	67-76	ALL /STD/ - .089-.091 - RETAINING
1	3709351	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .087
1	3709352	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .090
1	3709353	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .093
1	3709354	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .096
1	3709355	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .099
1	3709356	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - .102
1	3709351	72	ALL /HD/ - .087
		74-76	ALL - .086-.088 - RETAINING
1	3709352	74-76	ALL - .089-.091 - RETAINING
1	3709354	74-76	ALL - .095-.097 - RETAINING
1	3709353	74-76	ALL - .092-.094 - RETAINING

4.412 WASHER, TRANSMISSION MAINSHAFT REAR BEARING

1	3709350	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
---	---------	----	--

4.413 SPRING, TRANSMISSION SYNCHRONIZER

2	3870809	67	ALL 8 CYL /HD/ - 1ST AND REVERSE
2	3870810	67	ALL 8 CYL /HD/ - 2ND AND 3RD
4	3924768	67-76	ALL /STD/ /SUP 3859024/
AR	9798431	68-69	8 CYL /HD/ - WITH FLOOR SHIFT - RETAINING /SUP 9776632-8/
4	3911971	70-72	ALL /HD-MUNCIE/

4.417 GEAR, TRANSMISSION FIRST SPEED

1	3859014	67-76	ALL /STD-SAGINAW/ - 29-30 TEETH - /ILL. 4-1/
1	3870798	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 27-30 TEETH - /ILL. 4-1/
1	9776607	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - CONSTANT MESH - /ILL. 4-1/
1	3911961	70-72	ALL /HD-MUNCIE/

4.417 GEAR, TRANSMISSION REVERSE

1	3859015	67-76	ALL /STD-SAGINAW/ - 28-30 TEETH - INCL BUSHING - /ILL. 4-1/
1	3870803	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	3911964	70-72	ALL /HD-MUNCIE/

4.419 RING, TRANSMISSION SYNCHRONIZER BLOCKING RING TO SHAFT

1	3901166	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - SNAP /SUP 9776616/
---	---------	-------	--

4.419 WASHER, TRANSMISSION FIRST GEAR THRUST

1	9785587	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - CONSTANT MESH - /ILL. 4-1/
---	---------	-------	--

4.419 WASHER, TRANSMISSION REVERSE GEAR THRUST

1	3869940	67-76	ALL /STD-SAGINAW/ - /ILL. 4-1/ /SUP 8874553/
1	3884595	67-76	ALL /STD-SAGINAW/ - WAVE - /ILL. 4-1/
1	3911963	70-72	ALL /HD-MUNCIE/

4.421 GEAR, TRANSMISSION COUNTERSHAFT

1	3858998	67-74	ALL 6 CYL - 28 TEETH - /ILL. 4-1/
1	3859036	67-74	ALL 8 CYL /STD/ - 25 TEETH - /ILL. 4-1/
1	3870784	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	9776609	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	3911950	70-72	ALL /HD-MUNCIE/
1	3859951	75-76	SAGINAW/

4.422 BEARING, TRANSMISSION COUNTER GEAR ROLLER

AR	435847	67-76	ALL /STD/ - /ILL. 4-1/
AR	9423051	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/

4.422 ROLLER, TRANSMISSION COUNTERSHAFT GEAR BEARING

50	9776619	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
----	---------	-------	--

4.423 SPACER, TRANSMISSION COUNTER GEAR BEARING

1	3870796	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
---	---------	----	--

4.423 WASHER, TRANSMISSION COUNTER GEAR BEARING

1	3870797	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - FRONT THRUST - /ILL. 4-1/
1	3870799	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - REAR THRUST - /ILL. 4-1/

4.423 WASHER, TRANSMISSION COUNTER GEAR THRUST

2	3890565	67-76	ALL /STD-SAGINAW/ - /ILL. 4-1/
2	9776650	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
2	3911955	70-72	ALL /HD-MUNCIE/

4.423 WASHER, TRANSMISSION COUNTERSHAFT BEARING

2	3859006	67-76	ALL /STD-SAGINAW/ - /ILL. 4-1/
6	3709324	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
2	9776649	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - 15/16 FLAT - /ILL. 4-1/
4	3924786	70-72	ALL /HD-MUNCIE/

4.428 COUNTERSHAFT, TRANSMISSION

1	3859005	67-76	ALL /STD/ - /ILL. 4-1/
1	3870790	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	9776602	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	3911954	70-72	ALL /HD-MUNCIE/

4.430 GEAR, TRANSMISSION REVERSE IDLER

1	3859007	67-76	ALL /STD-SAGINAW/ - 17 TEETH - INCL BUSHING - /ILL. 4-1/
1	3870792	67	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - /ILL. 4-1/
1	9776604	68-69	ALL 8 CYL /HD/ - WITH FLOOR SHIFT - INCLUDES BUSHING - /ILL. 4-1/
1	3911956	70-72	ALL /HD-MUNCIE/

**4.431 BEARING, TRANSMISSION REVERSE
IDLER GEAR**

25 9423491 67 ALL 8 CYL /HD/ - WITH FLOOR
SHIFT - ROLLER - /ILL. 4-1/

**4.433 SHAFT, TRANSMISSION REVERSE IDLER
GEAR**

1 3998253 67-76 ALL /STD/ - /ILL. 4-1/ /SUP
3859012/
1 N.L.A. 67 8 CYL /HD/ WITH FLOOR SHIFT
/SUP 3870800/
1 9776628 68-69 ALL 8 CYL /HD/ - WITH FLOOR
SHIFT - /ILL. 4-1/
1 3911959 70-72 ALL /HD-MUNCIE/

**4.435 RING, TRANSMISSION REVERSE IDLER
GEAR RETAINING**

1 9414486 67-71 ALL /STD/ - 3/4 - /ILL. 4-1/

**4.437 WASHER, TRANSMISSION REVERSE
IDLER GEAR THRUST**

1 3859011 67 ALL /STD/ - /ILL. 4-1/
2 3876160 67 ALL 8 CYL /HD/ - WITH FLOOR
SHIFT - /ILL. 4-1/
1 9776651 68-69 ALL 8 CYL /HD/ - WITH FLOOR
SHIFT - /ILL. 4-1/

FIREBIRD

ST 4 SPEED TRANSMISSION

ALPHABETICAL INDEX GROUP 4.000

A	
ADAPTER	
SPEEDOMETER DRIVEN GEAR	4.329

B	
BALL	
TRANSMISSION REVERSE DETENT	4.311
BEARING	
MAINSHAFT /REAR/	4.408
TRANSMISSION CLUTCH GEAR	4.355
TRANSMISSION COUNTERSHAFT	4.422
TRANSMISSION MAINSHAFT	4.352
TRANSMISSION MAINSHAFT FRONT ROLLER	4.352

BOLT	
TRANSMISSION CONTROL LEVER AND BRACKET	4.012
TRANSMISSION REAR BEARING RETAINER	4.319

BOWL	
STEERING COLUMN	4.010

BRACKET	
TRANSMISSION CONTROL CABLE MOUNTING	4.047
TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER SHAFT	4.010
TRANSMISSION CONTROL ROD IDLER LEVER	4.040
TRANSMISSION NEUTRAL START SWITCH	4.054

BUSHING	
LOCK ROD IDLER LEVER TO SUPPORT	4.040
SHIFT ROD /IN SHIFTER UNIT/	4.037
STEERING COLUMN LOWER LEVER TO LOCK ROD	4.037
TRANSMISSION CONTROL ROD, SHAFT OR EQUALIZER	4.040
TRANSMISSION LOCK ROD TO IDLER LEVER	4.037
TRANSMISSION REAR EXTENSION	4.319

BUSHING AND SLEEVE KIT	
TRANSMISSION SHIFT LEVER	4.037

C	
CABLE /WITH CASING/	
SPEEDOMETER FLEXIBLE	4.342

CABLE KIT /LESS CASING/	
SPEEDOMETER FLEXIBLE	4.342

CAM	
TRANSMISSION DETENT	4.311

CASE	
TRANSMISSION	4.103

CLAMP	
TRANSMISSION LOCK ROD TO IDLER LEVER	4.037

CLIP	
SPEEDOMETER CABLE	4.342
SPEEDOMETER CABLE TO UNDERBODY	4.342
SPEEDOMETER DRIVE GEAR RETAINER	4.345
TRANSMISSION CONTROL ROD OR LOCK ROD TO SHIFT LEVERS	4.037
TRANSMISSION OIL COOLER PIPES	4.128

COUNTERSHAFT	
TRANSMISSION	4.428

C (Cont'd.)	
COVER	
TRANSMISSION CASE	4.105
UNDERBODY CONTROL LEVER SEAL	4.015

E	
ESCUTCHEON	
CONSOLE GEARSHIFT OPENING	4.017

EXTENSION ASSEMBLY	
TRANSMISSION	4.317

F	
FASTENER PACKAGE	
TRANSMISSION NEUTRAL, BACK UP LAMP AND SEAT BELT WARNING SWITCH	4.054

FITTING AND SEAL	
SPEEDOMETER DRIVEN GEAR	4.338

FORK	
TRANSMISSION GEARSHIFT SHIFT	4.303

G	
GASKET	
TRANSMISSION CLUTCH GEAR BEARING RETAINER	4.358
TRANSMISSION CONTROLLED SPARK SWITCH	4.075
TRANSMISSION COVER	4.109
TRANSMISSION EXTENSION TO CASE	4.318
TRANSMISSION REAR BEARING RETAINER	4.318
TRANSMISSION SIDE COVER PLUG	4.105

GASKET PACKAGE	
TRANSMISSION OVERHAUL	4.005

GEAR	
SPEEDOMETER DRIVE	4.343
SPEEDOMETER DRIVEN	4.337
TRANSMISSION CLUTCH	4.351
TRANSMISSION COUNTERSHAFT	4.421
TRANSMISSION FIRST OR REVERSE	4.417
TRANSMISSION MAINSHAFT SECOND SPEED	4.395
TRANSMISSION REVERSE IDLER	4.430
TRANSMISSION THIRD SPEED	4.415

GROMMET	
SPEEDOMETER FLEXIBLE SHAFT	4.342
TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER SHAFT	4.027
TRANSMISSION LOCK ROD TO IDLER LEVER	4.037

K	
KEY	
SPEEDOMETER ADAPTER DRIVE	4.330

KNOB	
TRANSMISSION GEARSHIFT CONTROL	4.006

L	
LEVER	
LOCK ROD IDLER	4.040
TRANSMISSION CONTROL SHIFTER	4.006

FIREBIRD ALPHABETICAL INDEX

L (Cont'd.)

LEVER (Cont'd.)
TRANSMISSION SHIFTER /ON TRANSMISSION/ 4.045

LOCK
LOCK ROD IDLER LEVER 4.040
TRANSMISSION CLUTCH GEAR BEARING RETAINER BOLT .. 4.356

M

MOUNTING ASSEMBLY
TRANSMISSION SUPPORT 4.081

N

NUT
GEARSHIFT KNOB RETAINING 4.006
TRANSMISSION CLUTCH GEAR BEARING RETAINER 4.356
TRANSMISSION CONTROL LEVER AND BRACKET SUPPORT .. 4.008
TRANSMISSION CONTROL ROD SWIVEL ADJUSTER 4.037
TRANSMISSION CONTROL SHIFTER TO SUPPORT 4.008
TRANSMISSION IDLER LEVER SUPPORT TO FRAME 4.040

P

PIN
TRANSMISSION DETENT CAM RETAINING 4.311
TRANSMISSION REVERSE IDLER SHAFT LOCK 4.435
TRANSMISSION REVERSE SHIFTER LEVER 4.311
TRANSMISSION REVERSE SHIFTER SHAFT PLATE LOCK 4.307
TRANSMISSION SHIFT LEVER INTERLOCK 4.307

PLATE
GEARSHIFT LEVER BOWL 4.010
STEERING HOUSING AND SHAFT DETENT LOCK 4.027
TRANSMISSION CONTROL LEVER HOLE TRIM 4.017
TRANSMISSION CONTROL LEVER TRIM 4.107

PLATE OR KEY
TRANSMISSION SYNCHRONIZER SHIFTING 4.384

PLUG
SPEEDOMETER CABLE DASH HOLE 4.342
TRANSMISSION CONTROL SPARK SWITCH HOLE 4.010
TRANSMISSION FILLER 4.103
TRANSMISSION SIDE COVER FRONT SHIFTER SHAFT BOSS .. 4.105

R

RETAINER
SHIFTER RODS TO SHIFTER 4.037
SPEEDOMETER CABLE TO SPEEDOMETER 4.342
SPEEDOMETER DRIVEN GEAR SLEEVE 4.338
STABILIZER SHAFT GROMMET 4.015
TRANSMISSION CLUTCH GEAR BEARING 4.356
TRANSMISSION CONTROL LEVER SEAL 4.015
TRANSMISSION DETENT CABLE 4.054
TRANSMISSION REAR BEARING 4.317
TRANSMISSION SYNCHRONIZER 4.383
UNDERBODY CONTROL LEVER SEAL 4.015

RING
STEERING COLUMN SHIFT TUBE RETAINING 4.027
TRANSMISSION CLUTCH GEAR BEARING LOCATING 4.376
TRANSMISSION CLUTCH GEAR BEARING RETAINER 4.376
TRANSMISSION CLUTCH GEAR BEARING TO TRANSMISSION CASE 4.376
TRANSMISSION DETENT CAM RETAINER 4.311
TRANSMISSION MAINSHAFT REAR BEARING RETAINER 4.412
TRANSMISSION REAR BEARING LOCATING 4.412
TRANSMISSION REAR BEARING TO MAINSHAFT 4.412
TRANSMISSION REVERSE IDLER FRONT GEAR RETAINING .. 4.435
TRANSMISSION SYNCHRONIZER BLOCKING 4.383
TRANSMISSION SYNCHRONIZER RETAINING 4.383

ROD
STEERING COLUMN LOCK 4.035
TRANSMISSION GEARSHIFT CONTROL 4.035

S

SCREW
CONVERTER COVER PAN TO CASE 4.115

SCREW
GEARSHIFT LEVER BOWL PLATE 4.012
STEERING COLUMN HOUSING DETENT 4.027
STEERING COLUMN SHIFT LEVER DETENT PLATE 4.012
TRANSMISSION CONTROL ROD TO LEVERS 4.037
TRANSMISSION NEUTRAL AND BACK*UP LAMP SWITCH TO COLUMN 4.054

SEAL
SPEEDOMETER DRIVEN GEAR FITTING 4.338
SPEEDOMETER PINION 4.338
STEERING COLUMN SHAFT 4.030
TRANSMISSION CLUTCH GEAR BEARING OIL 4.354
TRANSMISSION CONTROL LEVER 4.015
TRANSMISSION EXTENSION OIL 4.318
TRANSMISSION SHIFT LEVER ROD 4.015
TRANSMISSION SHIFTER SHAFT 4.313
UNDERBODY CONTROL LEVER 4.015

SHAFT
SPEEDOMETER FLEXIBLE 4.342
TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER 4.010
TRANSMISSION MAIN 4.403
TRANSMISSION REVERSE IDLER 4.433
TRANSMISSION SHIFTER 4.309

SHAFT AND LEVER
TRANSMISSION REVERSE SHIFTER 4.309

SHIELD
BACK UP LAMP SWITCH 4.054
TRANSMISSION MOUNTING ASSEMBLY HEAT 4.083

SHIFTER ASSEMBLY
TRANSMISSION CONTROL 4.004

SHROUD
STEERING COLUMN BOWL 4.010

SHROUD AND BOWL ASSEMBLY
STEERING COLUMN 4.010

SLEEVE
TRANSMISSION FIRST SPEED GEAR 4.419
TRANSMISSION SHIFT LEVER INTERLOCK 4.307

SLINGER
TRANSMISSION CLUTCH GEAR BEARING OIL 4.374

SPACER
TRANSMISSION COUNTERSHAFT BEARING 4.423
TRANSMISSION MAINSHAFT FRONT BEARING 4.352
TRANSMISSION MOUNT TO TRANSMISSION 4.085

SPRING
GEARSHIFT LEVER DETENT 4.010
STEERING COLUMN SHIFT TUBE RETURN 4.027
TRANSMISSION DETENT CAM 4.311
TRANSMISSION REVERSE DETENT BALL 4.311
TRANSMISSION REVERSE GEAR ANTI LASH 4.419
TRANSMISSION SHIFT LEVER INTERLOCK POPPET 4.311
TRANSMISSION SYNCHRONIZER 4.413

SUPPORT
TRANSMISSION CONTROL SHIFTER 4.010
TRANSMISSION LOCK ROD IDLER LEVER 4.040

SUPPORT ASSEMBLY
TRANSMISSION 4.081

SWITCH ASSEMBLY
TRANSMISSION CONTROLLED SPARK 4.075
TRANSMISSION DOWNSHIFT CONTROL 4.057
TRANSMISSION NEUTRAL START 4.054

SWIVEL
TRANSMISSION CONTROL ROD 4.037
TRANSMISSION LOCK ROD 4.037

FIREBIRD ALPHABETICAL INDEX

S (Cont'd.)

SYNCHRONIZER ASSEMBLY
 TRANSMISSION 4.380

T

TRANSMISSION ASSEMBLY
 FOUR SPEED 4.003

TRUNNION
 TRANSMISSION CONTROL ROD TO SHIFTER LEVERS 4.037

TUBE ASSEMBLY
 STEERING COLUMN SHIFT 4.025

V

VENT
 TRANSMISSION EXTENSION 4.317

W

WASHER
 STEERING COLUMN BOWL 4.012
 STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST 4.027
 STEERING COLUMN SUPPORT THRUST 4.012
 TRANSMISSION CLUTCH GEAR BEARING SPACER 4.376
 TRANSMISSION CONTROL LEVER AND BRACKET TO
 SUPPORT 4.004
 TRANSMISSION COUNTER GEAR THRUST 4.423
 TRANSMISSION COUNTERSHAFT BEARING 4.423
 TRANSMISSION FIRST SPEED GEAR THRUST 4.419
 TRANSMISSION GEARSHIFT CONTROL RODS OR LOCK ROD
 TO LEVERS 4.037
 TRANSMISSION MAINSHAFT REAR BEARING SPACER 4.412
 TRANSMISSION REVERSE GEAR THRUST 4.419
 TRANSMISSION REVERSE IDLER GEAR THRUST 4.437
 TRANSMISSION SUPPORT MOUNTING TO BRACKET 4.085
 UPPER LOCK ROD TO COLUMN LOWER LEVER 4.037
 UPPER STEERING COLUMN WAVE 4.012

WEIGHT
 DRIVE LINE DAMPER 4.083

WIRE ASSEMBLY
 NEUTRAL SAFETY SWITCH AND SEAT BELT RELAY 4.054
 TRANSMISSION NEUTRALIZER SWITCH 4.054

.000

ST 4 SPEED TRANSMISSION

4.003 TRANSMISSION ASSEMBLY, FOUR SPEED

1	9785958	67	ALL 6 CYL - 3.11 1ST GEAR - SAGINAW /SUP 9777732/
1	546070	67	ALL 8 CYL - EXC RAM AIR - 2.52 1ST GEAR - MUNCIE /M20/ /SUP 9789170-9792530/
1	545769	67-68	ALL 8 CYL - 2.20 1ST GEAR - MUNCIE /M21/ /SUP 9785945/
1	9791992	68-69	ALL 6 CYL - 2.85 1ST GEAR - SAGINAW
1	546070	68	ALL 8 CYL - 2.52 1ST GEAR - MUNCIE /M20/ /SUP 9792530/
1	9798975	69	ALL 8 CYL - 2.20 1ST GEAR - MUNCIE /M21/
1	9798974	69	ALL 8 CYL - 2.52 1ST GEAR - MUNCIE /M20/
1	N.L.A.	70	ALL - 2.52 1ST GEAR - MUNCIE - /M20/ /SUP 3952659/
1	N.L.A.	71	MUNCIE WIDE RATIO /M20/ - 2.52 1ST GEAR /SUP 6271516/
1	N.L.A.	71	MUNCIE HD CLOSE RATIO /M22/ - 2.20 1ST GEAR /SUP 6271517/
1	6273271	72	4 SPD /SAGINAW/ /SUP 6271515/
1	N.L.A.	72	4 SPD /MUNCIE/ - WIDE RATIO - CODED WD /SUP 6271516/
1	N.L.A.	72	4 SPD /MUNCIE/ - HD /SUP 6271517/
1	332558	73	350 ENG /SAGINAW/ - CODED TF
1	6273271	73-75	350 ENG /SAGINAW/ - CODED WC
1	332559	73	400 /4BC/ AND 455 SD ENG /MUNCIE/ - WIDE RATIO - CODED UA
1	N.L.A.	73-74	400 /4BC/ OR 455 SD ENG /MUNCIE/ - WIDE RATIO - CODED WD /SUP 6271516/
1	332578	73-74	4 SPD /MUNCIE/ - CLOSE RATIO - CODED FC
1	360837	75	ST 4 SPD - INCL INSTALLATION SHEET - WARNER
1	369182	74-76	4 SPD /WARNER - SEE NOTE A /SUP 361658/

4.003 TRANSMISSION ASSEMBLY, FOUR SPEED

(Cont'd)

NOTE A. WHEN USING ABOVE ON TRANS WITH CODE HW, TRANSFER SPEEDOMETER DRIVE GEAR FROM OLD TRANS AND ELIMINATE SPEEDOMETER ADAPTER.

4.004 SHIFTER ASSEMBLY, TRANSMISSION CONTROL

1	9793456	67	ALL /SUP 9789336/ - /ILL. 4-1/
1	9792437	68	ALL - /ILL. 4-1/
1	9798724	69	ALL - LESS LEVER - /ILL. 4-1/
1	405728	70-76	ALL - HURST

4.004 WASHER, TRANSMISSION CONTROL LEVER AND BRACKET TO SUPPORT

1	382105	67	ALL - 3/8 ID X 3/4 OD - /ILL. 4-1/ /SUP 3825452/
---	--------	----	--

4.005 GASKET PACKAGE, TRANSMISSION OVERHAUL

1	3886338	67-69	ALL 6 CYL
1	3917763	67	ALL 8 CYL /SUP 3849473/
1	3917763	68-74	ALL 8 CYL /MUNCIE/
1	3960199	75-76	ST 4 SPD /WARNER/
1	3886338	73-76	ALL /SAGINAW/

4.006 KNOB, TRANSMISSION GEARSHIFT CONTROL

1	390768	67	ALL /SUP 3895201-3921147/ - /ILL. 4-1/
1	9794505	68	ALL - BLACK - /ILL. 4-1/ /SUP 9781795/
1	357703	68-69	ALL - LIST - PRINTED IN REVERSE POSITION /SUP 494367/
1	9794505	69	ALL - BLACK - /ILL. 4-1/
1	9794300	69	ALL - WALNUT, WITH SHIFT PATTERN - /ILL. 4-1/
1	N.L.A.	70	ALL - BLACK /SUP 988605/
1	481595	70-76	ALL - SIMULATED LEATHER

4.006 LEVER, TRANSMISSION CONTROL SHIFTER

1	9792435	68-69	ALL - /ILL. 4-1/
1	479048	70-76	ALL

4.006 NUT, GEARSHIFT KNOB RETAINING

1	9794299	68-74	ALL W/SIMULATED LEATHER OR WALNUT KNOB - TO SHIFT LEVER
---	---------	-------	---

4.008 NUT, TRANSMISSION CONTROL LEVER AND BRACKET SUPPORT

1	3901372	67	ALL - 1 HOLE - /ILL. 4-1/
1	3901371	67	ALL - 2 HOLE - /ILL. 4-1/

4.008 NUT, TRANSMISSION CONTROL SHIFTER TO SUPPORT

1	9791886	68-69	ALL - 3/8-16 - /ILL. 4-1/
---	---------	-------	---------------------------

4.010 BOWL, STEERING COLUMN

1	7800262	67-68	ALL - WITH TILT WHEEL
1	7810762	69-76	ALL - EXC TILT WHEEL /SUP 7804436/

4.010 BRACKET, TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER SHAFT

1	3920249	67	ALL 6 CYL - /ILL. 4-1/ /SUP 3901375/
1	3920250	67	ALL 8 CYL - /ILL. 4-1/ /SUP 3901382/

FIREBIRD

- 4.010 PLATE, GEARSHIFT LEVER BOWL**
1 7807229 69-70 ALL - EXC TILT WHEEL
- 4.010 PLUG, TRANSMISSION CONTROL SPARK SWITCH HOLE**
1 3906448 71 455 HO ENG ST 4 SPD
72 400 /4BC/ AND 350 ENG ST 4 SPD
75 ALL
- 4.010 SHAFT, TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER**
1 3901377 67 ALL 6 CYL - /ILL. 4-1/
1 3922531 67 ALL 8 CYL - /ILL. 4-1/ /SUP 3901378/
- 4.010 SHROUD, STEERING COLUMN BOWL**
1 7811350 69-75 ALL - EXC TILT WHEEL /SUP 7804473/
1 7809375 70-75 ALL - WITH TILT WHEEL
- 4.010 SHROUD AND BOWL ASSEMBLY, STEERING COLUMN**
1 5699057 67-68 ALL - EXC TILT WHEEL
- 4.010 SPRING, GEARSHIFT LEVER DETENT**
1 7806110 69 ALL - EXC TILT WHEEL
- 4.010 SUPPORT, TRANSMISSION CONTROL SHIFTER**
1 3895261 67 ALL - /ILL. 4-1/
1 9791899 68-69 ALL - /ILL. 4-1/
1 3975595 70 ALL
1 3989410 71 ALL
72-74 ALL EXC 350 ENG
75-76 400 OR 455 ENG
1 3975595 72-74 350 ENG
75 350 /4BC/ ENG
- 4.012 BOLT, TRANSMISSION CONTROL LEVER AND BRACKET**
1 3922533 67 ALL /SUP 3895263/ - /ILL. 4-1/
- 4.012 SCREW, GEARSHIFT LEVER BOWL PLATE**
2 7810242 69-70 ALL EXC TILT WHEEL /SUP 7808198/
- 4.012 SCREW, STEERING COLUMN SHIFT LEVER DETENT PLATE**
2 7804407 73-76 ST 4 SPD EXC TILT WHEEL
- 4.012 WASHER, STEERING COLUMN BOWL**
1 7804447 69-70 ALL - EXC TILT WHEEL - WAVE
1 7805159 69-73 ALL - WITH TILT WHEEL - WAVE
1 7804906 69-73 ALL - WITH TILT WHEEL - THRUST
1 3884595 74-75 ALL - WITH TILT WHEEL - THRUST
- 4.012 WASHER, STEERING COLUMN SUPPORT THRUST**
1 3886319 73-76 ALL W/TILT WHEEL
- 4.012 WASHER, UPPER STEERING COLUMN WAVE**
1 5699618 67-68 ALL - WITH TILT WHEEL - 1-11/32 ID X 1-11/16 OD
- 4.015 COVER, UNDERBODY CONTROL LEVER SEAL**
1 3929982 67 ALL - WITH CONSOLE /SUP 3903522/ - /ILL. 10-1/

- 4.015 RETAINER, TRANSMISSION CONTROL LEVER SEAL**
1 3893872 67 ALL - WITH CONSOLE - RIGHT - /ILL. 10-1/
1 3899870 67 ALL - WITH CONSOLE - LEFT - /ILL. 10-1/
1 3973970 70-76 ALL W/FLOOR SHIFT - TO UNDERBODY
- 4.015 RETAINER, STABILIZER SHAFT GROMMET**
2 5544049 67 ALL - /ILL. 4-1/
- 4.015 RETAINER, UNDERBODY CONTROL LEVER SEAL**
1 3893877 67 ALL /SUP -9789971- / - /ILL. 4-1, 10-1/
- 4.015 SEAL, TRANSMISSION CONTROL LEVER**
1 3921896 67 ALL - WITH CONSOLE /SUP - 3893870- / - /ILL. 10-1/
1 483812 70-76 FLOOR SHIFT - LOWER
1 3973966 - 70-76 FLOOR SHIFT - UPPER /SUP 9795213/
- 4.015 SEAL, TRANSMISSION SHIFT LEVER ROD**
1 9795407 68-69 ALL - TO FLOOR - /ILL. 10-1/
2 5696537 74-76 ST - RUBBER
- 4.015 SEAL, UNDERBODY CONTROL LEVER**
1 3974526 67 ALL - 3893877 RETAINER MUST BE INSTALLED WITH THIS SEAL /SUP 9789944-3893873/ - /ILL. 4-1, 10-1/
- 4.017 ESCUTCHEON, CONSOLE GEARSHIFT OPENING**
1 478571 70-76 F - STD FLOOR SHIFT - CONSOLE
- 4.017 PLATE, TRANSMISSION CONTROL LEVER HOLE TRIM**
1 3893855 67 ALL EXC CONSOLE - CHROME
1 3921895 67 ALL - WITH CONSOLE /SUP 3899869-3921892/ - /ILL. 10-1/
1 9780054 68-69 ALL - WITH CONSOLE - BLACK - /ILL. 10-1/
1 9780055 68-69 ALL 8 CYL - EXC CONSOLE - CHROME
- 4.025 TUBE ASSEMBLY, STEERING COLUMN SHIFT**
1 7804498 69 ALL - EXC TILT WHEEL - /ILL. 6-1/
1 N.L.A. 69 ALL - WITH TILT WHEEL - /ILL. 6-1/ /SUP 7805163/
1 7808563 70-76 ALL EXC TILT WHEEL
1 7808908 70-75 ALL W/TILT WHEEL
- 4.027 GROMMET, TRANSMISSION CONTROL LEVER AND BRACKET STABILIZER SHAFT**
AR 6270704 67 ALL - /ILL. 4-1/ /SUP 3910700/
- 4.027 PLATE, STEERING HOUSING AND SHAFT DETENT LOCK**
1 5698603 67-68 ALL - EXC TILT WHEEL
- 4.027 RING, STEERING COLUMN SHIFT TUBE RETAINING**
1 7804907 69-75 ALL - WITH TILT WHEEL - /ILL. 6-1/

FIREBIRD

4.027
ST 4 SPEED
TRANSMISSION

- 4.027 SCREW, STEERING COLUMN HOUSING DETENT**
- 1 7806109 69 ALL - EXC TILT WHEEL
- 4.027 SPRING, STEERING COLUMN SHIFT TUBE RETURN**
- 1 7804446 69-70 ALL - EXC TILT WHEEL - /ILL. 6-1/
1 7810567 71-76 ALL EXC TILT WHEEL
- 4.027 WASHER, STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST**
- 1 7807427 69-75 ALL - EXC TILT WHEEL /SUP 7804548/ - /ILL. 6-1/
- 4.030 SEAL, STEERING COLUMN SHAFT**
- 1 7807007 70 ALL
- 4.035 ROD, STEERING COLUMN LOCK**
- 1 9795688 69 ALL 6 CYL - LOWER - /ILL. 4-1/
1 9795686 69 ALL 8 CYL - LOWER - /ILL. 4-1/
1 N.L.A. 69 ALL - UPPER - /ILL. 4-1/ /SUP 9777795/
1 3975624 70-71 ALL - UPPER
1 3975618 70-71 ALL - LOWER
72-74 ALL EXC 350 ENG - LOWER - MUNCIE
1 479628 72-75 ALL W/350 ENG - LOWER
1 3975607 72-76 ALL W/350 ENG - UPPER
1 3975624 72-76 ALL EXC 350 ENG - UPPER
1 493453 74-76 ALL W/400 /4BC/ ENG - LOWER - WARNER
- 4.035 ROD, TRANSMISSION GEARSHIFT CONTROL**
- 1 3930051 67 ALL 6 CYL - 1ST AND 2ND - /ILL. 4-1/ /SUP 3895253/
1 3930053 67 ALL 6 CYL - 3RD AND 4TH - /ILL. 4-1/ /SUP 3895255/
1 3930069 67 ALL 6 CYL - REVERSE - /ILL. 4-1/ /SUP 3895284/
1 3930071 67 ALL 8 CYL - 1ST AND 2ND - /ILL. 4-1/ /SUP 3899042/
1 3930073 67 ALL 8 CYL - 3RD AND 4TH - /ILL. 4-1/ /SUP 3899024/
1 3930075 67 ALL 8 CYL - REVERSE - /ILL. 4-1/ /SUP 3899025/
1 9791876 68-69 ALL - 1ST AND 2ND - /ILL. 4-1/
1 9791885 68-69 ALL - 3RD AND 4TH - /ILL. 4-1/
1 N.L.A. 68-69 6 CYL - REVERSE /SUP 9791953/
1 9791884 68-69 ALL 8 CYL - REVERSE - /ILL. 4-1/

1 3975617 70-71 ALL - 1ST AND 2ND
1 3975619 70-71 ALL - 3RD AND 4TH - MUNCIE
1 3975621 70-71 ALL - REVERSE
1 3975611 72-75 ALL W/350 ENG - 1ST AND 2ND - SAGINAW
1 3975612 72-76 ALL W/350 ENG - 3RD AND 4TH - SAGINAW
1 3975613 72-75 ALL W/350 ENG - REVERSE - SAGINAW
1 3975617 72-74 ALL EXC 350 ENG - 1ST AND 2ND - MUNCIE
1 3975619 72-74 ALL EXC 350 ENG - 3RD AND 4TH - MUNCIE
1 3975621 72-74 ALL EXC 350 ENG - REVERSE - MUNCIE
1 493450 74-76 ALL - 1ST AND 2ND - WARNER
1 493451 74-76 ALL - 3RD AND 4TH - WARNER
1 356556 74-76 ALL - REVERSE - WARNER / SUP 493452/

- 4.037 BUSHING, SHIFT ROD /IN SHIFTER UNIT/**
- AR 1234418 70-72 FLOOR SHIFT
74-76 FLOOR SHIFT
- 4.037 BUSHING, STEERING COLUMN LOWER LEVER TO LOCK ROD**
- 1 9798861 69-70 ALL - INNER - 5/16 ID - /ILL. 4-1/
1 9798862 69-70 ALL - OUTER - 1/2 ID - /ILL. 4-1/
- 4.037 BUSHING, TRANSMISSION LOCK ROD TO IDLER LEVER**
- 1 382102 69-75 ALL - /ILL. 4-1/
- 4.037 BUSHING AND SLEEVE KIT, TRANSMISSION SHIFT LEVER**
- AR 1394293 67-76 ALL - INCL 1-5/16 ID SLEEVE AND 1-7/16 ID BUSHING
- 4.037 CLAMP, TRANSMISSION LOCK ROD TO IDLER LEVER**
- 1 382103 69-74 ALL - /ILL. 4-1/
- 4.037 CLIP, TRANSMISSION CONTROL ROD OR LOCK ROD TO SHIFT LEVERS**
- AR 3749084 67-69 ALL - /ILL. 4-2/
- 4.037 GROMMET, TRANSMISSION LOCK ROD TO IDLER LEVER**
- 1 3975131 69-70 ALL - /ILL. 4-1/ /SUP 3833108/
1 3975131 71 ALL
72-76 ALL - 1/2 ID X 3/4 OD X 5/16 THK
- 4.037 NUT, TRANSMISSION CONTROL ROD SWIVEL ADJUSTER**
- AR 3840137 67 ALL - /ILL. 4-1/
70-76 ALL - 7/16-20 X .240 IN THICK
- 4.037 RETAINER, SHIFTER RODS TO SHIFTER**
- AR 1244707 70-75 ALL
- 4.037 SCREW, TRANSMISSION CONTROL ROD TO LEVERS**
- AR 3989433 73-76 ALL - 5/16-18 X 1/2
- 4.037 SWIVEL, TRANSMISSION CONTROL ROD**
- AR 3895244 67 ALL - /ILL. 4-1/
1 3975600 72-76 350 ENG ST 4 SPD
- 4.037 SWIVEL, TRANSMISSION LOCK ROD**
- 1 382104 69-74 ALL - /ILL. 4-1/
1 1385607 73-75 ALL - UPPER - TO LEVER
1 477721 70-76 ALL - REVERSE ROD TO SHIFTER
- 4.037 TRUNNION, TRANSMISSION CONTROL ROD TO SHIFTER LEVERS**
- 1 9788242 68-69 ALL - 1ST AND 2ND - INCLUDES PIN - /ILL. 4-1/
1 9791887 68-69 ALL - 3RD AND 4TH - /ILL. 4-1/
1 9786896 68-69 ALL - REVERSE - /ILL. 4-1/
2 491086 70-72 ALL EXC REVERSE - W/PIN / SUP 477821/
1 477721 70-72 ALL - REVERSE
2 491086 73-76 ALL - INCL PIN
- 4.037 WASHER, TRANSMISSION GEARSHIFT CONTROL RODS OR LOCK ROD TO LEVERS**
- AR 382105 68-76 ALL - 25/64 IN ID X 3/4 IN OD - /ILL. 4-2/
AR 334533 73-76 ALL - 5/16 ID X 1-1/16 OD

* NEW PARTS JUNE 1977

FIREBIRD

4.037 WASHER, TRANSMISSION GEARSHIFT CONTROL RODS OR LOCK ROD TO LEVERS (Cont'd)

AR 3903516 74-75 ALL - 7/64 FREE HEIGHT X 13/32 ID

4.037 WASHER, UPPER LOCK ROD TO COLUMN LOWER LEVER

1 580379 69-75 ALL - /ILL. 4-1/

4.040 BRACKET, TRANSMISSION CONTROL ROD IDLER LEVER

1 3998691 70-73 ALL - NOTE. WHEN USING ON 1970-71 JOBS DISCARD ATTACHING SCREW

4.040 BUSHING, LOCK ROD IDLER LEVER TO SUPPORT

2 3792168 69-76 ALL - /ILL. 4-1/

4.040 BUSHING, TRANSMISSION CONTROL ROD, SHAFT OR EQUALIZER

AR 1377083 67-76 ALL - 1/2 ID X 1/4 IN THICK

4.040 LEVER, LOCK ROD IDLER

1 9789815 69 ALL - /ILL. 4-1/

1 3975623 70-71 ALL

1 3975606 72-76 350 ENG

1 3975623 72-76 ALL EXC 350 ENG

4.040 LOCK, LOCK ROD IDLER LEVER

1 3685801 69-76 ALL - /ILL. 4-1/

4.040 NUT, TRANSMISSION IDLER LEVER SUPPORT TO FRAME

3 3792287 67 ALL - 5/16-18

4.040 SUPPORT, TRANSMISSION LOCK ROD IDLER LEVER

1 3895291 69 ALL - /ILL. 4-1/

1 3975620 70-71 ALL

1 3975604 72-74 350 ENG

1 3975620 75-76 ALL

4.045 LEVER, TRANSMISSION SHIFTER /ON TRANSMISSION/

1 3922528 67 ALL 6 CYL - 1ST AND 2ND - /ILL. 4-1/ /SUP 3895249/

1 3895251 67 ALL 6 CYL - 3RD AND 4TH - /ILL. 4-1/

1 N.L.A. 67 6 CYL - REVERSE /SUP 3895283/

1 3859942 67 ALL 8 CYL - 1ST AND 2ND - /ILL. 4-1/

1 3859943 67 ALL 8 CYL - 3RD AND 4TH - /ILL. 4-1/

1 3857412 67 ALL 8 CYL - REVERSE - /ILL. 4-1/

2 409870 68 ALL 6 CYL - 1ST AND 2ND, 3RD AND 4TH - /SUP 9787255-405830/ /ILL. 4-1/

1 N.L.A. 68 6 CYL - REVERSE /SUP 9792024/

2 9782450 68 ALL 8 CYL - 1ST AND 2ND, 3RD AND 4TH - /ILL. 4-1/

1 9792026 68 ALL 8 CYL - REVERSE - /ILL. 4-1/

2 409870 69 ALL 6 CYL - 1ST AND 2ND, 3RD AND 4TH - /ILL. 4-1/ /SUP 9787255/

1 N.L.A. 69 ALL 6 CYL - REVERSE - /ILL. 4-1/ /SUP 9795692/

2 9798541 69 ALL 8 CYL - 1ST AND 2ND, 3RD AND 4TH - /ILL. 4-1/

4.045 LEVER, TRANSMISSION SHIFTER /ON TRANSMISSION/ (Cont'd)

1 9795695 69 ALL 8 CYL - REVERSE - /ILL. 4-1/

2 409870 70-71 ALL - 1ST AND 2ND, 3RD AND 4TH /SUP 3975615/

1 3975616 70-71 ALL - REVERSE

2 3975609 72-75 350 ENG - 1ST AND 2ND, 3RD AND 4TH

1 409870 72 ALL EXC 350 ENG - 1ST AND 2ND, 3RD AND 4TH /SUP 3975615/

1 3975610 72 350 ENG - REVERSE

1 3975616 72-74 ALL EXC 350 ENG - REVERSE - MUNCIE

2 409870 73-74 ALL EXC 350 ENG - 1ST AND 2ND, 3RD AND 4TH - MUNCIE

1 492013 73-75 350 ENG - REVERSE

2 486391 74-76 ALL - 3RD AND 4TH - WARNER

1 486392 74-76 ALL - REVERSE - WARNER

4.047 BRACKET, TRANSMISSION CONTROL CABLE MOUNTING

1 9795915 74-75 ST FLOOR SHIFT W/CONSOLE - LOWER

4.054 BRACKET, TRANSMISSION NEUTRAL START SWITCH

1 3961589 70-76 ALL - CLUTCH OPERATED

4.054 FASTENER PACKAGE, TRANSMISSION NEUTRAL, BACK UP LAMP AND SEAT BELT WARNING SWITCH

1 3981828 69-76 ALL - TO COLUMN - DL 2.698

4.054 RETAINER, TRANSMISSION DETENT CABLE

1 404087 70-76 ALL

4.054 SCREW, TRANSMISSION NEUTRAL AND BACK UP LAMP SWITCH TO COLUMN

2 3981828 69 ALL - #8-18 X 1/4 /SUP 7806573/

1 3981828 71-72 ALL

4.054 SHIELD, BACK UP LAMP SWITCH

1 3706355 67 ALL 8 CYL

4.054 SWITCH ASSEMBLY, TRANSMISSION NEUTRAL START

1 1993486 69 ALL - INCLUDES BRACKET

1 3983965 70-71 ALL

72 ALL EXC 350 ENG

73-76 ALL - CLUTCH OPERATED

4.054 WIRE ASSEMBLY, NEUTRAL SAFETY SWITCH AND SEAT BELT RELAY

1 8910504 72-73 ALL

4.054 WIRE ASSEMBLY, TRANSMISSION NEUTRALIZER SWITCH

1 6299268 69-70 ALL

4.057 SWITCH ASSEMBLY, TRANSMISSION DOWNSHIFT CONTROL

1 1242101 72 TRANS AM
73-74 455 SD ENG /SUP 1235480/

4.075 GASKET, TRANSMISSION CONTROLLED SPARK SWITCH

1 3906462 70-72 ALL

1 3929530 73-76 ALL

4.075 SWITCH ASSEMBLY, TRANSMISSION CONTROLLED SPARK

1	480308	70	ALL
1	9799850	71-72	ST 4 SPD
1	490751	73	ALL - 1ST TYPE - STAMPED 490751
1	494366	73	ALL - 2ND TYPE - STAMPED 494366
		74	8 CYL ENG

4.081 MOUNTING ASSEMBLY, TRANSMISSION SUPPORT

1	3913498	67-74	ALL /SUP 3792133/
1	498129	75	ALL
1	525620	76	ALL

4.081 SUPPORT ASSEMBLY, TRANSMISSION

MOVED TO GROUP 7.011 AND
NAME CHANGED TO CROSS
MEMBER

4.083 SHIELD, TRANSMISSION MOUNTING ASSEMBLY HEAT

1	498160	75	8 CYL ENG
---	--------	----	-----------

4.083 WEIGHT, DRIVE LINE DAMPER

1	9789563	67-69	ALL 6 CYL
---	---------	-------	-----------

4.085 SPACER, TRANSMISSION MOUNT TO TRANSMISSION

2	497737	76	ALL
---	--------	----	-----

4.085 WASHER, TRANSMISSION SUPPORT MOUNTING TO BRACKET

2	3818180	67-70	ALL - 15/32 X 1-1/4 X 3/16 THICK
---	---------	-------	-------------------------------------

4.103 CASE, TRANSMISSION

1	3890566	67	ALL 6 CYL - FIRST TYPE HAVE 1ST AND 2ND SPEED SYNCHRONIZER WITH TEETH RUNNING PARTIAL WIDTH OF SLEEVE - /ILL. 4-1/
1	3925654	67	ALL 6 CYL - SECOND TYPE HAVE 1ST AND 2ND SPEED SYNCHRONIZER WITH TEETH RUNNING FULL WIDTH OF SLEEVE - /ILL. 4-1/
1	3925659	67-74	ALL 8 CYL /MUNCIE/ - INCL PLUGS /SUP 3925658/ - /ILL. 4-1/
1	3925654	68-69	ALL 6 CYL - /ILL. 4-1/
		72-76	ALL 8 CYL /SAGINAW/
1	6260710	74-76	8 CYL ENG /WARNER/

4.103 PLUG, TRANSMISSION FILLER

1	444746	67-69	ALL
---	--------	-------	-----

4.105 COVER, TRANSMISSION CASE

1	3927919	67-69	ALL 6 CYL - SAGINAW - /ILL. 4-1/
1	3977618	67-73	ALL 8 CYL - MUNCIE - USED W/TRANS CODED WD OR WK
		74	8 CYL - MUNCIE - 7 BOLT HOLES /SUP 3887888/
1	335308	73	ALL W/TRANS CODED FC OR UA
1	335316	73	ALL W/TRANS CODED TF
1	3952647	72-75	ALL /SAGINAW/ - USED W/ TRANS CODED WC
1	360811	74-76	ALL - WARNER - 9 BOLT HOLES

4.105 GASKET, TRANSMISSION SIDE COVER PLUG

1	3929530	73-76	8 CYL ENG
---	---------	-------	-----------

4.105 PLUG, TRANSMISSION SIDE COVER FRONT SHIFTER SHAFT BOSS

1	3906448	73-75	8 CYL ENG - 9/16-18 THD - 13/ 16
---	---------	-------	-------------------------------------

4.107 PLATE, TRANSMISSION CONTROL LEVER TRIM

1	9780055	68	ALL - EXC CONSOLE - CHROME
---	---------	----	-------------------------------

4.109 GASKET, TRANSMISSION COVER

1	3858990	67-69	ALL 6 CYL - /ILL. 4-1/
1	3831705	67-69	ALL 8 CYL - /ILL. 4-1/
		70-74	ALL /MUNCIE/
1	3858990	72-75	ALL /SAGINAW/
1	3709316	74-76	ALL /WARNER/

4.115 SCREW, CONVERTER COVER PAN TO CASE

1	9784860	73-74	ALL - #12-11 X 1 IN
---	---------	-------	---------------------

4.128 CLIP, TRANSMISSION OIL COOLER PIPES

AR	3710497	72-75	ALL
----	---------	-------	-----

4.303 FORK, TRANSMISSION GEARSHIFT SHIFT

1	3884610	67-69	ALL 6 CYL - 1ST AND 2ND - / ILL. 4-1/
1	3858997	67-69	ALL 6 CYL - 3RD AND 4TH - / ILL. 4-1/
2	3831717	67-74	ALL 8 CYL - 1ST AND 2ND, 3RD AND 4TH /MUNCIE/ - /ILL. 4- 1/
1	3832786	67-74	ALL 8 CYL - REVERSE / MUNCIE/ - /ILL. 4-1/
1	3884610	72-75	ALL 1ST AND 2ND /SAGINAW/
1	3858997	72-75	ALL - 3RD AND 4TH / SAGINAW/
2	360088	74-76	ALL - 1ST, 2ND, 3RD, 4TH - WARNER
1	3743478	74-76	ALL - REVERSE - WARNER

4.307 PIN, TRANSMISSION SHIFT LEVER INTERLOCK

1	3709315	74-76	ALL - WARNER - .240 OD X .388 LONG
---	---------	-------	---------------------------------------

4.307 PIN, TRANSMISSION REVERSE SHIFTER SHAFT PLATE LOCK

1	103565	67	ALL - 5/32 X 1-1/4
---	--------	----	--------------------

4.307 SLEEVE, TRANSMISSION SHIFT LEVER INTERLOCK

1	360089	74-75	ALL - WARNER - 1.0085 LONG /SUP 3709313/
1	360089	74	ALL - WARNER - 1.01025 LONG
1	360090	74-76	ALL - WARNER - 1.01175 LONG
1	360091	74-76	ALL - WARNER - 1.01325 LONG
1	3709312	74-75	ALL - WARNER - 1.0135 LONG
1	360092	74-76	ALL - WARNER - 1.01475 LONG
1	360093	74-76	ALL - WARNER - 1.01625 LONG
1	360094	74-76	ALL - WARNER - 1.01775 LONG
1	360095	74-76	ALL - WARNER - 1.01925 LONG
1	360096	74-76	ALL - WARNER - 1.02075 LONG
1	360097	74-76	ALL - WARNER - 1.02225 LONG
1	N.L.A.	74-75	ALL - WARNER - 1.0235 LONG /SUP 3709314/
1	360098	74-76	ALL - WARNER - 1.02375 LONG

* NEW PARTS JUNE 1977

4.309 SHAFT, TRANSMISSION SHIFTER

1	3895733	67	ALL 6 CYL - 1ST AND 2ND - FIRST TYPE SEE NOTE A / SUP -3887061- / - /ILL. 4-1/
1	370480	67	6 CYL - 3RD AND 4TH - FIRST TYPE SEE NOTE A /SUP 3858994/
1	3887063	67	ALL 6 CYL - REVERSE - FIRST TYPE SEE NOTE A - /ILL. 4-1/
1	3915044	67	ALL 6 CYL - 1ST AND 2ND - SECOND TYPE SEE NOTE B - /ILL. 4-1/
1	3932234	67	ALL 6 CYL - 3RD AND 4TH - SECOND TYPE SEE NOTE B - /ILL. 4-1/ /SUP 3915043/
1	3915047	67	ALL 6 CYL - REVERSE - SECOND TYPE SEE NOTE B - /ILL. 4-1/
2	3831709	67-68	ALL 8 CYL - 1ST, 2ND, 3RD OR 4TH - /ILL. 4-1/
1	3850086	67-68	ALL 8 CYL - REVERSE - /ILL. 4-1/
1	3915044	68-69	ALL 6 CYL - 1ST AND 2ND - /ILL. 4-1/
1	3932234	68-69	ALL 6 CYL - 3RD AND 4TH - /ILL. 4-1/ /SUP 3915043/
1	3915047	68-69	ALL 6 CYL - REVERSE - /ILL. 4-1/
2	3952649	69-72	ALL 8 CYL - 1ST AND 2ND, 3RD AND 4TH /MUNCIE/ /SUP 3950308/ - /ILL. 4-1/
1	3950312	69-74	ALL 8 CYL - REVERSE / MUNCIE/ - /ILL. 4-1/
1	3915044	72	ALL 1ST AND 2ND /SAGINAW/
1	3952649	72-75	ALL 3RD AND 4TH /SAGINAW/
1	3915047	72	ALL REVERSE - INCL LEVER / SAGINAW/
2	3952649	73-74	ALL - 1ST, 2ND, 3RD AND 4TH / MUNCIE/
1	342421	73	ALL 1ST AND 2ND - WITH TRANS CODED TF /SAGINAW/
1	342422	73-74	ALL 1ST AND 2ND - WITH TRANS CODED WC / SAGINAW/
		75	ALL - 1ST AND 2ND / SAGINAW/
1	342425	73-75	ALL - REVERSE /SAGINAW/
1	360087	74-76	ALL - 1ST AND 2ND - WARNER
1	360086	74-76	ALL - 3RD AND 4TH - WARNER
1	6260716	74-76	ALL - REVERSE - WARNER

NOTE A. FIRST TYPE HAVE 1/8 IN FROM GROOVE IN SHAFT TO END OF SHAFT.
NOTE B. SECOND TYPE HAVE 1/16 IN FROM GROOVE IN SHAFT TO END OF SHAFT.

4.309 SHAFT AND LEVER, TRANSMISSION REVERSE SHIFTER

1	3887063	67	ALL 6 CYL
---	---------	----	-----------

4.311 BALL, TRANSMISSION REVERSE DETENT

1	453593	67-69	ALL - 3/8 DIA - /ILL. 4-2/
---	--------	-------	----------------------------

4.311 CAM, TRANSMISSION DETENT

1	336937	67-69	ALL 6 CYL - 1ST AND 2ND - /ILL. 4-1/ /SUP 3911925/
1	3911919	67-69	ALL 6 CYL - 3RD AND 4TH - /ILL. 4-1/
2	3905462	67-74	ALL 8 CYL /MUNCIE/ - /ILL. 4-1/
1	3911925	72	ALL 1ST AND 2ND /SAGINAW/
1	3911919	72-74	ALL 3RD AND 4TH /SAGINAW/
1	336937	73-75	350 ENG - 1ST AND 2ND - SAGINAW
1	346399	75	ALL - 3RD AND 4TH - SAGINAW

4.311 PIN, TRANSMISSION DETENT CAM RETAINING

1	3831715	67-69	ALL 6 CYL
		72	ALL
		73-75	ALL /SAGINAW/

4.311 PIN, TRANSMISSION REVERSE SHIFTER LEVER

1	141198	72	ST 4 SPD /SAGINAW/ - DOWEL
---	--------	----	----------------------------

4.311 RING, TRANSMISSION DETENT CAM RETAINER

1	274676	67-68	ALL - 5/16
---	--------	-------	------------

4.311 SPRING, TRANSMISSION DETENT CAM

1	3831718	67-68	ALL - /ILL. 4-2/
1	3831718	69-70	ALL - /ILL. 4-2/ /SUP 3853804/
1	3831718	71-75	ALL - MUNCIE OR SAGINAW

4.311 SPRING, TRANSMISSION REVERSE DETENT BALL

1	3773017	67-74	ALL 8 CYL /MUNCIE/ - /ILL. 4-1/
1	3709310	67	ALL 6 CYL - /ILL. 4-1/
1	3920799	68-69	ALL 6 CYL - /ILL. 4-1/
		72-75	ALL /SAGINAW/
1	3773017	74-76	ALL - WARNER

4.311 SPRING, TRANSMISSION SHIFT LEVER INTERLOCK POPPET

1	3709310	74-76	ALL - WARNER
---	---------	-------	--------------

4.313 SEAL, TRANSMISSION SHIFTER SHAFT

3	3844036	67-69	ALL 6 CYL
3	3831716	67-71	ALL 8 CYL
		72-74	ALL /MUNCIE/
		72-75	ALL 3RD AND 4TH /SAGINAW/
2	3844036	72	ALL 1ST, 2ND AND REVERSE / SAGINAW/
1	6255517	73	350 ENG - 1ST AND 2ND - WITH TRANS CODED TF / SAGINAW/
1	3844036	73-75	350 ENG - REVERSE / SAGINAW/
		73	350 ENG - 1ST AND 2ND - WITH TRANS CODED WC / SAGINAW/
		74-75	350 ENG - 1ST AND 2ND / SAGINAW/
2	6260717	74-76	ALL - WARNER

4.317 EXTENSION ASSEMBLY, TRANSMISSION

1	352253	67	ALL 6 CYL - /SUP 3873885- 6261883/ /ILL. 4-1/
1	N.L.A.	68-69	ALL 6 CYL /SAGINAW/ /SUP 9791990/
1	3857583	67-70	ALL 8 CYL - /ILL. 4-1/
1	3978763	71-74	ALL /MUNCIE/
1	352253	72-74	ALL /SAGINAW/ /SUP 3873885- 6261883/
1	360809	74-76	ALL /WARNER/

4.317 RETAINER, TRANSMISSION REAR BEARING

1	3831752	67-74	ALL 8 CYL - MUNCIE - /ILL. 4-1/
1	3931531	74-76	ALL - WARNER

4.317 VENT, TRANSMISSION EXTENSION

1	3738462	67-76	ALL /SAGINAW OR WARNER/ - METAL
---	---------	-------	---------------------------------

4.318 GASKET, TRANSMISSION EXTENSION TO CASE

1	3876752	67-69	ALL 6 CYL - /ILL. 4-1/
---	---------	-------	------------------------

4.318 GASKET, TRANSMISSION EXTENSION TO CASE (Cont'd)

1 3876752 72 ALL
73-76 ALL /SAGINAW/

4.318 GASKET, TRANSMISSION REAR BEARING RETAINER

1 3911900 67-68 ALL 8 CYL - EXC RAM AIR -
FRONT - /ILL. 4-1/ /SUP
9777531/
1 3911901 67-68 8 CYL - REAR - /ILL. 4-1/ /SUP
9777532/
1 3911900 67-68 ALL 8 CYL - WITH RAM AIR -
FRONT - /ILL. 4-1/
1 3911900 69-74 ALL 8 CYL - FRONT - MUNCIE
1 3911901 69-74 ALL 8 CYL - REAR - MUNCIE
1 3787722 74-76 ALL - FRONT - WARNER
1 3787720 74-76 ALL - REAR - WARNER

4.318 SEAL, TRANSMISSION EXTENSION OIL

1 1243402 67-69 ALL - /ILL. 4-2/ /SUP 3871649/
1 1386231 70 ALL
1 8626009 71-74 ALL /MUNCIE/ /SUP 8625893/
1 1386231 72-74 ALL /SAGINAW/ - 1-1/2 ID X 2-
3/8 OD
1 6260707 74-76 ALL - WARNER
1 1243402 75 ALL /SAGINAW/

4.319 BOLT, TRANSMISSION REAR BEARING RETAINER

1 3774911 74-76 ST - WARNER - 1/2-13 X 1-1/8

4.319 BUSHING, TRANSMISSION REAR EXTENSION

1 6260048 67-70 ALL /SUP 3786292/ - /ILL. 4-1/
1 3978765 71-76 ALL /MUNCIE OR WARNER/
1 6260048 72-75 ALL /SAGINAW/

4.329 ADAPTER, SPEEDOMETER DRIVEN GEAR

1 535617 67 ST 4 SPD USED WITH AXLE
RATIO 3.90 - 19 TOOTH DRIVE
GEAR - BLUE
67 ST 4 SPD USED WITH AXLE
RATIO 4.33 - 21 TOOTH DRIVE
GEAR - BLUE
1 1563872 70 ST 4 SPD USED WITH AXLE
RATIO 3.31 - 23 TOOTH DRIVE
GEAR
70 ST 4 SPD USED WITH AXLE
RATIO 3.31 - 24 TOOTH DRIVE
GEAR
1 1565210 70 ST 4 SPD USED WITH AXLE
RATIO 3.55 - 20 TOOTH DRIVE
GEAR
70 ST 4 SPD USED WITH AXLE
RATIO 3.55 - 19 TOOTH DRIVE
GEAR
70 ST 4 SPD USED WITH AXLE
RATIO 3.73 - 21 TOOTH DRIVE
GEAR
70 ST 4 SPD USED WITH AXLE
RATIO 3.73 - 20 TOOTH DRIVE
GEAR
1 6477964 71-72 ST 4 SPD USED WITH AXLE
RATIO 3.73 - 17 TOOTH DRIVE
GEAR

4.330 KEY, SPEEDOMETER ADAPTER DRIVE

1 867209 70 ALL W/F70 TIRES - 1-13/16 IN
LONG

4.337 GEAR, SPEEDOMETER DRIVEN

1 3987917 67-69 ST 4 SPD - 17 TEETH - PURPLE
71-72 ST 4 SPD - 17 TEETH - PURPLE
1 3987918 67-69 ST 4 SPD - 18 TEETH - BROWN

4.337 GEAR, SPEEDOMETER DRIVEN (Cont'd)

1 3987919 67-70 ST 4 SPD - 19 TEETH -
NATURAL
73-75 ST 4 SPD - 19 TEETH -
NATURAL
1 3987920 67-70 ST 4 SPD - 20 TEETH - BLUE
73-76 ST 4 SPD - 20 TEETH - BLUE
1 9781826 67 ST 4 SPD - 19 TEETH -
ORANGE
1 3987921 67 ST 4 SPD - 21 TEETH - RED
70-75 ST 4 SPD - 21 TEETH - RED
1 3860033 67 ST 4 SPD - 21 TEETH -
NATURAL
1 9780522 68-69 ST 4 SPD - 18 TEETH - GREEN
1 3860329 68-69 ST 4 SPD - 20 TEETH -
YELLOW
1 9780523 69 ST 4 SPD - 17 TEETH - BLACK
1 3860346 70 ST 4 SPD - 23 TEETH - BLACK
1 3860347 70 ST 4 SPD - 24 TEETH -
YELLOW
1 3860345 70 ST 4 SPD - 22 TEETH - GREEN
1 3987922 71-75 ST 4 SPD - 22 TEETH - GRAY

4.338 FITTING AND SEAL, SPEEDOMETER DRIVEN GEAR

1 345215 67-76 ALL /SUP 3869912-3869914-
6258100/

4.338 RETAINER, SPEEDOMETER DRIVEN GEAR SLEEVE

1 3708148 67-76 ALL - /ILL. 4-1/

4.338 SEAL, SPEEDOMETER DRIVEN GEAR FITTING

1 6264903 67-76 ALL -O- RING - .647 ID X .103 /
SUP 3708146/ - /ILL. 4-1/

4.338 SEAL, SPEEDOMETER PINION

1 3869910 67-72 ALL - STEEL AND RUBBER

4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE

1 6478128 67-68 ALL 8 CYL - TYPE #CC-75 -
CABLE 68-5/8, CASING 67-1/2
- NOTE. ADAPTER GROUP
4.329 NOT USED. /SUP
1588291/
1 6454973 67 ALL 8 CYL - TYPE #CC-289 -
CABLE 56-1/8, CASING 55 -
NOTE. USE WITH ADAPTER
GROUP 4.329.
1 6478121 67-68 ALL /-37/ 6 CYL - UPPER -
TYPE #CC-292 - CABLE 46-1/
8, CASING 45 /SUP 6454482/
1 6476725 67-68 ALL /-67/ 6 CYL - UPPER -
TYPE #CC-300 - CABLE 44-1/
8, CASING 43
1 6454481 67-69 ALL 6 CYL - LOWER - TYPE
#CC-291 - CABLE 25-1/8,
CASING 24
1 6477421 69 ALL 6 CYL - UPPER - TYPE
#CC-342
1 6478174 69 ALL 8 CYL - TYPE #CC-533 /
SUP 6477543/
1 6478177 70 ALL EXC ADAPTER - TYPE
#CC369 /SUP 6477550/
1 6478176 70 ALL W/ADAPTER - TYPE
#CC366 /SUP 6477547/
1 6478177 71 ALL - TYPE #CC536 - 68 IN
LONG
72-76 ALL EXC 350 ENG - TYPE
#CC536
1 6478170 72-76 350 ENG - UPPER - 40 IN LONG
- TYPE #CC529

4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE (Cont'd)

- 1 6454481 72-76 350 ENG - LOWER - 24 IN LONG - TYPE #CC291
- 1 6478880 73-74 ALL W/CRUISE CONTROL - TYPE #CC430

4.342 CABLE KIT /LESS CASING/, SPEEDOMETER FLEXIBLE

NOTE. KIT INCLUDES CABLE, TIP AND STAKING TOOL.

- 1 6477499 67-70 ALL - 81 IN OL - TYPE #615 / SUP 846890/

4.342 CLIP, SPEEDOMETER CABLE TO UNDERBODY

- 1 3825340 67 ALL 6 CYL /SUP 3881339/
- 3 3772324 67-69 ALL 8 CYL

4.342 CLIP, SPEEDOMETER CABLE

- AR 1380949 68-69 ALL
- 1 477704 70-75 ALL - TO TRANS

4.342 GROMMET, SPEEDOMETER FLEXIBLE SHAFT

- 1 332650 74-75 ST - USED IN 1 IN DIA HOLE - USE SEALANT MATERIAL AS REQD AROUND HOLE IN GROMMET

4.342 PLUG, SPEEDOMETER CABLE DASH HOLE

- 1 4699197 67 ALL 8 CYL - 1 IN HOLE
- 1 4410574 68 ALL 8 CYL - 1 IN HOLE
- 1 4859119 67-69 ALL - CRUISE CONTROL SPEEDO HOLE - FOR 1-1/2 IN HOLE
- 1 4410574 71-74 ALL - FOR 1 IN HOLE

4.342 RETAINER, SPEEDOMETER CABLE TO SPEEDOMETER

- 1 6491006 69-71 ALL - SPRING CLIP

4.342 SHAFT, SPEEDOMETER FLEXIBLE

SEE CABLE, GROUP 4.342

4.343 GEAR, SPEEDOMETER DRIVE

- 1 9785023 67-69 ALL - 7 TOOTH - /ILL. 4-2/
- 1 3845079 67-68 ALL 8 CYL WITH 39.9 OR 39.10 AXLE - 6 TOOTH - /ILL. 4-1/
- 1 3845079 69-70 ALL 8 CYL - 6 TOOTH - /ILL. 4-1/
- 1 3708144 69-75 ALL 8 CYL - 8 TOOTH - 1-27/32 OD X 1.176 ID X 39/64 THK - /ILL. 4-1/
- 1 3978758 71-74 ST 4 SPD FIRST JOBS WITH SIDE COVER HAVING 7 BOLT HOLES - 8 TEETH - 1-27/32 OD X 1.378 ID X 39/64 THK - STEEL
- 1 6260705 74-76 ST 4 SPD - 8 TEETH - BLUE - AFTER JOBS WITH SIDE COVER HAVING 9 BOLT HOLES - REQUIRES ADAPTER

4.345 CLIP, SPEEDOMETER DRIVE GEAR RETAINER

- 1 6261781 69-70 ALL 8 CYL
- 72-76 ALL /SUP 6261353/

4.351 GEAR, TRANSMISSION CLUTCH

- 1 3885095 67 ALL 6 CYL - 3.11 1ST GEAR - /ILL. 4-1/
- 1 357241 67 8 CYL - 2.52 1ST GEAR /SUP 3885011-3925689/

4.351 GEAR, TRANSMISSION CLUTCH (Cont'd)

- 1 357242 67-70 8 CYL - 2.20 1ST GEAR /SUP 3925690-3915095/
- 1 3859030 68-69 ALL 6 CYL - 19 - 30 TEETH - /ILL. 4-1/
- 1 N.L.A. 68 8 CYL - 2.52 1ST GEAR - 21 TEETH /SUP 3915094/
- 1 357241 69-70 8 CYL - 2.52 1ST GEAR
- 1 357243 71-74 ALL 4 SPD ST - WIDE RATIO / MUNCIE/ - INCL SLINGER / SUP 3978772/
- 1 3978761 71-72 ALL 4 SPD ST HD /MUNCIE/ - INCL SLINGER
- 1 3859035 72-75 ALL /SAGINAW/
- 1 357244 73 4 SPD ST - CLOSE RATIO / MUNCIE/ - INCL SLINGER / SUP 3978773/
- 1 360807 74-76 ALL - WARNER

4.352 BEARING, TRANSMISSION MAINSHAFT FRONT ROLLER

- 14 3743449 67-69 ALL 6 CYL - /ILL. 4-1/
- 72 ALL
- 73-75 ALL /SAGINAW/

4.352 BEARING, TRANSMISSION MAINSHAFT

- 1 9419248 67-74 ALL 8 CYL /MUNCIE/ - FRONT - 17 ROLLS W/CAGE - /ILL. 4-1/
- 16 9423039 74-76 ALL - FRONT - WARNER /SUP 7451735/

4.352 SPACER, TRANSMISSION MAINSHAFT FRONT BEARING

- 1 389677 74-76 ALL - WARNER

4.354 SEAL, TRANSMISSION CLUTCH GEAR BEARING OIL

- 1 3987936 67-69 ALL 6 CYL - /ILL. 4-1/
- 72 ALL /SUP 3761933/
- 1 3987936 73 350 ENG /SAGINAW/
- 74-76 ALL /SAGINAW OR WARNER/

4.355 BEARING, TRANSMISSION CLUTCH GEAR

- 1 907929 67-69 ALL 6 CYL - /ILL. 4-1/ /SUP 907762/
- 1 907572 67-74 ALL 8 CYL /MUNCIE/ - INCLUDES SNAP RING - /ILL. 4-1/
- 1 725765 72-75 ALL /SAGINAW/
- 1 908216 74-76 ALL - WARNER

4.356 LOCK, TRANSMISSION CLUTCH GEAR BEARING RETAINER BOLT

- 1 3849938 67-74 ALL 8 CYL - RIGHT - /ILL. 4-1/
- 1 3849937 67-74 ALL 8 CYL - LEFT - /ILL. 4-1/

4.356 NUT, TRANSMISSION CLUTCH GEAR BEARING RETAINER

- 1 591150 67-74 ALL 8 CYL /MUNCIE/ - /ILL. 4-1/

4.356 RETAINER, TRANSMISSION CLUTCH GEAR BEARING

- 1 3859032 67-69 ALL 6 CYL - /ILL. 4-1/
- 1 3915020 67-71 ALL 8 CYL /SUP 3851326/ - /ILL. 4-1/
- 1 3859032 72-75 ALL /SAGINAW/
- 1 3915020 73-74 8 CYL ENG /MUNCIE/
- 1 360806 74-76 ALL - WARNER

4.358 GASKET, TRANSMISSION CLUTCH GEAR BEARING RETAINER

- 1 3915019 67 ALL 8 CYL - /ILL. 4-1/ /SUP 3851328/

4.358 GASKET, TRANSMISSION CLUTCH GEAR BEARING RETAINER (Cont'd)

1	3916113	67-68	ALL 6 CYL - /ILL. 4-1/
1	3915019	68	ALL 8 CYL - /ILL. 4-1/
		69-74	ALL /MUNCIE/ - /ILL. 4-2/
1	3916113	72-75	ALL /SAGINAW/
1	1359473	74-76	ALL - WARNER

4.374 SLINGER, TRANSMISSION CLUTCH GEAR BEARING OIL

1	3925692	68-74	ALL 8 CYL /SUP 3916111/
---	---------	-------	-------------------------

4.376 RING, TRANSMISSION CLUTCH GEAR BEARING LOCATING

1	590849	67-69	ALL 6 CYL
1	2830050	67-75	ALL 8 CYL - /MUNCIE OR WARNER/
1	590849	72-75	ALL /SAGINAW/

4.376 RING, TRANSMISSION CLUTCH GEAR BEARING RETAINER

1	3709351	67-69	ALL 6 CYL N
		73-76	ALL - .086-.088 - SNAP PLAI
1	3709352	73-76	ALL - .089-.091 - SNAP BLUE
1	3709354	74-76	ALL - .095-.097
1	3709353	74-76	ALL - .092-.094
1	3709355	74-76	ALL - .098-.100
1	3709356	74-76	ALL - .101-.103

4.376 RING, TRANSMISSION CLUTCH GEAR BEARING TO TRANSMISSION CASE

1	2830050	73-76	ALL /MUNCIE OR WARNER/ - SNAP RING - 3-1/32 ID X 3-15/32 OD X 1/16 THK
---	---------	-------	--

4.376 WASHER, TRANSMISSION CLUTCH GEAR BEARING SPACER

AR	3709350	74-76	ST - WARNER
----	---------	-------	-------------

4.380 SYNCHRONIZER ASSEMBLY, TRANSMISSION

1	3924769	67	ALL 6 CYL - 1ST AND 2ND - FIRST TYPE WITH TEETH RUNNING PARTIAL WIDTH OF SLEEVE - INCLUDES REVERSE GEAR TEETH
1	3924771	67	ALL 6 CYL - 1ST AND 2ND - SECOND TYPE WITH TEETH RUNNING FULL WIDTH OF SLEEVE - INCLUDES REVERSE GEAR TEETH
1	357238	67-74	8 CYL - 1ST AND 2ND / MUNCIE/ - INCL 2 BLOCKING RINGS /SUP 344241/
1	357239	67-74	ALL 8 CYL - 3RD AND 4TH / MUNCIE/ - INCLUDES 2 BLOCKING RINGS /SUP 3914116-3924113/ - /ILL. 4-1/
1	3924766	67-69	ALL 6 CYL - 3RD AND 4TH / SUP -3859021- / - /ILL. 4-1/
1	3924771	68-69	ALL 6 CYL - 1ST AND 2ND - INCLUDES REVERSE GEAR TEETH - /ILL. 4-1/
1	3924771	72-75	ALL 1ST AND 2ND /SAGINAW/
1	3924766	72-75	ALL 3RD AND 4TH /SAGINAW/
1	360801	74-76	ALL - 1ST AND 2ND - WARNER
1	360100	74-76	ALL - 3RD AND 4TH - WARNER

4.383 RETAINER, TRANSMISSION SYNCHRONIZER

2	3859025	67-69	ALL 6 CYL - /ILL. 4-1/
---	---------	-------	------------------------

4.383 RING, TRANSMISSION SYNCHRONIZER BLOCKING

4	3859027	67-69	ALL 6 CYL
---	---------	-------	-----------

4.383 RING, TRANSMISSION SYNCHRONIZER BLOCKING (Cont'd)

4	357234	67-74	8 CYL /MUNCIE/ /SUP 344243/
4	3859027	72-75	ALL /SAGINAW/
4	360812	74-76	ALL - WARNER /SUP 3709348/

4.383 RING, TRANSMISSION SYNCHRONIZER RETAINING

1	3831741	67-74	ALL 8 CYL /MUNCIE/ - 3RD AND 4TH - /ILL. 4-1/
2	3859025	67-69	ALL 6 CYL /SAGINAW/
		72-75	ALL /SAGINAW/
1	3709351	74-76	ALL - WARNER - 3RD AND 4TH - .086-.088
1	3709352	74-76	ALL - WARNER - 3RD AND 4TH - .089-.091
1	3709354	74-76	ALL - WARNER 3RD AND 4TH - .095-.097
1	3709353	74-76	ALL - WARNER 3RD AND 4TH - .092-.094
1	3709356	74-76	ALL - WARNER 3RD AND 4TH - .101-.103
1	3709355	74-76	ALL - WARNER 3RD AND 4TH - .098-.100

4.384 PLATE OR KEY, TRANSMISSION SYNCHRONIZER SHIFTING

6	3915050	67-68	ALL 8 CYL - /ILL. 4-1/ /SUP 3831735/
6	3871250	67-69	ALL 6 CYL - /ILL. 4-1/
6	3915050	69-74	ALL 8 CYL /MUNCIE/
6	3871250	72-75	ALL /SAGINAW/
6	3870793	74-76	ALL - WARNER

4.395 GEAR, TRANSMISSION MAINSHAFT SECOND SPEED

1	3915055	67-69	ALL 6 CYL /SUP 3859982/
1	357226	67-70	ALL 8 CYL
		71-74	ST 4 SPD STD /MUNCIE/ - 30 TEETH /SUP 3831746/
1	3879999	71-72	ST 4 SPD HD /MUNCIE/
1	3915055	72-74	ALL /SAGINAW/
1	360802	74-76	ALL - WARNER
1	352239	75	ALL - SAGINAW

4.403 SHAFT, TRANSMISSION MAIN

1	3915087	67	ALL 8 CYL /SUP 3890531/
1	3915014	67-69	ALL 6 CYL /SUP 3860044/
1	3915087	68-70	ALL 8 CYL
1	3978759	71-74	ALL /MUNCIE/
1	3915014	72-75	ALL /SAGINAW/
1	6260713	74-76	ALL - WARNER

4.408 BEARING, MAINSHAFT /REAR/

1	725756	67-69	ALL 6 CYL - /ILL. 4-1/ /SUP 907763/
1	907474	67-74	ALL 8 CYL /MUNCIE/ - /ILL. 4-1/
1	907765	72-75	ALL /SAGINAW/
1	907458	74-76	ALL - WARNER

4.412 RING, TRANSMISSION MAINSHAFT REAR BEARING RETAINER

1	N.L.A.	67-71	ALL 8 CYL - .087 - /ILL. 4-1/
1	3998395	67-71	ALL 8 CYL - .090 - /ILL. 4-1/ / SUP 3831757/
1	3998395	67-71	ALL 8 CYL - .093 /SUP 3831756/ - /ILL. 4-1/
1	3831755	67-71	ALL 8 CYL - .096 - /ILL. 4-1/
1	3707189	72-75	ALL /SAGINAW/ - .089-.091
1	3998395	72-74	ALL /MUNCIE/ - .100-.103
1	3709351	74-76	ALL - WARNER - .086-.088
1	3709352	74-76	ALL - WARNER - .089-.091
1	3709353	74-76	ALL - WARNER - .092-.094
1	3709354	74-76	ALL - WARNER - .095-.097

4.412 RING, TRANSMISSION MAINSHAFT REAR BEARING RETAINER (Cont'd)

1 3709355 74-76 ALL - WARNER - .098-.100
1 3709356 74-76 ALL - WARNER - .101-.103

4.412 RING, TRANSMISSION REAR BEARING LOCATING

1 3707174 67-69 ALL 6 CYL
72-76 ALL /SAGINAW/ - TO CASE
1 3831749 67-74 ALL 8 CYL
1 3911967 74 ALL - WARNER - .073 THK
75-76 WARNER OR MUNCIE

4.412 RING, TRANSMISSION REAR BEARING TO MAINSHAFT

1 3707189 67-69 ALL 6 CYL - .089-.091
73-75 ALL 8 CYL ENG /SAGINAW/ -
.089-.091

4.412 WASHER, TRANSMISSION MAINSHAFT REAR BEARING SPACER

AR 3709350 74-76 ALL - WARNER

4.413 SPRING, TRANSMISSION SYNCHRONIZER

4 3924768 67-69 ALL 6 CYL - /ILL. 4-1/ /SUP
3859024/
4 3920775 67 ALL 8 CYL - /ILL. 4-1/ /SUP
3853805/
4 3920775 68-74 ALL 8 CYL /MUNCIE/ - /ILL. 4-
1/
AR 3924768 72-75 ALL /SAGINAW/
4 3870810 74-76 ALL - WARNER

4.415 GEAR, TRANSMISSION THIRD SPEED

1 3859986 67-69 ALL 6 CYL - /ILL. 4-1/
1 357227 67-70 ALL 8 CYL - /ILL. 4-1/
71-74 ST 4 SPD STD /MUNCIE/ /SUP
3831747/
1 3880845 71-72 ST 4 SPD HD /MUNCIE/
1 3890552 72-75 ALL /SAGINAW/
1 360099 74-76 ALL - WARNER

4.417 GEAR, TRANSMISSION FIRST OR REVERSE

1 3859981 67-69 ALL 6 CYL - 1ST SPEED - /ILL.
4-1/
1 3849388 67-70 ALL 8 CYL - 1ST SPEED - /ILL.
4-1/
1 357228 67-74 ALL 8 CYL /MUNCIE/ -
REVERSE - 35 TEETH - /ILL.
4-1/ /SUP 3831748/
1 3849388 71-74 ST 4 SPD STD /MUNCIE/ - 1ST
SPEED 36 TEETH
1 3924796 71-72 ST 4 SPD HD - 1ST SPEED
1 3859981 72-75 1ST SPEED /SAGINAW/ - 29
TEETH
1 360803 74-76 ALL - 1ST SPEED - WARNER
1 360804 74-76 ALL - REVERSE - WARNER

4.419 SLEEVE, TRANSMISSION FIRST SPEED GEAR

1 3978781 67-74 ALL 8 CYL - MUNCIE /SUP
3849408/
1 6260712 74-76 ALL - WARNER

4.419 SPRING, TRANSMISSION REVERSE GEAR ANTI LASH

2 3890532 67-72 ALL 8 CYL
73-74 400 AND 455 ENG - MUNCIE

4.419 WASHER, TRANSMISSION FIRST SPEED GEAR THRUST

1 6260715 74-76 ALL - WARNER

4.419 WASHER, TRANSMISSION REVERSE GEAR THRUST

1 3869940 67-69 ALL 6 CYL - /ILL. 4-1/
1 3884595 67-69 ALL 6 CYL - WAVE - /ILL. 4-1/
72-75 ALL - WAVE - 1.82 X 1.20 DIA /
SAGINAW/
1 3869940 72-75 ALL - 2.40 X 1.20 DIA /
SAGINAW/

4.421 GEAR, TRANSMISSION COUNTERSHAFT

1 3859970 67 ALL 6 CYL - FIRST TYPE HAVE
OILING HOLE FORWARD OF
REVERSE GEAR SECTION -
3.11 1ST GEAR - /ILL. 4-1/
1 3915033 67 ALL 6 CYL - SECOND TYPE
HAVE OILING HOLE
REARWARD OF REVERSE
GEAR SECTION - /ILL. 4-1/
1 3905463 67-70 ALL 8 CYL - 2.52 1ST GEAR /
SUP 3884688-3905464/ - /ILL.
4-1/
1 357236 67-70 ALL 8 CYL - 2.20 1ST GEAR - /
ILL. 4-1/ /SUP 3905465/
1 3924708 68-69 ALL 6 CYL - /ILL. 4-1/
1 3905466 71-72 ST 4 SPD HD /MUNCIE/ - 2.20
1ST GEAR RATIO
1 357235 71-74 ST 4 SPD STD /MUNCIE/ - 2.52
1ST GEAR RATIO /SUP
3905463/
1 465467 72-75 ALL /SAGINAW/ /SUP 3915034/
1 357236 73 ST 4 SPD HD /MUNCIE/ /SUP
3905465/
1 360805 74-76 ST 4 SPD /WARNER/

4.422 BEARING, TRANSMISSION COUNTERSHAFT

AR 435847 67-75 ALL - ROLLER TYPE - 3/4
LONG - 1/8 DIA - /112
QUANTITY/ - /ILL. 4-2/

4.423 SPACER, TRANSMISSION COUNTERSHAFT BEARING

1 3912195 67-74 ALL 8 CYL /MUNCIE/ - INCL
WASHER /SUP 3864854/ - /
ILL. 4-1/
1 6260708 74-76 ALL /WARNER/

4.423 WASHER, TRANSMISSION COUNTERSHAFT BEARING

2 3859006 67-69 ALL 6 CYL - /ILL. 4-1/
6 3864856 67-74 ALL 8 CYL /MUNCIE/ - /ILL. 4-
1/
2 3859006 72-75 ALL /SAGINAW/
6 6260709 74-76 ALL /WARNER/ - SPACER

4.423 WASHER, TRANSMISSION COUNTER GEAR THRUST

2 3890565 67-69 ALL 6 CYL - /ILL. 4-1/
2 3864860 67-74 ALL 8 CYL /MUNCIE/ - /ILL. 4-
1/
2 3890565 72-76 ALL /SAGINAW/
1 3870799 74-76 ALL - REAR /WARNER/ - 1-3/4
IN OD X 57/64 ID X 1/8 THICK
1 6260714 74-76 ALL - REAR /WARNER/ - 2 IN
OD X 1 IN ID X 1/8 THICK

4.428 COUNTERSHAFT, TRANSMISSION

1 3859005 67-69 ALL 6 CYL - /ILL. 4-1/
1 357233 67-74 ALL 8 CYL /MUNCIE/ - 1 IN DIA
- /ILL. 4-1/ /SUP 3864850/
1 3859005 72-75 ALL /SAGINAW/
1 6260711 74-76 ALL /WARNER/

FIREBIRD

4.430 GEAR, TRANSMISSION REVERSE IDLER

1	3859975	67	ALL 6 CYL - FIRST TYPE 1-1/2 IN LONG - 18 TEETH - /ILL. 4-1/ 1/
1	3915037	67	ALL 6 CYL - SECOND TYPE 2- 1/8 IN LONG - /ILL. 4-1/ 68-69 ALL 6 CYL - /ILL. 4-1/
1	357230	67-70	8 CYL - FRONT /SUP 3831762/
1	357231	67-74	8 CYL /MUNCIE/ - REAR /SUP 3831764/
1	357230	71-74	ST 4 SPD STD /MUNCIE/ - FRONT /SUP 3831762/
1	3879997	71-72	ST 4 SPD HD /MUNCIE/ - FRONT
1	3915037	72-75	ALL /SAGINAW/ - 2-1/8 LONG
1	3936254	74-76	ALL /WARNER/ - FRONT
1	3774905	74-76	ALL /WARNER/ - REAR - 19 TEETH - INCL BUSHING

4.433 SHAFT, TRANSMISSION REVERSE IDLER

1	3910029	67	ALL 6 CYL - FIRST TYPE 3-27/ 32 IN LONG - /ILL. 4-1/
1	3915039	67	ALL 6 CYL - SECOND TYPE 4- 7/32 IN LONG - /ILL. 4-1/ 68-69 ALL 6 CYL - /ILL. 4-1/
1	357229	67-74	8 CYL /MUNCIE/ /SUP 3831761/
1	3915039	72-75	ALL /SAGINAW/
1	3746277	74-76	ALL /WARNER/

**4.435 PIN, TRANSMISSION REVERSE IDLER
SHAFT LOCK**

1	456722	67-69	ALL - 1/4 X 1-1/2 - /ILL. 4-1/
---	--------	-------	--------------------------------

**4.435 RING, TRANSMISSION REVERSE IDLER
FRONT GEAR RETAINING**

1	3774910	74-76	ALL /WARNER/
---	---------	-------	--------------

**4.437 WASHER, TRANSMISSION REVERSE
IDLER GEAR THRUST**

1	3834739	67-74	ALL 8 CYL - FRONT GEAR THRUST - /MUNCIE/ - /ILL. 4- 1/
1	3774909	74	ALL - FRONT GEAR THRUST - /WARNER/
		67-76	ALL 8 CYL - FRONT GEAR THRUST - /MUNCIE OR WARNER/ - 1-5/8 IN OD - / ILL. 4-1/
1	3870799	75-76	ALL - REAR GEAR THRUST - / WARNER/

FIREBIRD

AUTOMATIC TRANSMISSION

ALPHABETICAL INDEX GROUP 4.000

A	B (Cont'd.)
ACTUATOR ASSEMBLY	BUSHING
TRANSMISSION PARKING LOCK 4.290	STEERING COLUMN LOWER LEVER TO LOCK ROD 4.037
ADAPTER	TRANSMISSION CASE TO OUTPUT SHAFT 4.104
SPEEDOMETER DRIVEN GEAR 4.329	TRANSMISSION CONTROL LEVER 4.008
B	TRANSMISSION CONTROL OR LOCK ROD IDLER LEVER TO SUPPORT 4.040
BAFFLE	TRANSMISSION CONTROL ROD OR LOCK ROD TO LEVERS TRANSMISSION CONTROL ROD SWIVEL TO SHIFT TUBE LEVER GROMMET 4.037
OIL DRAIN BACK 4.105	TRANSMISSION EQUALIZER SHAFT PIVOT 4.040
BALL	TRANSMISSION EQUALIZER SHAFT TO EQUALIZER 4.040
TRANSMISSION OIL PUMP COVER AIR COOLER HOLE 4.226	TRANSMISSION EXTENSION OR REAR BEARING RETAINING TRANSMISSION GOVERNOR SLEEVE 4.256
BAND ASSEMBLY	TRANSMISSION GOVERNOR SUPPORT BODY 4.256
TRANSMISSION LOW BRAKE 4.251	TRANSMISSION HIGH CLUTCH DRUM 4.169
BEARING	TRANSMISSION LOW SUN GEAR 4.162
TRANSMISSION LOW SUN GEAR NEEDLE THRUST 4.176	TRANSMISSION OUTPUT SHAFT 4.176
TRANSMISSION PLANET CARRIER TO CASE NEEDLE 4.176	TRANSMISSION PUMP BODY 4.226
BEARING ASSEMBLY	TRANSMISSION STATOR SHAFT 4.226
TRANSMISSION LOW SUN GEAR NEEDLE 4.162	BUSHING PACKAGE
TRANSMISSION OUTPUT SHAFT NEEDLE THRUST 4.176	TRANSMISSION 4.005
BEARING KIT	BUTTON
TRANSMISSION PLANET PINION 4.176	TRANSMISSION CONTROL LEVER 4.006
BODY	C
TRANSMISSION OIL CONTROL VALVE 4.265	CABLE /WITH CASING/ SPEEDOMETER FLEXIBLE 4.342
TRANSMISSION VALVE 4.216	CABLE ASSEMBLY
BODY AND GEAR ASSEMBLY	TRANSMISSION CONTROL 4.047
TRANSMISSION OIL PUMP 4.224	CABLE KIT /LESS CASING/ SPEEDOMETER FLEXIBLE 4.342
BODY AND SEAL RING UNIT	CAP
TRANSMISSION GOVERNOR SUPPORT 4.256	TRANSMISSION CONTROL LEVER HOUSING POINTER 4.020
BOLT	TRANSMISSION GEARSHIFT INDICATOR LENS LAMP 4.020
TRANSMISSION CONTROL CABLE LOWER BRACKET TO TRANSMISSION 4.047	TRANSMISSION LOW BRAKE BAND ADJUSTING SCREW 4.253
TRANSMISSION CONVERTER TO FLYWHEEL 4.115	CARRIER
TRANSMISSION VALVE BODY TO CASE 4.217	TRANSMISSION PLANET /WITH OUTPUT SHAFT LESS GEARS, SHAFT AND PINION/ 4.175
BOLT AND WASHER	CASE ASSEMBLY
TRANSMISSION OIL PUMP TO CASE 4.226	TRANSMISSION 4.103
BOOT	CLAMP
TRANSMISSION DOWNSHIFT SWITCH 4.057	TRANSMISSION CONTROL ROD OR LOCK ROD 4.037
BOWL	TRANSMISSION OIL COOLER PIPE 4.128
STEERING COLUMN 4.010	CLIP
BOWL ASSEMBLY	SPEEDOMETER CABLE 4.342
TRANSMISSION GEARSHIFT LEVER 4.010	SPEEDOMETER DRIVE GEAR RETAINER 4.345
BRACKET	TRANSMISSION CONTROL HANDLE TO CONTROL ROD 4.006
TRANSMISSION CONTROL CABLE MOUNTING 4.047	TRANSMISSION CONTROL ROD OR LOCK ROD TO SHIFT LEVERS 4.037
TRANSMISSION CONTROL CABLE MOUNTING LOWER 4.010	TRANSMISSION DOWNSHIFT CONTROL CABLE 4.057
TRANSMISSION CONTROL LEVER 4.010	TRANSMISSION DOWNSHIFT LEAD 4.060
TRANSMISSION CONTROLLED SPARK SWITCH MOUNTING 4.075	TRANSMISSION GEARSHIFT BUTTON TO PAWL ROD 4.006
TRANSMISSION DOWNSHIFT SWITCH MOUNTING 4.057	TRANSMISSION GEARSHIFT INDICATOR LENS RETAINING 4.020
TRANSMISSION DOWNSHIFT SWITCH MOUNTING 4.216	TRANSMISSION OIL COOLER PIPES 4.128
TRANSMISSION EQUALIZER SHAFT TO FRAME 4.040	TRANSMISSION SOLENOID WIRES TO VALVE BODY 4.265
TRANSMISSION GEARSHIFT INDICATOR LENS RETAINING 4.020	TRANSMISSION VACUUM PIPE TO FLYWHEEL HOUSING 4.205
TRANSMISSION OIL COOLER PIPES 4.128	CLUTCH ASSEMBLY
TRANSMISSION PARKING LOCK 4.290	TRANSMISSION 4.164
TRANSMISSION SHIFTER MOUNTING 4.010	
TRANSMISSION THROTTLE VALVE RETURN SPRING 4.050	

FIREBIRD ALPHABETICAL INDEX

C (Cont'd.)	
CONNECTOR	
TRANSMISSION DOWNSHIFT SOLENOID VALVE	4.057
TRANSMISSION OIL COOLER PIPES TO TRANSMISSION	4.128
CONVERTER PACKAGE	
TRANSMISSION /REBUILT/	4.115
COVER	
TRANSMISSION GOVERNOR	4.256
TRANSMISSION LOW SERVO	4.212
COVER AND STATOR SHAFT ASSEMBLY	
TRANSMISSION OIL PUMP	4.224
CROSS SHAFT ASSEMBLY	
TRANSMISSION THROTTLE CONTROL VALVE	4.050
CUSHION	
TRANSMISSION REVERSE CLUTCH	4.166
D	
DIAL	
TRANSMISSION CONTROL INDICATOR	4.020
DRUM AND BUSHING ASSEMBLY	
TRANSMISSION HIGH CLUTCH	4.169
F	
FILTER	
TRANSMISSION CONTROL INDICATOR DIAL LAMP	4.020
FITTING AND SEAL ASSEMBLY	
SPEEDOMETER DRIVEN GEAR	4.338
G	
GASKET	
TRANSMISSION CASE OIL PAN	4.196
TRANSMISSION FRONT OIL PUMP BODY	4.203
TRANSMISSION GOVERNOR COVER	4.256
TRANSMISSION LOW SERVO COVER	4.212
TRANSMISSION OIL COOLER LINES TO CONNECTOR	4.128
TRANSMISSION OIL PAN DRAIN SCREW	4.195
TRANSMISSION OIL PUMP COVER TO CASE	4.226
TRANSMISSION OIL PUMP SUCTION SCREEN	4.197
TRANSMISSION SOLENOID VALVE	4.265
TRANSMISSION TO GOVERNOR SUPPORT BODY	4.256
TRANSMISSION VACUUM MODULATOR	4.205
TRANSMISSION VALVE BODY PLATE	4.217
TRANSMISSION VALVE BODY PLATE TO CASE	4.265
GASKET AND SEAL PACKAGE	
TRANSMISSION OVERHAUL	4.005
GASKET SET	
TRANSMISSION	4.005
GATE	
STEERING COLUMN GEAR SHIFT LEVER	4.027
STEERING SHAFT HOUSING SUPPORT	4.027
GEAR	
SPEEDOMETER DRIVE	4.343
SPEEDOMETER DRIVEN	4.337
TRANSMISSION PLANET INPUT SUN	4.175
TRANSMISSION REVERSE RING	4.190
GEAR AND FLANGE ASSEMBLY	
TRANSMISSION HIGH CLUTCH LOW SUN	4.162
GEAR AND PIN PACKAGE	
TRANSMISSION GOVERNOR DRIVEN	4.256
GOVERNOR ASSEMBLY	
TRANSMISSION	4.256
GROMMET	
TRANSMISSION CONTROL ROD TO LEVER AND BRACKET ..	4.037
TRANSMISSION CONTROL ROD TO RANGE SELECTOR OUTER LEVER	4.037

G (Cont'd.)	
GROMMET (Cont'd.)	
TRANSMISSION CONTROL UPPER ROD TO STEERING COLUMN	4.037
TRANSMISSION GEARSHIFT CONTROL ROD TO GEARSHIFT LEVERS	4.037
UPPER LOCK ROD TO LEVER	4.037
GUIDE	
TRANSMISSION PARK LOCK AND RANGE SELECTOR INNER LEVER	4.218
H	
HANDLE	
TRANSMISSION CONTROL LEVER	4.006
HOUSING ASSEMBLY	
CONSOLE SHIFT LEVER INDICATOR	4.020
HUB	
TRANSMISSION HIGH CLUTCH	4.164
I	
INDICATOR	
TRANSMISSION GEARSHIFT	4.020
K	
KNOB	
TRANSMISSION GEARSHIFT LEVER	4.006
L	
LENS	
TRANSMISSION GEARSHIFT INDICATOR	4.020
LEVER	
TRANSMISSION CONTROL	4.006
TRANSMISSION CONTROL ROD	4.030
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER	4.040
TRANSMISSION NEUTRAL SAFETY SWITCH	4.054
TRANSMISSION PARKING LOCK AND RANGE SELECTOR ..	4.278
TRANSMISSION RANGE SELECTOR	4.045
TRANSMISSION THROTTLE VALVE	4.278
TRANSMISSION THROTTLE VALVE CONTROL	4.050
LEVER ASSEMBLY	
TRANSMISSION PARK LOCK AND RANGE SELECTOR INNER	4.218
LINK	
TRANSMISSION RANGE SELECTOR VALVE	4.275
LOCK	
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER	4.040
M	
MODULATOR ASSEMBLY	
TRANSMISSION VACUUM	4.205
MOUNTING ASSEMBLY	
TRANSMISSION SUPPORT	4.081
N	
NUT	
TRANSMISSION CONTROL LEVER HANDLE	4.008
TRANSMISSION DOWNSHIFT SWITCH AND SPACER TO BRACKET	4.057
TRANSMISSION IDLER LEVER SUPPORT TO FRAME	4.040
TRANSMISSION LOW BAND ANCHOR ADJUSTING SCREW ..	4.037
TRANSMISSION LOW BRAKE BAND ANCHOR ADJUSTING SCREW	4.253
TRANSMISSION RANGE SELECTOR LEVER	4.046
TRANSMISSION THROTTLE VALVE ROD	4.052
TRANSMISSION THROTTLE VALVE SPRING REGULATING ..	4.217

P

PAN	
TRANSMISSION OIL	4.195
PAWL	
TRANSMISSION PARKING LOCK	4.294
PIN	
TRANSMISSION CONTROL CABLE	4.047
TRANSMISSION CONTROL LEVER PIVOT	4.008
TRANSMISSION CONVERTER PRESSURE RELIEF VALVE SPRING RETAINER	4.216
TRANSMISSION HI SPEED DOWNSHIFT TIMING VALVE AND SPRING RETAINER	4.265
TRANSMISSION MODULATOR LIMIT VALVE RETAINER	4.265
TRANSMISSION SHIFT CONTROL VALVE SLEEVE TO VALVE BODY	4.265
PINION	
TRANSMISSION PLANET	4.175
PIPE	
CARBURETOR TO TRANSMISSION VACUUM	4.205
TRANSMISSION OIL COOLER	4.128
PIPE ASSEMBLY	
TRANSMISSION OIL FILLER	4.133
TRANSMISSION VENT	4.104
PISTON	
SPRING AND RETAINER ASSEMBLY, TRANSMISSION LOW SERVO SECONDARY	4.228
TRANSMISSION LOW SERVO PRIMARY	4.228
TRANSMISSION REVERSE CLUTCH	4.166
PISTON AND CUSHION ASSEMBLY	
TRANSMISSION HIGH CLUTCH	4.166
PLATE	
GEARSHIFT LEVER BOWL	4.010
STEERING COLUMN SHIFT STOP	4.010
STEERING HOUSING AND SHAFT DETENT LOCK	4.027
TRANSMISSION CONTROL INDICATOR DIAL	4.020
TRANSMISSION CONTROL LEVER HOLE TRIM	4.017
TRANSMISSION FORWARD CLUTCH	4.163
TRANSMISSION HIGH CLUTCH	4.163
TRANSMISSION OIL CHANNEL SUPPORT	4.265
TRANSMISSION PLANET PINION SHAFT LOCK	4.176
TRANSMISSION REVERSE CLUTCH	4.163
TRANSMISSION VALVE BODY	4.265
TRANSMISSION VALVE BODY TRANSFER	4.215
PLUG	
CRUISE CONTROL SPEEDOMETER CABLE HOLE	4.342
TRANSMISSION CONTROL LEVER	4.008
PLUNGER	
TRANSMISSION VACUUM MODULATOR	4.205
POINTER	
TRANSMISSION INDICATOR	4.020
PUMP ASSEMBLY	
TRANSMISSION OIL	4.224
R	
RACE	
TRANSMISSION PLANET CARRIER TO CASE THRUST BEARING	4.176
RELAY	
TRANSMISSION CONTROL SPARK	4.075
REPAIR KIT	
TRANSMISSION OVERHAUL	4.005
RETAINER	
SPEEDOMETER CABLE TO SPEEDOMETER	4.342
SPEEDOMETER DRIVEN GEAR SLEEVE	4.338
TRANSMISSION CONTROL CABLE LEVER AND BRACKET SEAL	4.047
TRANSMISSION CONTROL INDICATOR DIAL	4.020

R (Cont'd.)

RETAINER (Cont'd.)	
TRANSMISSION CONTROL LEVER AND BRACKET SEAL	4.015
TRANSMISSION CONTROL LEVER SEAL	4.015
TRANSMISSION GEARSHIFT INDICATOR LENS	4.020
TRANSMISSION HIGH CLUTCH PISTON RETURN SPRING	4.164
TRANSMISSION LOW SERVO PISTON ROD SPRING	4.226
TRANSMISSION RANGE SELECTOR DETENT ROLLER SPRING	4.218
TRANSMISSION RANGE SELECTOR SHAFT	4.275
TRANSMISSION SHIFT VALVE	4.265
TRANSMISSION VACUUM MODULATOR	4.205
RETAINER OR EXTENSION ASSEMBLY	
TRANSMISSION REAR BEARING	4.317
RING	
SPEEDOMETER DRIVEN GEAR SHAFT OIL SEAL RETAINING STEERING COLUMN SHIFT TUBE RETAINING	4.338
TRANSMISSION CLUTCH DRUM OIL SEAL	4.169
TRANSMISSION CONTROL KNOB TO LEVER	4.008
TRANSMISSION GOVERNOR HUB OIL	4.256
TRANSMISSION GOVERNOR INNER WEIGHT RETAINER	4.256
TRANSMISSION GOVERNOR INNER WEIGHT TO CONNECTING SHAFT RETAINING	4.256
TRANSMISSION GOVERNOR OUTER WEIGHT RETAINER	4.256
TRANSMISSION GOVERNOR SUPPORT OIL SEAL	4.256
TRANSMISSION HI SPEED DOWNSHIFT TIMING VALVE PIN RETAINER	4.265
TRANSMISSION HIGH CLUTCH	4.164
TRANSMISSION INPUT SHAFT OIL	4.123
TRANSMISSION LOW SERVO COVER RETAINER	4.228
TRANSMISSION LOW SERVO PISTON	4.228
TRANSMISSION LOW SERVO PISTON ROD SNAP	4.233
TRANSMISSION PARK LOCK ACTUATOR TO INNER LEVER TRANSMISSION PARKING LOCK ACTUATOR TO INNER LEVER	4.218
TRANSMISSION PARKING LOCK PAWL SHAFT RETAINER	4.290
TRANSMISSION PRESSURE REGULATOR VALVE INNER SEAT	4.216
TRANSMISSION PRIMARY PISTON OIL SEAL	4.228
TRANSMISSION REVERSE AND MODULATOR VALVE SLEEVE	4.216
TRANSMISSION REVERSE CLUTCH	4.164
TRANSMISSION UPPER VALVE BODY RETAINING	4.217
VALVE BODY SHIFT VALVE PLUG SLEEVE	4.216
RING PACKAGE	
TRANSMISSION /SNAP/	4.005
TRANSMISSION OIL SEAL	4.005
ROD	
TRANSMISSION CONTROL	4.035
TRANSMISSION CONTROL LEVER RELEASE	4.008
TRANSMISSION CONTROL LOCK	4.035
TRANSMISSION LOW SERVO PISTON	4.228
TRANSMISSION THROTTLE VALVE CONTROL CROSS SHAFT	4.050
ROD ASSEMBLY	
TRANSMISSION OIL INDICATOR	4.133
TRANSMISSION THROTTLE VALVE CONTROL	4.050
ROLLER ASSEMBLY	
TRANSMISSION RANGE SELECTOR DETENT	4.218
S	
SCREEN	
TRANSMISSION GOVERNOR VALVE	4.256
SCREEN ASSEMBLY	
TRANSMISSION CASE	4.105
TRANSMISSION OIL PUMP SUCTION	4.197
TRANSMISSION THROTTLE VALVE FEED	4.265
SCREW	
GEARSHIFT LEVER BOWL PLATE	4.012
GOVERNOR HUB	4.256
STEERING COLUMN HOUSING DETENT	4.027
STEERING SHAFT HOUSING SUPPORT GATE OR DETENT PLATE	4.027
TRANSMISSION CONTROL ROD TO IDLER LEVER	4.037
TRANSMISSION CONVERTER COVER PAN TO CASE	4.115
TRANSMISSION LOW BRAKE BAND ANCHOR ADJUSTING	4.253

FIREBIRD ALPHABETICAL INDEX

S (Cont'd.)

SCREW (Cont'd.)	
TRANSMISSION NEUTRAL AND BACK UP LAMP SWITCH TO COLUMN	4.054
TRANSMISSION OIL PAN DRAIN	4.195
SCREW AND CONICAL WASHER	
TRANSMISSION OIL PAN TO CASE	4.196
SCREW AND LOCKWASHER	
TRANSMISSION PLANET PINION LOCK PLATE	4.176
SCREW AND LOCKWASHER ASSEMBLY	
TRANSMISSION GOVERNOR BODY TO HUB	4.256
SEAL	
SPEEDOMETER DRIVEN GEAR SHAFT OIL	4.338
SPEEDOMETER GEAR SLEEVE TO REAR BEARING RETAINER	4.338
SPEEDOMETER PINION	4.338
STEERING COLUMN SHAFT	4.030
TRANSMISSION CONTROL LEVER	4.015
TRANSMISSION DETENT CONTROL CABLE	4.104
TRANSMISSION DETENT SOLENOID CONNECTOR	4.265
TRANSMISSION DOWNSHIFT SOLENOID VALVE CONNECTOR	4.216
TRANSMISSION GEARSHIFT CONTROL CABLE	4.047
TRANSMISSION HIGH CLUTCH PISTON OIL	4.166
TRANSMISSION LOW SERVO COVER	4.212
TRANSMISSION LOW SERVO COVER OIL	4.228
TRANSMISSION LOW SERVO PISTON OIL	4.229
TRANSMISSION MODULATOR TO CASE OIL	4.205
TRANSMISSION OIL FILLER TO CASE	4.133
TRANSMISSION OIL PUMP	4.226
TRANSMISSION OIL PUMP BODY OIL	4.226
TRANSMISSION OIL PUMP TO CASE	4.226
TRANSMISSION OIL SUCTION PIPE TO CASE OIL	4.197
TRANSMISSION OUTPUT SHAFT TO EXTENSION OIL	4.318
TRANSMISSION REAR BEARING RETAINER TO CASE	4.318
TRANSMISSION THROTTLE CONTROL LEVER SHAFT	4.278
TRANSMISSION VACUUM MODULATOR TO CASE	4.057
SEAL ASSEMBLY	
TRANSMISSION PARK LOCK RANGE SELECTOR SHAFT OIL	4.275
TRANSMISSION REAR BEARING RETAINER TO OUTPUT SHAFT	4.318
SEAL PACKAGE	
TRANSMISSION	4.005
TRANSMISSION CLUTCH	4.166
TRANSMISSION OIL PUMP	4.226
TRANSMISSION REVERSE CLUTCH PISTON	4.166
SEAT	
TRANSMISSION HIGH CLUTCH SPRING	4.164
TRANSMISSION OIL COOLER BY PASS VALVE	4.216
TRANSMISSION REVERSE CLUTCH PISTON RETURN	4.164
SHAFT	
SPEEDOMETER FLEXIBLE	4.342
TRANSMISSION GOVERNOR	4.256
TRANSMISSION PARK LOCK AND RANGE SELECTOR	4.275
TRANSMISSION PARKING LOCK PAWL	4.294
TRANSMISSION PLANET PINION	4.175
TRANSMISSION THROTTLE VALVE CONTROL	4.050
SHAFT ASSEMBLY	
TRANSMISSION INPUT	4.123
SHIELD	
TRANSMISSION CONTROL SPLASH	4.067
SHIFTER ASSEMBLY	
TRANSMISSION CONTROL	4.004
SHROUD	
STEERING COLUMN BOWL	4.010
SLEEVE	
SPEEDOMETER DRIVEN GEAR	4.338
TRANSMISSION CONTROL LEVER RELEASE ROD	4.008
TRANSMISSION GEARSHIFT CONTROL ROD TO LEVERS	4.037
TRANSMISSION HYDRAULIC MODULATOR VALVE	4.216
TRANSMISSION SHIFT CONTROL VALVE	4.265

S (Cont'd.)

SLIDE	
GEARSHIFT CONTROL LEVER	4.008
SOCKET ASSEMBLY	
GEARSHIFT INDICATOR LIGHT	4.020
SPACER	
TRANSMISSION CONVERTER TO CRANKSHAFT	4.115
TRANSMISSION DOWNSHIFT SWITCH MOUNTING	4.057
TRANSMISSION OIL COOLER PIPES	4.128
TRANSMISSION PLANET PINION BEARING	4.176
TRANSMISSION PRESSURE REGULATOR VALVE	4.216
SPRING	
GEARSHIFT LEVER DETENT	4.010
STEERING COLUMN SHIFT TUBE RETURN	4.027
TRANSMISSION CONTROL LEVER	4.008
TRANSMISSION EQUALIZER SHAFT ANTI RATTLE	4.040
TRANSMISSION FORWARD CLUTCH CUSHION	4.164
TRANSMISSION GEARSHIFT INDICATOR	4.020
TRANSMISSION GEARSHIFT LEVER BOWL	4.008
TRANSMISSION GEARSHIFT UPPER SHIFT LEVER	4.008
TRANSMISSION HIGH CLUTCH	4.164
TRANSMISSION HIGH SPEED DOWNSHIFT TIMING VALVE	4.265
TRANSMISSION LOW SERVO PISTON	4.228
TRANSMISSION LOW SERVO PRIMARY PISTON CUSHION	4.233
TRANSMISSION LOW SERVO PRIMARY PISTON RETURN	4.233
TRANSMISSION MODULATOR LIMIT VALVE	4.265
TRANSMISSION OIL COOLER BY PASS VALVE	4.216
TRANSMISSION OIL PUMP PRESSURE RELIEF VALVE	4.216
TRANSMISSION PARKING LOCK PAWL DISENGAGING	4.295
TRANSMISSION PRESSURE REGULATOR VALVE	4.216
TRANSMISSION RANGE SELECTOR DETENT	4.293
TRANSMISSION RANGE SELECTOR DETENT ROLLER	4.217
TRANSMISSION REVERSE CLUTCH PISTON CUSHION	4.164
TRANSMISSION REVERSE CLUTCH PISTON RETURN	4.164
TRANSMISSION SHIFT VALVE	4.265
TRANSMISSION STATOR AND DETENT VALVE	4.265
TRANSMISSION THROTTLE VALVE ROD	4.052
VACUUM MODULATOR DAMPING	4.205
SPRING PACKAGE	
TRANSMISSION LOW AND DRIVE VALVE	4.216
STRAINER	
TRANSMISSION OIL	4.197
STRUT	
TRANSMISSION LOW BRAKE BAND	4.252
STUD	
TRANSMISSION PRESSURE REGULATOR VALVE RETAINER	4.216
SUPPORT	
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER	4.040
SUPPORT ASSEMBLY	
TRANSMISSION	4.081
SWITCH	
TRANSMISSION CONTROLLED SPARK	4.075
SWITCH ASSEMBLY	
TRANSMISSION DOWNSHIFT CONTROL	4.057
TRANSMISSION NEUTRALIZER AND BACK UP LAMP	4.054
SWIVEL	
TRANSMISSION CONTROL ROD OR LOCK ROD	4.037
T	
TRANSMISSION ASSEMBLY	
AUTOMATIC	4.003
TRUNNION	
TRANSMISSION CONTROL ROD TO RANGE SELECTOR OUTER LEVER	4.037
TUBE	
TRANSMISSION SERVO APPLICATOR PRESSURE	4.216
VACUUM PIPE TO TRANSMISSION	4.205

T (Cont'd.)

TUBE ASSEMBLY

STEERING COLUMN REACTION AND SHIFT	4.025
STEERING COLUMN SHIFT	4.025

.000

U

UNDERPAN

TRANSMISSION CONVERTER	4.115
------------------------------	-------

V

VALVE

DOWNSHIFT TIMING	4.216
TRANSMISSION CONVERTER STATOR AND DETENT	4.265
TRANSMISSION GOVERNOR	4.256
TRANSMISSION HIGH SPEED DOWNSHIFT TIMING	4.265
TRANSMISSION HYDRAULIC MODULATOR	4.216
TRANSMISSION MODULATOR LIMIT	4.265
TRANSMISSION MODULATOR VACUUM	4.205
TRANSMISSION OIL COOLER BY PASS	4.216
TRANSMISSION PRESSURE REGULATOR	4.216
TRANSMISSION RANGE SELECTOR	4.265
TRANSMISSION SHIFT	4.265
TRANSMISSION SHIFT CONTROL	4.265
TRANSMISSION VALVE BODY MANUAL CONTROL	4.216
TRANSMISSION VALVE BODY SOLENOID	4.265

VALVE AND SLEEVE PACKAGE

TRANSMISSION REVERSE AND MODULATOR BOOST	4.216
--	-------

VALVE ASSEMBLY

TRANSMISSION DOWNSHIFT TIMING	4.234
-------------------------------------	-------

VALVE PACKAGE

TRANSMISSION OIL PUMP PRIMING	4.203
TRANSMISSION SHIFT CONTROL	4.265

VENT

TRANSMISSION EXTENSION	4.317
------------------------------	-------

W

WASHER

STEERING COLUMN BOWL	4.012
STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST	4.027
TRANSMISSION CLUTCH DRUM THRUST	4.169
TRANSMISSION CLUTCH HUB THRUST	4.169
TRANSMISSION CONTROL LEVER	4.008
TRANSMISSION CONTROL ROD LEVER TO LEVER	4.037
TRANSMISSION CONTROL RODS OR LOCK ROD TO COLUMN AND LEVERS	4.037
TRANSMISSION GOVERNOR DAMPING	4.256
TRANSMISSION HIGH CLUTCH HUB	4.164
TRANSMISSION HIGH SPEED DOWNSHIFT TIMING VALVE	4.265
TRANSMISSION INPUT SUN GEAR THRUST	4.176
TRANSMISSION INPUT SUN GEAR TO CARRIER THRUST	4.176
TRANSMISSION LOW SERVO CUSHION SPRING RETAINER	4.228
TRANSMISSION LOW SERVO PISTON APPLY	4.228
TRANSMISSION PLANET PINION THRUST	4.176
TRANSMISSION PRESSURE REGULATOR VALVE SPRING	4.216
TRANSMISSION PUMP COVER TO HIGH CLUTCH DRUM THRUST	4.169
TRANSMISSION SUPPORT MOUNTING TO BRACKET	4.085
TRANSMISSION THROTTLE VALVE CONTROL CROSS SHAFT	4.052
UPPER STEERING COLUMN WAVE	4.012

WASHER PACKAGE

TRANSMISSION LOW SUN GEAR	4.162
---------------------------------	-------

WEIGHT

DRIVE LINE DAMPER	4.083
TRANSMISSION GOVERNOR	4.256

Y

YOKE

TRANSMISSION CONTROL CABLE TO MOUNTING BRACKET	4.047
--	-------

AUTOMATIC TRANSMISSION

4.003 TRANSMISSION ASSEMBLY, AUTOMATIC

1	1383471	67	ALL 6 CYL - 1BC - EXC AIR COND - MODEL LF
1	1383472	67	ALL 6 CYL - 4BC - EXC AIR COND - MODEL LG
1	N.L.A.	67	6 CYL WITH AIR COND - MODEL LH /SUP 1383473/
1	N.L.A.	67	8 CYL /2BC/ EXC AIR COND - MODEL MA /SUP 1377113/
1	1377114	67	ALL 8 CYL - 4BC - EXC AIR COND - MODEL MB
1	1377115	67	ALL 8 CYL - WITH AIR COND - MODEL MC
1	1383746	68	ALL 6 CYL - 1BC - EXC AIR COND - MODEL LF
1	1383747	68	ALL 6 CYL - 4BC - EXC AIR COND - MODEL LG
1	N.L.A.	68	6 CYL WITH AIR COND - MODEL LH /SUP 1383748/
1	1383317	68	ALL 8 CYL - 2BC - EXC AIR COND - MODEL MA
1	N.L.A.	68	8 CYL /4BC/ EXC AIR COND - MODEL MB /SUP 1383316/
1	N.L.A.	68	8 CYL WITH AIR COND - MODEL MC /SUP 1383315/
1	1386505	69	ALL AT 6 CYL - EXC AIR COND - MODEL LF
1	1386507	69	ALL AT 6 CYL - WITH AIR COND - MODEL LH
1	1386508	69	ALL AT 8 CYL - EXC AIR COND - MODEL MA
1	1386510	69	ALL AT 8 CYL - WITH AIR COND - MODEL MC
1	N.L.A.	70	6 CYL PG - MODEL EB /SUP 478626/
1	477621	70	8 CYL PG - MODEL EA
1	6264966	71	AT 6 CYL /SUP 3981751/
1	3987939	71	AT 350 ENG
1	6261821	72	6 CYL PG
1	6264999	72	350 ENG PG

4.004 SHIFTER ASSEMBLY, TRANSMISSION CONTROL

1	9794098	67	ALL AT - WITH FLOOR SHIFT / SUP 9792584/ - /ILL. 4-1/
---	---------	----	---

4.004 SHIFTER ASSEMBLY, TRANSMISSION CONTROL (Cont'd)

1	9791314	68	ALL AT - WITH FLOOR SHIFT - INCLUDES LEVER - /ILL. 4-1/
1	9797066	69	ALL AT - WITH FLOOR SHIFT - COMPLETE - /ILL. 4-1/
1	498974	70-72	ALL PG FLOOR SHIFT /SUP 481224/

4.005 BUSHING PACKAGE, TRANSMISSION

1	1394292	67-68	ALL - CONTAINS ALL BUSHINGS FOR TRANS EXT, CLUTCH DRUM, SUN GEAR, OUTPUT SHAFT, STATOR SHAFT, CASE AND PUMP BODY /SUP 1396575/
---	---------	-------	--

4.005 GASKET AND SEAL PACKAGE, TRANSMISSION OVERHAUL

1	3958686	70-72	ALL PG
---	---------	-------	--------

4.005 GASKET SET, TRANSMISSION

1	1381332	67-69	ALL
---	---------	-------	-----

4.005 REPAIR KIT, TRANSMISSION OVERHAUL

1	1394341	67-69	ALL - WITH GASKETS AND SEALS
1	3914196	70-72	ALL

4.005 RING PACKAGE, TRANSMISSION /SNAP/

1	1394145	68-69	ALL
---	---------	-------	-----

4.005 RING PACKAGE, TRANSMISSION OIL SEAL

1	3928592	70-72	ALL PG - CONTAINS 2 CLUTCH DRUM SEALS, 2 GOVERNOR SEALS, 2 INPUT SHAFT SEALS, 1 LOW SERVO SEAL
---	---------	-------	--

4.005 SEAL PACKAGE, TRANSMISSION

1	1396508	67-69	ALL
---	---------	-------	-----

4.006 BUTTON, TRANSMISSION CONTROL LEVER

1	3914825	67	ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/
1	480433	70-72	ALL PG FLOOR SHIFT
1	547046	76	ALL WITH TH350 WITH SPECIAL EDITION TRANSMISSION - PLASTIC

4.006 CLIP, TRANSMISSION CONTROL HANDLE TO CONTROL ROD

1	9791339	68-69	ALL AT - WITH FLOOR SHIFT - /ILL. 4-2/
---	---------	-------	--

4.006 CLIP, TRANSMISSION GEARSHIFT BUTTON TO PAWL ROD

1	9797188	70-72	ALL PG FLOOR SHIFT
---	---------	-------	--------------------

4.006 HANDLE, TRANSMISSION CONTROL LEVER

1	3895274	67	ALL - WITH FLOOR SHIFT - /ILL. 4-1/
1	9791338	68-69	ALL AT - WITH FLOOR SHIFT - INNER - /ILL. 4-2/
1	9791337	68-69	ALL AT - WITH FLOOR SHIFT - OUTER - /ILL. 4-2/

4.006 KNOB, TRANSMISSION GEARSHIFT LEVER

1	3973042	67	ALL AT - WITH COLUMN SHIFT - BLACK /SUP 3899067/ - /ILL. 4-1/
---	---------	----	---

4.006 KNOB, TRANSMISSION GEARSHIFT LEVER (Cont'd)

1	N.L.A.	67	ALL AT - WITH COLUMN SHIFT - BLUE - TRIM 250-270 - /ILL. 4-1/ /SUP 9777862/
1	3899064	67	ALL AT - WITH COLUMN SHIFT - BLUE - TRIM 255-265 - /ILL. 4-1/
1	3920228	67	ALL AT - WITH COLUMN SHIFT - GOLD - /ILL. 4-1/ /SUP 3899066/
1	3973042	67	ALL AT - WITH COLUMN SHIFT - RED - /ILL. 4-1/ /SUP 3899063/
1	N.L.A.	67	ALL AT - WITH COLUMN SHIFT - TURQUOISE - /ILL. 4-1/ / SUP 9777863/
1	9792623	68-69	ALL AT - WITH COLUMN SHIFT - /ILL. 4-1/
1	481172	70-72	ALL PG - WITH COLUMN SHIFT ALL PG FLOOR SHIFT

4.006 LEVER, TRANSMISSION CONTROL

1	6263121	67-68	ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/ /SUP 3895273-3924191/
1	9790724	68	ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL - /ILL. 4-1/ AT COLUMN SHIFT WITH TILT WHEEL /SUP 9790725/
1	N.L.A.	68	AT COLUMN SHIFT WITH TILT WHEEL /SUP 9790725/
1	546723	69	ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL - UPPER - /ILL. 4-1/ /SUP 9795118/
1	N.L.A.	69	ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL - UPPER - /ILL. 4-1/ /SUP 9795890/
1	480677	70	ALL PG COLUMN SHIFT - UPPER
1	N.L.A.	71-72	PG COLUMN SHIFT - UPPER / SUP 482697/

4.008 BUSHING, TRANSMISSION CONTROL LEVER

2	3859797	67	ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/
---	---------	----	--

4.008 NUT, TRANSMISSION CONTROL LEVER HANDLE

1	3895275	67	ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/
---	---------	----	--

4.008 PIN, TRANSMISSION CONTROL LEVER PIVOT

1	3793014	67-71	ALL AT - WITH COLUMN SHIFT /SUP 387315/ - /ILL. 4-1/
1	9425112	69	ALL AT - WITH COLUMN SHIFT - 7/32 X 15/16 SLOTTED SPRING - - /ILL. 4-1/

4.008 PLUG, TRANSMISSION CONTROL LEVER

1	3859792	67-68	ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/
---	---------	-------	--

4.008 RING, TRANSMISSION CONTROL KNOB TO LEVER

2	9418564	69	ALL AT - WITH FLOOR SHIFT
---	---------	----	---------------------------

4.008 ROD, TRANSMISSION CONTROL LEVER RELEASE

1	3895278	67	ALL AT - /ILL. 4-1/
---	---------	----	---------------------

4.008 SLIDE, GEARSHIFT CONTROL LEVER

2	9796094	69-72	ALL - WITH CONSOLE - PLASTIC - NOTE REPLACE IN PAIRS
---	---------	-------	--

4.008 SLEEVE, TRANSMISSION CONTROL LEVER RELEASE ROD

1	3905504	67	ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/
---	---------	----	--

4.008 SPRING, TRANSMISSION CONTROL LEVER

1	3895277	67	ALL AT - UPPER - WITH FLOOR SHIFT - /ILL. 4-1/
1	3899023	67-68	ALL AT - LOWER - WITH FLOOR SHIFT - /ILL. 4-1/

4.008 SPRING, TRANSMISSION GEARSHIFT LEVER BOWL

1	7800670	67-68	ALL - WITH COLUMN SHIFT - WITH TILT WHEEL
1	7800605	67-68	ALL - WITH COLUMN SHIFT - EXC TILT WHEEL
1	7812853	69-72	ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL - /ILL. 6-1/
		70	ALL PG - WITH COLUMN SHIFT - WITH TILT WHEEL

4.008 SPRING, TRANSMISSION GEARSHIFT UPPER SHIFT LEVER

1	7808017	69	ALL AT WITH COLUMN SHIFT - EXC TILT WHEEL - /ILL. 6-1/
		70-72	ALL PG WITH COLUMN SHIFT - EXC TILT WHEEL /SUP 7804403/

4.008 WASHER, TRANSMISSION CONTROL LEVER

1	2390395	67	ALL AT - WITH FLOOR SHIFT - CONTROL ROD LEVER - 5/8 ID X 1 OD - /ILL. 4-1/
1	3917594	67	ALL AT - WITH FLOOR SHIFT - CONTROL LEVER RELEASE ROD - 3/16 ID X 3/8 OD - /ILL. 4-1/

4.010 BOWL ASSEMBLY, TRANSMISSION GEARSHIFT LEVER

1	5698516	67-68	ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL
1	5698984	67-68	ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL - INCLUDES SPRING
1	7810761	69-72	ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL /SUP 7804434/
1	7805994	69	ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL
1	7805994	70	PG COLUMN SHIFT W/TILT WHEEL

4.010 BOWL, STEERING COLUMN

1	7800262	67-68	ALL - WITH FLOOR SHIFT - WITH TILT WHEEL
1	7810762	69	ALL AT - WITH FLOOR SHIFT - EXC TILT WHEEL
		70	ALL PG - WITH FLOOR SHIFT - EXC TILT WHEEL /SUP 7804436/
1	7810762	71-72	ALL PG - WITH FLOOR SHIFT - EXC TILT WHEEL

4.010 BRACKET, TRANSMISSION CONTROL CABLE MOUNTING LOWER

1	9791367	68-69	ALL AT - WITH FLOOR SHIFT - /ILL. 4-2/
---	---------	-------	--

4.010 BRACKET, TRANSMISSION CONTROL LEVER

1 9794101 67 ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/ /SUP 9777741-9792585/

4.010 BRACKET, TRANSMISSION SHIFTER MOUNTING

1 9793263 68 ALL AT - WITH FLOOR SHIFT - /ILL. 4-2/

4.010 PLATE, GEARSHIFT LEVER BOWL

1 7804401 69 ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL - /ILL. 6-1/
1 7807229 69 ALL AT - WITH FLOOR SHIFT - EXC TILT WHEEL
1 7804401 70 ALL PG COLUMN SHIFT EXC TILT WHEEL
1 7807229 70 ALL PG FLOOR SHIFT EXC TILT WHEEL

4.010 PLATE, STEERING COLUMN SHIFT STOP

1 5698651 67-68 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL

4.010 SHROUD, STEERING COLUMN BOWL

1 7811350 69-70 ALL AT - EXC TILT WHEEL / SUP 7804473/
1 N.L.A. 69 AT FLOOR SHIFT WITH TILT WHEEL /SUP 7808002/
1 7809375 70-72 ALL PG WITH FLOOR SHIFT - WITH TILT WHEEL
1 7811350 71-72 PG W/COLUMN SHIFT - EXC TILT WHEEL UPPER

4.010 SPRING, GEARSHIFT LEVER DETENT

1 7806110 69 ALL AT - WITH FLOOR SHIFT - EXC TILT WHEEL

4.012 SCREW, GEARSHIFT LEVER BOWL PLATE

2 7810242 69-70 AT OR PG EXC TILT WHEEL / SUP 7808198/

4.012 WASHER, STEERING COLUMN BOWL

1 7804447 69-70 ALL AT OR PG - EXC TILT WHEEL - WAVE - /ILL. 6-1/
1 7805159 69-72 ALL AT OR PG - WITH TILT WHEEL - WAVE - /ILL. 6-1/
1 7804906 69-72 ALL AT OR PG - WITH TILT WHEEL - THRUST - /ILL. 6-1/

4.012 WASHER, UPPER STEERING COLUMN WAVE

1 5699618 67-68 ALL - WITH TILT WHEEL - 1-11/32 ID X 1-11/16 OD

4.015 RETAINER, TRANSMISSION CONTROL LEVER SEAL

2 3893872 67 ALL AT - WITH FLOOR SHIFT - /ILL. 10-1/

4.015 RETAINER, TRANSMISSION CONTROL LEVER AND BRACKET SEAL

1 3895282 67 ALL AT - WITH FLOOR SHIFT - /ILL. 4-1, 10-1/

4.015 SEAL, TRANSMISSION CONTROL LEVER

1 3925419 67 ALL AT - WITH FLOOR SHIFT / SUP -3893871- / - /ILL. 10-1/
1 9779566 68 ALL AT - WITH FLOOR SHIFT - /ILL. 4-1, 10-1/
1 9797193 69-70 ALL - WITH FLOOR SHIFT - /ILL. 10-1/

4.017 PLATE, TRANSMISSION CONTROL LEVER HOLE TRIM

1 3925418 67 ALL AT - WITH FLOOR SHIFT - RIGHT - /ILL. 10-1/ /SUP 3893864/
1 3925417 67 ALL AT - WITH FLOOR SHIFT - LEFT - /ILL. 10-1/ /SUP 3893863/

4.020 BRACKET, TRANSMISSION GEARSHIFT INDICATOR LENS RETAINING

1 9796793 69 ALL AT WITH COLUMN SHIFT - EXC TILT WHEEL
1 7805445 69 ALL AT WITH COLUMN SHIFT - WITH TILT WHEEL
1 9796793 70-72 ALL PG COLUMN SHIFT EXC TILT WHEEL
1 7805445 70 ALL PG COLUMN SHIFT W/TILT WHEEL

4.020 CAP, TRANSMISSION CONTROL LEVER HOUSING POINTER

1 478106 70-72 PG COLUMN SHIFT

4.020 CAP, TRANSMISSION GEARSHIFT INDICATOR LENS LAMP

1 N.L.A. 67-68 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL /SUP 9788110/
1 N.L.A. 67-68 ALL - WITH COLUMN SHIFT - EXC TILT WHEEL /SUP 7800592-7801162/
1 9796866 69-72 ALL AT WITH COLUMN SHIFT - EXC TILT WHEEL
1 9796915 69-72 ALL AT WITH COLUMN SHIFT - WITH TILT WHEEL

4.020 CLIP, TRANSMISSION GEARSHIFT INDICATOR LENS RETAINING

1 9796918 69 ALL AT WITH COLUMN SHIFT - WITH TILT WHEEL

4.020 DIAL, TRANSMISSION CONTROL INDICATOR

1 N.L.A. 67 ALL - WITH TILT WHEEL - WITH COLUMN SHIFT /SUP 3904851/
1 3893874 67 ALL AT - WITH FLOOR SHIFT - /ILL. 10-1/

4.020 FILTER, TRANSMISSION CONTROL INDICATOR DIAL LAMP

1 3779994 67 ALL - WITH TILT WHEEL - WITH COLUMN SHIFT

4.020 HOUSING ASSEMBLY, CONSOLE SHIFT LEVER INDICATOR

1 9791330 68-69 ALL AT - /ILL. 10-1/
1 478572 70-72 ALL PG

4.020 INDICATOR, TRANSMISSION GEARSHIFT

1 9787532 67-68 ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL - /ILL. 4-1/
1 9796215 69 ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL - WITH LENS - BLACK - /ILL. 4-1/
70 ALL PG COLUMN SHIFT EXC TILT WHEEL - INCL LENS - BLACK
1 482255 71 PG COLUMN SHIFT EXC TILT WHEEL - INCL LENS - BLACK - PAINT TO MATCH

4.020 INDICATOR, TRANSMISSION GEARSHIFT

(Cont'd)

1 482255 72 PG COLUMN SHIFT EXC TILT WHEEL OR FORMULA STEERING WHEEL - INCL LENS - BLACK - PAINT TO MATCH

4.020 LENS, TRANSMISSION GEARSHIFT INDICATOR

1 9787710 68 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL
1 9796913 69 ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL
1 480731 70-72 ALL PG FLOOR SHIFT

4.020 PLATE, TRANSMISSION CONTROL INDICATOR DIAL

1 3893875 67 ALL AT - WITH FLOOR SHIFT - /ILL. 10-1/
1 478573 70-72 ALL PG FLOOR SHIFT

4.020 POINTER, TRANSMISSION INDICATOR

1 9775619 67-68 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL
1 9796916 69 ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL

4.020 RETAINER, TRANSMISSION CONTROL INDICATOR DIAL

1 3893876 67 ALL AT - WITH FLOOR SHIFT - /ILL. 10-1/

4.020 RETAINER, TRANSMISSION GEARSHIFT INDICATOR LENS

1 9787711 67-68 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL
1 9796932 69 ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL - BLACK
1 482325 72 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL - BLACK

4.020 SOCKET ASSEMBLY, GEARSHIFT INDICATOR LIGHT

1 7805546 69 ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL
1 7805581 69 ALL AT - WITH COLUMN SHIFT - WITH TILT WHEEL
70-72 ALL PG COLUMN SHIFT W/TILT WHEEL
1 7805546 70-72 ALL PG COLUMN SHIFT EXC TILT WHEEL

4.020 SPRING, TRANSMISSION GEARSHIFT INDICATOR

2 9787535 67-68 ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL - TO TURN SIGNAL SWITCH - /ILL. 4-1/
2 9796211 69 ALL AT - WITH COLUMN SHIFT - EXC TILT WHEEL - LENS RETAINING - /ILL. 4-1/
70-72 ALL PG COLUMN SHIFT - EXC TILT WHEEL - LENS RETAINING

4.025 TUBE ASSEMBLY, STEERING COLUMN REACTION AND SHIFT

1 7802486 68 ALL - WITH COLUMN SHIFT - EXC TILT WHEEL

4.025 TUBE ASSEMBLY, STEERING COLUMN SHIFT

1 7804498 69 ALL AT - EXC TILT WHEEL - /ILL. 6-1/
1 N.L.A. 69 ALL AT - WITH TILT WHEEL - /ILL. 6-1/ /SUP 7805163/

4.025 TUBE ASSEMBLY, STEERING COLUMN SHIFT

(Cont'd)

1 7808563 70-72 ALL PG COLUMN SHIFT
70-72 ALL PG FLOOR SHIFT EXC TILT WHEEL
1 7808908 70-72 ALL PG FLOOR SHIFT W/TILT WHEEL
1 7808563 75-76 WITH TH350 EXC TILT WHEEL

4.027 GATE, STEERING COLUMN GEAR SHIFT LEVER

1 7811592 71-72 PG W/COLUMN SHIFT - EXC TILT WHEEL
1 7811691 71-72 PG W/COLUMN SHIFT T/W TILT WHEEL

4.027 GATE, STEERING SHAFT HOUSING SUPPORT

1 7804916 69 ALL AT WITH COLUMN SHIFT - WITH TILT WHEEL - /ILL. 6-1/
70 ALL PG WITH COLUMN SHIFT - WITH TILT WHEEL

4.027 PLATE, STEERING HOUSING AND SHAFT DETENT LOCK

1 7801037 67-68 ALL - WITH COLUMN SHIFT - EXC TILT WHEEL
1 5698603 67-68 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL

4.027 RING, STEERING COLUMN SHIFT TUBE RETAINING

1 7804907 69 ALL AT - WITH TILT WHEEL - /ILL. 6-1/
70-72 ALL PG - WITH TILT WHEEL

4.027 SCREW, STEERING COLUMN HOUSING DETENT

1 7806109 69 ALL AT - WITH FLOOR SHIFT - EXC TILT WHEEL

4.027 SCREW, STEERING SHAFT HOUSING SUPPORT GATE OR DETENT PLATE

2 7800639 69 ALL AT WITH COLUMN SHIFT - WITH TILT WHEEL - /ILL. 6-1/
70-72 ALL PG WITH COLUMN SHIFT - WITH TILT WHEEL

4.027 SPRING, STEERING COLUMN SHIFT TUBE RETURN

1 7804446 69 ALL AT - EXC TILT WHEEL - /ILL. 6-1/
70 ALL PG - EXC TILT WHEEL
1 7810567 71-72 ALL PG - EXC TILT WHEEL

4.027 WASHER, STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST

1 7807427 69 ALL AT - EXC TILT WHEEL - /ILL. 6-1/ /SUP 7804548/
70-72 ALL PG - EXC TILT WHEEL

4.030 LEVER, TRANSMISSION CONTROL ROD

1 9789714 67 ALL AT - WITH FLOOR SHIFT / SUP 9777740/ - /ILL. 4-1/

4.030 SEAL, STEERING COLUMN SHAFT

1 7807007 70 ALL PG

4.035 ROD, TRANSMISSION CONTROL LOCK

1 9777795 69 ALL - WITH FLOOR SHIFT - UPPER - /ILL. 4-1/
1 9777796 69 ALL - WITH FLOOR SHIFT - LOWER - /ILL. 4-1/
1 3975630 70-72 ALL PG FLOOR SHIFT

4.035 ROD, TRANSMISSION CONTROL

- 1 N.L.A. 67-69 ALL - UPPER - WITH COLUMN SHIFT - /ILL. 4-1/ /SUP 9777795/
- 1 9777796 67-69 ALL - LOWER - WITH COLUMN SHIFT - /ILL. 4-1/
- 1 9791671 67 ALL AT - WITH FLOOR SHIFT / SUP 9777742/ - /ILL. 4-1/
- 1 3975630 70-72 ALL PG COLUMN SHIFT

4.037 BUSHING, STEERING COLUMN LOWER LEVER TO LOCK ROD

- 1 9798861 69 ALL AT - WITH FLOOR SHIFT - INNER - 5/16 ID - /ILL. 4-1/
- 1 9798862 69 ALL AT - WITH FLOOR SHIFT - OUTER - 1/2 ID - /ILL. 4-1/
- 1 9798861 70 ALL PG FLOOR SHIFT - INNER - 5/16 ID
- 1 9798862 70 ALL PG FLOOR SHIFT - OUTER - 1/2 ID

4.037 BUSHING, TRANSMISSION CONTROL ROD OR LOCK ROD TO LEVERS

- AR 382102 67-68 ALL AT - 3/8 ID - 1/2 OD X 1/2 - /ILL. 4-1/
- 69 ALL AT - /ILL. 4-1/
- 70-72 ALL PG

4.037 BUSHING, TRANSMISSION CONTROL ROD SWIVEL TO SHIFT TUBE LEVER GROMMET

- 1 1394293 ALL YEARS/ALL MODELS - INCL SLEEVE /SUP 401257/

4.037 CLAMP, TRANSMISSION CONTROL ROD OR LOCK ROD

- AR 382103 67-68 ALL AT - WITH COLUMN SHIFT - 13/32 ID X 25/32 OD - /ILL. 4-1/
- 69 ALL AT - /ILL. 4-2/
- 70-72 ALL PG

4.037 CLIP, TRANSMISSION CONTROL ROD OR LOCK ROD TO SHIFT LEVERS

- AR 3749084 67-69 ALL AT - /ILL. 4-2/

4.037 GROMMET, TRANSMISSION CONTROL ROD TO LEVER AND BRACKET

- 1 3833107 67 ALL - WITH FLOOR SHIFT

4.037 GROMMET, TRANSMISSION CONTROL ROD TO RANGE SELECTOR OUTER LEVER

- 1 3833107 67 ALL - WITH FLOOR SHIFT - /ILL. 4-1/

4.037 GROMMET, TRANSMISSION CONTROL UPPER ROD TO STEERING COLUMN

- 1 3852837 67-69 ALL AT - WITH COLUMN SHIFT - /ILL. 4-1/

4.037 GROMMET, TRANSMISSION GEARSHIFT CONTROL ROD TO GEARSHIFT LEVERS

- AR 3975131 67-68 ALL AT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69-70 ALL AT - /ILL. 4-1/ /SUP 3833108/
- AR 3975131 71-72 ALL PG

4.037 GROMMET, UPPER LOCK ROD TO LEVER

- 1 3975131 69-70 ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/ /SUP 3833108/
- 1 3975131 71 ALL PG W/FLOOR SHIFT

4.037 NUT, TRANSMISSION LOW BAND ANCHOR ADJUSTING SCREW

- AR 3840137 70-72 ALL PG - 7/16-20

4.037 SCREW, TRANSMISSION CONTROL ROD TO IDLER LEVER

- AR 3989433 72 ALL

4.037 SLEEVE, TRANSMISSION GEARSHIFT CONTROL ROD TO LEVERS

- 1 3852838 67-69 ALL AT - WITH COLUMN SHIFT - 5/16 ID X 7/16 OD X 3/8 LG - /ILL. 4-1/
- 1 1394293 70-71 ALL AT /SUP 1385890/

4.037 SWIVEL, TRANSMISSION CONTROL ROD OR LOCK ROD

- AR 382104 67-68 ALL AT - WITH COLUMN SHIFT - 3/8-16 X 1-1/2 LG - /ILL. 4-1/
- 69 ALL AT - /ILL. 4-2/
- 1 1385607 70-72 PG - TO IDLER LEVERS
- AR 382104 72 ALL PG - 3/8-16 X 1-1/2

4.037 TRUNNION, TRANSMISSION CONTROL ROD TO RANGE SELECTOR OUTER LEVER

- 1 9786896 67 ALL - WITH FLOOR SHIFT - /ILL. 4-1/

4.037 WASHER, TRANSMISSION CONTROL ROD LEVER TO LEVER

- 1 9415113 67 ALL - WITH FLOOR SHIFT - 5/8 ID X 15/16 OD WAVE - /ILL. 4-1/

4.037 WASHER, TRANSMISSION CONTROL RODS OR LOCK ROD TO COLUMN AND LEVERS

- 1 580379 67-68 ALL AT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69 ALL AT - /ILL. 4-2/
- 70-72 ALL PG

4.040 BRACKET, TRANSMISSION EQUALIZER SHAFT TO FRAME

- 1 3998691 70-72 ALL PG - NOTE. WHEN USING ON 1970-71 DISCARD ATTACHING SCREW /SUP 3982394/

4.040 BUSHING, TRANSMISSION CONTROL OR LOCK ROD IDLER LEVER TO SUPPORT

- 2 3792168 67-68 ALL AT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69 ALL AT - /ILL. 4-2/

4.040 BUSHING, TRANSMISSION EQUALIZER SHAFT TO EQUALIZER

- 1 1377083 70-72 ALL PG

4.040 BUSHING, TRANSMISSION EQUALIZER SHAFT PIVOT

- 1 1377083 70-72 ALL PG

4.040 LEVER, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER

- 1 3895290 67-68 ALL AT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69 ALL AT - /ILL. 4-2/
- 1 3975632 70-72 ALL PG

- 4.040 LOCK, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER**
- 1 3685801 67-68 ALL AT - WITH COLUMN SHIFT - 13/16 OD - /ILL. 4-1/
69 ALL AT - /ILL. 4-2/
- 4.040 NUT, TRANSMISSION IDLER LEVER SUPPORT TO FRAME**
- 3 3792287 67 ALL AT - 5/16-18 - /ILL. 4-1/
- 4.040 SPRING, TRANSMISSION EQUALIZER SHAFT ANTI RATTLE**
- 1 1380549 70-71 ALL PG
- 4.040 SUPPORT, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER**
- 1 3895291 67-68 ALL AT - WITH COLUMN SHIFT - /ILL. 4-1/
69 ALL AT - /ILL. 4-2/
- 4.045 LEVER, TRANSMISSION RANGE SELECTOR**
- 1 9777797 67-69 ALL AT - WITH COLUMN SHIFT - OUTER - /ILL. 4-2/
1 N.L.A. 67 ALL AT - WITH FLOOR SHIFT - OUTER - /ILL. 4-2/ /SUP 9777743/
1 9794309 68 ALL AT - WITH FLOOR SHIFT - OUTER - /ILL. 4-2/ /SUP 9793194/
1 9795328 69 ALL AT - WITH FLOOR SHIFT - OUTER - /ILL. 4-2/
1 3982395 70-72 ALL PG COLUMN SHIFT - OUTER
1 481222 70-72 ALL PG FLOOR SHIFT - OUTER
- 4.046 NUT, TRANSMISSION RANGE SELECTOR LEVER**
- 1 3952675 70-71 PG - TO TRANSMISSION
- 4.047 BOLT, TRANSMISSION CONTROL CABLE LOWER BRACKET TO TRANSMISSION**
- 1 9794953 69 ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/
- 4.047 BRACKET, TRANSMISSION CONTROL CABLE MOUNTING**
- 1 481221 70-72 ALL PG FLOOR SHIFT - LOWER
- 4.047 CABLE ASSEMBLY, TRANSMISSION CONTROL**
- 1 9794252 68-69 ALL AT - WITH FLOOR SHIFT - INCLUDES SEAL - /ILL. 4-1/ /SUP 9793277/
1 481220 70-72 ALL PG FLOOR SHIFT - INCL SEAL
- 4.047 PIN, TRANSMISSION CONTROL CABLE**
- 1 3998634 68-69 ALL AT - WITH FLOOR SHIFT - TO SHAFT - /ILL. 4-2/ /SUP 9791366/
1 9791327 68-69 ALL AT - WITH FLOOR SHIFT - TO SHIFTER - 1/4 X 1/2 CLEVIS - /ILL. 4-2/
1 9779348 68-69 ALL AT - WITH FLOOR SHIFT - TO RANGE SELECTOR LEVER - /ILL. 4-2/ NOTE. ALSO PURCHASE AND INSTALL WASHER - 3718496 AND COTTER PIN - 107762
1 9791327 70-72 ALL PG FLOOR SHIFT - TO SHIFTER
1 3998634 70-71 PG FLOOR SHIFT - TO SHIFTER /SUP 9791366/

- 4.047 PIN, TRANSMISSION CONTROL CABLE**
(Cont'd)
- 1 9779348 70-72 PG FLOOR SHIFT - TO RANGE SELECTOR LEVER NOTE. ALSO PURCHASE AND INSTALL WASHER - 3718496 AND COTTER PIN - 107762
- 4.047 RETAINER, TRANSMISSION CONTROL CABLE LEVER AND BRACKET SEAL**
- 1 478841 70-72 ALL PG FLOOR SHIFT
- 4.047 SEAL, TRANSMISSION GEARSHIFT CONTROL CABLE**
- 1 9793261 68-69 ALL AT - WITH FLOOR SHIFT - /ILL. 4-2/
1 478840 70-72 ALL PG FLOOR SHIFT
- 4.047 YOKE, TRANSMISSION CONTROL CABLE TO MOUNTING BRACKET**
- 2 334961 67-69 ALL AT - WITH FLOOR SHIFT - /ILL. 4-2/
70-72 ALL PG FLOOR SHIFT /SUP 476737/
- 4.050 BRACKET, TRANSMISSION THROTTLE VALVE RETURN SPRING**
- 1 479907 70-71 8 CYL PG
- 4.050 CROSS SHAFT ASSEMBLY, TRANSMISSION THROTTLE CONTROL VALVE**
- 1 482738 70-71 8 CYL PG - INCL BRACKET / SUP 480848/
1 485892 72 8 CYL PG - INCL BRACKET
- 4.050 LEVER, TRANSMISSION THROTTLE VALVE CONTROL**
- 1 3952617 70-71 ALL PG - LOWER
1 3972248 70-72 6 CYL PG
- 4.050 ROD ASSEMBLY, TRANSMISSION THROTTLE VALVE CONTROL**
- 1 3901360 70 6 CYL PG
1 480092 70-72 8 CYL PG - TO BRACKET
1 482737 71 PG
1 485893 72 8 CYL PG - BRACKET TO CARB
- 4.050 ROD, TRANSMISSION THROTTLE VALVE CONTROL CROSS SHAFT**
- 1 482737 70 8 CYL PG /SUP 478727/
- 4.050 SHAFT, TRANSMISSION THROTTLE VALVE CONTROL**
- 1 3952672 70-72 ALL PG
- 4.052 NUT, TRANSMISSION THROTTLE VALVE ROD**
- 1 3952673 70-71 PG
- 4.052 SPRING, TRANSMISSION THROTTLE VALVE ROD**
- 1 3953208 70-72 6 CYL PG
1 3949060 70-72 8 CYL PG
- 4.052 WASHER, TRANSMISSION THROTTLE VALVE CONTROL CROSS SHAFT**
- 1 3978774 70-72 ALL PG
- 4.054 LEVER, TRANSMISSION NEUTRAL SAFETY SWITCH**
- 1 3895280 67 ALL AT - WITH FLOOR SHIFT - /ILL. 4-1/

- 4.054 SCREW, TRANSMISSION NEUTRAL AND BACK UP LAMP SWITCH TO COLUMN**
- 2 7806573 69 ALL AT - #8-18 X 1/4 /SUP 7808133/
- 4.054 SWITCH ASSEMBLY, TRANSMISSION NEUTRALIZER AND BACK UP LAMP**
- 1 9777866 67 ALL AT - WITH FLOOR SHIFT - D.L. 2.698 - /ILL. 4-1/
- 1 1993404 67-68 ALL - WITH COLUMN SHIFT / SUP 1993405-1993380/ - D.L. 2.698
- 1 1993422 68 ALL AT - WITH FLOOR SHIFT - D.L. 2.698 - /ILL. 4-1/
- 1 1994158 69-70 ALL AT - D.L. 2.698 /SUP 1993448-1993456/
- 1 1994158 71 ALL AT - D.L. 2.698
- 1 1994158 72 ALL AT - COLUMN SHIFT - EXC SEAT BELT WARNING SYSTEM
- 1 1994154 72 ALL AT - FLOOR SHIFT EXC SEAT BELT WARNING SYSTEM /SUP 1994115/
- 1 1994158 72 ALL AT - WITH SEAT BELT WARNING SYSTEM /SUP 1994133-1994153/
- 4.057 BOOT, TRANSMISSION DOWNSHIFT SWITCH**
- 1 9781103 67-69 ALL AT
- 4.057 BRACKET, TRANSMISSION DOWNSHIFT SWITCH MOUNTING**
- 1 9789008 67-68 ALL 6 CYL - 1BC
- 1 9783592 67-69 ALL 8 CYL - 2BC
- 1 9781104 67 ALL WITH 326 ENGINE - 4BC
- 1 9785906 68 ALL WITH 350 ENGINE - 4BC
- 1 9789008 69 ALL 6 CYL AT
- 4.057 CLIP, TRANSMISSION DOWNSHIFT CONTROL CABLE**
- 1 9795713 69 ALL AT - AND TRANS VACUUM PIPE
- 4.057 CONNECTOR, TRANSMISSION DOWNSHIFT SOLENOID VALVE**
- 1 8626252 67-69 ALL AT - SINGLE MALE - /ILL. 4-1/ /SUP 2984090/
- 4.057 NUT, TRANSMISSION DOWNSHIFT SWITCH AND SPACER TO BRACKET**
- 1 9776110 67-69 ALL AT
- 4.057 SEAL, TRANSMISSION VACUUM MODULATOR TO CASE**
- SEE GROUP 4.205
- 4.057 SPACER, TRANSMISSION DOWNSHIFT SWITCH MOUNTING**
- 1 9775940 67-69 ALL AT
- 4.057 SWITCH ASSEMBLY, TRANSMISSION DOWNSHIFT CONTROL**
- 1 9785545 67-69 ALL AT /SUP -9785546-/
- 4.060 CLIP, TRANSMISSION DOWNSHIFT LEAD**
- 1 9787673 67-69 ALL AT
- 4.067 SHIELD, TRANSMISSION CONTROL SPLASH**
- 1 N.L.A. 67-68 ALL AT - WITH COLUMN SHIFT - ATTACH WITH IDLER SUPPORT BOLTS - /ILL. 4-1/ /SUP 9792574/

- 4.067 SHIELD, TRANSMISSION CONTROL SPLASH (Cont'd)**
- 1 9798982 69 ALL AT - WITH FLOOR SHIFT
- 4.075 BRACKET, TRANSMISSION CONTROLLED SPARK SWITCH MOUNTING**
- 1 487162 72 PG
- 4.075 RELAY, TRANSMISSION CONTROL SPARK**
- 1 3990843 71 6 CYL PG - DELAY
- 1 3990842 71 6 CYL PG - REVERSING
- 1 3996296 72 6 CYL ENG PG - DELAY
- 4.075 SWITCH, TRANSMISSION CONTROLLED SPARK**
- 1 6462514 70 6 CYL PG /SUP 6462655/
- 1 6462514 70 8 CYL PG
- 71 PG
- 1 3996287 72 6 CYL ENG PG
- 1 486978 72 8 CYL ENG PG
- 4.081 MOUNTING ASSEMBLY, TRANSMISSION SUPPORT**
- 1 3913498 67-69 ALL AT
- 70-72 ALL PG /SUP 3792133/
- 4.081 SUPPORT ASSEMBLY, TRANSMISSION**
- MOVED TO GROUP 7.011 AND NAME CHANGED TO CROSSMEMBER
- 4.083 WEIGHT, DRIVE LINE DAMPER**
- 1 9789563 67-69 ALL 6 CYL AT
- 4.085 WASHER, TRANSMISSION SUPPORT MOUNTING TO BRACKET**
- 2 3818180 67-69 ALL AT - 15/32 X 1-1/4 X 3/16 THICK
- 70 ALL PG - 15/32 X 1-1/4 X 3/16 THICK
- 4.103 CASE ASSEMBLY, TRANSMISSION**
- 1 N.L.A. 67 ALL 6 CYL - 1BC
- 67 ALL 6 CYL - 4BC - WITH AIR COND /SUP 1378891/
- 1 1378888 67 ALL 6 CYL - 4BC - EXC AIR COND /SUP 1381305/
- 1 1378888 67 ALL 8 CYL
- 1 1378888 68 ALL 6 CYL - 1BC
- 68 ALL 6 CYL - 4BC - WITH AIR COND
- 1 1378888 68 ALL 8 CYL
- 68 ALL 6 CYL - 4BC - EXC AIR COND /SUP 1381306/
- 1 1378888 69 ALL AT
- 1 3981855 70-72 6 CYL PG - SEE NOTE
- 1 478627 70-72 8 CYL PG - INCL BUSHINGS / SUP 480112/
- NOTE. WHEN USING ON SOME 1971 JOBS, IT MAY BE NECESSARY TO REMOVE LEFT REAR MACHINING LUG TO ACHIEVE UNDERBODY CLEARANCE.*
- 4.104 BUSHING, TRANSMISSION CASE TO OUTPUT SHAFT**
- 1 1367730 67-69 ALL AT - /ILL. 4-1/
- 1 3789009 70-72 ALL PG
- 4.104 PIPE ASSEMBLY, TRANSMISSION VENT**
- 1 1375830 67-69 ALL AT
- 4.104 SEAL, TRANSMISSION DETENT CONTROL CABLE**
- 1 6264901 75-76 ALL WITH TH350 -O- RING

FIREBIRD

4.105 BAFFLE, OIL DRAIN BACK

1 3816920 70-72 ALL PG

4.105 SCREEN ASSEMBLY, TRANSMISSION CASE

1 3921124 70-72 ALL PG

4.115 BOLT, TRANSMISSION CONVERTER TO FLYWHEEL

3 3987930 67-69 ALL AT /SUP 1362977/

2 3799830 70 ALL PG

AR 3987930 71-72 ALL PG

4.115 CONVERTER PACKAGE, TRANSMISSION / REBUILT/

1 1378055 67 ALL 6 CYL /SUP 9776990/

1 9776991 67-69 ALL 8 CYL AT

1 9792251 68 ALL 6 CYL

1 1394144 69 ALL 6 CYL AT

1 3964587 70 6 CYL PG

1 3852880 70 8 CYL PG

1 3998276 71-72 6 CYL PG

1 3991015 71-72 8 CYL PG

4.115 SCREW, TRANSMISSION CONVERTER COVER PAN TO CASE

1 9784860 67-72 ALL AT, PG OR HT - NO. 12-11 X 1

AR 6261376 70-72 6 CYL PG OR HT - 1/4-20 X 7/8 - INCLUDES WASHER

4.115 SPACER, TRANSMISSION CONVERTER TO CRANKSHAFT

1 1362702 67-69 ALL AT

70 ALL PG

4.115 UNDERPAN, TRANSMISSION CONVERTER

NOTE. REFER TO GROUP 0.679.

4.123 RING, TRANSMISSION INPUT SHAFT OIL

2 1367471 67-69 ALL AT

2 3817715 70-72 ALL PG

4.123 SHAFT ASSEMBLY, TRANSMISSION INPUT

1 1378287 67 ALL

1 1378273 68-69 ALL AT - SEE NOTE /SUP 1384601/

1 3950385 70 ALL PG

71-72 8 CYL PG

1 3946732 71-72 6 CYL PG

NOTE. USED TO SERVICE JOBS WITH 2 SEAL RINGS AND A MAINSHAFT - 3 OIL SEAL RINGS MUST BE USED FOR SERVICE.

4.128 BRACKET, TRANSMISSION OIL COOLER PIPES

1 3945470 70-71 6 CYL PG

4.128 CLAMP, TRANSMISSION OIL COOLER PIPE

1 3998687 72 6 CYL

4.128 CLIP, TRANSMISSION OIL COOLER PIPES

2 3710497 67-70 ALL 8 CYL

1 9799713 68-69 6 CYL /SUP 9774975/

1 3945472 70-71 6 CYL

2 3710497 72 ALL 8 CYL

4.128 CONNECTOR, TRANSMISSION OIL COOLER PIPES TO TRANSMISSION

2 386297 67-69 ALL AT - 5/16 IN

4.128 GASKET, TRANSMISSION OIL COOLER LINES TO CONNECTOR

2 8625422 67-69 AT /SUP 1194600/

4.128 PIPE, TRANSMISSION OIL COOLER

1 N.L.A. 70-71 6 CYL PG - OUTLET /SUP 481656/

1 N.L.A. 70-71 8 CYL PG - OUTLET /SUP 481652/

NOTE. FOR MODELS NOT SHOWN USE BULK TUBING - STD. STK. CAT. GROUP 8.964.

4.128 SPACER, TRANSMISSION OIL COOLER PIPES

1 3945475 70-71 6 CYL PG

4.133 PIPE ASSEMBLY, TRANSMISSION OIL FILLER

1 N.L.A. 67 ALL /SUP 9789141/

1 9793057 68-69 ALL AT

1 3789688 70 6 CYL PG /SUP 3974425/

1 478363 70-72 8 CYL PG

4.133 ROD ASSEMBLY, TRANSMISSION OIL INDICATOR

1 1361594 67 ALL

1 1383413 68 ALL

1 1239014 69-72 ALL AT OR PG /SUP 1387568/

4.133 SEAL, TRANSMISSION OIL FILLER TO CASE

1 6264902 67-69 ALL AT
70-72 ALL PG /SUP 6255641/

4.162 BEARING ASSEMBLY, TRANSMISSION LOW SUN GEAR NEEDLE

1 3771838 70-72 ALL PG - THRUST

4.162 BUSHING, TRANSMISSION LOW SUN GEAR

1 1381366 67-69 ALL AT - /ILL. 4-1/

4.162 GEAR AND FLANGE ASSEMBLY, TRANSMISSION HIGH CLUTCH LOW SUN

1 1364366 67-69 ALL - /ILL. 4-1/

1 3843443 70 ALL PG

71-72 8 CYL PG

1 3854333 71-72 6 CYL PG

4.162 WASHER PACKAGE, TRANSMISSION LOW SUN GEAR

1 3758781 70-72 ALL PG - INCL BUSHING

4.163 PLATE, TRANSMISSION FORWARD CLUTCH

AR 3779904 70-72 ALL PG - DRIVE

5 3783287 70-72 6 CYL PG - DRIVEN

5 3883903 70-72 8 CYL PG - DRIVEN - .060 THICK

AR 3883904 70-72 8 CYL PG - DRIVEN - .090 THICK

4.163 PLATE, TRANSMISSION HIGH CLUTCH

5 1373575 67-69 ALL AT - DRIVE - /ILL. 4-1/

6 3783287 67-69 ALL AT - DRIVEN - /ILL. 4-1/

4.163 PLATE, TRANSMISSION REVERSE CLUTCH

AR 1375558 67-69 ALL AT - DRIVE - /ILL. 4-1/

AR 1379373 67-69 ALL AT - REACTION - /ILL. 4-1/

1 6257025 67-69 ALL AT - PRESSURE - .326-.316 THICK - IDENT 1 MARK - /ILL. 4-1/

4.163 PLATE, TRANSMISSION REVERSE CLUTCH (Cont'd)

1	6257025	70-72	ALL PG
4	3832386	70-72	ALL PG - DRIVE /SUP 6260151/
4	1379373	70-72	ALL PG - REACTION
1	6257025	70-71	ALL PG - PRESSURE - .326-.316 THICK - IDENT 1 MARK

4.164 CLUTCH ASSEMBLY, TRANSMISSION

1	3901122	70	6 CYL PG
1	3901124	70-72	8 CYL PG
1	3901121	71-72	6 CYL PG

4.164 HUB, TRANSMISSION HIGH CLUTCH

1	1380015	67-69	ALL AT - /ILL. 4-1/
1	3792701	70-72	6 CYL PG
1	3826047	70-72	8 CYL PG

4.164 RETAINER, TRANSMISSION HIGH CLUTCH PISTON RETURN SPRING

1	6261041	67-69	AT
		70-72	PG /SUP 3779908/

4.164 RING, TRANSMISSION HIGH CLUTCH

1	3779911	67-69	ALL AT - FLANGE THRUST RETAINER - /ILL. 4-1/
		70-72	ALL PG - FLANGE THRUST RETAINER
1	6255698	67-69	ALL AT - PISTON RETURN - / ILL. 4-1/
		70-72	ALL PG - PISTON RETURN

4.164 RING, TRANSMISSION REVERSE CLUTCH

1	3796576	67-69	ALL AT - SNAP - /ILL. 4-1/
		70-72	ALL PG - SNAP

4.164 SEAT, TRANSMISSION HIGH CLUTCH SPRING

1	3789072	67-69	ALL AT - /ILL. 4-1/
		70-72	ALL PG

4.164 SEAT, TRANSMISSION REVERSE CLUTCH PISTON RETURN

1	3789062	67-69	AT
		70-72	PG /SUP 1362452/

4.164 SPRING, TRANSMISSION FORWARD CLUTCH CUSHION

1	3862232	70-72	PG
---	---------	-------	----

4.164 SPRING, TRANSMISSION HIGH CLUTCH

24	1365153	67-69	ALL AT - /ILL. 4-1/
24	3783288	70-72	ALL PG

4.164 SPRING, TRANSMISSION REVERSE CLUTCH PISTON CUSHION

1	3845858	70-72	ALL PG
---	---------	-------	--------

4.164 SPRING, TRANSMISSION REVERSE CLUTCH PISTON RETURN

17	3789061	67-69	ALL AT - /ILL. 4-1/
		70-72	ALL PG

4.164 WASHER, TRANSMISSION HIGH CLUTCH HUB

1	3783286	67-69	ALL AT - REAR - THRUST - / ILL. 4-1/
		70-72	ALL PG - REAR THRUST
1	1377665	67-69	ALL AT - FRONT - THRUST - / ILL. 4-1/

4.166 CUSHION, TRANSMISSION REVERSE CLUTCH

1	1371859	67-69	ALL AT - /ILL. 4-1/
---	---------	-------	---------------------

4.166 PISTON, TRANSMISSION REVERSE CLUTCH

1	1371899	67-69	ALL AT 6 CYL - /ILL. 4-1/
1	1371900	67-69	ALL AT 8 CYL - /ILL. 4-1/
1	3845857	70-72	ALL PG

4.166 PISTON AND CUSHION ASSEMBLY, TRANSMISSION HIGH CLUTCH

1	1394283	67-69	ALL AT 6 CYL - /ILL. 4-1/ /SUP 1378662/
1	1394284	67-69	ALL AT 8 CYL - /ILL. 4-1/ /SUP -1378663-/
1	3844206	70-72	6 CYL PG
1	3883902	70-72	8 CYL PG

4.166 SEAL, TRANSMISSION HIGH CLUTCH PISTON OIL

1	1356811	67-69	ALL AT - INNER - /ILL. 4-1/
1	1362832	67-69	ALL AT - OUTER - /ILL. 4-1/

4.166 SEAL PACKAGE, TRANSMISSION CLUTCH

1	3794123	70-72	ALL PG - INNER AND OUTER SEALS
---	---------	-------	-----------------------------------

4.166 SEAL PACKAGE, TRANSMISSION REVERSE CLUTCH PISTON

1	3799008	67-69	ALL AT - /ILL. 4-1/
		70-72	ALL PG

4.169 BUSHING, TRANSMISSION HIGH CLUTCH DRUM

1	3840760	67-69	ALL AT - /ILL. 4-1/
		70-72	ALL PG

4.169 DRUM AND BUSHING ASSEMBLY, TRANSMISSION HIGH CLUTCH

1	1361823	67-69	ALL AT - /ILL. 4-1/
1	3844252	70-72	ALL PG

4.169 RING, TRANSMISSION CLUTCH DRUM OIL SEAL

2	3689808	67-69	ALL AT - /ILL. 4-1/
		70-72	ALL PG

4.169 WASHER, TRANSMISSION CLUTCH DRUM THRUST

AR	3845835	70-72	ALL PG - .061 THICK
AR	3845836	70-72	ALL PG - .078 THICK
AR	3845837	70-72	ALL PG - .092 THICK
AR	3845838	70-72	ALL PG - .106 THICK

4.169 WASHER, TRANSMISSION CLUTCH HUB THRUST

1	3783285	70-72	ALL PG - FRONT
---	---------	-------	----------------

4.169 WASHER, TRANSMISSION PUMP COVER TO HIGH CLUTCH DRUM THRUST

AR	1356904	67-69	ALL AT - .063-.059 - /ILL. 4-1/
AR	1356905	67-69	ALL AT - .081-.077 - /ILL. 4-1/
AR	1356906	67-69	ALL AT - .099-.095 - /ILL. 4-1/

4.175 CARRIER, TRANSMISSION PLANET /WITH OUTPUT SHAFT LESS GEARS, SHAFT AND PINION/

1	1380232	67-69	ALL AT - /ILL. 4-1/
1	3920786	70	ALL PG
		71-72	ALL PG - V-8
1	3920785	71-72	6 CYL PG

4.175 GEAR, TRANSMISSION PLANET INPUT SUN

1	1364346	67-69	ALL AT - /ILL. 4-1/
1	3756797	71-72	PG

- 4.175 PINION, TRANSMISSION PLANET**
 3 1364347 67-69 ALL AT - SHORT - /ILL. 4-1/
 3 1364345 67-69 ALL AT - LONG - /ILL. 4-1/
 3 3790163 71-72 ALL 6 CYL - PG - SHORT
- 4.175 SHAFT, TRANSMISSION PLANET PINION**
 3 1356730 67-69 ALL AT - SHORT - /ILL. 4-1/
 3 1362449 67-69 ALL AT - LONG - /ILL. 4-1/
 6 3694427 71-72 ALL PG - USED W/SMALL
 GEAR SET
 3 3790164 71-72 ALL PG - LONG
- 4.176 BEARING, TRANSMISSION LOW SUN
 GEAR NEEDLE THRUST**
 1 3818528 67-69 ALL AT - /ILL. 4-1/
- 4.176 BEARING ASSEMBLY, TRANSMISSION
 OUTPUT SHAFT NEEDLE THRUST**
 1 3742922 70-72 ALL PG
- 4.176 BEARING, TRANSMISSION PLANET
 CARRIER TO CASE NEEDLE**
 1 1194558 67-69 ALL AT - /ILL. 4-1/
- 4.176 BEARING KIT, TRANSMISSION PLANET
 PINION**
 1 1396533 67-69 ALL AT - /ILL. 4-1/
 1 7450410 71-72 ALL PG - NEEDLE - INCL 240 -
 USED W/SMALL GEAR
- 4.176 BUSHING, TRANSMISSION OUTPUT
 SHAFT**
 1 3789034 67-69 ALL AT - /ILL. 4-1/
 70-72 ALL PG
- 4.176 PLATE, TRANSMISSION PLANET PINION
 SHAFT LOCK**
 1 1359724 67-69 ALL AT - /ILL. 4-1/
 1 3694428 71-72 ALL PG - USED W/SMALL
 GEAR SET
- 4.176 RACE, TRANSMISSION PLANET CARRIER
 TO CASE THRUST BEARING**
 1 1366680 67-69 ALL AT - 1-1/2 ID X 2-5/32 OD
 - /ILL. 4-1/
 1 1366679 67-69 ALL AT - 1-9/16 ID X 2-11/64
 OD - /ILL. 4-1/
- 4.176 SCREW AND LOCKWASHER,
 TRANSMISSION PLANET PINION LOCK
 PLATE**
 3 1368715 67-69 ALL AT - /ILL. 4-1/
 3 3694432 71-72 ALL PG
- 4.176 SPACER, TRANSMISSION PLANET PINION
 BEARING**
 3 1378051 67 ALL - THICK - /ILL. 4-1/ /SUP
 1356750/
 AR 3789037 67-69 ALL AT - THIN - /ILL. 4-1/
 70 ALL PG - THIN
 3 1378051 68-69 ALL AT - THICK - /ILL. 4-1/
 70 ALL PG - THICK
 18 3790162 71-72 ALL 6 CYL PG - USED WITH
 SMALL GEAR SET
- 4.176 WASHER, TRANSMISSION INPUT SUN
 GEAR TO CARRIER THRUST**
 1 1373336 67-69 ALL AT - 1-29/32 OD - /ILL. 4-
 1/
 3 1373337 67-69 ALL AT - REAR - 1-27/32 OD -
 /ILL. 4-1/

- 4.176 WASHER, TRANSMISSION INPUT SUN
 GEAR THRUST**
 1 3689834 70-72 ALL PG
- 4.176 WASHER, TRANSMISSION PLANET PINION
 THRUST**
 3 3789036 67-69 ALL AT - FRONT - /ILL. 4-1/
 70 ALL PG - FRONT
 3 3789035 67-69 ALL AT - REAR - 1-5/32 OD - /
 ILL. 4-1/
 70 ALL PG - REAR - 1-5/32 OD
 6 3790777 71-72 6 CYL PG
- 4.190 GEAR, TRANSMISSION REVERSE RING**
 1 1364348 67-69 ALL AT - /ILL. 4-2/
 1 3843441 70 ALL PG
 71-72 ALL V-8 PG
 1 3790168 71-72 ALL 6 CYL PG
- 4.195 GASKET, TRANSMISSION OIL PAN DRAIN
 SCREW**
 1 3921989 71-72 PG - 1/2 X 11/32 OD - NYLON
- 4.195 PAN, TRANSMISSION OIL**
 1 1378881 67-69 ALL AT - /ILL. 4-1/
 1 3789146 70-72 ALL PG
- 4.195 SCREW, TRANSMISSION OIL PAN DRAIN**
 1 3923420 70-71 ALL PG
- 4.196 GASKET, TRANSMISSION CASE OIL PAN**
 1 1376720 67-69 ALL AT - /ILL. 4-1/
 1 3789148 70-72 ALL PG
- 4.196 SCREW AND CONICAL WASHER,
 TRANSMISSION OIL PAN TO CASE**
 14 3829139 67-69 ALL AT - 5/16-18 X 5/8
 14 3829139 70 ALL PG - 5/16-18 X 5/8
- 4.197 GASKET, TRANSMISSION OIL PUMP
 SUCTION SCREEN**
 1 3795990 70-72 ALL PG
- 4.197 SCREEN ASSEMBLY, TRANSMISSION OIL
 PUMP SUCTION**
 1 6263005 70-72 PG - INCL GASKET /SUP
 3849968/
- 4.197 SEAL, TRANSMISSION OIL SUCTION PIPE
 TO CASE OIL**
 1 1363951 67-69 ALL AT - /ILL. 4-1/
- 4.197 STRAINER, TRANSMISSION OIL**
 1 6438817 67-69 ALL AT /SUP 1374649/ - /ILL.
 4-1/
- 4.203 GASKET, TRANSMISSION FRONT OIL
 PUMP BODY**
 1 3789022 70-72 ALL PG
- 4.203 VALVE PACKAGE, TRANSMISSION OIL
 PUMP PRIMING**
 1 3871500 70-72 ALL PG
- 4.205 CLIP, TRANSMISSION VACUUM PIPE TO
 FLYWHEEL HOUSING**
 1 9795713 67-68 ALL /SUP 9777821/
 1 488175 70-72 8 CYL PG /SUP 479209/
- 4.205 GASKET, TRANSMISSION VACUUM
 MODULATOR**
 1 6257218 70-72 ALL PG

4.205 MODULATOR ASSEMBLY, TRANSMISSION VACUUM

- 1 3027222 67-69 AT /SUP 1394524-1394527-8625976/
- 1 5638205 70-72 PG /SUP 3905487/

4.205 PIPE, CARBURETOR TO TRANSMISSION VACUUM

- 1 9792209 68-69 ALL AT 8 CYL - 2BC
- 1 3937972 70-72 6 CYL PG
- 1 479113 70-71 8 CYL PG

4.205 PLUNGER, TRANSMISSION VACUUM MODULATOR

- 1 3830311 70-72 ALL PG

4.205 RETAINER, TRANSMISSION VACUUM MODULATOR

- 1 1357282 67-69 ALL AT - /ILL. 4-1/

4.205 SEAL, TRANSMISSION MODULATOR TO CASE OIL

- AR 6264903 67-69 ALL AT - /ILL. 4-1/ /SUP 1174637-8619568-3708146/

4.205 SPRING, VACUUM MODULATOR DAMPING

- 1 3839599 70-72 ALL PG

4.205 TUBE, VACUUM PIPE TO TRANSMISSION

- AR 3987364 67-69 ALL AT 70-72 ALL PG /SUP 541524/

4.205 VALVE, TRANSMISSION MODULATOR VACUUM

- 1 1364808 67-69 ALL AT - FRONT - /ILL. 4-1/
- 1 1363090 67-69 ALL AT - REAR - /ILL. 4-1/
- 1 3830276 70 ALL PG - FIRST JOBS - NO RING GROOVE ON SECOND UNGROUND LAND
- 1 3847870 70 PG - SECOND JOBS - HAS RING GROOVE ON SECOND UNGROUND LAND
- 1 3830276 71-72 8 CYL PG 71-72 6 CYL PG

4.212 COVER, TRANSMISSION LOW SERVO

- 1 1372028 67-69 ALL AT - /ILL. 4-1/
- 1 3789085 70-72 ALL PG

4.212 GASKET, TRANSMISSION LOW SERVO COVER

- 1 3789086 70-72 ALL PG

4.212 SEAL, TRANSMISSION LOW SERVO COVER

- 1 3789087 70-72 ALL PG

4.215 PLATE, TRANSMISSION VALVE BODY TRANSFER

- 1 3981739 70-72 8 CYL PG - GASKETS BONDED TO PLATE - DISCARD OLD GASKETS
- 1 3981738 70-72 6 CYL PG /SUP 3968096/

4.216 BODY, TRANSMISSION VALVE

- 1 3968062 70 6 CYL PG - COMPLETE
- 1 3968063 70 8 CYL PG - COMPLETE
- 1 3968067 70 6 CYL PG - UPPER
- 1 3968071 70-72 6 CYL PG - LOWER
- 1 3968069 70 8 CYL PG - UPPER - FIRST TYPE - SEE NOTE A
- 1 3968073 70 8 CYL PG - LOWER - FIRST TYPE - SEE NOTE A

4.216 BODY, TRANSMISSION VALVE (Cont'd)

- 1 3993002 70 8 CYL PG - UPPER VALVE - SECOND TYPE - SEE NOTE B /SUP 3981758/
- 1 3981743 70 8 CYL PG - LOWER VALVE - SECOND TYPE - SEE NOTE B 71-72 8 CYL PG - LOWER
- 1 3992998 71-72 6 CYL PG - UPPER
- 1 3993002 71-72 8 CYL PG - UPPER
- 1 3987996 71-72 6 CYL PG - COMPLETE
- 1 3993001 71-72 8 CYL PG - COMPLETE

NOTE A. FIRST TYPE - VACUUM MODULATOR VALVE DOES NOT HAVE RING GROOVE ON SECOND UNGROUND LAND.

NOTE B. SECOND TYPE - VACUUM MODULATOR VALVE HAS RING GROOVE ON SECOND UNGROUND LAND.

4.216 BRACKET, TRANSMISSION DOWNSHIFT SWITCH MOUNTING

MOVED TO GROUP 4.057

4.216 PIN, TRANSMISSION CONVERTER PRESSURE RELIEF VALVE SPRING RETAINER

- 1 9414193 68-69 ALL AT - STRAIGHT /SUP 1374594/

4.216 RING, TRANSMISSION PRESSURE REGULATOR VALVE INNER SEAT

- 1 3744352 70-72 ALL PG

4.216 RING, TRANSMISSION REVERSE AND MODULATOR VALVE SLEEVE

- 1 274613 67 ALL

4.216 RING, VALVE BODY SHIFT VALVE PLUG SLEEVE

- 1 9411820 70 ALL PG - INTERNAL - 1-1/16 BORE

4.216 SEAL, TRANSMISSION DOWNSHIFT SOLENOID VALVE CONNECTOR

- 1 6264903 69 ALL AT /SUP 8619568-3708146/ - /ILL. 4-1/

4.216 SEAT, TRANSMISSION OIL COOLER BY PASS VALVE

- 2 3844043 67 ALL - /ILL. 4-1/

4.216 SLEEVE, TRANSMISSION HYDRAULIC MODULATOR VALVE

- 1 3792250 70-72 6 CYL PG

4.216 SPACER, TRANSMISSION PRESSURE REGULATOR VALVE

- AR 8623368 67-69 ALL AT - /ILL. 4-1/

4.216 SPRING PACKAGE, TRANSMISSION LOW AND DRIVE VALVE

- 1 3977616 70-72 ALL PG

4.216 SPRING, TRANSMISSION OIL COOLER BY PASS VALVE

- 1 8626921 67 ALL - /ILL. 4-1/ /SUP 3789018/

4.216 SPRING, TRANSMISSION OIL PUMP PRESSURE RELIEF VALVE

- 1 1384598 68-69 ALL AT

4.216 SPRING, TRANSMISSION PRESSURE REGULATOR VALVE

- 1 1373576 67-69 ALL AT - /ILL. 4-1/

**4.216 SPRING, TRANSMISSION PRESSURE
REGULATOR VALVE (Cont'd)**

1	3814086	70	PG - FIRST JOBS - SEE NOTE A
1	3981763	70	PG - AFTER JOBS - SEE NOTE B
1	3814086	71-72	PG

NOTE A. FIRST TYPE - VACUUM MODULATOR VALVE DOES NOT HAVE RING GROOVE ON SECOND UNGROUND LAND.

NOTE B. SECOND TYPE - VACUUM MODULATOR VALVE HAS RING GROOVE ON SECOND UNGROUND LAND.

**4.216 STUD, TRANSMISSION PRESSURE
REGULATOR VALVE RETAINER**

1	6256829	70-72	ALL PG
---	---------	-------	--------

**4.216 TUBE, TRANSMISSION SERVO
APPLICATOR PRESSURE**

1	3795898	70-72	ALL PG
---	---------	-------	--------

**4.216 VALVE AND SLEEVE PACKAGE,
TRANSMISSION REVERSE AND
MODULATOR BOOST**

1	230553	67	ALL - /ILL. 4-1/ /SUP 1361192/
1	1394167	68-69	ALL AT - /ILL. 4-1/
1	3900940	70	PG - FIRST TYPE - SEE NOTE A
1	3900938	70	PG - AFTER TYPE - SEE NOTE B
		71-72	8 CYL PG

NOTE A. FIRST TYPE - VACUUM MODULATOR VALVE DOES NOT HAVE RING GROOVE ON SECOND UNGROUND LAND.

NOTE B. SECOND TYPE - VACUUM MODULATOR VALVE HAS RING GROOVE ON SECOND UNGROUND LAND.

4.216 VALVE, DOWNSHIFT TIMING

1	3830128	70-72	PG
---	---------	-------	----

**4.216 VALVE, TRANSMISSION OIL COOLER BY
PASS**

AR	8626921	67	ALL /SUP 3789017/ - /ILL. 4-1/
1	3977543	70-72	8 CYL PG

**4.216 VALVE, TRANSMISSION HYDRAULIC
MODULATOR**

1	3792251	70-72	6 CYL PG
---	---------	-------	----------

**4.216 VALVE, TRANSMISSION PRESSURE
REGULATOR**

1	1385938	67-68	ALL /SUP 1366880/ - /ILL. 4-1/
1	1385938	69	ALL AT

**4.216 VALVE, TRANSMISSION VALVE BODY
MANUAL CONTROL**

1	3925674	70-72	ALL PG
---	---------	-------	--------

**4.216 WASHER, TRANSMISSION PRESSURE
REGULATOR VALVE SPRING**

1	1365196	67-69	ALL AT - /ILL. 4-1/
---	---------	-------	---------------------

**4.217 BOLT, TRANSMISSION VALVE BODY TO
CASE**

6	179823	70-72	PG - 5/16-18 X 1-5/8
---	--------	-------	----------------------

**4.217 GASKET, TRANSMISSION VALVE BODY
PLATE**

1	3840329	70-72	ALL PG - UPPER
---	---------	-------	----------------

**4.217 GASKET, TRANSMISSION VALVE BODY
PLATE (Cont'd)**

2	7420925	70	ALL PG - TRANSFER PLATE - UPPER AND LOWER
---	---------	----	--

**4.217 NUT, TRANSMISSION THROTTLE VALVE
SPRING REGULATING**

1	3767300	70-72	ALL PG
---	---------	-------	--------

**4.217 RING, TRANSMISSION UPPER VALVE
BODY RETAINING**

1	9416713	70-72	ALL PG - 7/32 EXTERNAL
---	---------	-------	------------------------

**4.217 SPRING, TRANSMISSION RANGE
SELECTOR DETENT ROLLER**

1	3839320	70-72	ALL PG
---	---------	-------	--------

**4.218 GUIDE, TRANSMISSION PARK LOCK AND
RANGE SELECTOR INNER LEVER**

1	3813591	70-72	ALL PG
---	---------	-------	--------

**4.218 LEVER ASSEMBLY, TRANSMISSION PARK
LOCK AND RANGE SELECTOR INNER**

1	3824051	70-72	ALL PG
---	---------	-------	--------

**4.218 RETAINER, TRANSMISSION RANGE
SELECTOR DETENT ROLLER SPRING**

1	3789117	70-72	ALL PG
---	---------	-------	--------

**4.218 RING, TRANSMISSION PARK LOCK
ACTUATOR TO INNER LEVER**

1	9411834	70	ALL PG - EXTERNAL - FOR 3/ 16 IN SHAFT GROOVE
---	---------	----	--

**4.218 ROLLER ASSEMBLY, TRANSMISSION
RANGE SELECTOR DETENT**

1	3886200	70-72	ALL PG
---	---------	-------	--------

**4.224 BODY AND GEAR ASSEMBLY,
TRANSMISSION OIL PUMP**

1	1394360	67-69	ALL AT - /ILL. 4-1/ /SUP 1396689/
---	---------	-------	--------------------------------------

**4.224 COVER AND STATOR SHAFT ASSEMBLY,
TRANSMISSION OIL PUMP**

1	1359171	67	ALL
1	1384599	68-69	ALL AT - /ILL. 4-1/
1	3988907	70	6 CYL PG - FIRST TYPE LESS OIL COOLER BY-PASS VALVE /SUP 3950395/
1	3988907	70	6 CYL PG - SECOND TYPE W/ OIL COOLER BY-PASS VALVE
		70	8 CYL PG /SUP 3950391/
1	3988907	71-72	PG

4.224 PUMP ASSEMBLY, TRANSMISSION OIL

1	1359171	67	ALL 6 CYL /SUP 1373453/
1	1359171	67	ALL 8 CYL - 2BC - EXC AIR COND /SUP 1373453/
1	3828786	70-72	ALL PG - LESS COVER <i>NOTE. FOR 1967-69 NOT LISTED ABOVE, SEE COMPONENTS.</i>

**4.226 BALL, TRANSMISSION OIL PUMP COVER
AIR COOLER HOLE**

1	104919	67-69	ALL AT - PLUG /SUP 1382221/
---	--------	-------	-----------------------------

**4.226 BOLT AND WASHER, TRANSMISSION OIL
PUMP TO CASE**

8	6261374	67-69	ALL AT - /ILL. 4-1/ /SUP 1378053/
		70-72	ALL PG

4.226 BUSHING, TRANSMISSION PUMP BODY

1 8623940 67-69 ALL AT - /ILL. 4-1/

4.226 BUSHING, TRANSMISSION STATOR SHAFT

1 1381366 67-68 ALL /SUP 1369758/ - /ILL. 4-1/

4.226 GASKET, TRANSMISSION OIL PUMP COVER TO CASE

1 1374598 67-69 ALL AT - /ILL. 4-1/

4.226 RETAINER, TRANSMISSION LOW SERVO PISTON ROD SPRING

1 3905402 70-72 ALL PG

4.226 SEAL, TRANSMISSION OIL PUMP

1 3789013 70-72 ALL PG

4.226 SEAL, TRANSMISSION OIL PUMP BODY OIL

1 8626916 67-69 ALL AT - /ILL. 4-1/
70-72 ALL PG /SUP 1384746/

4.226 SEAL, TRANSMISSION OIL PUMP TO CASE

1 6261413 67-69 ALL AT /SUP 1357088/ - /ILL. 4-1/

8 3884683 70-72 PG - BOLT SEAL

4.226 SEAL PACKAGE, TRANSMISSION OIL PUMP

1 3886384 70-72 ALL PG - CONSISTS OF 7 BOLT SEALS AND 1 OIL PUMP SEAL

4.228 PISTON, TRANSMISSION LOW SERVO PRIMARY

1 1372055 67 ALL - /ILL. 4-1/

1 1372055 68 ALL - FIRST TYPE - DIE CAST WITH CAST IRON SEAL RING - /ILL. 4-1/

1 1384396 68 ALL - SECOND TYPE - STAMPED WITH BONDED RUBBER LIP SEAL - /ILL. 4-1/

69 ALL AT - /ILL. 4-1/

1 3846173 70-72 ALL PG

4.228 PISTON, SPRING AND RETAINER ASSEMBLY, TRANSMISSION LOW SERVO SECONDARY

1 1396826 67-69 ALL AT - /ILL. 4-1/

4.228 RING, TRANSMISSION LOW SERVO COVER RETAINER

1 1357393 67-69 ALL AT - /ILL. 4-1/

4.228 RING, TRANSMISSION LOW SERVO PISTON

1 3789084 70-72 ALL PG

4.228 RING, TRANSMISSION PRIMARY PISTON OIL SEAL

1 1372058 67 ALL - /ILL. 4-1/
68 ALL - FIRST TYPE - WITH DIE CAST PISTON HAVING CAST IRON SEAL RING - NO SIMILAR PART ON SECOND TYPE - /ILL. 4-1/

4.228 ROD, TRANSMISSION LOW SERVO PISTON

1 1372015 07 ALL - /ILL. 4-1/

1 1372015 68 ALL - FIRST TYPE - WITH DIE CAST PISTON HAVING CAST IRON SEAL RING - /ILL. 4-1/

4.228 ROD, TRANSMISSION LOW SERVO PISTON (Cont'd)

1 1384397 68 ALL - SECOND TYPE - WITH STAMPED PISTON HAVING BONDED RUBBER LIP SEAL - /ILL. 4-1/

69 ALL AT - /ILL. 4-1/

1 3907181 70-72 ALL PG - INCL RETAINER

4.228 SEAL, TRANSMISSION LOW SERVO COVER OIL

1 1191493 67-69 ALL AT - /ILL. 4-1/

4.228 SPRING, TRANSMISSION LOW SERVO PISTON

1 3846166 70-72 ALL PG - APPLY

1 3830235 70-71 ALL PG - RETURN /BLUE/
72 ALL 6 CYL PG - RETURN

1 3815914 72 ALL 8 CYL PG - RETURN

4.228 WASHER, TRANSMISSION LOW SERVO CUSHION SPRING RETAINER

1 446363 67-69 ALL AT /SUP 1372059/ - /ILL. 4-1/

4.228 WASHER, TRANSMISSION LOW SERVO PISTON APPLY

1 3702807 70-72 ALL PG - ON SPRING SEAT

4.229 SEAL, TRANSMISSION LOW SERVO PISTON OIL

1 1356964 67-69 ALL AT - /ILL. 4-1/

4.233 RING, TRANSMISSION LOW SERVO PISTON ROD SNAP

1 8623508 67 ALL - /ILL. 4-1/

1 8623508 68 ALL - FIRST TYPE - WITH DIE CAST PISTON HAVING CAST IRON SEAL RING - /ILL. 4-1/

1 1384398 68 ALL - SECOND TYPE - WITH STAMPED PISTON HAVING BONDED RUBBER LIP SEAL - /ILL. 4-1/

69 ALL AT - /ILL. 4-1/

4.233 SPRING, TRANSMISSION LOW SERVO PRIMARY PISTON CUSHION

1 1372019 67-69 ALL AT - /ILL. 4-1/

4.233 SPRING, TRANSMISSION LOW SERVO PRIMARY PISTON RETURN

1 1372017 67-69 ALL AT - /ILL. 4-1/

4.234 VALVE ASSEMBLY, TRANSMISSION DOWNSHIFT TIMING

1 3829920 67 ALL 6 CYL - 4BC - EXC AIR COND

67-68 ALL 8 CYL - 4BC

67-69 ALL AT 8 CYL - 2BC - WITH AIR COND

4.251 BAND ASSEMBLY, TRANSMISSION LOW BRAKE

1 3883918 67-69 ALL AT - /ILL. 4-1/
70-72 ALL PG

4.252 STRUT, TRANSMISSION LOW BRAKE BAND

1 1362502 67-69 ALL AT - ANCHOR - /ILL. 4-1/

1 1358898 67-69 ALL AT - APPLY - /ILL. 4-1/

1 1362592 70-72 ALL PG - ANCHOR

1 3713613 70-72 ALL PG - APPLY

- 4.253 CAP, TRANSMISSION LOW BRAKE BAND ADJUSTING SCREW**
1 1359440 67-69 ALL AT
- 4.253 NUT, TRANSMISSION LOW BRAKE BAND ANCHOR ADJUSTING SCREW**
1 3840137 70-72 ALL PG
- 4.253 SCREW, TRANSMISSION LOW BRAKE BAND ANCHOR ADJUSTING**
1 1358900 67-69 ALL AT - /ILL. 4-1/
1 3789089 70-72 ALL PG
- 4.256 BODY AND SEAL RING UNIT, TRANSMISSION GOVERNOR SUPPORT**
1 3996642 70-72 PG /SUP 3890522/
- 4.256 BUSHING, TRANSMISSION GOVERNOR SLEEVE**
1 1235259 67-69 ALL AT - BORE
- 4.256 BUSHING, TRANSMISSION GOVERNOR SUPPORT BODY**
1 3789877 70-72 ALL PG
- 4.256 COVER, TRANSMISSION GOVERNOR**
1 1359112 67-69 ALL AT - /ILL. 4-1/
- 4.256 GASKET, TRANSMISSION GOVERNOR COVER**
1 1359113 67-69 ALL AT - /ILL. 4-1/
1 3818935 70-72 ALL PG
- 4.256 GASKET, TRANSMISSION TO GOVERNOR SUPPORT BODY**
1 3890524 70 ALL PG - FIRST JOBS - USED ON JOBS WITHOUT TEFLON SEAL BETWEEN GOVERNOR SUPPORT AND CASE
1 3987943 70 PG - AFTER JOBS - USED ON JOBS WITH TEFLON SEAL BETWEEN GOVERNOR AND SUPPORT
71-72 PG
- 4.256 GEAR AND PIN PACKAGE, TRANSMISSION GOVERNOR DRIVEN**
1 9777310 67-69 ALL - BLUE
1 9777311 67-69 ALL - BROWN
- 4.256 GOVERNOR ASSEMBLY, TRANSMISSION**
1 1377893 67-69 ALL AT 6 CYL
1 6261706 67-69 ALL AT 8 CYL - 2BC /SUP 1374587/
1 1377893 67-68 ALL AT 8 CYL - 4BC - EXC AIR COND
1 6261706 67-68 ALL AT 8 CYL - 4BC - WITH AIR COND /SUP 1374587/
1 3882876 70 6 CYL PG
1 3850510 70 8 CYL PG
1 3987913 71-72 6 CYL PG
1 3850510 71-72 8 CYL PG
- 4.256 RING, TRANSMISSION GOVERNOR HUB OIL**
2 3689808 70-72 ALL PG
- 4.256 RING, TRANSMISSION GOVERNOR INNER WEIGHT RETAINER**
1 9414875 70-72 ALL PG

- 4.256 RING, TRANSMISSION GOVERNOR INNER WEIGHT TO CONNECTING SHAFT RETAINING**
1 3798068 70-72 ALL PG
- 4.256 RING, TRANSMISSION GOVERNOR OUTER WEIGHT RETAINER**
1 274978 70-72 ALL PG /SUP 9412980/
- 4.256 RING, TRANSMISSION GOVERNOR SUPPORT OIL SEAL**
1 3987944 70-72 PG
- 4.256 SCREEN, TRANSMISSION GOVERNOR VALVE**
1 3848365 70-72 PG
- 4.256 SCREW AND LOCKWASHER ASSEMBLY, TRANSMISSION GOVERNOR BODY TO HUB**
4 3856672 70-72 ALL PG
- 4.256 SCREW, GOVERNOR HUB**
1 3789048 70-72 ALL PG
- 4.256 SHAFT, TRANSMISSION GOVERNOR**
1 3850517 70-72 ALL PG
- 4.256 VALVE, TRANSMISSION GOVERNOR**
1 3850516 70-72 ALL PG
- 4.256 WASHER, TRANSMISSION GOVERNOR DAMPING**
1 3905432 70-72 ALL PG
- 4.256 WEIGHT, TRANSMISSION GOVERNOR**
1 3882877 70 6 CYL PG
1 3987914 71-72 6 CYL PG
- 4.265 BODY, TRANSMISSION OIL CONTROL VALVE**
1 1378257 67-69 ALL AT - /ILL. 4-1/
- 4.265 CLIP, TRANSMISSION SOLENOID WIRES TO VALVE BODY**
1 1373229 67-69 ALL AT - /ILL. 4-1/
- 4.265 GASKET, TRANSMISSION SOLENOID VALVE**
1 1358640 67-69 ALL AT - /ILL. 4-1/
- 4.265 GASKET, TRANSMISSION VALVE BODY PLATE TO CASE**
1 1378520 67-69 ALL AT - /ILL. 4-1/
- 4.265 PIN, TRANSMISSION HI SPEED DOWNSHIFT TIMING VALVE AND SPRING RETAINER**
1 9414193 67-69 AT - STRAIGHT - 7/64 X 3/4 / SUP 1374594/
- 4.265 PIN, TRANSMISSION MODULATOR LIMIT VALVE RETAINER**
1 9414193 67-69 AT - STRAIGHT - 7/64 X 3/4 / SUP 1374594/
- 4.265 PIN, TRANSMISSION SHIFT CONTROL VALVE SLEEVE TO VALVE BODY**
1 1373098 67-68 ALL - 7/64 X 1-1/8 - /ILL. 4-1/
- 4.265 PLATE, TRANSMISSION OIL CHANNEL SUPPORT**
1 1373491 67-69 ALL AT - /ILL. 4-1/

- 4.265 PLATE, TRANSMISSION VALVE BODY**
 - 1 1381098 67 ALL 6 CYL - /ILL. 4-1/
 - 1 1378517 67 ALL 8 CYL - /ILL. 4-1/
 - 1 1386305 68-69 ALL AT 6 CYL - /ILL. 4-1/
 - 1 N.L.A. 68-69 ALL AT 8 CYL /SUP 1384917/ - /ILL. 4-1/
- 4.265 RETAINER, TRANSMISSION SHIFT VALVE**
 - 1 1373916 67-69 ALL AT - /ILL. 4-1/
- 4.265 RING, TRANSMISSION HI SPEED DOWNSHIFT TIMING VALVE PIN RETAINER**
 - 1 9416094 67 ALL /SUP 9411834/
- 4.265 SCREEN ASSEMBLY, TRANSMISSION THROTTLE VALVE FEED**
 - 1 3846834 70-72 ALL PG
- 4.265 SEAL, TRANSMISSION DETENT SOLENOID CONNECTOR**
 - 1 6264903 67-68 ALL /SUP 3708146/ - /ILL. 4-1/
- 4.265 SLEEVE, TRANSMISSION SHIFT CONTROL VALVE**
 - 1 1368980 67-68 ALL 6 CYL - 1BC - EXC AIR COND
 - 1 1379108 67-68 ALL 6 CYL - 1BC - WITH AIR COND
 - 67-68 ALL 6 CYL - 4BC
 - 67-69 ALL 8 CYL
 - 69 ALL 6 CYL - WITH AIR COND
 - 1 1368980 69 ALL 6 CYL - EXC AIR COND
- 4.265 SPRING, TRANSMISSION HIGH SPEED DOWNSHIFT TIMING VALVE**
 - 1 1378927 67-69 ALL AT - OUTER
 - 1 1378374 67-68 ALL 6 CYL - INNER /SUP 1381088/
 - 1 1378374 67 ALL 8 CYL - INNER
 - 68 ALL 8 CYL - 4BC - EXC AIR COND - INNER
 - 1 1378374 68 ALL 8 CYL - 2BC - INNER /SUP 1381088/
 - 68 ALL 8 CYL - 4BC - WITH AIR COND - INNER
 - 69 ALL AT
- 4.265 SPRING, TRANSMISSION MODULATOR LIMIT VALVE**
 - 1 N.L.A. 67-68 ALL 6 CYL - 4BC - EXC AIR COND /SUP 1377944/
 - 1 1367259 67-68 ALL 6 CYL - 1BC
 - 67-68 ALL 6 CYL - 4BC - WITH AIR COND
 - 67-68 ALL 8 CYL - 4BC - EXC AIR COND /SUP 1381462/
 - 1 1367259 67-69 ALL 8 CYL - 2BC
 - 67-68 ALL 8 CYL - 4BC - WITH AIR COND
 - 1 1367259 69 ALL AT 6 CYL /SUP 1381462/
- 4.265 SPRING, TRANSMISSION SHIFT VALVE**
 - 1 1369080 67-69 ALL AT - /ILL. 4-1/
- 4.265 SPRING, TRANSMISSION STATOR AND DETENT VALVE**
 - 1 1384598 67-69 AT /SUP 1358638/
- 4.265 VALVE, TRANSMISSION HIGH SPEED DOWNSHIFT TIMING**
 - 1 1378332 67-69 ALL AT 6 CYL - /ILL. 4-1/
 - 1 1378325 67-69 ALL AT 8 CYL - /ILL. 4-1/

- 4.265 VALVE, TRANSMISSION CONVERTER STATOR AND DETENT**
 - 1 1358848 67-69 ALL AT - /ILL. 4-1/
- 4.265 VALVE, TRANSMISSION MODULATOR LIMIT**
 - 1 1359023 67-69 ALL AT - /ILL. 4-1/
- 4.265 VALVE, TRANSMISSION RANGE SELECTOR**
 - 1 1358641 67-69 ALL AT - /ILL. 4-1/
- 4.265 VALVE, TRANSMISSION SHIFT**
 - 1 1369100 67-69 ALL AT - /ILL. 4-1/
- 4.265 VALVE, TRANSMISSION SHIFT CONTROL**
 - 1 1369101 67-69 ALL AT - /ILL. 4-1/
- 4.265 VALVE PACKAGE, TRANSMISSION SHIFT CONTROL**
 - 1 1396623 67-68 ALL - CONSISTS OF 1 SHIFT VALVE, 1 SHIFT CONTROL VALVE, 1 SLEEVE, 1 SPRING AND 1 RETAINER
- 4.265 VALVE, TRANSMISSION VALVE BODY SOLENOID**
 - 1 1993391 67-69 ALL AT - /ILL. 4-1/
- 4.265 WASHER, TRANSMISSION HIGH SPEED DOWNSHIFT TIMING VALVE**
 - 1 387399 67-69 ALL AT /SUP 1378326/ - /ILL. 4-1/
- 4.275 LINK, TRANSMISSION RANGE SELECTOR VALVE**
 - 1 1359024 67-69 ALL AT - /ILL. 4-1/
- 4.275 RETAINER, TRANSMISSION RANGE SELECTOR SHAFT**
 - 1 1358925 67-69 ALL AT - /ILL. 4-1/
- 4.275 SEAL ASSEMBLY, TRANSMISSION PARK LOCK RANGE SELECTOR SHAFT OIL**
 - 1 8623056 67-69 ALL AT - LIP TYPE - /ILL. 4-2/
 - 1 3789137 70-72 ALL PG
- 4.275 SHAFT, TRANSMISSION PARK LOCK AND RANGE SELECTOR**
 - 1 1365183 67-69 ALL AT - /ILL. 4-1/
 - 1 3952622 70-72 ALL PG
- 4.278 LEVER, TRANSMISSION PARKING LOCK AND RANGE SELECTOR**
 - 1 1365278 67-69 ALL AT - INNER - /ILL. 4-1/
- 4.278 LEVER, TRANSMISSION THROTTLE VALVE**
 - 1 3789138 70-72 ALL PG - INNER
- 4.278 SEAL, TRANSMISSION THROTTLE CONTROL LEVER SHAFT**
 - 1 8526398 70-72 ALL PG - O RING /SUP 3727391/
- 4.290 ACTUATOR ASSEMBLY, TRANSMISSION PARKING LOCK**
 - 1 1232036 67-69 ALL AT /SUP 1369926/ - /ILL. 4-1/
 - 1 3978780 70-72 ALL PG
- 4.290 BRACKET, TRANSMISSION PARKING LOCK**
 - 1 1377861 67-69 ALL AT - /ILL. 4-1/

- 4.290 BRACKET, TRANSMISSION PARKING LOCK** (Cont'd)
- 1 3789127 70-72 ALL PG
- 4.290 RING, TRANSMISSION PARKING LOCK ACTUATOR TO INNER LEVER**
- 1 9416094 67-69 ALL AT - /ILL. 4-1/ /SUP 9411834/
- 4.290 RING, TRANSMISSION PARKING LOCK PAWL SHAFT RETAINER**
- 1 3750532 70-72 ALL PG - SNAP
- 4.293 SPRING, TRANSMISSION RANGE SELECTOR DETENT**
- 1 1367747 67-69 ALL AT - /ILL. 4-1/
- 4.294 PAWL, TRANSMISSION PARKING LOCK**
- 1 1358903 67-69 ALL AT - /ILL. 4-1/
- 1 3815199 70-72 ALL PG
- 4.294 SHAFT, TRANSMISSION PARKING LOCK PAWL**
- 1 1358901 67-69 ALL AT - /ILL. 4-1/
- 1 3789130 70-72 ALL PG
- 4.295 SPRING, TRANSMISSION PARKING LOCK PAWL DISENGAGING**
- 1 1357227 67-69 ALL AT - /ILL. 4-1/
- 1 3821953 70-72 ALL PG
- 4.317 RETAINER OR EXTENSION ASSEMBLY, TRANSMISSION REAR BEARING**
- 1 N.L.A. 67-68 ALL 6 CYL /SUP 1383474/ - / ILL. 4-1/
- 1 6260035 67-68 ALL 8 CYL /SUP 1357669/ - / ILL. 4-1/
- 1 N.L.A. 69 ALL AT 6 CYL - WITH BUSHING - /SUP 1386409/ /ILL. 4-1/
- 1 6260035 69 ALL AT 8 CYL - WITH BUSHING - /ILL. 4-1/
- 1 3987986 70-72 ALL PG - WITH BUSHING /SUP 3864431/
- 4.317 VENT, TRANSMISSION EXTENSION**
- 1 3820840 70-72 ALL PG
- 4.318 SEAL, TRANSMISSION OUTPUT SHAFT TO EXTENSION OIL**
- 1 1386231 67-68 ALL /SUP 1353997/
- 1 1243402 70 ALL PG /SUP 3871649/
- 4.318 SEAL, TRANSMISSION REAR BEARING RETAINER TO CASE**
- 1 1358899 67-69 ALL AT - /ILL. 4-1/
- 1 3789056 70-72 ALL PG
- 4.318 SEAL ASSEMBLY, TRANSMISSION REAR BEARING RETAINER TO OUTPUT SHAFT**
- 1 1386231 69-72 ALL AT - AND PLANET CARRIER - /ILL. 4-1/
- 4.319 BUSHING, TRANSMISSION EXTENSION OR REAR BEARING RETAINING**
- 1 6260048 67-69 ALL - /ILL. 4-1/ /SUP 3798960/ 70-72 ALL PG
- 4.329 ADAPTER, SPEEDOMETER DRIVEN GEAR**
- 1 540474 68 AT USED WITH 2.56 AXLE RATIO - 36 TOOTH DRIVEN GEAR
- 68 AT USED WITH 2.56 AXLE RATIO - 37 TOOTH DRIVEN GEAR

- 4.329 ADAPTER, SPEEDOMETER DRIVEN GEAR** (Cont'd)
- 1 9775436 69 AT USED WITH 3.55 AXLE RATIO - 44 TOOTH DRIVEN GEAR
- 69 AT USED WITH 3.55 AXLE RATIO - 43 TOOTH DRIVEN GEAR
- 1 535617 70 PG USED WITH 3.36 AXLE RATIO - 21 TOOTH DRIVEN GEAR - BLUE
- 1 535614 70 PG USED WITH .7333 AXLE RATIO - RED
- 4.337 GEAR, SPEEDOMETER DRIVEN**
- 1 9780628 67-68 AT - 35 TEETH - PINK
- 1 1359270 67-69 AT - 36 TEETH - WHITE
- 1 1359271 67-69 AT - 37 TEETH - RED
- 1 1359273 67-69 AT - 39 TEETH - BROWN
- 1 1362048 67-69 AT - 40 TEETH - BLACK
- 1 1362195 67-69 AT - 41 TEETH - YELLOW
- 1 1362049 67 AT - 42 TEETH - GREEN
- 1 1362196 67-69 AT - 43 TEETH - PURPLE
- 1 9780470 67-69 AT - 44 TEETH - DARK BLUE
- 1 9775187 67-69 AT - 45 TEETH - LIGHT BLUE
- 1 3987917 70-72 AT - 17 TEETH - PURPLE
- 1 3987919 70-72 AT - 19 TEETH - NATURAL
- 1 3987920 72 AT - 20 TEETH - BLUE
- 1 3987921 70 AT - 21 TEETH - RED
- 4.338 FITTING AND SEAL ASSEMBLY, SPEEDOMETER DRIVEN GEAR**
- 1 345215 70-72 PG /SUP 3869912-6258100/
- 4.338 RETAINER, SPEEDOMETER DRIVEN GEAR SLEEVE**
- 1 1362215 67-69 ALL AT - /ILL. 4-1/
- 1 3708148 70-71 ALL PG
- 4.338 RING, SPEEDOMETER DRIVEN GEAR SHAFT OIL SEAL RETAINING**
- 1 1361618 67-69 ALL AT
- 4.338 SEAL, SPEEDOMETER DRIVEN GEAR SHAFT OIL**
- 1 1240382 67-69 ALL AT /SUP 1196792/
- 1 6264903 70-71 ALL PG /SUP 3708146/
- 4.338 SEAL, SPEEDOMETER GEAR SLEEVE TO REAR BEARING RETAINER**
- 1 6264904 67-69 ALL AT /SUP 1359319/
- 4.338 SEAL, SPEEDOMETER PINION**
- 1 3869910 67-72 ALL - STEEL AND RUBBER
- 4.338 SLEEVE, SPEEDOMETER DRIVEN GEAR**
- 1 1362284 67-69 ALL AT - WITH 36-37-38-39 TOOTH DRIVEN GEARS AND WILL BE STAMPED SAME
- 1 1362285 67-69 ALL AT - WITH 40-41-42-43 TOOTH DRIVEN GEARS AND WILL BE STAMPED SAME
- 4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE**
- 1 6454759 67-68 ALL 8 CYL - WITH CRUISE CONTROL - UPPER - TYPE #CC-284
- 1 6476587 67-68 ALL 8 CYL - WITH CRUISE CONTROL - LOWER - TYPE #CC-294
- 1 6478128 67-68 ALL /-37/ - EXC CRUISE CONTROL - EXC ADAPTER - TYPE #CC-75 /SUP 1588291/

4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE (Cont'd)

- 1 6478128 67-68 ALL /-67/ - EXC CRUISE CONTROL - EXC ADAPTER - TYPE #CC-229 /SUP 6476274/
- 1 6478121 68 ALL - EXC CRUISE CONTROL - WITH ADAPTER - UPPER - TYPE #CC-292 /SUP 6454482/
- 1 6454481 68 ALL - EXC CRUISE CONTROL - WITH ADAPTER - LOWER - TYPE #CC-291
- 1 6478175 69 ALL AT - EXC ADAPTER, CRUISE CONTROL OR RAM AIR - TYPE #CC-534 /SUP 6477544/
- 1 ~~6478169~~ 69 ALL AT - EXC CRUISE CONTROL - UPPER - WITH ADAPTER - TYPE #CC-342 /SUP 6477421/
- 1 6454481 69 ALL AT - EXC CRUISE CONTROL - LOWER - WITH ADAPTER - TYPE #CC-291
- 1 6478170 69 ALL AT - WITH CRUISE CONTROL - UPPER /TYPE NCC-529 /SUP 6477531/
- 1 6476587 69 ALL AT - WITH CRUISE CONTROL - LOWER - TYPE #CC-294
- 1 6478170 70 ALL PG W/ADAPTER - UPPER - TYPE #CC350 /SUP 6477531/
- 1 6454481 70 ALL PG W/ADAPTER - LOWER - TYPE #CC291 /SUP 6478245/
- 1 6478176 70 ALL PG EXC ADAPTER - TYPE #CC366 /SUP 6477547/
- 1 6478181 71-72 6 CYL PG - TYPE #CC-540
- 1 6478176 71 8 CYL PG EXC ADAPTER - TYPE #CC535 - 64 IN LONG
- 1 6478732 72 8 CYL PG - TYPE #CC425
- 1 6478171 72 350 ENG PG - TYPE #CC530 - 44 IN LONG
- 1 ~~6478169~~ 76 ALL AT - WITH CRUISE CONTROL - 36 IN LONG

4.342 CABLE KIT /LESS CASING/, SPEEDOMETER FLEXIBLE

NOTE: KIT INCLUDES CABLE, TIP AND STAKING TOOL.

- 1 6477499 67-70 ALL - 81 IN OL - TYPE #615 /SUP 846890/

4.342 CLIP, SPEEDOMETER CABLE

- AR 1380949 68-69 ALL
- 1 479962 70-71 PG - TO CROSS SHAFT BRACKET

4.342 PLUG, CRUISE CONTROL SPEEDOMETER CABLE HOLE

- 1 4859119 67-69 ALL AT - FOR 1-1/2 IN HOLE
- 1 4410574 71 ALL PG - SPEEDO CABLE - FOR 1 IN HOLE

4.342 RETAINER, SPEEDOMETER CABLE TO SPEEDOMETER

- 1 6491006 69-71 ALL W/QUICK RELEASE CABLE - SPRING CLIP

4.342 SHAFT, SPEEDOMETER FLEXIBLE

SEE CABLE, GROUP 4.342

4.343 GEAR, SPEEDOMETER DRIVE

- 1 1374094 67 ALL 6 CYL - 1BC - EXC AIR COND - 18 TEETH - NYLON - YELLOW
- 67-68 ALL 8 CYL - 4BC - WITH AIR COND - 18 TEETH - NYLON - YELLOW
- 67-68 ALL 8 CYL - 2BC - 18 TEETH - NYLON - YELLOW
- 68 ALL 6 CYL - 1BC - EXC AIR COND - FIRST TYPE - 18 TEETH - NYLON
- 1 1371877 67-68 ALL 6 CYL - 1BC - WITH AIR COND - 16 TEETH - NYLON - WHITE
- 67-68 ALL 6 CYL - 4BC - 16 TEETH - NYLON - WHITE
- 67-68 ALL 8 CYL - 4BC - EXC AIR COND - 16 TEETH - NYLON - WHITE
- 68 ALL 6 CYL - 1BC - EXC AIR COND - SECOND TYPE - 16 TEETH - NYLON
- 1 1371877 69 ALL AT 6 CYL - 16 TOOTH - NYLON
- 1 1374094 69 ALL AT 8 CYL - 18 TOOTH - NYLON
- 1 3708144 70-72 6 CYL PG - 8 TEETH - STEEL
- 1 3708144 70 6 CYL PG - 8 TEETH - PLASTIC - INCL CLIP /SUP 3924098/
- 1 3905494 70-71 8 CYL PG - 9 TEETH - STEEL

4.345 CLIP, SPEEDOMETER DRIVE GEAR RETAINER

- 1 6261781 67-69 ALL AT - /ILL. 4-1/
- 70-72 ALL PG W/PLASTIC DRIVE GEARS /SUP 6261353/

FIREBIRD

HYDRAMATIC TRANSMISSION

ALPHABETICAL INDEX GROUP 4.000

A	B (Cont'd.)
ACTUATOR ASSEMBLY	BRACKET (Cont'd.)
TRANSMISSION PARKING BRAKE 4.290	TRANSMISSION OIL COOLER PIPES 4.128
ADAPTER	TRANSMISSION PARKING BRAKE 4.290
SPEEDOMETER DRIVEN GEAR 4.329	TRANSMISSION SHIFTER MOUNTING 4.010
AUTOMATIC TRANSMISSION IDENTIFICATION 4.000	BUSHING
	STEERING COLUMN LOWER LEVER TO LOCK ROD 4.037
	TRANSMISSION CASE 4.104
	TRANSMISSION CASE EXTENSION 4.319
	TRANSMISSION CENTER SUPPORT 4.162
	TRANSMISSION CONTROL LEVER 4.008
	TRANSMISSION CONTROL OR LOCK ROD IDLER LEVER TO SUPPORT 4.040
	TRANSMISSION CONTROL ROD OR LOCK ROD TO LEVERS 4.037
	TRANSMISSION DIRECT CLUTCH DRUM TO PUMP COVER 4.169
	TRANSMISSION GOVERNOR SLEEVE 4.256
	TRANSMISSION INPUT RING GEAR ASSEMBLY 4.176
	TRANSMISSION INTERMEDIATE CLUTCH SPRAG 4.168
	TRANSMISSION OIL PUMP STATOR SHAFT 4.226
	TRANSMISSION OIL PUMP STATOR SHAFT REAR 4.161
	TRANSMISSION OUTPUT SHAFT 4.176
	TRANSMISSION PUMP BODY 4.226
	TRANSMISSION REACTION PLANET CARRIER TO OUTPUT SHAFT 4.176
	TRANSMISSION REAR BEARING RETAINING 4.319
	TRANSMISSION SUN GEAR SHAFT 4.161
	TRANSMISSION SUN GEAR TO OUTPUT SHAFT 4.176
	BUSHING AND SLEEVE KIT
	TRANSMISSION SHIFT LEVER 4.037
	BUSHING AND VALVE KIT
	TRANSMISSION PRESSURE REGULATOR 4.216
	BUTTON
	TRANSMISSION CONTROL LEVER 4.006
	C
	CABLE /WITH CASING/
	SPEEDOMETER FLEXIBLE 4.342
	CABLE ASSEMBLY
	TRANSMISSION CONTROL 4.047
	TRANSMISSION DOWNSHIFT CONTROL 4.057
	CABLE KIT /LESS CASING/
	SPEEDOMETER 4.342
	CAM
	TRANSMISSION INTERMEDIATE OVERRUN CLUTCH 4.167
	CAP
	TRANSMISSION CONTROL LEVER HOUSING POINTER 4.020
	TRANSMISSION GEARSHIFT INDICATOR LENS LAMP 4.020
	TRANSMISSION GOVERNOR THRUST 4.256
	CARRIER ASSEMBLY
	TRANSMISSION OUTPUT /COMPLETE/ 4.175
	CARRIER PACKAGE
	TRANSMISSION REACTION /COMPLETE/ 4.175
	CASE ASSEMBLY
	TRANSMISSION /COMPLETE/ 4.103
	CLAMP
	TRANSMISSION CONTROL ROD OR LOCK ROD 4.037
	TRANSMISSION OIL COOLER PIPE 4.128

FIREBIRD ALPHABETICAL INDEX

C (Cont'd.)

CLIP	
SPEEDOMETER CABLE	4.342
SPEEDOMETER DRIVE GEAR OUTPUT SHAFT TO GEAR	4.345
TRANSMISSION CONTROL HANDLE TO CONTROL ROD	4.006
TRANSMISSION CONTROL ROD OR LOCK ROD TO SHIFT LEVERS	4.037
TRANSMISSION DOWNSHIFT CONTROL CABLE	4.057
TRANSMISSION DOWNSHIFT CONTROL CABLE TO TRANSMISSION FILLER TUBE BRACKET	4.060
TRANSMISSION DOWNSHIFT LEAD	4.060
TRANSMISSION GEARSHIFT BUTTON TO PAWL ROD	4.006
TRANSMISSION GEARSHIFT INDICATOR LENS RETAINING	4.020
TRANSMISSION MANUAL VALVE LINK	4.275
TRANSMISSION OIL COOLER PIPES	4.128
TRANSMISSION SOLENOID WIRES	4.265
TRANSMISSION VACUUM PIPE	4.205

CLUTCH ASSEMBLY

TRANSMISSION INTERMEDIATE OVERRUN	4.164
TRANSMISSION LOW AND REVERSE	4.180

CONNECTOR

TRANSMISSION DOWNSHIFT SOLENOID VALVE	4.057
TRANSMISSION OIL COOLER PIPES TO TRANSMISSION	4.128

CONVERTER ASSEMBLY

TRANSMISSION /REBUILT/	4.115
------------------------------	-------

COVER

GOVERNOR	4.256
TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON	4.228
TRANSMISSION REAR SERVO	4.241

COVER AND PISTON PACKAGE

TRANSMISSION REAR SERVO	4.241
-------------------------------	-------

COVER AND STATOR SHAFT

TRANSMISSION OIL PUMP	4.224
-----------------------------	-------

D

DIAL

TRANSMISSION CONTROL INDICATOR	4.020
--------------------------------------	-------

DRUM ASSEMBLY

TRANSMISSION DIRECT CLUTCH	4.169
----------------------------------	-------

E

EXTENSION ASSEMBLY

TRANSMISSION CASE	4.317
-------------------------	-------

F

FASTENER PACKAGE

TRANSMISSION NEUTRAL, BACK UP LAMP AND SEAT BELT WARNING SWITCH	4.054
---	-------

FITTING ASSEMBLY

SPEEDOMETER DRIVEN GEAR	4.338
-------------------------------	-------

G

GASKET

GOVERNOR COVER	4.256
TRANSMISSION CASE TO EXTENSION	4.318
TRANSMISSION OIL COOLER FITTING	4.128
TRANSMISSION OIL PAN	4.196
TRANSMISSION OIL PAN DRAIN SCREW	4.195
TRANSMISSION OIL PUMP SCREEN	4.224
TRANSMISSION PUMP BODY BOLT	4.226
TRANSMISSION PUMP TO CASE	4.226
TRANSMISSION REAR SERVO COVER	4.241
TRANSMISSION SOLENOID VALVE	4.265
TRANSMISSION VALVE BODY SPACER PLATE	4.265

GASKET AND SEAL KIT

TRANSMISSION OVERHAUL	4.005
-----------------------------	-------

G (Cont'd.)

GATE

STEERING COLUMN GEAR SHIFT LEVER	4.027
STEERING SHAFT HOUSING SUPPORT	4.027

GEAR

SPEEDOMETER DRIVE	4.343
SPEEDOMETER DRIVEN	4.337
TRANSMISSION INPUT RING	4.158
TRANSMISSION OUTPUT RING	4.187
TRANSMISSION REAR INTERNAL MAINSHAFT	4.187
TRANSMISSION SUN	4.159

GEAR AND PIN KIT

GOVERNOR	4.256
----------------	-------

GOVERNOR

TRANSMISSION	4.256
--------------------	-------

GROMMET

SPEEDOMETER FLEXIBLE SHAFT	4.342
TRANSMISSION CONTROL ROD TO GEARSHIFT LEVER	4.037
TRANSMISSION CONTROL ROD TO RANGE SELECTOR OUTER LEVER	4.037
TRANSMISSION CONTROL UPPER ROD TO STEERING COLUMN	4.037
TRANSMISSION OIL PUMP FILTER ARM	4.197
TRANSMISSION STRAINER TO PIPE	4.197
UPPER LOCK ROD TO LEVER	4.037

GUIDE

TRANSMISSION INTERMEDIATE CLUTCH SPRING	4.164
---	-------

H

HANDLE

TRANSMISSION CONTROL LEVER	4.006
----------------------------------	-------

HOSE

TRANSMISSION VACUUM MODULATOR PIPE	4.205
--	-------

HOUSING

CONSOLE SHIFT LEVER INDICATOR	4.020
-------------------------------------	-------

HOUSING ASSEMBLY

TRANSMISSION DIRECT CLUTCH	4.169
TRANSMISSION FORWARD CLUTCH	4.169

HUB

TRANSMISSION DIRECT CLUTCH DRIVING	4.164
TRANSMISSION FORWARD CLUTCH	4.164

I

INDICATOR

TRANSMISSION GEARSHIFT /WITH LENS/	4.020
--	-------

INDICATOR ASSEMBLY

TRANSMISSION OIL LEVEL	4.133
------------------------------	-------

INSERT

TRANSMISSION DOWNSHIFT CONTROL LEVER	4.057
--	-------

K

KNOB

TRANSMISSION CONTROL LEVER	4.006
----------------------------------	-------

L

LENS

TRANSMISSION GEARSHIFT INDICATOR	4.020
--	-------

LEVER

TRANSMISSION CONTROL	4.006
TRANSMISSION CONTROL ROD	4.030
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER	4.040
TRANSMISSION DETENT VALVE ACTUATOR	4.279
TRANSMISSION NEUTRAL SAFETY SWITCH	4.054
TRANSMISSION PARKING LOCK AND RANGE SELECTOR INNER	4.294

L (Cont'd.)

LEVER (Cont'd.)	
TRANSMISSION RANGE SELECTOR - OUTER	4.045
LEVER AND PIN ASSEMBLY	
TRANSMISSION PARKING BRAKE INSIDE DETENT	4.279
LINK	
TRANSMISSION MANUAL VALVE CONTROL	4.275
LOCK	
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER	4.040

M

MODULATOR ASSEMBLY	
TRANSMISSION	4.205
MOUNTING ASSEMBLY	
TRANSMISSION SUPPORT	4.081

N

NUT	
SHIFTER TO MOUNTING BRACKET	4.010
TRANSMISSION CONTROL LEVER HANDLE	4.008
TRANSMISSION CONTROL ROD	4.037
TRANSMISSION DOWNSHIFT SWITCH AND SPACER TO BRACKET	4.057
TRANSMISSION IDLER LEVER SUPPORT TO FRAME	4.040

P

PAN	
TRANSMISSION OIL	4.195
PAWL	
TRANSMISSION PARKING BRAKE	4.294
PIN	
GOVERNOR WEIGHT	4.256
TRANSMISSION CONTROL CABLE	4.047
TRANSMISSION CONTROL LEVER PIVOT	4.008
TRANSMISSION CONTROL VALVE	4.265
TRANSMISSION DETENT REGULATOR VALVE	4.265
TRANSMISSION DETENT VALVE ACTUATOR LEVER	4.275
TRANSMISSION DOWN SHIFT CONTROL CABLE LEVER	4.060
TRANSMISSION FRONT SERVO PISTON	4.228
TRANSMISSION MANUAL SHAFT	4.275
TRANSMISSION OIL PUMP	4.226
TRANSMISSION REAR BAND APPLY	4.241
TRANSMISSION VALVE BODY	4.265
TRANSMISSION VALVE RETAINING	4.216
PINION KIT	
TRANSMISSION OUTPUT AND REACTION CARRIERS	4.175
PIPE	
CARBURETOR TO TRANSMISSION VACUUM	4.205
TRANSMISSION GOVERNOR OIL	4.248
PIPE ASSEMBLY	
TRANSMISSION INTAKE /TO STRAINER/	4.197
TRANSMISSION OIL FILLER	4.133
TRANSMISSION VENT	4.104
PISTON	
TRANSMISSION ACCUMULATOR	4.241
TRANSMISSION ACCUMULATOR /FRONT/	4.228
TRANSMISSION DIRECT CLUTCH	4.166
TRANSMISSION FORWARD CLUTCH	4.166
TRANSMISSION FRONT SERVO	4.228
TRANSMISSION INTERMEDIATE CLUTCH	4.166
TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR	4.228
TRANSMISSION LOW AND REVERSE CLUTCH	4.166
TRANSMISSION REAR SERVO	4.241
PISTON AND SEAL	
TRANSMISSION DIRECT CLUTCH ACCUMULATOR	4.229
TRANSMISSION INTERMEDIATE SERVO	4.228

P (Cont'd.)

PLATE	
GEARSHIFT LEVER BOWL	4.010
STEERING COLUMN SHIFT STOP	4.010
STEERING HOUSING AND SHAFT DETENT LOCK	4.027
TRANSMISSION CONTROL INDICATOR DIAL	4.020
TRANSMISSION CONTROL LEVER HOLE TRIM	4.017
TRANSMISSION DIRECT CLUTCH	4.163
TRANSMISSION FORWARD CLUTCH	4.163
TRANSMISSION GEARSHIFT KNOB LOCK	4.006
TRANSMISSION INTERMEDIATE CLUTCH	4.163
TRANSMISSION LOW AND REVERSE CLUTCH DRIVE	4.163
TRANSMISSION LOW AND REVERSE CLUTCH REACTION	4.163
TRANSMISSION VALVE BODY SPACER	4.265
PLUG	
CRUISE CONTROL SPEEDOMETER CABLE HOLE	4.342
TRANSMISSION CASE PARKING BRAKE PAWL SHAFT BORE HOLE	4.103
TRANSMISSION CASE PARKING BRAKE PAWL SHAFT BORE HOLE	4.294
TRANSMISSION CONTROL LEVER	4.008
TRANSMISSION INTERMEDIATE CLUTCH CUP	4.103
TRANSMISSION MAINSHAFT	4.172
TRANSMISSION MANUAL LOW CONTROL VALVE	4.265
TRANSMISSION OUTPUT SHAFT	4.175
TRANSMISSION PRESSURE REGULATOR VALVE BORE	4.216
TRANSMISSION VALVE BODY VALVE BORE	4.265
POINTER	
TRANSMISSION GEARSHIFT INDICATOR	4.020
PUMP ASSEMBLY	
TRANSMISSION OIL	4.224
R	
RACE	
TRANSMISSION INTERMEDIATE CLUTCH /OUTER/	4.168
TRANSMISSION LOW AND REVERSE OVERRUN CLUTCH	4.180
RELAY	
TRANSMISSION CONTROL SPARK	4.075
RELAY ASSEMBLY	
TRANSMISSION CONTROL VACUUM ADVANCE DELAY	4.075
REPAIR KIT	
TRANSMISSION OVERHAUL	4.005
RETAINER	
SHIFT CONTROL RODS AND EQUALIZER	4.037
SPEEDOMETER CABLE TO SPEEDOMETER	4.342
SPEEDOMETER CABLE TO TRANSMISSION CROSSMEMBER	4.342
SPEEDOMETER DRIVEN GEAR SLEEVE	4.338
TRANSMISSION CONTROL CABLE LEVER AND BRACKET SEAL	4.047
TRANSMISSION CONTROL CABLE TO SHIFTER PIN	4.047
TRANSMISSION CONTROL INDICATOR DIAL	4.020
TRANSMISSION CONTROL LEVER BRACKET SEAL	4.015
TRANSMISSION CONTROL LEVER SEAL	4.015
TRANSMISSION DOWNSHIFT CONTROL CABLE TO THROTTLE LEVER	4.057
TRANSMISSION FORWARD AND/OR DIRECT CLUTCH PISTON SPRING	4.164
TRANSMISSION FRONT SERVO SPRING	4.233
TRANSMISSION GEARSHIFT INDICATOR LENS	4.020
TRANSMISSION GOVERNOR COVER	4.256
TRANSMISSION INTERMEDIATE CLUTCH	4.167
TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON COVER	4.228
TRANSMISSION INTERMEDIATE CLUTCH SPRING	4.164
TRANSMISSION INTERMEDIATE OVERRUN CLUTCH	4.167
TRANSMISSION PARKING LOCK AND RANGE SELECTOR SHAFT	4.290
TRANSMISSION REAR SERVO PISTON SPRING	4.246
TRANSMISSION VACUUM MODULATOR	4.205
RING	
SPEEDOMETER DRIVEN GEAR SHAFT OIL SEAL RETAINING	4.338
STEERING COLUMN SHIFT TUBE RETAINING	4.027
TRANSMISSION ACCUMULATOR PISTON OIL SEAL	4.242
TRANSMISSION CENTER SUPPORT INTERMEDIATE CLUTCH OIL SEAL	4.162

FIREBIRD ALPHABETICAL INDEX

R (Cont'd.)

RING (Cont'd.)

TRANSMISSION CENTER SUPPORT TO CASE	4.162
TRANSMISSION CLUTCH PISTON RETURN SPRING SEAT	4.164
TRANSMISSION CONTROL KNOB TO LEVER	4.008
TRANSMISSION DIRECT CLUTCH ACCUMULATOR PISTON RETAINING	4.229
TRANSMISSION DIRECT CLUTCH DRUM OIL SEAL	4.169
TRANSMISSION FORWARD AND/OR DIRECT CLUTCH	4.164
TRANSMISSION FORWARD AND/OR DIRECT CLUTCH PRESSURE PLATE RETAINING	4.167
TRANSMISSION FORWARD AND/OR DIRECT TO HOUSING	4.164
TRANSMISSION FORWARD CLUTCH HOUSING OIL SEAL	4.169
TRANSMISSION FRONT ACCUMULATOR PISTON OIL SEAL	4.229
TRANSMISSION FRONT INTERNAL GEAR	4.176
TRANSMISSION FRONT SERVO OIL SEAL	4.229
TRANSMISSION FRONT SERVO SPRING RETAINING	4.228
TRANSMISSION INTERMEDIATE CLUTCH RETAINER	4.164
TRANSMISSION INTERMEDIATE CLUTCH SPRAG RETAINER TO DIRECT CLUTCH HOUSING	4.167
TRANSMISSION INTERMEDIATE CLUTCH SPRING RETAINER /TO SUPPORT/	4.164
TRANSMISSION INTERMEDIATE OVERRUN CLUTCH RETAINING	4.168
TRANSMISSION LOW AND REVERSE CLUTCH	4.180
TRANSMISSION MAINSHAFT TO INTERNAL GEAR	4.172
TRANSMISSION OIL PUMP COVER OIL SEAL	4.226
TRANSMISSION OUTPUT CARRIER RETAINING TO OUTPUT SHAFT FRONT	4.176
TRANSMISSION OUTPUT RING GEAR SUPPORT TO SHAFT	4.176
TRANSMISSION OUTPUT SHAFT TO FRONT INTERNAL GEAR INTERNAL	4.176
TRANSMISSION PRESSURE REGULATOR VALVE	4.216
TRANSMISSION REAR SERVO PISTON RETAINING	4.241
TRANSMISSION SUN GEAR DRIVE SHELL RETAINING	4.176

RING KIT

TRANSMISSION	4.005
--------------	-------

ROD

TRANSMISSION CONTROL LEVER RELEASE	4.008
TRANSMISSION CONTROL LOCK	4.035
TRANSMISSION GEARSHIFT CONTROL	4.035
TRANSMISSION INTERMEDIATE SERVO APPLY	4.228
TRANSMISSION OIL FILLER TUBE /OIL GAUGE/	4.133

ROLLER

TRANSMISSION INTERMEDIATE CLUTCH	4.167
----------------------------------	-------

ROLLER AND SPRING

TRANSMISSION PARKING BRAKE MANUAL DETENT	4.293
--	-------

ROLLER ASSEMBLY

TRANSMISSION LOW CLUTCH	4.180
-------------------------	-------

ROLLER PACKAGE

TRANSMISSION LOW CLUTCH	4.180
-------------------------	-------

S

SCREEN

TRANSMISSION GOVERNOR OIL PIPE HOLE	4.248
-------------------------------------	-------

SCREEN AND GASKET UNIT

TRANSMISSION OIL PUMP	4.197
-----------------------	-------

SCREEN ASSEMBLY

TRANSMISSION GOVERNOR PRESSURE HOLE	4.248
TRANSMISSION OIL PUMP PRESS HOLE	4.224

SCREW

GEARSHIFT LEVER BOWL PLATE	4.012
NAME PLATE TO CASE	4.003
STEERING COLUMN HOUSING DETENT	4.027
STEERING COLUMN SHIFT LEVER DETENT PLATE	4.012
STEERING SHAFT HOUSING SUPPORT GATE OR DETENT PLATE	4.027
TRANSMISSION CASE TO CENTER SUPPORT LOCATING	4.162
TRANSMISSION CONTROL ROD TO IDLER LEVER	4.037
TRANSMISSION CONVERTER COVER PAN TO CASE	4.115
TRANSMISSION NEUTRAL AND BACK UP LAMP SWITCH TO COLUMN	4.054
TRANSMISSION OIL PAN DRAIN	4.195

S (Cont'd.)

SCREW AND WASHER

TRANSMISSION OIL PAN	4.196
----------------------	-------

SEAL

SPEEDOMETER DRIVEN GEAR SHAFT OIL	4.338
SPEEDOMETER GEAR SLEEVE TO REAR BEARING RETAINER	4.338
SPEEDOMETER PINION	4.338
STEERING COLUMN SHAFT	4.030
TRANSMISSION CASE EXTENSION OIL	4.318
TRANSMISSION CONTROL LEVER	4.015
TRANSMISSION DETENT SOLENOID CONNECTOR	4.265
TRANSMISSION DIRECT CLUTCH ACCUMULATOR PISTON	4.229
TRANSMISSION DOWNSHIFT CONTROL CABLE TO TRANSMISSION	4.047
TRANSMISSION GEARSHIFT CONTROL CABLE	4.047
TRANSMISSION GOVERNOR COVER TO CASE	4.256
TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON COVER	4.229
TRANSMISSION INTERMEDIATE SERVO PISTON	4.229
TRANSMISSION OIL FILLER TO CASE	4.133
TRANSMISSION OIL PUMP TO CASE	4.226
TRANSMISSION OIL SUCTION PIPE TO CASE OIL	4.197
TRANSMISSION OUTPUT SHAFT /O/ RING	4.294
TRANSMISSION OUTPUT SHAFT YOKE TO SLEEVE	4.318
TRANSMISSION PARK LOCK AND RANGE SELECTOR SHAFT OIL	4.275
TRANSMISSION REAR BEARING RETAINER TO CASE	4.318
TRANSMISSION REAR SERVO PISTON	4.242
TRANSMISSION SPEED CONTROL SPARK SWITCH	4.075
TRANSMISSION VACUUM MODULATOR TO CASE	4.057
TRANSMISSION VACUUM MODULATOR TO CASE	4.205

SEAL ASSEMBLY

TRANSMISSION OIL PUMP	4.226
TRANSMISSION REAR BEARING RETAINER TO OUTPUT SHAFT	4.318

SEAL KIT

TRANSMISSION FORWARD AND/OR DIRECT PISTON	4.166
TRANSMISSION INTERMEDIATE CLUTCH PISTON	4.166

SEAL PACKAGE

TRANSMISSION INTERMEDIATE CLUTCH PISTON	4.203
TRANSMISSION LOW AND REVERSE CLUTCH PISTON	4.203

SEAT

TRANSMISSION CLUTCH PISTON RETURN SPRING	4.164
TRANSMISSION INTERMEDIATE SERVO PISTON SPRING	4.233
TRANSMISSION LOW AND REVERSE CLUTCH PISTON RETURN SPRING	4.164

SEAT AND SPRING

TRANSMISSION DIRECT CLUTCH	4.164
TRANSMISSION FORWARD CLUTCH	4.164
TRANSMISSION INTERMEDIATE CLUTCH PISTON RETURN	4.164
TRANSMISSION LOW AND REVERSE CLUTCH PISTON RETURN	4.164

SHAFT

SPEEDOMETER FLEXIBLE	4.342
TRANSMISSION INPUT	4.123
TRANSMISSION PARKING BRAKE MANUAL	4.275
TRANSMISSION PARKING BRAKE PAWL	4.294
TRANSMISSION PARKING LOCK AND RANGE SELECTOR	4.294
TRANSMISSION SUN GEAR	4.161
TRANSMISSION TURBINE	4.123

SHAFT AND PLUG ASSEMBLY

TRANSMISSION MAIN	4.172
-------------------	-------

SHAFT AND PLUG PACKAGE

TRANSMISSION PARK PAWL	4.294
------------------------	-------

SHAFT ASSEMBLY

TRANSMISSION OUTPUT	4.175
---------------------	-------

SHELL

TRANSMISSION SUN GEAR DRIVE	4.175
-----------------------------	-------

SHIELD

TRANSMISSION CONTROL SPLASH	4.067
TRANSMISSION MOUNTING ASSEMBLY HEAT	4.083

S (Cont'd.)	
SHIFT PACKAGE	
TRANSMISSION CONTROL VALVE CALIBRATION	4.265
SHIFTER ASSEMBLY	
TRANSMISSION CONTROL	4.004
SHROUD	
STEERING COLUMN BOWL	4.010
SLEEVE	
TRANSMISSION CONTROL LEVER RELEASE ROD	4.008
TRANSMISSION CONTROL ROD TO LEVERS	4.037
TRANSMISSION OUTPUT SHAFT YOKE SEAL	4.318
SLEEVE AND PIPE ASSEMBLY	
TRANSMISSION OUTSIDE VENT	4.104
SLEEVE AND SEAL ASSEMBLY	
SPEEDOMETER DRIVEN GEAR	4.338
SLIDE	
GEARSHIFT CONTROL LEVER	4.008
SOCKET ASSEMBLY	
GEARSHIFT INDICATOR LIGHT	4.020
SOLENOID ASSEMBLY	
TRANSMISSION	4.265
SPACER	
CONVERTER TO CRANKSHAFT	4.115
TRANSMISSION CASE CENTER SUPPORT	4.162
TRANSMISSION DOWNSHIFT SWITCH MOUNTING	4.057
TRANSMISSION MOUNT TO TRANSMISSION	4.085
TRANSMISSION OIL COOLER PIPES	4.128
TRANSMISSION OIL PUMP THRUST	4.169
TRANSMISSION PRESSURE REGULATOR VALVE	4.216
TRANSMISSION VALVE BODY	4.265
SPRAG AND BUSHING	
TRANSMISSION INTERMEDIATE CLUTCH	4.167
SPRING	
GEARSHIFT LEVER DETENT	4.010
STEERING COLUMN SHIFT TUBE RETURN	4.027
TRANSMISSION CLUTCH CUSHION	4.164
TRANSMISSION CLUTCH PISTON RETURN	4.164
TRANSMISSION CONTROL CABLE ASSEMBLY TO MOUNTING BRACKET WASHER	4.047
TRANSMISSION CONTROL LEVER	4.008
TRANSMISSION CONTROL ROD IDLER LEVER	4.040
TRANSMISSION DETENT REGULATOR VALVE	4.265
TRANSMISSION DIRECT CLUTCH ACCUMULATOR PISTON	4.233
TRANSMISSION DIRECT CLUTCH PISTON RELEASE	4.164
TRANSMISSION FORWARD CLUTCH PISTON RELEASE	4.164
TRANSMISSION FRONT ACCUMULATOR PISTON	4.233
TRANSMISSION FRONT SERVO PISTON	4.233
TRANSMISSION GEARSHIFT INDICATOR	4.020
TRANSMISSION GEARSHIFT LEVER BOWL	4.008
TRANSMISSION GEARSHIFT UPPER SHIFT LEVER	4.008
TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON	4.229
TRANSMISSION INTERMEDIATE CLUTCH PISTON RELEASE	4.164
TRANSMISSION INTERMEDIATE SERVO PISTON	4.216
TRANSMISSION LOW AND REVERSE CLUTCH SUPPORT RETAINING	4.180
TRANSMISSION OIL PUMP PRIMING VALVE	4.226
TRANSMISSION PARK LOCK PAWL DISENGAGING	4.295
TRANSMISSION PARKING BRAKE PAWL RETURN	4.295
TRANSMISSION PRESSURE REGULATOR VALVE	4.216
TRANSMISSION REAR ACCUMULATOR	4.246
TRANSMISSION REAR SERVO PISTON	4.246
SPRING ASSEMBLY	
TRANSMISSION DETENT	4.275
STRAINER ASSEMBLY	
TRANSMISSION OIL	4.197
STUD	
TRANSMISSION CASE EXTENSION TO CASE	4.319
SUPPORT	
TRANSMISSION SPACER PLATE	4.265

S (Cont'd.)	
SUPPORT AND RACE ASSEMBLY	
TRANSMISSION CENTER	4.162
SUPPORT ASSEMBLY	
TRANSMISSION	4.081
TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER	4.040
TRANSMISSION LOW AND REVERSE CLUTCH	4.162
SWITCH	
TRANSMISSION CONTROLLED SPARK	4.075
SWITCH ASSEMBLY	
TRANSMISSION DOWNSHIFT CONTROL	4.057
TRANSMISSION NEUTRAL START AND BACK UP LAMP	4.054
SWIVEL	
TRANSMISSION CONTROL ROD OR LOCK ROD	4.037
TRANSMISSION CONTROL ROD TO LEVER BRACKET	4.037
T	
TRANSMISSION ASSEMBLY	
HYDRAMATIC	4.003
SPECIAL REPLACEMENT	4.003
TUBE	
VACUUM PIPE TO TRANSMISSION	4.205
TUBE ASSEMBLY	
STEERING COLUMN SHIFT	4.025
TRANSMISSION GEARSHIFT	4.025
U	
UNDERPAN	
TRANSMISSION CONVERTER	4.115
V	
VALVE	
TRANSMISSION OIL PUMP PRIMING	4.226
TRANSMISSION VACUUM MODULATOR	4.205
VALVE AND PLUG	
TRANSMISSION PRESSURE REGULATOR	4.216
VALVE ASSEMBLY	
TRANSMISSION CONTROL	4.265
TRANSMISSION MANUAL	4.265
VALVE PACKAGE	
TRANSMISSION OIL COOLER BY PASS	4.216
VENT ASSEMBLY	
TRANSMISSION	4.317
W	
WASHER	
STEERING COLUMN BOWL	4.012
STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST	4.027
STEERING COLUMN SUPPORT THRUST	4.012
STEERING COLUMN WAVE	4.012
TRANSMISSION CENTER SUPPORT TO REACTION DRUM THRUST	4.162
TRANSMISSION CONTROL CABLE	4.047
TRANSMISSION CONTROL LEVER	4.008
TRANSMISSION CONTROL ROD LEVER TO LEVER	4.037
TRANSMISSION CONTROL ROD OR LOCK ROD	4.037
TRANSMISSION CONTROL RODS OR LOCK ROD TO COLUMN AND LEVERS	4.037
TRANSMISSION DIRECT CLUTCH DRUM THRUST /FRONT/	4.169
TRANSMISSION DOWNSHIFT CONTROL CABLE TO CARBURETOR LEVER EXTENSION	4.057
TRANSMISSION FORWARD CLUTCH HUB TO DIRECT CLUTCH HOUSING	4.164
TRANSMISSION FORWARD CLUTCH HUB TO HOUSING THRUST	4.164
TRANSMISSION FRONT INTERNAL GEAR TO REACTION CARRIER THRUST	4.176

W (Cont'd.)

WASHER (Cont'd.)

TRANSMISSION INPUT RING GEAR SUPPORT THRUST 4.158
TRANSMISSION OIL COOLER LINES TO CONNECTOR 4.128
TRANSMISSION OIL PUMP BOLT TO CASE 4.226
TRANSMISSION OUTPUT SHAFT TO CASE 4.176
TRANSMISSION OUTPUT SHAFT TO CASE THRUST 4.176
TRANSMISSION PRESSURE REGULATOR VALVE SPRING
RETAINER 4.216
TRANSMISSION PUMP COVER FORWARD CLUTCH DRUM ... 4.169
TRANSMISSION REAR SERVO PISTON 4.241
TRANSMISSION RING GEAR THRUST FRONT 4.176
TRANSMISSION SERVO PISTON 4.228
TRANSMISSION SUN GEAR SHELL REAR THRUST 4.176
TRANSMISSION SUN GEAR THRUST 4.176
TRANSMISSION SUPPORT MOUNTING TO BRACKET 4.085

WIRE

TRANSMISSION DETENT VALVE CONTROL 4.275

Y

YOKE

TRANSMISSION CONTROL CABLE TO MOUNTING BRACKET . 4.047

.000

HYDRAMATIC TRANSMISSION

4.000 AUTOMATIC TRANSMISSION IDENTIFICATION

TH200 TRANSMISSION

DOES NOT HAVE A MODULATOR. HAS A ONE-PIECE CASE WITH LITTLE EXTENSION

TH250 TRANSMISSION

HAS AN INTERMEDIATE BAND WHICH IS EXTERNALLY ADJUSTABLE ON LEFT SIDE OF CASE

HT350 TRANSMISSION

MODULATOR IS LOCATED AT IMMEDIATE REAR OF TRANSMISSION

HT400 TRANSMISSION

MODULATOR LOCATED ON FORWARD RIGHT SIDE OF CASE WHERE COOLER LINES EXIT

4.003 SCREW, NAME PLATE TO CASE

1 8622361 67-74 HT400

4.003 TRANSMISSION ASSEMBLY, HYDRAMATIC

1	N.L.A.	67	ALL EXC RAM AIR - /PS/ - SEE NOTE A /SUP 9777928/
1	9789928	67	ALL WITH RAM AIR - /PQ/
1	N.L.A.	68	ALL WITH AIR COND EXC RAM AIR /PY/ /SUP 8626335/
1	N.L.A.	68	ALL WITH RAM AIR - /PQ/ / SUP 8626245/
1	6260053	69	ALL 6 CYL HT350 - 1BC - MODEL JB
1	N.L.A.	69	ALL 6 CYL HT350 - 4BC - MODEL JD /SUP 6260055/
1	6260003	69	ALL 8 CYL HT350 - 2BC - MODEL JF
1	8626520	69	ALL HT400 - TRANS CODE PV
1	8626317	69	ALL HT400 - TRANS CODE PS
1	N.L.A.	69	HT400 - TRANS CODE PX /SUP 8626517/
1	8626516	69	ALL HT400 - TRANS CODE PQ
1	N.L.A.	69	ALL HT400 - TRANS CODE PZ / SUP 8626609/

4.003 TRANSMISSION ASSEMBLY, HYDRAMATIC

(Cont'd)

1	6260127	70	6 CYL HT350 - MODEL JE
1	N.L.A.	70	8 CYL - 2BC - HT350 /SUP 6260333/
1	8627109	70	ALL HT400 - MODEL PF
1	8626686	70	ALL HT400 - MODEL PQ
1	8626691	70	ALL HT400 - MODEL PX
1	6260301	71	6 CYL HT350 - MODEL JE
1	N.L.A.	71	8 CYL HT350 /SUP 6260333/
1	8627089	71	HT400 - MODEL PR
1	8627090	71	HT400 - MODEL PT
1	8627091	71	HT400 - MODEL PW
1	N.L.A.	71	HT400 - MODEL PY /SUP 8627093/
1	8627088	71	HT400 - MODEL PQ
1	N.L.A.	72	8 CYL ENG HT350 /SUP 6260333/
1	8627296	72	HT400 - MODEL PT
1	N.L.A.	72	HT400 - MODEL PG /SUP 8627308/
1	8627292	72	HT400 - MODEL PQ
1	6260395	73	6 CYL ENG HT350 - MODEL JE
1	1244982	73	HT350 - MODEL ME
1	1244981	73	HT350 - MODEL MC
1	6260399	73	350 ENG HT350 - MODEL MA
1	8627486	73	HT400 - MODEL PT
1	8627485	73	HT400 - MODEL PR
1	8627483	73	HT400 - MODEL PG
1	8627484	73	HT400 - MODEL PQ
1	8627760	73	HT400 - MODEL P2Q
1	8627762	73	HT400 - MODEL P2T
1	8627684	73	HT400 - MODEL P2Z
1	1248369	74	6 CYL ENG - HT350 - MODEL JB /SUP 1244172/
1	1244169	74	HT350 - MODEL MA
1	8627716	74	HT400 - MODEL PG
1	8627712	74	HT400 - MODEL PQ
1	8627713	74	HT400 - MODEL PR
1	8627714	74	HT400 - MODEL PT
1	8627789	74	HT400 - MODEL PZ
1	1248369	75	HT350 - MODEL JB /SUP 1248000/
1	1247621	75	HT350 - MODEL MA
1	1247625	75	HT350 - MODEL ME
1	1248371	75	HT350 - MODEL MG
1	8640131	76	6 CYL ENG - HT350 - MODEL JB
1	8640129	76	350 ENG - MODEL MA
1	8640133	76	400 /4BC/ ENG - MODEL MG

NOTE A. ON 1967 EXC RAM AIR THERE WERE TWO TRANS USED, PS EARLY AND PX LATE. ANY PARTS THAT ARE PECULIAR TO ONE OR THE OTHER WILL BE DESIGNATED AS SUCH BY REFERING TO THE TRANS CODES PS OR PX. THE PX ASSEMBLY IS NOW DISCONTINUED.

4.003 TRANSMISSION ASSEMBLY, SPECIAL REPLACEMENT

NOTE. THE FOLLOWING ARE NOT COMPLETE ASSEMBLIES. TO COMPLETE ASSEMBLY, TRANSFER SPEEDO DRIVE GEAR, VALVE BODY AND INTERMEDIATE CLUTCH ACCUMULATOR SPRING FROM OLD TRANSMISSION ASSEMBLY. PURCHASE OF NEW MODULATOR AND GOVERNOR ASSEMBLY ARE ALSO REQUIRED.

4.003 TRANSMISSION ASSEMBLY, SPECIAL REPLACEMENT (Cont'd)

- 1 742606 * 69-76 TH350 WITH 6 CYL ENG - 6 IN EXTENSION
- 1 742696 * 69-76 TH350 WITH PONTIAC ENG - 6 IN EXTENSION

4.004 SHIFTER ASSEMBLY, TRANSMISSION CONTROL

- 1 9794098 67 ALL HT - WITH FLOOR SHIFT / SUP 9792584/
- 1 9791314 68 ALL HT - WITH FLOOR SHIFT - INCLUDES LEVER - /ILL. 4-1/
- 1 9796736 69 ALL HT - WITH FLOOR SHIFT - COMPLETE - /ILL. 4-1/
- 1 351300 70 ALL HT FLOOR SHIFT - COMPLETE /SUP 478842/
- 1 498974 71 ALL HT FLOOR SHIFT - EXC FORMULA OR TRANS AM - COMPLETE /SUP 481224/
- 1 351300 71 FORMULA OR TRANS AM HT FLOOR SHIFT - COMPLETE / SUP 478842/
- 1 498974 72-74 ALL /2BC/ - WITH CONSOLE - COMPLETE /SUP 481224/
- 1 351300 72-74 ALL HT /4BC/ - WITH CONSOLE /SUP 478842/
- 1 351300 74 HT400 W/CONSOLE /SUP 478842/
- 1 498974 75-76 HT350 W/CONSOLE

4.005 GASKET AND SEAL KIT, TRANSMISSION OVERHAUL

- 1 8625905 67-74 HT400
- 1 347126 69-76 HT350 /SUP 6261689/

4.005 REPAIR KIT, TRANSMISSION OVERHAUL

- 1 8625967 67-74 ALL HT400 - THIS INCLUDES GASKET AND SEAL KIT GROUP 4.005 /SUP 8625904/
- 1 358045 69-76 HT350

4.005 RING KIT, TRANSMISSION

- 1 8623979 67-74 HT400 - SNAP - INCL FRONT, INTERMEDIATE AND DIRECT CLUTCH, REAR SERVO, INTERNAL GEAR AND PARK BRAKE RINGS
- 1 3941963 69-72 ALL HT350 - OIL
- 1 338202 73-76 HT350 - OIL

4.006 BUTTON, TRANSMISSION CONTROL LEVER

- 1 3914825 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 1 9797195 69 ALL HT - WITH FIREBIRD EMBLEM - BLACK - /ILL. 4-1/
- 1 480433 70-72 ALL HT - W/FLOOR SHIFT
- 1 490586 73-76 ALL - WITH FLOOR SHIFT

4.006 CLIP, TRANSMISSION CONTROL HANDLE TO CONTROL ROD

- 1 9791339 68 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

4.006 CLIP, TRANSMISSION GEARSHIFT BUTTON TO PAWL ROD

- 1 9797188 69-76 ALL - WITH FLOOR SHIFT - /ILL. 4-1/

4.006 HANDLE, TRANSMISSION CONTROL LEVER

- 1 3895274 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

4.006 HANDLE, TRANSMISSION CONTROL LEVER (Cont'd)

- 1 9791338 68 ALL HT - WITH FLOOR SHIFT - INNER - /ILL. 4-1/
- 1 9791337 68 ALL HT - WITH FLOOR SHIFT - OUTER - /ILL. 4-1/

4.006 KNOB, TRANSMISSION CONTROL LEVER

- 1 3973042 67 ALL HT - WITH COLUMN SHIFT - BLACK /SUP 3899067/ - /ILL. 4-1/
- 1 3899064 67 ALL HT - WITH COLUMN SHIFT - MEDIUM BRIGHT BLUE - TRIM 255-265 - /ILL. 4-1/
- 1 3920228 67 ALL HT - WITH COLUMN SHIFT - MEDIUM GOLD /SUP 3899066/
- 1 3973042 67 ALL HT - WITH COLUMN SHIFT - MEDIUM RED - /SUP 3899063/ /ILL. 4-1/
- 1 9792623 68-76 ALL HT - WITH COLUMN SHIFT - /ILL. 4-2/
- 1 9796831 69 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 1 481172 70-76 ALL HT WITH FLOOR SHIFT - SIMULATED BLACK VINYL FINISH

4.006 LEVER, TRANSMISSION CONTROL

- 1 N.L.A. 67 HT COLUMN SHIFT /SUP 3914815/
- 1 6263121 67 ALL HT - WITH FLOOR SHIFT / SUP 3924191/
- 1 9790724 68 ALL HT - WITH COLUMN SHIFT - /ILL. 4-1/
- 1 480677 70 ALL HT COLUMN SHIFT - UPPER
- 1 482967 71-75 ALL - COLUMN SHIFT - UPPER

4.006 PLATE, TRANSMISSION GEARSHIFT KNOB LOCK

- 1 9797530 69-70 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

4.008 BUSHING, TRANSMISSION CONTROL LEVER

- 2 3859797 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

4.008 NUT, TRANSMISSION CONTROL LEVER HANDLE

- 1 3895275 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

4.008 PIN, TRANSMISSION CONTROL LEVER PIVOT

- 1 3793014 67-76 ALL HT - WITH COLUMN SHIFT /SUP 387315/ - /ILL. 4-2/
- 1 9425112 69 ALL HT - WITH COLUMN SHIFT - 7/32 X 15/16 SLOTTED SPRING - /ILL. 4-2/

4.008 PLUG, TRANSMISSION CONTROL LEVER

- 1 3859792 67-68 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

4.008 RING, TRANSMISSION CONTROL KNOB TO LEVER

- 2 9418564 69-70 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

4.008 ROD, TRANSMISSION CONTROL LEVER RELEASE

- 1 3895278 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/

- 4.008 SLEEVE, TRANSMISSION CONTROL LEVER RELEASE ROD**
1 3905504 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 4.008 SLIDE, GEARSHIFT CONTROL LEVER**
2 9796094 69-76 ALL HT - WITH CONSOLE - PLASTIC - NOTE. REPLACE IN PAIRS
- 4.008 SPRING, TRANSMISSION CONTROL LEVER**
1 3895277 67 ALL HT - UPPER - WITH FLOOR SHIFT - /ILL. 4-1/
1 3899023 67-68 ALL HT - LOWER - WITH FLOOR SHIFT - /ILL. 4-1/
- 4.008 SPRING, TRANSMISSION GEARSHIFT LEVER BOWL**
1 7800605 67-68 ALL - WITH COLUMN SHIFT - EXC TILT WHEEL
1 7800670 67-68 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL
1 7812853 69-74 ALL HT - WITH COLUMN SHIFT - WITH TILT WHEEL
- 4.008 SPRING, TRANSMISSION GEARSHIFT UPPER SHIFT LEVER**
1 7808017 69-75 ALL HT WITH COLUMN SHIFT - EXC TILT WHEEL - /SUP 7804403/ /ILL. 6-1/
- 4.008 WASHER, TRANSMISSION CONTROL LEVER**
1 2390395 67 ALL HT - WITH FLOOR SHIFT - CONTROL ROD LEVER - 5/8 ID X 1 OD - /ILL. 4-1/
1 3917594 67 ALL HT - WITH FLOOR SHIFT - CONTROL LEVER RELEASE ROD - 3/16 ID X 3/8 OD - /ILL. 4-1/
- 4.010 BOWL, STEERING COLUMN**
1 7800262 67-68 ALL - WITH FLOOR SHIFT - WITH TILT WHEEL
1 7810762 69-75 HT FLOOR SHIFT EXC TILT WHEEL
76 HT EXC TILT WHEEL /SUP 7804436/
- 4.010 BOWL, TRANSMISSION GEARSHIFT LEVER**
1 5698516 67-68 ALL - WITH COLUMN SHIFT - EXC TILT WHEEL
1 7810761 69-75 ALL HT - WITH COLUMN SHIFT - EXC TILT WHEEL /SUP 7804434/
1 7805994 69 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL
1 7805994 70 HT COLUMN SHIFT W/TILT WHEEL
1 7805991 73-74 HT COLUMN SHIFT WITH TILT WHEEL
- 4.010 BRACKET, TRANSMISSION CONTROL LEVER**
1 9794101 67 ALL HT - WITH FLOOR SHIFT - /SUP 9792585/ /ILL. 4-1/
- 4.010 BRACKET, TRANSMISSION SHIFTER MOUNTING**
1 9793263 68-69 ALL HT - WITH FLOOR SHIFT - /ILL. 4-2/

- 4.010 NUT, SHIFTER TO MOUNTING BRACKET**
1 3792287 70 ALL HT FLOOR SHIFT - 5/16-18
- 4.010 PLATE, GEARSHIFT LEVER BOWL**
1 7804401 69-70 ALL HT - WITH COLUMN SHIFT - EXC TILT WHEEL - /ILL. 6-1/
1 7807229 69-70 ALL HT - WITH FLOOR SHIFT - EXC TILT WHEEL
- 4.010 PLATE, STEERING COLUMN SHIFT STOP**
1 5698651 67-68 ALL - WITH COLUMN SHIFT - WITH TILT WHEEL
- 4.010 SHROUD, STEERING COLUMN BOWL**
1 7811350 69-70 ALL HT - EXC TILT WHEEL / SUP 7804473/
1 7809375 70-75 ALL HT - WITH FLOOR SHIFT - WITH TILT WHEEL
1 7811350 71-75 HT W/COLUMN SHIFT - EXC TILT WHEEL - UPPER
- 4.010 SPRING, GEARSHIFT LEVER DETENT**
1 7806110 69 ALL HT - WITH FLOOR SHIFT - EXC TILT WHEEL
- 4.012 SCREW, GEARSHIFT LEVER BOWL PLATE**
2 7810242 69-70 HT EXC TILT WHEEL /SUP 7808198/
- 4.012 SCREW, STEERING COLUMN SHIFT LEVER DETENT PLATE**
2 7804407 73-76 TH EXC TILT WHEEL
- 4.012 WASHER, STEERING COLUMN BOWL**
1 7804447 69-70 ALL HT - EXC TILT WHEEL - WAVE - /ILL. 6-1/
1 7805159 69-73 ALL HT - WITH TILT WHEEL - WAVE - /ILL. 6-1/
1 7804906 69-73 ALL HT - WITH TILT WHEEL - THRUST - /ILL. 6-1/
- 4.012 WASHER, STEERING COLUMN SUPPORT THRUST**
1 3886319 73-76 ALL W/TILT WHEEL
- 4.012 WASHER, STEERING COLUMN WAVE**
1 5699618 67-68 ALL - WITH TILT WHEEL - 1-11/32 ID X 1-11/16 OD
- 4.015 RETAINER, TRANSMISSION CONTROL LEVER BRACKET SEAL**
1 3895282 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1, 10-1/
- 4.015 RETAINER, TRANSMISSION CONTROL LEVER SEAL**
2 3893872 67 ALL HT - WITH FLOOR SHIFT - /ILL. 10-1/
- 4.015 SEAL, TRANSMISSION CONTROL LEVER**
1 3925419 67 ALL HT - WITH FLOOR SHIFT / SUP -3893871- / - /ILL. 10-1/
1 9779566 68 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1, 10-1/
1 9797193 69-76 ALL WITH FLOOR SHIFT - /ILL. 10-1/
- 4.017 BRACKET, TRANSMISSION CONTROL LEVER SEAL**
1 478920 73-76 ALL HT ALL W/CONSOLE
- 4.017 PLATE, TRANSMISSION CONTROL LEVER HOLE TRIM**
1 3925418 67 ALL HT - WITH FLOOR SHIFT - RIGHT /SUP 3893864/

4.017 PLATE, TRANSMISSION CONTROL LEVER HOLE TRIM (Cont'd)

1 3925417 67 ALL HT - WITH FLOOR SHIFT - LEFT /SUP 3893863/

4.020 BRACKET, TRANSMISSION GEARSHIFT INDICATOR LENS RETAINING

1 9796793 69-72 ALL HT WITH COLUMN SHIFT - EXC TILT WHEEL

1 7805445 69-70 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

1 9796793 73-75 ALL HT

4.020 CAP, TRANSMISSION CONTROL LEVER HOUSING POINTER

1 478016 70-72 ALL HT COLUMN SHIFT LESS TILT WHEEL
73-75 ALL COLUMN SHIFT

4.020 CAP, TRANSMISSION GEARSHIFT INDICATOR LENS LAMP

1 N.L.A. 67-68 ALL - WITH COLUMN SHIFT - EXC TILT WHEEL - USE WITH BOYNE SWITCHES /SUP 7801162/

1 9796866 69-72 ALL HT WITH COLUMN SHIFT - EXC TILT WHEEL

1 9796915 69-72 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

1 9796866 73-75 ALL HT

4.020 CLIP, TRANSMISSION GEARSHIFT INDICATOR LENS RETAINING

1 9796918 69 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

4.020 DIAL, TRANSMISSION CONTROL INDICATOR

1 3986833 67 ALL HT - WITH FLOOR SHIFT - /SUP 3919154/

4.020 HOUSING, CONSOLE SHIFT LEVER INDICATOR

1 9792136 68-69 ALL HT - INCLUDES LENS - / ILL. 10-1/

1 478572 70-76 ALL

4.020 INDICATOR, TRANSMISSION GEARSHIFT / WITH LENS/

1 9788744 67-68 HT COLUMN SHIFT EXC TILT WHEEL - /ILL. 4-1/

1 9796216 69-70 HT COLUMN SHIFT EXC TILT WHEEL - BLACK - PAINT TO MATCH - /ILL. 4-2/

1 482261 71 HT COLUMN SHIFT EXC TILT WHEEL - BLACK - PAINT TO MATCH

72 HT COLUMN SHIFT EXC TILT WHEEL OR FORMULA STEERING WHEEL - INCL LENS - BLACK - PAINT TO MATCH

73-75 COLUMN SHIFT - INCL LENS - BLACK - PAINT TO MATCH

4.020 LENS, TRANSMISSION GEARSHIFT INDICATOR

1 9796914 69 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

1 478574 70-76 ALL FLOOR SHIFT

4.020 PLATE, TRANSMISSION CONTROL INDICATOR DIAL

1 3893875 67 ALL HT - WITH FLOOR SHIFT - /ILL. 10-1/

4.020 PLATE, TRANSMISSION CONTROL INDICATOR DIAL (Cont'd)

1 478573 70-76 ALL FLOOR SHIFT

4.020 POINTER, TRANSMISSION GEARSHIFT INDICATOR

1 9796916 69 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

4.020 RETAINER, TRANSMISSION CONTROL INDICATOR DIAL

1 3893876 67 ALL HT - WITH FLOOR SHIFT - /ILL. 10-1/

4.020 RETAINER, TRANSMISSION GEARSHIFT INDICATOR LENS

1 9796932 69 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

1 482325 72 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

4.020 SOCKET ASSEMBLY, GEARSHIFT INDICATOR LIGHT

1 7805546 69-75 ALL WITH COLUMN SHIFT - EXC TILT WHEEL

1 7805581 69-72 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL

4.020 SPRING, TRANSMISSION GEARSHIFT INDICATOR

2 9787535 67-68 ALL HT - WITH COLUMN SHIFT - EXC TILT WHEEL - TO TURN SIGNAL SWITCH - /ILL. 4-1/

2 9796211 69-72 ALL HT - WITH COLUMN SHIFT - EXC TILT WHEEL - LENS RETAINING - /ILL. 4-2/
73-75 ALL HT WITH COLUMN SHIFT

4.025 TUBE ASSEMBLY, TRANSMISSION GEARSHIFT

1 7802486 68 ALL - WITH COLUMN SHIFT

4.025 TUBE ASSEMBLY, STEERING COLUMN SHIFT

1 7804498 69 ALL HT - EXC TILT WHEEL - / ILL. 6-1/

1 N.L.A. 69 ALL HT - WITH TILT WHEEL / SUP 7805163/

1 7808563 70-74 HT COLUMN SHIFT
70-74 ALL FLOOR SHIFT EXC TILT WHEEL

75 HT COLUMN SHIFT EXC TILT WHEEL

76 HT EXC TILT WHEEL

1 7808908 70-75 ALL FLOOR SHIFT W/TILT WHEEL

4.027 GATE, STEERING COLUMN GEAR SHIFT LEVER

1 7811592 71-75 HT W/COLUMN SHIFT - EXC TILT WHEEL

1 7811691 71-74 HT W/COLUMN SHIFT T/W TILT WHEEL

4.027 GATE, STEERING SHAFT HOUSING SUPPORT

1 7804916 69-70 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL - /ILL. 6-1/

4.027 PLATE, STEERING HOUSING AND SHAFT DETENT LOCK

1 5698603 67-68 ALL - WITH FLOOR SHIFT - EXC TILT WHEEL

- 4.027 PLATE, STEERING HOUSING AND SHAFT DETENT LOCK (Cont'd)**
- 1 7801037 67-68 ALL - WITH COLUMN SHIFT - EXC TILT WHEEL
- 4.027 RING, STEERING COLUMN SHIFT TUBE RETAINING**
- 1 7804907 69-75 ALL WITH TILT WHEEL - /ILL. 6-1/
- 4.027 SCREW, STEERING COLUMN HOUSING DETENT**
- 1 7806109 69 ALL HT - WITH FLOOR SHIFT - EXC TILT WHEEL
- 4.027 SCREW, STEERING SHAFT HOUSING SUPPORT GATE OR DETENT PLATE**
- 2 7800639 69-74 ALL HT WITH COLUMN SHIFT - WITH TILT WHEEL - /ILL. 6-1/
- 4.027 SPRING, STEERING COLUMN SHIFT TUBE RETURN**
- 1 7804446 69-70 ALL HT - EXC TILT WHEEL - /ILL. 6-1/
- 1 7810567 71-76 HT EXC TILT WHEEL
- 4.027 WASHER, STEERING COLUMN SHIFT TUBE RETURN SPRING THRUST**
- 1 7807427 69-75 ALL HT - EXC TILT WHEEL - /ILL. 6-1/ /SUP 7804548/
- 4.030 LEVER, TRANSMISSION CONTROL ROD**
- 1 9789714 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 4.030 SEAL, STEERING COLUMN SHAFT**
- 1 7807007 70 ALL
- 4.035 ROD, TRANSMISSION CONTROL LOCK**
- 1 N.L.A. 69 ALL HT - WITH FLOOR SHIFT - UPPER - /ILL. 4-1/ /SUP 9777795/
- 1 9777796 69 ALL HT - WITH FLOOR SHIFT - LOWER - /ILL. 4-1/
- 1 3975630 70-76 ALL HT FLOOR SHIFT
- 4.035 ROD, TRANSMISSION GEARSHIFT CONTROL**
- 1 9791671 67 ALL HT - WITH FLOOR SHIFT - /SUP 9789716/ - /ILL. 4-1/
- 1 9777795 67-69 ALL - WITH COLUMN SHIFT - UPPER - /ILL. 4-2/
- 1 9777796 67-69 ALL - WITH COLUMN SHIFT - LOWER - /ILL. 4-2/
- 1 3975630 70-76 ALL HT COLUMN SHIFT
- 4.037 BUSHING, STEERING COLUMN LOWER LEVER TO LOCK ROD**
- 1 9798861 69-70 ALL HT - WITH FLOOR SHIFT - INNER - 5/16 ID - /ILL. 4-1/
- 1 9798862 69-70 ALL HT - WITH FLOOR SHIFT - OUTER - 1/2 ID - /ILL. 4-1/
- 4.037 BUSHING, TRANSMISSION CONTROL ROD OR LOCK ROD TO LEVERS**
- 1 382102 67-75 ALL - 3/8 ID - 1/2 OD X 1/2 LG - /ILL. 4-4/
- 4.037 BUSHING AND SLEEVE KIT, TRANSMISSION SHIFT LEVER**
- AR 1394293 67-76 ALL - INCL - 1-5/16 ID SLEEVE AND 1-7/16 ID BUSHING

- 4.037 CLAMP, TRANSMISSION CONTROL ROD OR LOCK ROD**
- AR 382103 67-68 ALL HT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69-74 ALL - /ILL. 4-4/
- 4.037 CLIP, TRANSMISSION CONTROL ROD OR LOCK ROD TO SHIFT LEVERS**
- AR 3749084 67-69 ALL HT - /ILL. 4-4/
- 4.037 GROMMET, TRANSMISSION CONTROL ROD TO GEARSHIFT LEVER**
- AR 3975131 67-68 ALL HT - WITH COLUMN SHIFT
- 69-70 ALL HT /SUP 3833108/
- AR 3975131 71-73 ALL HT
- 4.037 GROMMET, TRANSMISSION CONTROL ROD TO RANGE SELECTOR OUTER LEVER**
- 1 3833107 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 4.037 GROMMET, TRANSMISSION CONTROL UPPER ROD TO STEERING COLUMN**
- 1 3852837 67-69 ALL HT - WITH COLUMN SHIFT - /ILL. 4-2/
- 4.037 GROMMET, UPPER LOCK ROD TO LEVER**
- 1 3975131 69-70 ALL HT - WITH FLOOR SHIFT / SUP 3833108/
- 1 3975131 71 ALL HT W/FLOOR SHIFT
- 4.037 NUT, TRANSMISSION CONTROL ROD**
- AR 3840137 67-75 ALL - HEX - 7/16-20 X .240 IN THICK
- 4.037 RETAINER, SHIFT CONTROL RODS AND EQUALIZER**
- AR 1244707 70-74 ALL
- 4.037 SCREW, TRANSMISSION CONTROL ROD TO IDLER LEVER**
- AR 3989433 72-76 ALL
- 4.037 SLEEVE, TRANSMISSION CONTROL ROD TO LEVERS**
- 1 3852838 67-69 ALL HT - WITH COLUMN SHIFT - /ILL. 4-2/
- 1 1394293 70-71 ALL HT - WITH COLUMN SHIFT /SUP 1385890/
- 4.037 SWIVEL, TRANSMISSION CONTROL ROD OR LOCK ROD**
- AR 382104 67-68 ALL HT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69 ALL HT - /ILL. 4-4/
- 1 1385607 70-76 ALL - TO IDLER LEVERS
- AR 382104 72-74 ALL HT - 3/8-16 X 1-1/2
- 4.037 SWIVEL, TRANSMISSION CONTROL ROD TO LEVER BRACKET**
- 1 3843142 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 4.037 WASHER, TRANSMISSION CONTROL ROD OR LOCK ROD**
- AR 334533 73-76 ALL - 5/16 ID X 1-1/16 OD
- 4.037 WASHER, TRANSMISSION CONTROL ROD LEVER TO LEVER**
- 1 9415113 67 ALL HT - WITH FLOOR SHIFT - 5/8 ID X 15/16 OD WAVE - /ILL. 4-1/

4.037 WASHER, TRANSMISSION CONTROL RODS OR LOCK ROD TO COLUMN AND LEVERS

- 1 580379 67-68 ALL - WITH COLUMN SHIFT - / ILL. 4-1/
- 69-75 ALL HT - 23/32 X 21/64 X 1/32 - /ILL. 4-4/
- AR 382105 73-76 ALL - 25/64 X 3/4 X .03

4.040 BRACKET, TRANSMISSION CONTROL ROD IDLER LEVER

- 1 3998691 70-76 ALL HT - NOTE. WHEN USING ON 1970-71, DISCARD ATTACHING SCREW /SUP 3982394/

4.040 BUSHING, TRANSMISSION CONTROL OR LOCK ROD IDLER LEVER TO SUPPORT

- 2 3792168 67-68 ALL HT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69 ALL HT - /ILL. 4-4/
- 1 1377083 70-76 ALL

4.040 LEVER, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER

- 1 3895290 67-68 ALL HT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69 ALL HT - /ILL. 4-4/
- 1 3982391 70-76 ALL HT

4.040 LOCK, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER

- 1 3685801 67-68 ALL HT - WITH COLUMN SHIFT - 13/16 OD - /ILL. 4-1/
- 69 ALL HT - /ILL. 4-4/

4.040 NUT, TRANSMISSION IDLER LEVER SUPPORT TO FRAME

- 3 3792287 67 ALL HT - 5/16-18 - /ILL. 4-1/

4.040 SPRING, TRANSMISSION CONTROL ROD IDLER LEVER

- 1 1380549 70-76 ALL

4.040 SUPPORT ASSEMBLY, TRANSMISSION CONTROL ROD OR LOCK ROD IDLER LEVER

- 1 3895291 67-68 ALL HT - WITH COLUMN SHIFT - /ILL. 4-1/
- 69 ALL HT - /ILL. 4-4/

4.045 LEVER, TRANSMISSION RANGE SELECTOR - OUTER

- 1 N.L.A. 67 ALL HT - WITH FLOOR SHIFT / SUP 9789715/
- 1 9777797 67-69 ALL HT - WITH COLUMN SHIFT - /ILL. 4-3/
- 1 9794309 68 ALL HT - WITH FLOOR SHIFT - /ILL. 4-2/ /SUP 9793194/
- 1 9795328 69 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 1 3982396 70-76 ALL HT COLUMN SHIFT - /ILL. 4-1/
- 1 480565 70-76 ALL FLOOR SHIFT - /ILL. 4-1/

4.047 BOLT, TRANSMISSION CONTROL CABLE LOWER BRACKET TO TRANSMISSION

- 1 9794953 69 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 76 ALL HT - WITH FLOOR CONSOLE

4.047 BRACKET, TRANSMISSION CONTROL CABLE MOUNTING

- 1 9793193 68-74 HT400 W/FLOOR SHIFT - LOWER
- 1 9795915 69-76 ALL HT350 - WITH FLOOR SHIFT AND CONSOLE - LOWER

4.047 CABLE ASSEMBLY, TRANSMISSION CONTROL

- 1 9794252 68-69 ALL HT - WITH FLOOR SHIFT - INCLUDES SEAL - /ILL. 4-1/ / SUP 9793277/
- 1 498467 70-74 HT FLOOR SHIFT - INCL SEAL
- 75-76 HT350 FLOOR SHIFT - INCL SEAL /SUP 478839/
- 1 9791611 73-74 ALL WITH FLOOR SHIFT - DOES NOT INCL SEAL
- 1 498468 75-76 HT350 W/FLOOR SHIFT - DOES NOT INCL SEAL

4.047 PIN, TRANSMISSION CONTROL CABLE

- 1 3998634 68-74 ALL HT - WITH FLOOR SHIFT - TO SHAFT /SUP 9791366/
- 1 9791327 68-76 ALL HT - WITH FLOOR SHIFT - TO SHIFTER - 1/4 X 1/2 CLEVIS - /ILL. 4-2/
- 1 9779348 68-76 ALL WITH FLOOR SHIFT - TO RANGE SELECTOR LEVER - /ILL. 4-2/

NOTE. ON 1968-72 PURCHASE AND INSTALL WASHER - 3718496 AND COTTER PIN - 107762.

4.047 RETAINER, TRANSMISSION CONTROL CABLE LEVER AND BRACKET SEAL

- 1 478841 70-76 ALL WITH FLOOR SHIFT

4.047 RETAINER, TRANSMISSION CONTROL CABLE TO SHIFTER PIN

- 1 3998634 75-76 ALL FLOOR SHIFT - 1/4 IN SPRING

4.047 SEAL, TRANSMISSION DOWNSHIFT CONTROL CABLE TO TRANSMISSION

- 1 6264901 69-76 ALL HT350 - .333 -O- RING / SUP 6261243/

4.047 SEAL, TRANSMISSION GEARSHIFT CONTROL CABLE

- 1 9793261 68-69 ALL HT - WITH FLOOR SHIFT - /ILL. 4-2/
- 1 478840 70-76 ALL HT - WITH FLOOR SHIFT

4.047 SPRING, TRANSMISSION CONTROL CABLE ASSEMBLY TO MOUNTING BRACKET WASHER

- AR 334961 73-76 HT FLOOR SHIFT

4.047 WASHER, TRANSMISSION CONTROL CABLE

- 1 473059 74 HT350 WITH 6 CYL /BRACKET/ /SUP 590936/
- 1 507295 75-76 HT FLOOR SHIFT - FLAT - 9/32 X 1/2 X 1/32
- 1 590936 75 HT350 WITH 6 CYL /BRACKET/

4.047 YOKE, TRANSMISSION CONTROL CABLE TO MOUNTING BRACKET

- AR 334961 67-72 ALL HT - WITH FLOOR SHIFT / SUP 476737/

4.050 BRACKET, TRANSMISSION DOWNSHIFT CONTROL CABLE

- 1 497255 76 HT350 WITH 8 CYL ENG

- 4.054 FASTENER PACKAGE, TRANSMISSION NEUTRAL, BACK UP LAMP AND SEAT BELT WARNING SWITCH**
- 1 3981828 67-76 ALL - TO COLUMN - DL 2.698
- 4.054 LEVER, TRANSMISSION NEUTRAL SAFETY SWITCH**
- 1 3895280 67 ALL HT - WITH FLOOR SHIFT - /ILL. 4-1/
- 4.054 SCREW, TRANSMISSION NEUTRAL AND BACK UP LAMP SWITCH TO COLUMN**
- 2 7806573 69 ALL HT - #8-18 X 1/4 /SUP 7808133/
- 4.054 SWITCH ASSEMBLY, TRANSMISSION NEUTRAL START AND BACK UP LAMP**
- 1 9789717 67 ALL HT - WITH FLOOR SHIFT - D.L. 2.698 - /ILL. 4-1/
- 1 1993404 67-68 ALL - WITH COLUMN SHIFT - D.L. 2.698 /SUP 1993380/
- 1 1993422 68 ALL HT - WITH FLOOR SHIFT - D.L. 2.698 - /ILL. 4-1/
- 1 1994158 69-70 ALL HT - D.L. 2.698 /SUP 1993456/
- 1 1994158 71 ALL HT - D.L. 2.698
- 72 ALL HT W/COLUMN SHIFT EXC SEAT BELT WARNING SYSTEM
- 72 ALL HT W/SEAT BELT WARNING SYSTEM
- 73 ALL HT /SUP 1994133/
- 1 1994154 72 ALL HT W/FLOOR SHIFT EXC SEAT BELT WARNING SYSTEM /SUP 1994115/
- 1 1994163 74-76 ALL - INCL SEAT BELT WARNING SWITCH
- 4.057 BOOT, TRANSMISSION DOWNSHIFT SWITCH**
- 1 9781103 67-69 ALL HT400
- 4.057 BRACKET, TRANSMISSION DOWNSHIFT SWITCH MOUNTING**
- 1 9785906 67 ALL
- 68-69 ALL HT400 - 4BC /SUP 9784533/
- 1 9783592 69 ALL HT400 - 2BC
- 4.057 CABLE ASSEMBLY, TRANSMISSION DOWNSHIFT CONTROL**
- 1 9796687 69 ALL 6 CYL HT350
- 1 9795962 69 ALL 8 CYL HT350
- 1 342486 70-71 ALL HT350
- 72 ALL HT350 - BLACK - FIRST TYPE - 42 IN LONG /SUP 3972237/
- 1 490443 72 ALL HT350 - BLACK - SECOND TYPE - 41 IN LONG /SUP 487910/
- 1 342486 73-75 6 CYL HT350 /SUP 330196/
- 1 490443 73-74 8 CYL HT350
- 1 1248361 75-76 6 CYL HT350
- 1 1248358 75-76 8 CYL HT350
- 4.057 CLIP, TRANSMISSION DOWNSHIFT CONTROL CABLE**
- 1 N.L.A. 69 ALL HT350 6 CYL /SUP 9782367/
- 1 9795713 69 ALL HT - AND TRANS VACUUM PIPE

- 4.057 CONNECTOR, TRANSMISSION DOWNSHIFT SOLENOID VALVE**
- 1 8626252 67-69 ALL HT400 - SINGLE MALE - / SUP 2984090/ /ILL. 4-1/
- 1 8626597 70 HT400
- 71 HT400 - TRANS CODED PR, PT OR PY
- 1 8626252 71 HT400 - TRANS CODED PQ
- 1 8626597 72-74 HT400
- 4.057 INSERT, TRANSMISSION DOWNSHIFT CONTROL LEVER**
- 1 9795964 69 ALL HT350
- 4.057 NUT, TRANSMISSION DOWNSHIFT SWITCH AND SPACER TO BRACKET**
- 1 9776110 67-69 ALL HT400
- 4.057 RETAINER, TRANSMISSION DOWNSHIFT CONTROL CABLE TO THROTTLE LEVER**
- 1 403993 69 ALL HT350 /SUP 1386458/
- 4.057 SEAL, TRANSMISSION VACUUM MODULATOR TO CASE**
- SEE GROUP 4.205
- 4.057 SPACER, TRANSMISSION DOWNSHIFT SWITCH MOUNTING**
- 1 9775940 67-69 ALL HT400
- 4.057 SWITCH ASSEMBLY, TRANSMISSION DOWNSHIFT CONTROL**
- 1 9785545 67-69 ALL HT400
- 1 1242101 70 ALL HT400 /SUP 1233031/
- 1 1242101 71 ALL TH400 - 2 BLADE TYPE TERMINALS /SUP 3986863/
- 1 1242101 72 ALL TH WITH TRANS AM /SUP 1235480/
- 1 1242101 72 ALL TH400 EXC TRANS AM / SUP 3986863/
- 1 1242101 73-75 HT400
- 4.057 WASHER, TRANSMISSION DOWNSHIFT CONTROL CABLE TO CARBURETOR LEVER EXTENSION**
- 1 9428565 69 ALL HT350 8 CYL
- 4.060 BRACKET, TRANSMISSION DOWNSHIFT CABLE MOUNTING**
- 1 N.L.A. 69 ALL HT350 6 CYL - 1BC /SUP 9784384/
- 1 3972998 70-74 6 CYL HT350
- 1 479805 70-71 8 CYL HT350
- 1 486054 72 8 CYL HT350 - FIRST TYPE - 42 IN LONG
- 1 487844 72 8 CYL HT350 - SECOND TYPE - 41 IN LONG
- 73-74 8 CYL HT350
- 1 497255 75 8 CYL HT350
- 4.060 CLIP, TRANSMISSION DOWNSHIFT CONTROL CABLE TO TRANSMISSION FILLER TUBE BRACKET**
- 1 1233599 70 ALL HT350
- 71-74 8 CYL HT350
- 4.060 CLIP, TRANSMISSION DOWNSHIFT LEAD**
- 1 9787673 67-74 ALL HT
- 4.060 PIN, TRANSMISSION DOWN SHIFT CONTROL CABLE LEVER**
- 1 485839 72-74 8 CYL HT350 - TO CARB

4.067 SHIELD, TRANSMISSION CONTROL SPLASH

1	N.L.A.	67 68	ALL HT - WITH COLUMN SHIFT ALL HT EXC RAM AIR OR 400 HO - WITH COLUMN SHIFT - ATTACH WITH IDLER SUPPORT BOLTS /SUP 9792574/
1	9798982	69	ALL HT - WITH FLOOR SHIFT
1	549234	76	ALL HT - CONSISTS OF /1/ 9798978 SPLASH SHIELD AND /1/ 549223 INSTRUCTION SHEET

4.075 RELAY, TRANSMISSION CONTROL SPARK

1	3990843	71	6 CYL HT350 - DELAY
1	3990842	71	6 CYL HT350 - REVERSING
1	3996296	72	6 CYL ENG HT350 - DELAY

4.075 RELAY ASSEMBLY, TRANSMISSION CONTROL VACUUM ADVANCE DELAY

1	6270698	73-74	ALL
---	---------	-------	-----

4.075 SEAL, TRANSMISSION SPEED CONTROL SPARK SWITCH

1	6264904	72	ALL 8 CYL HT
---	---------	----	--------------

4.075 SWITCH, TRANSMISSION CONTROLLED SPARK

1	6462514	70-71	ALL HT350
1	6462286	70-71	ALL HT400
1	546633	72	HT350 W/35, 36, 37, 38 OR 39 TOOTH SPEEDO DRIVEN GEAR
1	546632	72	HT350 W/40, 41, 42, 43, 44 OR 45 TOOTH SPEEDO DRIVEN GEAR
1	546629	72	HT400 W/35, 36, 37, 38 OR 39 TOOTH SPEEDO DRIVEN GEAR
1	546630	72	HT400 W/40, 41, 42, 43, 44 OR 45 TOOTH SPEEDO DRIVEN GEAR
1	1242546	73-74	8 CYL HT350
1	1242546	75	HT350 WITH 400 /4BC/ ENG EXC CATALYTIC CONVERTER
1	8627332	73-74	HT400

4.081 MOUNTING ASSEMBLY, TRANSMISSION SUPPORT

1	479795	67-72	ALL HT400 /SUP 9746982/
1	3913498	69-74	ALL HT350 /SUP 3792133/
1	479795	73-74	ALL HT400
1	498129	75	ALL HT
1	525620	76	ALL HT

4.081 SUPPORT ASSEMBLY, TRANSMISSION

MOVED TO GROUP 7.011 AND
NAME CHANGED TO
CROSSMEMBER

4.083 SHIELD, TRANSMISSION MOUNTING ASSEMBLY HEAT

1	498160	75	8 CYL ENG
---	--------	----	-----------

4.085 SPACER, TRANSMISSION MOUNT TO TRANSMISSION

2	497737	76	ALL
---	--------	----	-----

4.085 WASHER, TRANSMISSION SUPPORT MOUNTING TO BRACKET

2	3818180	67-70	ALL HT - 15/32 X 1-1/4 X 3/16 THICK
---	---------	-------	--

4.103 CASE ASSEMBLY, TRANSMISSION / COMPLETE/

1	8626977	67-74	HT400 - INCL BUSHING /SUP 8624969-8626952/
1	461913	69-76	ALL HT350 - INCLUDES BUSHING - STAMPED 6460146 - SEE NOTE A /SUP 3974336/ - /ILL. 4-1/

*NOTE A. WHEN INSTALLING THIS CASE OR CASE
STAMPED 6260011 YOU MUST USE PN 6261516 VALVE,
GROUP 4.205.*

4.103 PLUG, TRANSMISSION CASE PARKING BRAKE PAWL SHAFT BORE HOLE

1	8620318	67-76	HT - 3/8 IN DIA - D.L. 4.294
---	---------	-------	------------------------------

4.103 PLUG, TRANSMISSION INTERMEDIATE CLUTCH CUP

1	N.L.A.	67-74	HT400 - 1/4 DIA /SUP 8611710/
---	--------	-------	-------------------------------

4.104 BUSHING, TRANSMISSION CASE

1	8623941	67-74	ALL HT400 - /ILL. 4-1/
1	6261016	69-76	ALL HT350 - TO OUTPUT SHAFT - /ILL. 4-1/

4.104 PIPE ASSEMBLY, TRANSMISSION VENT

1	3820840	69-72	ALL HT350 /SUP 6261289/
1	8627566	73-74	HT400

4.104 SLEEVE AND PIPE ASSEMBLY, TRANSMISSION OUTSIDE VENT

1	8623425	67-72	ALL HT400 - /ILL. 4-1/
---	---------	-------	------------------------

4.115 BOLT, TRANSMISSION CONVERTER TO FLYWHEEL

AR	3987930	67-72	HT /SUP 1362977/
----	---------	-------	------------------

4.115 CONVERTER ASSEMBLY, TRANSMISSION /REBUILT/

1	8623964	67-68	ALL - /ILL. 4-1/
1	1394144	69-74	ALL HT350 - /ILL. 4-1/
1	8623990	69-71	ALL HT400 - 2BC - /ILL. 4-1/
1	8623964	69-71	ALL HT400 - 4BC - /ILL. 4-1/
		72-74	ALL HT400
1	1252084	75-76	6 CYL ENG
1	1252083	75-76	TH350 WITH 350 OR 400 ENG
1	8623990	75-76	TH400

4.115 SCREW, TRANSMISSION CONVERTER COVER PAN TO CASE

1	9784860	67-74	ALL - NO. 12-11 X 1
AR	6261376	70-72	6 CYL HT - 1/4-20 X 7/8 - INCLUDES WASHER

4.115 SPACER, CONVERTER TO CRANKSHAFT

1	1362702	69-70	ALL HT350
---	---------	-------	-----------

4.115 UNDERPAN, TRANSMISSION CONVERTER

NOTE. REFER TO GROUP 0.679.

4.123 SHAFT, TRANSMISSION INPUT

1	360941	69-75	HT350
1	8640235	76	HT350

4.123 SHAFT, TRANSMISSION TURBINE

1	8624772	67-74	ALL HT400 - /ILL. 4-1/
---	---------	-------	------------------------

4.128 BRACKET, TRANSMISSION OIL COOLER PIPES

1	3945470	70-71	6 CYL HT350
---	---------	-------	-------------

4.128 CLAMP, TRANSMISSION OIL COOLER PIPE

1	3998687	72	6 CYL HT350
1	6271699	73-76	6 CYL HT350

4.128 CLIP, TRANSMISSION OIL COOLER PIPES

2 3710497 67-70 ALL 8 CYL HT
1 3945472 70-71 6 CYL HT350
2 3710497 72-74 ALL
1 496112 75-76 HT350 - TO ENGINE

4.128 CONNECTOR, TRANSMISSION OIL COOLER PIPES TO TRANSMISSION

2 386297 67-69 ALL HT - 5/16 IN
AR 3974421 70-76 HT350 - INVERTED FLARED
TUBE - HEX HEAD
2 8626632 70-74 ALL HT400

4.128 GASKET, TRANSMISSION OIL COOLER FITTING

2 8625422 67-74 ALL HT400

4.128 SPACER, TRANSMISSION OIL COOLER PIPES

1 3945475 70-71 6 CYL HT350

4.128 WASHER, TRANSMISSION OIL COOLER LINES TO CONNECTOR

2 8625422 67-70 ALL HT - COPPER /SUP
1194600/

4.133 INDICATOR ASSEMBLY, TRANSMISSION OIL LEVEL

1 9789821 67 ALL
1 9792498 68-69 ALL HT400
1 1244421 74-76 HT

4.133 PIPE ASSEMBLY, TRANSMISSION OIL FILLER

1 9789818 67-69 HT400
1 490102 69 HT350 /SUP 9795816/
1 6260027 70-73 HT350
1 6261755 72 HT350
1 1238779 70-73 HT 400 /SUP 1385944/
1 416562 74 HT350 W/350 ENG
1 1244468 74 HT400
1 355555 75-76 6 CYL ENG W/HT350
1 525397 75-76 8 CYL ENG

4.133 ROD, TRANSMISSION OIL FILLER TUBE / OIL GAUGE/

1 1239014 69 HT 350
70-73 HT /SUP 3905449,1387568/

4.133 SEAL, TRANSMISSION OIL FILLER TO CASE

1 6264902 67-72 ALL
74-76 ALL /SUP 6255641/

4.158 GEAR, TRANSMISSION INPUT RING

1 6261401 69-76 HT350 - INCL SUPPORT /SUP
6261397/

4.158 WASHER, TRANSMISSION INPUT RING GEAR SUPPORT THRUST

1 6261383 69-72 ALL HT350 - /ILL. 4-1/
1 6260374 73-74 HT350

4.159 BEARING AND RACES KIT, TRANSMISSION CENTER SUPPORT TO SUN GEAR THRUST

1 8623920 67-74 HT400 INCL 2 RACES AND 1
BEARING - /ILL. 4-1/

4.159 BEARING AND RACES KIT, TRANSMISSION SUN GEAR TO REAR INTERNAL GEAR THRUST

1 8623921 67-74 HT400 INCL 2 RACES AND 1
BEARING - /ILL. 4-1/

4.159 GEAR, TRANSMISSION SUN

1 8626807 67-74 HT400 /SUP 8623182/
1 6260185 69-76 HT350 - INCL BUSHING /SUP
6261168/

4.161 BUSHING, TRANSMISSION OIL PUMP STATOR SHAFT REAR

2 6261022 69-76 ALL HT350 - /ILL. 4-1/

4.161 BUSHING, TRANSMISSION SUN GEAR SHAFT

2 8623944 67-74 ALL HT400 - /ILL. 4-1/

4.161 SHAFT, TRANSMISSION SUN GEAR

1 8623177 67-74 ALL HT400 - INCL BUSHINGS -
/ILL. 4-1/

4.162 BOLT, TRANSMISSION CASE TO CENTER SUPPORT

1 8624009 67-74 ALL HT400 - /ILL. 4-1/

4.162 BUSHING, TRANSMISSION CENTER SUPPORT

1 8623942 67-74 ALL HT400 - /ILL. 4-1/

4.162 RING, TRANSMISSION CENTER SUPPORT INTERMEDIATE CLUTCH OIL SEAL

4 8626356 67-74 HT400 - /ILL. 4-1/ /SUP
8623148/

4.162 RING, TRANSMISSION CENTER SUPPORT TO CASE

1 8623437 67-74 ALL HT400 - SNAP - /ILL. 4-1/

4.162 SCREW, TRANSMISSION CASE TO CENTER SUPPORT LOCATING

1 8623498 67-68 ALL - /ILL. 4-1/

4.162 SPACER, TRANSMISSION CASE CENTER SUPPORT

1 8626816 70-74 ALL HT400

4.162 SUPPORT AND RACE ASSEMBLY, TRANSMISSION CENTER

1 8625990 67-74 HT400 INCL RACE, BUSHING
AND PLUG /SUP 8624992/ - /
ILL. 4-1/

4.162 SUPPORT ASSEMBLY, TRANSMISSION LOW AND REVERSE CLUTCH

1 6261118 69-76 ALL HT350 - /ILL. 4-1/

4.162 WASHER, TRANSMISSION CENTER SUPPORT TO REACTION DRUM THRUST

1 8624783 67-74 ALL HT400 /SUP 8624088/ - /
ILL. 4-1/

4.163 PLATE, TRANSMISSION DIRECT CLUTCH

AR 8623197 67-73 ALL HT400 - DRIVEN - 14
TEETH - /ILL. 4-1/

1 8623122 67-74 ALL HT400 - BACKING - /ILL. 4-
1/

1 8623851 67-70 ALL HT400 - EXC RAM AIR -
DRIVEN WAVE

5 8623483 67-74 ALL HT400 - DRIVE - /ILL. 4-1/

AR 6261278 69-76 ALL HT350 - DRIVE - /ILL. 4-1/

AR 6261071 69-76 ALL HT350 - DRIVEN - /ILL. 4-
1/

1 6261350 69-76 ALL HT350 - PRESSURE - /ILL.
4-1/

1 8623851 71 HT400 CODED PT OR PY -
DRIVEN WAVE

72 HT400 CODED PT OR PX -
DRIVEN WAVE

4.163 PLATE, TRANSMISSION DIRECT CLUTCH

(Cont'd)

- 1 8623851 73-74 HT400 - DRIVEN WAVE
- 4.163 PLATE, TRANSMISSION FORWARD CLUTCH**
- 4 8623849 67-72 ALL HT400 - DRIVEN - 14 TEETH - /ILL. 4-1/
- 1 8623851 67-73 ALL HT400 - DRIVEN WAVE - 14 TEETH - /ILL. 4-1/
- 5 8623483 67-73 ALL HT400 - DRIVE - /ILL. 4-1/
- AR 6261071 69-76 ALL HT350 - DRIVEN - /ILL. 4-1/
- AR 6261278 69-76 ALL HT350 - DRIVE - /ILL. 4-1/
- 1 6261072 69-76 ALL HT350 - PRESSURE - .245-.255 THICK - /ILL. 4-1/
- 1 6261349 69-76 ALL HT350 - PRESSURE - .275-.285 THICK - /ILL. 4-1/
- 1 6261350 69-76 ALL HT350 - PRESSURE - .306-.316 THICK - /ILL. 4-1/
- 4 8623849 73-74 HT400 EXC TRANS CODED PQ - DRIVEN - 14 TEETH
- AR 8625197 73-74 HT400 TRANS CODED PQ - DRIVEN - 14 TEETH - 3/32 IN - FLAT

4.163 PLATE, TRANSMISSION INTERMEDIATE CLUTCH

- 3 8623151 67-74 ALL HT400 - DRIVING - 47 TEETH - /ILL. 4-1/
- 2 8623150 67-74 ALL HT400 - REACTION - /ILL. 4-1/
- 1 8623152 67-74 ALL HT400 - BACKING - /ILL. 4-1/
- 1 8624199 67-74 ALL HT400 EXC 1971 CODED PR, PQ OR PW - REACTION WAVE - /ILL. 4-1/
- AR 6261277 69-76 ALL HT350 - DRIVE - /ILL. 4-1/
- AR 6261450 69-76 ALL HT350 - REACTION - /ILL. 4-1/
- 1 6261010 69-76 ALL HT350 - PRESSURE - /ILL. 4-1/
- 1 8624199 73-74 HT400 EXC TRANS CODED PQ - REACTION WAVE

4.163 PLATE, TRANSMISSION LOW AND REVERSE CLUTCH DRIVE

- AR 3832386 69-76 ALL HT350 - /ILL. 4-1/

4.163 PLATE, TRANSMISSION LOW AND REVERSE CLUTCH REACTION

- AR 6261120 69-76 HT350

4.164 BEARING, TRANSMISSION DIRECT CLUTCH DRUM THRUST REAR

- 1 9428864 69-76 ALL HT350 - /ILL. 4-1/

4.164 CLUTCH ASSEMBLY, TRANSMISSION INTERMEDIATE OVERRUN

- 1 356826 69-76 HT350 /SUP 6261298/

4.164 GUIDE, TRANSMISSION INTERMEDIATE CLUTCH SPRING

- 1 8627385 73-74 HT400

4.164 HUB, TRANSMISSION DIRECT CLUTCH DRIVING

- 1 8625718 67-74 ALL HT400 - /ILL. 4-1/

4.164 HUB, TRANSMISSION FORWARD CLUTCH

- 1 8624197 67 ALL - /ILL. 4-1/
- 1 8625717 68-74 ALL HT400 - /ILL. 4-1/

4.164 RETAINER, TRANSMISSION INTERMEDIATE CLUTCH SPRING

- 1 8623146 67-74 HT400 - /ILL. 4-1/

4.164 RETAINER, TRANSMISSION FORWARD AND/OR DIRECT CLUTCH PISTON SPRING

- 2 8623104 67-74 HT400 - /ILL. 4-2/

4.164 RING, TRANSMISSION CLUTCH PISTON RETURN SPRING SEAT

- 2 6261037 69-76 ALL HT350 - 1 USED FORWARD AND 1 USED DIRECT - /ILL. 4-2/
- 1 6261041 69-76 ALL HT350 - LOW AND REVERSE - /ILL. 4-1/

4.164 RING, TRANSMISSION FORWARD AND/OR DIRECT TO HOUSING

- 2 8623105 67-74 HT400 - SNAP - RETAINING - /ILL. 4-2/

4.164 RING, TRANSMISSION FORWARD AND/OR DIRECT CLUTCH

- 2 8623112 67-74 HT400 - SNAP - /ILL. 4-1/

4.164 RING, TRANSMISSION INTERMEDIATE CLUTCH RETAINER

- 1 8623149 67-74 HT400 - SNAP - /ILL. 4-1/

4.164 RING, TRANSMISSION INTERMEDIATE CLUTCH SPRING RETAINER /TO SUPPORT/

- 1 8623153 67-74 ALL HT400 - SNAP - /ILL. 4-1/

4.164 SEAT, TRANSMISSION LOW AND REVERSE CLUTCH PISTON RETURN SPRING

- 1 N.L.A. 69-72 ALL HT350 - USE SEAT AND SPRING ASSY

4.164 SEAT, TRANSMISSION CLUTCH PISTON RETURN SPRING

- 1 6261111 69-73 ALL HT350 - INTERMEDIATE - /ILL. 4-1/

4.164 SEAT AND SPRING, TRANSMISSION DIRECT CLUTCH

- 1 1242723 69-76 HT350

4.164 SEAT AND SPRING, TRANSMISSION FORWARD CLUTCH

- 1 1242722 69-76 HT350

4.164 SEAT AND SPRING, TRANSMISSION INTERMEDIATE CLUTCH PISTON RETURN

- 1 1243126 73-76 HT350 WITH TRANS NOT HAVING EXTERIOR SCREW ON RH SIDE FOR ADJUSTING CLUTCH DRUM

4.164 SEAT AND SPRING, TRANSMISSION LOW AND REVERSE CLUTCH PISTON RETURN

- 1 6260382 69-76 HT350

4.164 SPRING, TRANSMISSION FORWARD CLUTCH PISTON RELEASE

- AR 8624101 67-74 ALL HT400 - /ILL. 4-1/

4.164 SPRING, TRANSMISSION INTERMEDIATE CLUTCH PISTON RELEASE

- 3 8623145 67-74 HT400 - /ILL. 4-1/

4.164 SPRING, TRANSMISSION DIRECT CLUTCH PISTON RELEASE

16 8623103 67-69 ALL HT400 - /ILL. 4-1/
16 8624073 70-74 ALL HT400

4.164 SPRING, TRANSMISSION CLUTCH CUSHION

1 6261309 69-76 ALL HT350 - INTERMEDIATE - /ILL. 4-1/
1 6261457 69-70 ALL HT350 - DIRECT - /ILL. 4-1/
1 6261222 69-75 ALL HT350 - FORWARD - /ILL. 4-1/
1 8640176 76 HT350 - FORWARD

4.164 SPRING, TRANSMISSION CLUTCH PISTON RETURN

AR 1242723 69-72 ALL HT350 - 21 USED FORWARD AND 17 USED DIRECT /SUP 6261025 - 6260311/
30 6261024 69-70 ALL HT350 - INTERMEDIATE
17 N.L.A. 69-72 ALL HT350 - LOW AND REVERSE - USE SEAT AND SPRING ASSY

4.164 WASHER, TRANSMISSION FORWARD CLUTCH HUB TO HOUSING THRUST

1 8624196 67-74 ALL HT400 - /ILL. 4-1/

4.164 WASHER, TRANSMISSION FORWARD CLUTCH HUB TO DIRECT CLUTCH HOUSING

1 8624781 67-74 ALL HT400 /SUP 8624089/ - /ILL. 4-1/

4.166 PISTON, TRANSMISSION DIRECT CLUTCH

1 8625514 67-72 ALL HT400 /SUP 8625515/ - /ILL. 4-1/
1 6260196 69-76 6 CYL HT350 /SUP 6261102-6261622/
1 6260197 69-76 ALL 8 CYL HT350 /WHEN USING ON 1969 REMOVE AND DISCARD DIRECT CLUTCH PISTON CUSHION SPRING/ /SUP 6261623/ - /ILL. 4-1/
1 8626544 73-74 HT400 - TRANS CODED PQ
1 8625514 73 HT400 - TRANS CODED PG-PR-PT-PX
74 HT400 - TRANS CODED PG-PZ
1 8625518 74 HT400 - TRANS CODED PT

4.166 PISTON, TRANSMISSION FORWARD CLUTCH

1 8624016 67-72 ALL HT400 - /ILL. 4-1/
1 6261115 69-76 ALL 6 CYL HT350 - /ILL. 4-1/
1 6261116 69-76 ALL 8 CYL HT350 - /ILL. 4-1/
1 8624016 73-74 HT400 TRANS CODED PG-PR
1 8625505 73-74 HT400 TRANS CODED PQ
1 8624021 74 HT400 - TRANS CODED PT

4.166 PISTON, TRANSMISSION INTERMEDIATE CLUTCH

1 8624210 67-72 ALL HT400 - /ILL. 4-1/
1 6260265 69-76 6 CYL HT350 /SUP 1246318-6261448/
1 6260264 69-74 ALL 8 CYL HT350 /SUP 6261449/ /ILL. 4-1/
1 8624210 73-74 HT400 - INCL RETAINER /SUP 8627379-8626938/
1 1246319 75-76 8 CYL ENG HT350

4.166 PISTON, TRANSMISSION LOW AND REVERSE CLUTCH

1 344212 69-76 6 CYL HT350 /SUP 6261106/

4.166 PISTON, TRANSMISSION LOW AND REVERSE CLUTCH (Cont'd)

1 6261105 69-76 8 CYL ENG HT350 - /ILL. 4-1/

4.166 SEAL KIT, TRANSMISSION FORWARD AND/OR DIRECT PISTON

2 8623917 67-74 HT400 - INCL INNER, CENTER AND OUTER SEAL - /ILL. 4-2/
1 3947087 69-76 HT350 - INCL INNER, CENTER AND OUTER SEAL - DIRECT - /ILL. 4-1/
1 3947086 69-76 ALL HT350 - FORWARD - INCL 1 - INNER AND 1 - OUTER SEAL - /ILL. 4-1/

4.166 SEAL KIT, TRANSMISSION INTERMEDIATE CLUTCH PISTON

1 8623918 67-74 HT400 - INCL INNER AND OUTER SEALS - /ILL. 4-1/

4.167 CAM, TRANSMISSION INTERMEDIATE OVERRUN CLUTCH

1 6260318 69-76 ALL HT350 /SUP 6261297/

4.167 RETAINER, TRANSMISSION INTERMEDIATE OVERRUN CLUTCH

1 6261143 69-76 ALL HT350 - /ILL. 4-1/

4.167 RETAINER, TRANSMISSION INTERMEDIATE CLUTCH

1 8623119 67-74 ALL HT400 - /ILL. 4-1/

4.167 RING, TRANSMISSION FORWARD AND/OR DIRECT CLUTCH PRESSURE PLATE RETAINING

2 6261048 69-76 ALL HT350 - /ILL. 4-2/

4.167 RING, TRANSMISSION INTERMEDIATE CLUTCH SPRAG RETAINER TO DIRECT CLUTCH HOUSING

1 8623120 67-74 ALL HT400 - SNAP - /ILL. 4-1/

4.167 ROLLER, TRANSMISSION INTERMEDIATE CLUTCH

1 8625814 71-74 HT400 - USED ONLY WITH INTERMEDIATE ROLLER TYPE CLUTCH

4.167 SPRAG AND BUSHING, TRANSMISSION INTERMEDIATE CLUTCH

1 8623116 67-74 ALL HT400 - USED ONLY WITH INTERMEDIATE SPRING TYPE CLUTCH - /ILL. 4-1/

4.168 BUSHING, TRANSMISSION INTERMEDIATE CLUTCH SPRAG

2 8623945 67-71 ALL HT400 - /ILL. 4-1/

4.168 RACE, TRANSMISSION INTERMEDIATE CLUTCH /OUTER/

1 8623117 67-74 ALL HT400 - /ILL. 4-1/
1 6261021 69-76 ALL HT350 - OVERRUN - /ILL. 4-1/

4.168 RING, TRANSMISSION INTERMEDIATE OVERRUN CLUTCH RETAINING

1 6261038 69-76 ALL HT350 - FRONT

4.169 BEARING, TRANSMISSION DIRECT CLUTCH FRONT

1 9436851 75-76 ALL

- 4.169 BEARING, TRANSMISSION OIL PUMP THRUST**
1 9433556 74-75 HT350 W/6 CYL OR 350 ENG
- 4.169 BUSHING, TRANSMISSION DIRECT CLUTCH DRUM TO PUMP COVER**
1 6261026 69-76 ALL HT350 - /ILL. 4-1/
- 4.169 DRUM ASSEMBLY, TRANSMISSION DIRECT CLUTCH**
1 6261404 69-76 ALL HT350 /SUP 6260317/ - / ILL. 4-1/
- 4.169 HOUSING ASSEMBLY, TRANSMISSION DIRECT CLUTCH**
1 8627433 67-72 HT400 - INCL RACE - USED ONLY WITH INTERMEDIATE SPRING TYPE CLUTCH /SUP 8623061/
1 8627387 71-72 HT400 - INCL CAM - USED ONLY WITH INTERMEDIATE ROLLER TYPE CLUTCH /SUP 8625816/
1 8625756 73-74 HT400 - TRANS CODED PQ - INCL RACE
- 4.169 HOUSING ASSEMBLY, TRANSMISSION FORWARD CLUTCH**
1 8624908 67-74 ALL HT400 - INCL WASHER - / ILL. 4-1/
1 360943 69-75 HT350 - DOES NOT INCLUDE INPUT SHAFT
1 8640236 76 HT350 /BUICK BUILT/
- NOTE: WHEN USING ON MODELS WITH A FLAT THRUST WASHER BETWEEN THE DIRECT CLUTCH AND FORWARD CLUTCH HOUSING, ALSO ORDER 1-6261404 DRUM AND 1-9428864 BEARING.*
- 4.169 RING, TRANSMISSION DIRECT CLUTCH DRUM OIL SEAL**
3 6261746 69-76 ALL HT350 /SUP 6261063/ - / ILL. 4-1/
- 4.169 RING, TRANSMISSION FORWARD CLUTCH HOUSING OIL SEAL**
2 6261570 69-76 ALL HT350 - /SUP 6261064/ - / ILL. 4-1/
- 4.169 SPACER, TRANSMISSION OIL PUMP THRUST**
AR 332505 74-76 HT350
- 4.169 WASHER, TRANSMISSION DIRECT CLUTCH DRUM THRUST /FRONT/**
1 6261015 69-76 ALL HT350 - .065-.067
1 6261013 69-76 ALL HT350 - .082-.084
1 6261014 69-76 ALL HT350 - .099-.101
- 4.169 WASHER, TRANSMISSION PUMP COVER FORWARD CLUTCH DRUM**
AR 8623300 67-74 ALL HT400 - .060-.064
AR 8623301 67-74 ALL HT400 - .071-.075
AR 8623302 67-74 ALL HT400 - .082-.086
AR 8623303 67-74 ALL HT400 - .093-.097
AR 8623304 67-74 ALL HT400 - .104-.108
AR 8623305 67-74 ALL HT400 - .115-.119
AR 8623306 67-74 ALL HT400 - .126-.130
- 4.172 PLUG, TRANSMISSION MAINSHAFT**
1 8623484 67-73 ALL HT400 - .31 - /ILL. 4-1/

- 4.172 RING, TRANSMISSION MAINSHAFT TO INTERNAL GEAR**
1 8625221 67-74 ALL HT400 - SNAP - /ILL. 4-1/
- 4.172 SHAFT AND PLUG ASSEMBLY, TRANSMISSION MAIN**
1 8623321 67 ALL - /ILL. 4-1/
1 8625736 68-74 ALL HT400 /SUP 8625734/ - / ILL. 4-1/
- 4.175 CARRIER ASSEMBLY, TRANSMISSION OUTPUT /COMPLETE/**
1 8625957 67-74 HT400 /SUP 8625731/
1 6261643 69-74 ALL HT350
1 1250023 75-76 HT350
- 4.175 CARRIER PACKAGE, TRANSMISSION REACTION /COMPLETE/**
1 8624971 67 ALL - /ILL. 4-1/
1 8627893 68-74 ALL HT400 - /ILL. 4-1/ /SUP 8625859/
1 6261645 69-76 ALL HT350 /SUP 6261391/ - / ILL. 4-1/
- 4.175 PINION KIT, TRANSMISSION OUTPUT AND REACTION CARRIERS**
2 8623951 67-68 ALL - /ILL. 4-1/ - NOTE. USE THIS KIT TO REPLACE PINION PINS WITH .4340-.4342 OD
2 8625913 67-72 ALL HT400 - /ILL. 4-1/ - NOTE. USE THIS KIT TO REPLACE PINION PINS WITH .3928-.3930 OD
73-74 HT400
- 4.175 PLUG, TRANSMISSION OUTPUT SHAFT**
1 8623484 67-74 ALL HT400 - .34 DIA - /ILL. 4-1/
- 4.175 SHAFT ASSEMBLY, TRANSMISSION OUTPUT**
1 8627453 67-74 ALL HT400 - INCLUDES PLUG / SUP 8625961/
1 1245379 69-76 HT350 /SUP 6260182/
- 4.175 SHELL, TRANSMISSION SUN GEAR DRIVE**
1 1241726 69-76 ALL HT350 /SUP 6261126/ - / ILL. 4-1/
- 4.176 BEARING, TRANSMISSION OUTPUT CARRIER**
1 9436852 75-76 HT350
- 4.176 BEARING, TRANSMISSION OUTPUT RING GEAR**
1 9436853 75-76 HT350
- 4.176 BEARING ASSEMBLY, TRANSMISSION OUTPUT RING GEAR SUPPORT TO CASE**
1 9427759 69-76 ALL HT350 - ROLLER - /ILL. 4-1/
- 4.176 BUSHING, TRANSMISSION INPUT RING GEAR ASSEMBLY**
2 6261029 69-76 ALL HT350 - /ILL. 4-1/
- 4.176 BUSHING, TRANSMISSION OUTPUT SHAFT**
1 8624988 67-74 ALL HT400 /SUP 8623943/
1 3789034 69-76 ALL HT350 - /ILL. 4-1/
- 4.176 BUSHING, TRANSMISSION REACTION PLANET CARRIER TO OUTPUT SHAFT**
1 6261033 69-76 ALL HT350 - /ILL. 4-1/

4.176 BUSHING, TRANSMISSION SUN GEAR TO OUTPUT SHAFT

2 6261033 69-76 ALL HT350 - /ILL. 4-1/

4.176 RING, TRANSMISSION FRONT INTERNAL GEAR

1 8626112 67-74 ALL HT400 /SUP 8623779/ - / ILL. 4-1/

4.176 RING, TRANSMISSION OUTPUT SHAFT TO FRONT INTERNAL GEAR INTERNAL

1 8623203 67-68 ALL - SNAP - /ILL. 4-1/
1 8626173 69-74 ALL HT400 - SNAP - /ILL. 4-1/

4.176 RING, TRANSMISSION OUTPUT CARRIER RETAINING TO OUTPUT SHAFT FRONT

1 6261039 69-76 ALL HT350 - /ILL. 4-1/

4.176 RING, TRANSMISSION OUTPUT RING GEAR SUPPORT TO SHAFT

1 6261040 69-76 ALL HT350 - /ILL. 4-1/

4.176 RING, TRANSMISSION SUN GEAR DRIVE SHELL RETAINING

2 6261066 69-76 ALL HT350 - /ILL. 4-1/

4.176 WASHER, TRANSMISSION RING GEAR THRUST FRONT

1 6261027 69-76 ALL HT350 - INPUT - /ILL. 4-1/
1 6261124 69-76 ALL HT350 - OUTPUT - /ILL. 4-1/

4.176 WASHER, TRANSMISSION FRONT INTERNAL GEAR TO REACTION CARRIER THRUST

1 8626372 67-74 ALL HT400 /SUP 8623180/ - / ILL. 4-1/

4.176 WASHER, TRANSMISSION SUN GEAR THRUST

1 6261034 69-76 HT350 - 1/32 IN THICK - /ILL. 4-1/
1 1241725 73 HT350 - 1/16 IN THICK

4.176 WASHER, TRANSMISSION OUTPUT SHAFT TO CASE THRUST

1 8626372 67-74 ALL HT400 /SUP 8625356/ - / ILL. 4-1/

4.176 WASHER, TRANSMISSION SUN GEAR SHELL REAR THRUST

1 6261184 69-76 ALL HT350 - /ILL. 4-1/

4.176 WASHER, TRANSMISSION OUTPUT SHAFT TO CASE

AR 8625401 67-74 HT400 - .074-.078 - STAMPED #1 - FLAT TABS /SUP 8623271/
AR 8625402 67-74 HT400 - .082-.086 - STAMPED #2 - FLAT TABS /SUP 8623272/
AR 8625403 67-74 HT400 - .090-.094 - STAMPED #3 - FLAT TABS /SUP 8623273/
AR 8625404 67-74 HT400 - .098-.102 - STAMPED #4 - FLAT TABS /SUP 8623274/
AR 8625405 67-74 HT400 - .106-.110 - STAMPED #5 - FLAT TABS /SUP 8623275/
AR 8625406 67-74 HT400 - .114-.118 - STAMPED #6 - FLAT TABS /SUP 8623276/

4.180 CLUTCH ASSEMBLY, TRANSMISSION LOW AND REVERSE

1 6261305 69-76 ALL HT350 - /ILL. 4-1/

4.180 RACE, TRANSMISSION LOW AND REVERSE OVERRUN CLUTCH

1 6261125 69-76 ALL HT350 - /ILL. 4-1/

4.180 RING, TRANSMISSION LOW AND REVERSE CLUTCH

1 6261416 69-76 ALL HT350 - SUPPORT TO CASE RETAINING - /ILL. 4-1/
2 6261051 69-76 ALL HT350 - TO CAM RETAINING - /ILL. 4-1/

4.180 ROLLER ASSEMBLY, TRANSMISSION LOW CLUTCH

1 8623842 67-74 ALL HT400 - /ILL. 4-1/

4.180 ROLLER PACKAGE, TRANSMISSION LOW CLUTCH

AR 8624960 67-74 ALL HT400 - 4 ROLLERS

4.180 SPRING, TRANSMISSION LOW AND REVERSE CLUTCH SUPPORT RETAINING

1 6261415 69-76 ALL HT350

4.187 BEARING AND RACES KIT, TRANSMISSION INTERNAL GEAR TO OUTPUT SHAFT

1 8623922 67-74 HT400 - INCL 2 RACES AND 1 BUSHING - /ILL. 4-1/

4.187 GEAR, TRANSMISSION OUTPUT RING

1 6261275 69-74 ALL HT350 - /ILL. 4-1/
1 1250022 75-76 HT350 - INCL BEARING

4.187 GEAR, TRANSMISSION REAR INTERNAL MAINSHAFT

1 8623202 67-74 ALL HT400 - /ILL. 4-1/

4.195 GASKET, TRANSMISSION OIL PAN DRAIN SCREW

1 3921989 69-76 ALL HT350

4.195 PAN, TRANSMISSION OIL

1 8623778 67 ALL - FIRST TYPE - WITH 3 DIMPLES ON OUTSIDE - /ILL. 4-1/
1 8625766 67 ALL - SECOND TYPE - WITH 2 DIMPLES ON OUTSIDE
1 335339 68-74 ALL HT400 - /ILL. 4-1/
1 69-74 HT350 - INCL PLUG AND GASKET /SUP 6261647/
1 8640016 75-76 ALL

4.195 SCREW, TRANSMISSION OIL PAN DRAIN

1 3923420 69-71 ALL HT350

4.196 GASKET, TRANSMISSION OIL PAN

1 8623266 67-72 HT400 - /ILL. 4-1/
1 6261649 69-76 ALL HT350 - TO TRANS CASE
1 8626931 73-74 HT400

4.196 SCREW AND WASHER, TRANSMISSION OIL PAN

13 3829139 67-70 HT400 - TO CASE - 5/16-18 X 5/8

4.197 BOLT, TRANSMISSION STRAINER RETAINING

1 8625769 67 ALL - SECOND TYPE - NO SIMILAR PART USED ON FIRST TYPE

- 4.197 BOLT, TRANSMISSION STRAINER RETAINING** (Cont'd)
- 1 8625769 68-74 ALL HT400
- 4.197 GROMMET, TRANSMISSION OIL PUMP FILTER ARM**
- 1 6437746 73-74 HT400
- 4.197 GROMMET, TRANSMISSION STRAINER TO PIPE**
- 1 6437746 67 ALL - SECOND TYPE - NO SIMILAR PART USED ON FIRST TYPE
68-72 ALL HT400
- 4.197 PIPE ASSEMBLY, TRANSMISSION INTAKE /TO STRAINER/**
- 1 8626886 67 ALL - SECOND TYPE - FIRST TYPE IS PART OF STRAINER
68-74 ALL HT400 - /SUP 8625428/ - / ILL. 4-1/
- 4.197 SCREEN AND GASKET UNIT, TRANSMISSION OIL PUMP**
- 1 6438816 69-75 HT350
1 1246417 76 HT350
- 4.197 SEAL, TRANSMISSION OIL SUCTION PIPE TO CASE OIL**
- 1 1363951 67-74 ALL HT400 - /ILL. 4-1/
- 4.197 STRAINER ASSEMBLY, TRANSMISSION OIL**
- 1 6438346 67 ALL - FIRST TYPE - WITH INTAKE PIPE WELDED ON / SUP 5579822/
1 6438348 67 ALL - SECOND TYPE - LESS INTAKE PIPE
68-74 ALL HT400 /SUP 6437741/
- 4.203 SEAL PACKAGE, TRANSMISSION INTERMEDIATE CLUTCH PISTON**
- 1 3947088 69-76 ALL HT350 - INCLUDES 1 INNER AND 1 OUTER SEAL - / ILL. 4-1/
- 4.203 SEAL PACKAGE, TRANSMISSION LOW AND REVERSE CLUTCH PISTON**
- 1 3947089 69-76 ALL HT350 - INCLUDES 1 OF INNER, OUTER AND CENTER SEALS - /ILL. 4-1/
- 4.205 CLIP, TRANSMISSION VACUUM PIPE**
- 1 9795713 67-68 ALL - TO FLYWHEEL HOUSING /SUP 9777821/
1 1380859 70-71 6 CYL HT350 - TO FLYWHEEL HOUSING
1 3905427 71-74 6 CYL HT350 - TO FILLER PIPE
1 488175 71-75 8 CYL ENG /SUP 479209/
1 3900412 75-76 HT350 WITH 6 CYL / MODULATOR PIPE/
- 4.205 HOSE, TRANSMISSION VACUUM MODULATOR PIPE**
- 1 336919 73-76 ALL - .23 ID X 1 FOOT, 3 IN LONG
- 4.205 MODULATOR ASSEMBLY, TRANSMISSION**
- 1 3027222 67-72 HT /SUP 1394524-8625976/
1 3027842 73-74 ALL - INCL SEAL
75 6 CYL ENG - INCL SEAL
1 3027843 75 8 CYL ENG - INCL SEAL
1 3034829 76 HT350 WITH 6 CYL
1 3032143 76 HT350 WITH 8 CYL

- 4.205 PIPE, CARBURETOR TO TRANSMISSION VACUUM**
- 1 9792518 68 ALL
1 9795882 69 ALL 8 CYL HT350 - 2BC
1 N.L.A. 69 8 CYL HT350 - 4BC /SUP 9796536/
1 N.L.A. 69 ALL 8 CYL HT400 - 2BC /SUP 9792210/
1 9792518 69 ALL 8 CYL HT400 - 4BC
1 1233546 70-71 6 CYL HT350
1 478908 70-71 8 CYL HT350
1 479112 70-71 ALL HT400 /2BC/
1 479111 70-72 ALL HT400 /4BC/
1 N.L.A. 72 ALL HT400 /2BC/ /SUP 545571/ - SEE NOTE A

NOTE A. FOR SERVICE USE BULK TUBING.

- 4.205 RETAINER, TRANSMISSION VACUUM MODULATOR**
- 1 1357282 67-73 ALL HT400 - /ILL. 4-1/
1 6261285 69-76 ALL HT350 - /ILL. 4-1/
1 8627650 74 HT400
- 4.205 SEAL, TRANSMISSION VACUUM MODULATOR TO CASE**
- 1 6264903 67-76 ALL HT /SUP 8619568-3708146/ - /ILL. 4-2/
- 4.205 TUBE, VACUUM PIPE TO TRANSMISSION**
- AR 3987364 67-71 ALL HT /SUP 541524/
- 4.205 VALVE, TRANSMISSION VACUUM MODULATOR**
- 1 8623983 67-74 ALL HT400 - /ILL. 4-1/
1 6261516 69-76 ALL HT350 /SUP 6261302/ - / ILL. 4-1/
- 4.216 BRACKET, TRANSMISSION DOWNSHIFT SWITCH MOUNTING**
- MOVED TO GROUP 4.057
- 4.216 BUSHING AND VALVE KIT, TRANSMISSION PRESSURE REGULATOR**
- 1 8625902 67-74 ALL HT400 - /ILL. 4-1/
- 4.216 PIN, TRANSMISSION VALVE RETAINING**
- AR 112496 69-72 HT350 - SQUARE END USED AS - FIRST AND SECOND SHIFT CONTROL VALVE SLEEVE RETAINER
- SECOND AND THIRD SHIFT CONTROL VALVE SLEEVE RETAINER
- DETENT REGULATOR VALVE RETAINER
- MANUAL LOW CONTROL VALVE RETAINER
- MODULATOR AND REVERSE BOOSTER VALVE SLEEVE PIN
- 4.216 PLUG, TRANSMISSION PRESSURE REGULATOR VALVE BORE**
- 1 8623292 67-74 ALL HT400 - .69 DIA
- 4.216 RING, TRANSMISSION PRESSURE REGULATOR VALVE**
- 1 274613 67-70 ALL HT400 - /ILL. 4-1/
- 4.216 SPACER, TRANSMISSION PRESSURE REGULATOR VALVE**
- AR 8623368 67-74 ALL HT400 - /ILL. 4-1/

4.216 SPRING, TRANSMISSION INTERMEDIATE SERVO PISTON

1 6261229 69-76 ALL HT350 - COIL - /ILL. 4-1/

4.216 SPRING, TRANSMISSION PRESSURE REGULATOR VALVE

1 8625648 67-74 ALL HT400 - /ILL. 4-1/
1 6260089 75 HT350

4.216 VALVE AND PLUG, TRANSMISSION PRESSURE REGULATOR

1 8623422 67-74 ALL HT400 /SUP 8624034/ - /ILL. 4-1/

4.216 VALVE PACKAGE, TRANSMISSION OIL COOLER BY PASS

1 3977543 69-76 ALL HT350 /SUP 3947082/ - /ILL. 4-1/

4.216 WASHER, TRANSMISSION PRESSURE REGULATOR VALVE SPRING RETAINER

1 8623039 67-74 ALL HT400 - /ILL. 4-1/

4.224 BODY OR PUMP ASSEMBLY, TRANSMISSION OIL PUMP

1 8625954 67-74 HT400 INCL DRIVE AND DRIVEN GEARS, OIL SEAL ASSY AND - O- RING
1 6264919 69 8 CYL ENG HT350
70-76 HT350 - SEE NOTE - INCL BUSHING, GEAR AND VALVE / SUP 6261799/

NOTE. WHEN USING IN PLACE OF MODELS WITH PRIMING VALVE AND SPRING DISCARD OLD PRIMING VALVE AND SPRING.

4.224 COVER AND STATOR SHAFT, TRANSMISSION OIL PUMP

1 8625955 67-74 HT400 - FRONT - INCL PRESSURE REGULATOR, BOOST VALVES AND ATTACHING BOLTS - SEE NOTE /SUP 8624982/
1 6258819 69-76 HT350 - INCL COVER, STATOR SHAFT AND INTEGRAL BUSHINGS /SUP 6261704/

NOTE. USE 8625955 T/W BODY, FRONT OIL PUMP /GR. 4.224/ ON MODELS NOT HAVING CASTING #8626174 OR 8626176 ON PUMP COVER ON MACHINED SURFACE.

4.224 GASKET, TRANSMISSION OIL PUMP SCREEN

1 6261235 69-76 ALL HT350 - /ILL. 4-1/

4.224 PUMP ASSEMBLY, TRANSMISSION OIL

1 3947097 69 ALL 6 CYL HT350 - /ILL. 4-1/

NOTE. FOR UNLISTED PUMP ASSEMBLIES USE COMPONENTS.

4.224 SCREEN ASSEMBLY, TRANSMISSION OIL PUMP PRESS HOLE

1 8640074 69-76 ALL HT350 - /ILL. 4-1/ /SUP 6261323/

4.226 BOLT AND /O/ RING PACKAGE, TRANSMISSION OIL PUMP TO CASE

AR 8625901 67 ALL

4.226 BOLT AND WASHER, TRANSMISSION OIL PUMP TO CASE

AR 6261374 67-76 ALL HT350 /SUP 1378053/

4.226 BUSHING, TRANSMISSION OIL PUMP STATOR SHAFT

2 8623944 67-74 ALL HT400 - /ILL. 4-1/
1 1381366 69-76 ALL HT350 - FRONT - /ILL. 4-1/

4.226 BUSHING, TRANSMISSION PUMP BODY

1 8623940 67-72 ALL HT400 - /ILL. 4-1/
73-76 ALL

4.226 GASKET, TRANSMISSION PUMP BODY BOLT

AR 3789024 67 ALL

4.226 GASKET, TRANSMISSION PUMP TO CASE

1 8623978 67-74 ALL HT400 - /ILL. 4-1/
1 6261584 69-76 ALL HT350

4.226 PIN, TRANSMISSION OIL PUMP

1 8623078 67-74 HT400 - .13 DIA X 1.33 STRAIGHT - /ILL. 4-1/

4.226 RING, TRANSMISSION OIL PUMP COVER OIL SEAL

2 8626356 67-74 HT400 - /ILL. 4-1/ /SUP 8623148/
2 6261570 72-76 HT350

4.226 SEAL, TRANSMISSION OIL PUMP TO CASE

1 6261413 67-76 ALL HT350 - 8-1/2 IN OD /SUP 1357088-8626309/ - /ILL. 4-1/
8 3884683 69-74 HT400 - BOLT SEAL

4.226 SEAL ASSEMBLY, TRANSMISSION OIL PUMP

1 8626916 67-76 ALL - FRONT
69-72 ALL HT - BODY /SUP 1384746/ /ILL. 4-1/

4.226 SPRING, TRANSMISSION OIL PUMP PRIMING VALVE

1 3850850 69-70 ALL HT350 - /ILL. 4-1/
71 HT350 FIRST JOBS HAVING OIL PUMP BODY WITH PRIMING VALVE - NO SIMILAR PART USED ON AFTER JOBS

4.226 VALVE, TRANSMISSION OIL PUMP PRIMING

1 3850849 69-70 ALL HT350 - /ILL. 4-1/
71 HT350 FIRST JOBS HAVING OIL PUMP BODY WITH PRIMING VALVE - NO SIMILAR PART USED ON AFTER JOBS

4.226 WASHER, TRANSMISSION OIL PUMP BOLT TO CASE

AR 3884683 67-70 ALL HT400 /SUP 8624144/

4.228 COVER, TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON

1 6261141 69-72 ALL HT350 - /ILL. 4-1/
1 6261141 73-76 6 CYL ENG HT350 W/TRANS CODED MC OR ME
1 1242545 73 8 CYL HT350 - W/TRANS CODED MA

4.228 PIN, TRANSMISSION FRONT SERVO PISTON

1 8623651 67-70 ALL HT400 - /ILL. 4-1/
1 8626879 71-74 ALL HT400

4.228 PISTON, TRANSMISSION ACCUMULATOR /FRONT/

1 8623652 67-70 ALL HT400 - /ILL. 4-1/
1 8626883 71-74 ALL HT400

4.228 PISTON, TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR

1 1239836 69-76 ALL HT350 - INCL SEALS /SUP 6261137/ - /ILL. 4-1/

4.228 PISTON, TRANSMISSION FRONT SERVO

1 8623649 67-70 ALL HT400 - /ILL. 4-1/
1 8626878 71-74 ALL HT400

4.228 PISTON AND SEAL, TRANSMISSION INTERMEDIATE SERVO

1 342494 69-76 HT350 /SUP 6261151/

4.228 RETAINER, TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON COVER

1 6260138 69-76 ALL HT350 /SUP 6261142/

4.228 RING, TRANSMISSION FRONT SERVO SPRING RETAINING

1 8626884 71-74 ALL HT400

4.228 ROD, TRANSMISSION INTERMEDIATE SERVO APPLY

1 6261008 69-76 ALL HT350 - 2-27/32 IN LONG - /ILL. 4-1/

4.228 WASHER, TRANSMISSION SERVO PISTON

1 8623362 67-76 HT - /ILL. 4-2/

4.229 PISTON AND SEAL, TRANSMISSION DIRECT CLUTCH ACCUMULATOR

1 1243383 69-76 HT350

4.229 RING, TRANSMISSION DIRECT CLUTCH ACCUMULATOR PISTON RETAINING

1 6261322 69-76 ALL HT350 - /ILL. 4-1/

4.229 RING, TRANSMISSION FRONT ACCUMULATOR PISTON OIL SEAL

1 8623653 67-74 ALL HT400 - /ILL. 4-1/

4.229 RING, TRANSMISSION FRONT SERVO OIL SEAL

1 8623131 67-74 ALL HT400 - /ILL. 4-1/

4.229 SEAL, TRANSMISSION DIRECT CLUTCH ACCUMULATOR PISTON

1 6261150 69-75 ALL HT350 - STEEL - /ILL. 4-1/
1 6260320 74-76 8 CYL ENG HT350 - TEFLON

4.229 SEAL, TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON COVER

1 338926 69-76 HT350 /SUP 6261242/

4.229 SEAL, TRANSMISSION INTERMEDIATE SERVO PISTON

1 6260320 74-76 8 CYL ENG HT350 - TEFLON

4.229 SPRING, TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON

1 6260080 69 ALL HT350 - /ILL. 4-1/
1 6261231 70 8 CYL HT350
1 6261140 70 6 CYL HT350

4.229 SPRING, TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON (Cont'd)

1 6261232 71-72 6 CYL HT350
1 6261419 71 8 CYL HT350
1 6261231 72-76 HT350 WITH 350 ENG
1 6260080 73-76 6 CYL ENG HT350
1 6261333 75-76 400 /4BC/ ENG HT350

4.233 RETAINER, TRANSMISSION FRONT SERVO SPRING

1 8623704 67-70 ALL HT400 - /ILL. 4-1/
1 8626881 71-74 ALL HT400 - CUPPED AREA HAS TAPERED SIDE

4.233 SEAT, TRANSMISSION INTERMEDIATE SERVO PISTON SPRING

1 6261178 69-76 ALL HT350 - /ILL. 4-1/

4.233 SPRING, TRANSMISSION DIRECT CLUTCH ACCUMULATOR PISTON

1 6260173 69-73 HT350
74-76 HT350 W/6 CYL ENG /SUP 6260051/

1 6261612 74 HT350 W/350 ENG
75-76 HT350 WITH 400 ENG

1 6261615 75-76 HT350 W/350 ENG

4.233 SPRING, TRANSMISSION FRONT ACCUMULATOR PISTON

1 8623654 67 ALL - WITH TRANS CODED PS - /ILL. 4-1/

1 8624358 67 ALL - WITH TRANS CODED PQ OR PX - /ILL. 4-1/
68-70 ALL HT400 - WITH TRANS CODED PQ, PX OR PY - /ILL. 4-1/

1 8623676 68-69 ALL HT400 - WITH TRANS CODED PX OR PY - /ILL. 4-1/

1 8625426 69 ALL HT400 - WITH TRANS CODED PS OR PV - /ILL. 4-1/

1 8626775 70 HT400 - WITH TRANS CODED PC, PD, PH, PQ OR PR
71 HT400 - WITH TRANS CODED PQ

1 8623674 70 HT400 - CODED PF
71 HT400 - CODED PT OR PY
72 HT400 CODED PG

1 8624358 72 HT400 - CODED PQ
1 8625426 72 HT400 - CODED PT OR PX
1 8623676 73 HT400 - TRANS CODED PG - BLACK

1 8624358 73-74 HT400 - TRANS CODED PQ-PR-PT - GRAY

1 8623674 73-74 HT400 - TRANS CODED PT - GREEN

1 8626775 73-74 HT400 - TRANS CODED P2Z
1 8623654 73 HT400 - TRANS CODED P2G - RED

74 HT400 - TRANS CODED PG - RED

4.233 SPRING, TRANSMISSION FRONT SERVO PISTON

1 8623489 67-74 ALL HT400 - /ILL. 4-1/

4.241 COVER AND PISTON PACKAGE, TRANSMISSION REAR SERVO

1 8624943 67-69 ALL HT400 - INCLUDES GASKET

4.241 COVER, TRANSMISSION REAR SERVO

1 8624136 67-74 ALL HT400 - 3 GROOVES - /ILL. 4-1/

4.241 GASKET, TRANSMISSION REAR SERVO COVER

1 8623174 67-74 ALL HT400 - /ILL. 4-1/

4.241 PIN, TRANSMISSION REAR BAND APPLY

1 8624139 67-74 ALL HT400 - 1 RING - 4-1/4 LG - /ILL. 4-1/

1 8624140 67-74 ALL HT400 - 2 RING - 4-5/16 LG - /ILL. 4-1/

1 8624141 67-74 ALL HT400 - 3 RING - 4-3/8 LG - /ILL. 4-1/

4.241 PISTON, TRANSMISSION ACCUMULATOR

1 8626902 67-74 HT400 - INCL 1 TEFLON AND 1 ALUMINUM RING - /ILL. 4-1/ / SUP 8623669/

4.241 PISTON, TRANSMISSION REAR SERVO

1 8624138 67-74 ALL HT400 - 6 RIBS - /ILL. 4-1/

4.241 RING, TRANSMISSION REAR SERVO PISTON RETAINING

1 274560 67-70 ALL HT400 - /ILL. 4-1/

4.241 WASHER, TRANSMISSION REAR SERVO PISTON

1 8623744 67-74 ALL HT400 - /ILL. 4-1/

4.242 RING, TRANSMISSION ACCUMULATOR PISTON OIL SEAL

1 8623671 67-74 ALL HT400 - INNER - ALUMINUM - /ILL. 4-1/

1 8623672 67-71 ALL HT400 - OUTER - /ILL. 4-1/

1 8627153 72-74 HT400 - OUTER - TEFLON

4.242 SEAL, TRANSMISSION REAR SERVO PISTON

1 8623430 67-74 ALL HT400 - /ILL. 4-1/

4.246 RETAINER, TRANSMISSION REAR SERVO PISTON SPRING

1 8623664 67-74 ALL HT400 - /ILL. 4-1/

4.246 SPRING, TRANSMISSION REAR ACCUMULATOR

1 8624256 67-71 ALL HT400 - /ILL. 4-1/ 72 ALL HT400 CODED PQ - PT

1 8624391 72 ALL HT400 CODED PG

1 8624256 73-74 HT400

4.246 SPRING, TRANSMISSION REAR SERVO PISTON

1 8623666 67-74 ALL HT400 - /ILL. 4-1/

4.248 PIPE, TRANSMISSION GOVERNOR OIL

2 8623157 67-74 ALL HT400 - /ILL. 4-1/

4.248 SCREEN, TRANSMISSION GOVERNOR OIL PIPE HOLE

1 8627468 67-70 HT400 /SUP 8626288/

1 8627509 71-74 HT400 /SUP 8626876/

4.248 SCREEN ASSEMBLY, TRANSMISSION GOVERNOR PRESSURE HOLE

1 6273269 69-76 ALL HT350 /SUP 6261324/

4.251 BAND ASSEMBLY, TRANSMISSION BRAKE

1 8623155 67-74 ALL HT400 - REAR - COMPLETE - /ILL. 4-1/

1 8623123 67-74 ALL HT400 - FRONT - /ILL. 4-1/

1 6261132 69-76 ALL HT350 - INTERMEDIATE OVERRUN - /ILL. 4-1/

4.256 BUSHING, TRANSMISSION GOVERNOR SLEEVE

1 1235259 67-69 ALL HT400 - IN CASE 70 ALL HT350 - IN CASE

4.256 CAP, TRANSMISSION GOVERNOR THRUST

1 6261239 73-76 HT350

4.256 COVER, GOVERNOR

1 8623262 67-74 ALL HT400 - /ILL. 4-1/

1 6261067 69-76 ALL HT350 - /ILL. 4-1/

4.256 GASKET, GOVERNOR COVER

1 8623263 67-74 ALL HT400 - /ILL. 4-1/

4.256 GEAR AND PIN KIT, GOVERNOR

1 8623924 67-74 HT400 - DRIVEN - INCL 1 GEAR AND 2 PINS

1 6261660 69-76 ALL HT350 - DRIVEN

4.256 GOVERNOR, TRANSMISSION

1 8623898 67-68 ALL - WITH TRANS CODED PQ - /ILL. 4-1/

1 8625622 67-68 ALL - WITH TRANS CODED PS, PX OR PY - /ILL. 4-1/

1 370366 69-70 HT350

1 8623852 69 ALL HT400 - WITH TRANS CODED PV - /ILL. 4-1/

1 8625622 69-70 ALL HT400 - WITH TRANS CODED PX - /ILL. 4-1/

1 8623898 69-70 ALL HT400 - WITH TRANS CODED PQ OR PS - /ILL. 4-1/

1 370368 71-72 HT350 /SUP 6261706/

1 8627443 71 HT400 WITH TRANS CODED PQ, PR OR PY /SUP 8626844/

1 8627442 71 HT400 WITH TRANS CODED PH OR PT /SUP 8627007/

1 8627443 72 HT400 CODED PQ OR PX

1 1244411 73-74 HT350 W/6 CYL ENG 75 HT350

1 370368 73-74 HT350 W/8 CYL ENG /SUP 6261706/

1 8627442 73-74 HT400 WITH TRANS CODED PT-PZ

1 8627443 73-74 HT400 WITH TRANS CODED PH-PQ

1 8640234 76 HT350

4.256 PIN, GOVERNOR WEIGHT

2 8623232 67-76 ALL HT - 3/32 X 1-7/8

4.256 RETAINER, TRANSMISSION GOVERNOR COVER

1 6260040 69-76 ALL HT350 - /ILL. 4-1/

4.256 SEAL, TRANSMISSION GOVERNOR COVER TO CASE

1 1241734 69-76 ALL HT350 - /SUP 6261341/

4.265 BALL, TRANSMISSION OIL CHECK VALVE

4 6261179 69-76 ALL HT350 - /ILL. 4-1/

4.265 BODY ASSEMBLY, TRANSMISSION VALVE

1 6260063 69 ALL HT350 6 CYL - 1BC - /ILL. 4-1/

1 N.L.A. 69 ALL HT350 6 CYL - 4BC /SUP 6260062/

1 6260306 70-72 HT350 /SUP 6260290/

1 1242325 73-74 6 CYL HT350

1 1242329 73 8 CYL HT350 - CODED MA

1 1244980 73 8 CYL HT350 - CODED MC

74 8 CYL ENG HT350 W/2.93 AXLE

1 1244979 73 8 CYL HT350 - CODED ME

74 8 CYL ENG HT350 W/3.08 AXLE

1 6261692 75 6 CYL ENG HT350

4.265 BODY ASSEMBLY, TRANSMISSION VALVE

(Cont'd)

1	8640048	75	HT350 WITH 350 ENG
1	8640049	75	HT350 WITH 400 ENG
1	8640190	76	HT350 WITH 6 CYL
1	8640191	76	HT350 WITH 350 ENG
1	8640231	76	HT350 WITH 400 ENG WITH GU1 AXLE RATIO
1	8640320	* 76	HT350 WITH 400 ENG WITH GU4 AXLE RATIO

4.265 CLIP, TRANSMISSION SOLENOID WIRES

1	8623766	70-72	HT400
---	---------	-------	-------

4.265 GASKET, TRANSMISSION SOLENOID VALVE

1	8623741	67-74	ALL HT400 - /ILL. 4-1/
---	---------	-------	------------------------

4.265 GASKET, TRANSMISSION VALVE BODY SPACER PLATE

1	8623561	67-74	HT400 - LOWER
1	8623563	67-74	HT400 - UPPER
1	6261678	69-73	HT350 - LOWER /SUP 6261213/
1	6261676	69-73	HT350 - UPPER /SUP 6261212/
1	8640092	74-76	HT350 - LOWER /SUP 330190/
1	330189	74-76	HT350 - UPPER

4.265 PIN, TRANSMISSION CONTROL VALVE

1	8624483	67	ALL - 1/8 X 1-1/8 SPRING /SUP 8623837/
2	8624482	67-74	ALL HT400 - 1/8 X 1-1/32 SPRING
1	8625324	71-74	HT400 - 3RD TO 2ND VALVE / SUP 8623583/

4.265 PIN, TRANSMISSION DETENT REGULATOR VALVE

1	8623507	67-74	ALL HT400
---	---------	-------	-----------

4.265 PIN, TRANSMISSION VALVE BODY

1	8623078	67-73	HT400 - .13 DIA X 1.33 STRAIGHT
1	8625544	68-74	ALL HT400 - 1/8 OD X 53/64 GROOVED

4.265 PLATE, TRANSMISSION VALVE BODY SPACER

1	8625652	67-68	ALL HT - /ILL. 4-1/
		69-70	HT400 - WITH TRANS CODED PQ, PS OR PX
		71	ALL HT400
1	6261679	69-76	HT350 - HAS GASKET BONDED TO PLATE
1	8625899	69-70	ALL HT400 - WITH TRANS CODED PV - /ILL. 4-1/
1	8625652	72	HT400 - CODED PQ
1	8625899	72-74	HT400 - CODED PT OR PG
1	8626036	73	HT400 - CODED PG, PR, P2G OR P2X
1	8629082	74	HT400 - CODED PT-PZ
1	8625663	73-74	HT400 - CODED PQ
1	8624461	73	HT400 - CODED P2Z

4.265 PLUG, TRANSMISSION MANUAL LOW CONTROL VALVE

1	6261206	69-76	ALL HT350 - /ILL. 4-1/
---	---------	-------	------------------------

4.265 PLUG, TRANSMISSION VALVE BODY VALVE BORE

1	8623298	67-74	ALL HT400 - .437 DIA
1	8623295	67-74	ALL HT400 - .50 DIA
1	8625546	68-74	ALL HT400 - 9/16 OD / .5625/

4.265 SEAL, TRANSMISSION DETENT SOLENOID CONNECTOR

1	6264903	67-74	ALL HT400 /SUP 8619568- 3708146/ - /ILL. 4-1/
---	---------	-------	--

4.265 SHIFT PACKAGE, TRANSMISSION CONTROL VALVE CALIBRATION

1	8626962	73	HT400 - CODED P2G OR P2X
---	---------	----	--------------------------

4.265 SOLENOID ASSEMBLY, TRANSMISSION

1	1993620	67-74	ALL HT400 /SUP 8623788/ - / ILL. 4-1/
---	---------	-------	--

4.265 SPACER, TRANSMISSION VALVE BODY

NOTE. SEE - PLATE, TRANS VALVE BODY SPACER -
GROUP 4.265.

4.265 SPRING, TRANSMISSION DETENT REGULATOR VALVE

1	6260066	69	ALL HT350 6 CYL - 4BC
1	6261251	69	ALL HT350 8 CYL

4.265 SUPPORT, TRANSMISSION SPACER PLATE

1	6261195	69-73	ALL HT350 - /ILL. 4-1/
1	338905	74-76	HT350

4.265 VALVE ASSEMBLY, TRANSMISSION CONTROL

1	N.L.A.	69	ALL HT400 - WITH TRANS CODED PV /SUP 8626249/
1	N.L.A.	69	ALL HT400 - WITH TRANS CODED PS /SUP 8626333/
1	8626381	69	ALL HT400 - WITH TRANS CODED PX - /ILL. 4-1/
1	N.L.A.	69	ALL HT400 - WITH TRANS CODED PQ /SUP 8626354/
1	8626745	70	ALL HT400 - W/TRANS CODED PP OR PQ - /ILL. 4-1/
1	8626742	70	ALL HT400 - W/TRANS CODED PT
1	8626749	70	ALL HT400 - W/TRANS CODED PX OR PY - /ILL. 4-1/
1	8627228	71	ALL HT400 - WITH TRANS CODED PQ
1	8627177	71	ALL HT400 - WITH TRANS CODED PR
1	8627178	71	ALL HT400 - WITH TRANS CODED PT
1	8627224	71	ALL HT400 - WITH TRANS CODED PW
1	8627223	71	ALL HT400 - WITH TRANS CODED PX
1	8627179	71	ALL HT400 - WITH TRANS CODED PY
1	8627361	72	ALL HT400 - W/TRANS CODED PQ
1	8627363	72	ALL HT400 - W/TRANS CODED PR
1	8627359	72	ALL HT400 - W/TRANS CODED PX
1	8627352	72	ALL HT400 - W/TRANS CODED PT
1	8627561	73	HT400 WITH TRANS CODED PT
1	8627774	73	HT400 - WITH TRANS CODED P2T
1	8627568	73	HT400 WITH TRANS CODED PG
1	8627770	73	HT400 - WITH TRANS CODED P2G
1	8627560	73	HT400 WITH TRANS CODED PR
1	8627779	73	HT400 - WITH TRANS CODED P2Z
1	8627559	73	HT400 WITH TRANS CODED PQ
1	8627772	73	HT400 - WITH TRANS CODED P2Q

- 4.265 VALVE ASSEMBLY, TRANSMISSION CONTROL (Cont'd)**
- 1 8627822 74 HT400 - W/TRANS CODED PR
 1 8627842 74 HT400 W/400 /4BC/ ENG
 1 8627865 74 HT400 W/455 ENG EXC SD
- 4.265 VALVE ASSEMBLY, TRANSMISSION MANUAL**
- 1 8623592 67-74 ALL HT400 - /ILL. 4-1/
 1 1394763 69-76 ALL HT350 - INCL SPRING, LINK, VALVE AND LEVER /SUP 6260148/
- 4.275 BRACKET, TRANSMISSION DETENT VALVE ACTUATOR LEVER**
- 1 6261187 69-76 ALL HT350 - /ILL. 4-1/
- 4.275 CLIP, TRANSMISSION MANUAL VALVE LINK**
- 1 6260113 69-70 ALL HT350 - /ILL. 4-1/
- 4.275 LINK, TRANSMISSION MANUAL VALVE CONTROL**
- 1 6260155 70-76 ALL HT350
- 4.275 PIN, TRANSMISSION DETENT VALVE ACTUATOR LEVER**
- 1 6261288 69-76 ALL HT350 - /ILL. 4-1/
- 4.275 PIN, TRANSMISSION MANUAL SHAFT**
- 1 8623232 67-71 ALL HT400
- 4.275 SEAL, TRANSMISSION PARK LOCK AND RANGE SELECTOR SHAFT OIL**
- 1 8623056 67-72 ALL HT - MANUAL SHAFT - WITH COUNTER BORED CASES - /ILL. 4-2/
 73-76 HT350
 73-74 HT400 - LIP SEAL DESIGN
 1 8621767 73 HT400 - O RING DESIGN
- 4.275 SHAFT, TRANSMISSION PARKING BRAKE MANUAL**
- 1 8627206 67-74 HT400 - /SUP 8623714/
 1 8626935 73 HT350 - INCL SEAL
- 4.275 SPRING ASSEMBLY, TRANSMISSION DETENT**
- 1 6261161 69 ALL HT350 - /ILL. 4-1/
 1 6260153 70-76 ALL HT350
- 4.275 WIRE, TRANSMISSION DETENT VALVE CONTROL**
- 1 1243133 69-76 ALL HT350 /SUP 6261214/
- 4.279 LEVER, TRANSMISSION DETENT VALVE ACTUATOR**
- 1 6261186 69-76 ALL HT350 - /ILL. 4-1/
- 4.279 LEVER AND PIN ASSEMBLY, TRANSMISSION PARKING BRAKE INSIDE DETENT**
- 1 8624336 67-74 ALL HT400 /SUP 8623558/ - / ILL. 4-1/
- 4.290 ACTUATOR ASSEMBLY, TRANSMISSION PARKING BRAKE**
- 1 8624091 67-74 ALL HT400 - /ILL. 4-1/
 1 6260224 69-76 ALL HT350 /SUP 6261425-6260141/ - /ILL. 4-1/
- 4.290 BRACKET, TRANSMISSION PARKING BRAKE**
- 1 8623042 67-74 HT400 - /ILL. 4-1/

- 4.290 BRACKET, TRANSMISSION PARKING BRAKE (Cont'd)**
- 1 1377861 69-76 HT350 AND RANGE SELECTOR SHAFT - /ILL. 4-1/
- 4.290 RETAINER, TRANSMISSION PARKING LOCK AND RANGE SELECTOR SHAFT**
- 1 6261347 69-76 ALL HT350 /RING/ /SUP 6260157/
- 4.293 ROLLER AND SPRING, TRANSMISSION PARKING BRAKE MANUAL DETENT**
- 1 8625773 67-74 ALL HT400 /SUP 8623617/ - / ILL. 4-1/
- 4.294 LEVER, TRANSMISSION PARKING LOCK AND RANGE SELECTOR INNER**
- 1 6261483 69 ALL HT350 - /ILL. 4-1/
 1 330136 70-76 HT350 /SUP 6260283/
- 4.294 PAWL, TRANSMISSION PARKING BRAKE**
- 1 8623037 67-74 ALL HT400 - /ILL. 4-1/
 1 6261657 69-76 HT350 - LOCK /SUP 6261529/
- 4.294 PLUG, TRANSMISSION CASE PARKING BRAKE PAWL SHAFT BORE HOLE**
- 1 8620318 67-76 HT - 3/8 DIA - D.L. 4.103
- 4.294 SEAL, TRANSMISSION OUTPUT SHAFT / O/ RING**
- 1 8616504 70 ALL HT400
- 4.294 SHAFT AND PLUG PACKAGE, TRANSMISSION PARK PAWL**
- 1 3977619 69-76 ALL HT350 /SUP 3947081/ - / ILL. 4-1/
- 4.294 SHAFT, TRANSMISSION PARKING BRAKE PAWL**
- 1 8624103 67 ALL - /ILL. 4-1/
 1 8624976 68-74 ALL HT400 - INCLUDES PLUG - /ILL. 4-1/
- 4.294 SHAFT, TRANSMISSION PARKING LOCK AND RANGE SELECTOR**
- 1 6260216 69-76 ALL HT350 - NOTE. WHEN USING ON 1969-70 JOBS DISCARD AND REPLACE RANGE SELECTOR LEVER NUT WITH 1-9424985 NUT / SUP 6261144/ - /ILL. 4-1/
- 4.295 SPRING, TRANSMISSION PARKING BRAKE PAWL RETURN**
- 1 8623041 67-74 ALL HT400 - /ILL. 4-1/
- 4.295 SPRING, TRANSMISSION PARK LOCK PAWL DISENGAGING**
- 1 6260253 69-76 ALL HT350 - /ILL. 4-1/
- 4.317 EXTENSION ASSEMBLY, TRANSMISSION CASE**
- 1 8626785 67-74 ALL HT400 /SUP 8624496/ - / ILL. 4-1/
 1 N.L.A. 69 ALL HT350 6 CYL - WITH BUSHING - /ILL. 4-1/ /SUP 1386409/
 1 6260035 69 ALL HT350 8 CYL - WITH BUSHING - /ILL. 4-1/
 70-76 ALL HT350 - WITH BUSHING
- 4.317 VENT ASSEMBLY, TRANSMISSION**
- 1 3820840 73-76 HT350 - NYLON PUSH IN TYPE - 11/32 IN DIA

4.318 GASKET, TRANSMISSION CASE TO EXTENSION

1 8624709 67-74 ALL HT400 - /ILL. 4-1/

4.318 SEAL, TRANSMISSION CASE EXTENSION OIL

1 8626009 67-74 ALL HT400 /SUP 8623743-8625893/ - /ILL. 4-1/

4.318 SEAL, TRANSMISSION OUTPUT SHAFT YOKE TO SLEEVE

1 3764601 70 6 CYL HT350

4.318 SEAL, TRANSMISSION REAR BEARING RETAINER TO CASE

1 1358899 69-76 ALL HT350 - /ILL. 4-1/

4.318 SEAL ASSEMBLY, TRANSMISSION REAR BEARING RETAINER TO OUTPUT SHAFT

1 1386231 69-74 ALL HT350 - 1-1/2 ID X 2-3/8 OD

1 1243402 75-76 HT350

4.318 SLEEVE, TRANSMISSION OUTPUT SHAFT YOKE SEAL

1 6261062 70 6 CYL HT350

4.319 BUSHING, TRANSMISSION CASE EXTENSION

1 8626901 67-74 ALL HT400 /SUP 8623966/ - /ILL. 4-1/

4.319 BUSHING, TRANSMISSION REAR BEARING RETAINING

1 6260048 69-76 ALL HT350 - /ILL. 4-1/

4.319 STUD, TRANSMISSION CASE EXTENSION TO CASE

2 8629072 75-76 TH400

4.329 ADAPTER, SPEEDOMETER DRIVEN GEAR

1 9775436 67 HT WITH 3.90 AXLE RATIO - 43 TOOTH DRIVEN GEAR - BLUE

68 HT WITH 3.90 AXLE RATIO - 42 TOOTH DRIVEN GEAR - BLUE

1 540474 69 HT350 WITH 2.56 AXLE RATIO - 37 TOOTH DRIVEN GEAR

69 HT350 WITH 2.56 AXLE RATIO - 36 TOOTH DRIVEN GEAR

1 9775436 69 HT400 WITH 3.90 AXLE RATIO - 42 TOOTH DRIVEN GEAR - BLUE

1 535617 70 HT350 WITH 3.36 AXLE RATIO - 41 TOOTH DRIVEN GEAR - BLUE

70 HT350 WITH 3.36 AXLE RATIO - 40 TOOTH DRIVEN GEAR - BLUE

70 HT400 WITH 3.73 AXLE RATIO - 41 TOOTH DRIVEN GEAR - BLUE

4.337 GEAR, SPEEDOMETER DRIVEN

1 1359270 67-68 HT400 - 36 TEETH - WHITE

1 1362048 67-69 HT400 - 40 TEETH - BLACK

1 1362049 67-71 HT400 - 42 TEETH - GREEN

73-74 HT400 - 42 TEETH - GREEN

1 9780628 67 HT400 - 35 TEETH - PINK

69 HT400 - 35 TEETH - PINK

1 1359273 67 HT400 - 39 TEETH - BROWN

69-71 HT400 - 39 TEETH - BROWN

73-74 HT400 - 39 TEETH - BROWN

1 1362196 67 HT400 - 43 TEETH - PURPLE

69 HT400 - 43 TEETH - PURPLE

71 HT400 - 43 TEETH - PURPLE

4.337 GEAR, SPEEDOMETER DRIVEN (Cont'd)

1 1362196 73-74 HT400 - 43 TEETH - PURPLE

1 9775187 67 HT400 - 45 TEETH - BLUE

70 HT400 - 45 TEETH - BLUE

1 1359272 68-71 HT400 - 38 TEETH - BLUE

73 HT400 - 38 TEETH - BLUE

1 9780470 68-71 HT400 - 44 TEETH - BLUE

73-74 HT400 - 44 TEETH - BLUE

1 9780628 69 HT350 - 35 TEETH - PINK

75-76 HT350 - 35 TEETH - PINK

1 1359270 69 HT350 - 36 TEETH - WHITE

75-76 HT350 - 36 TEETH - WHITE

1 1359271 69 HT350 - 37 TEETH - RED

70 76 HT350 - 37 TEETH - RED

1 1359272 69-71 HT350 - 38 TEETH - BLUE

73-76 HT350 - 38 TEETH - BLUE

1 1359273 69-71 HT350 - 39 TEETH - BROWN

73-74 HT350 - 39 TEETH - BROWN

1 1362048 69-70 HT350 - 40 TEETH - BLACK

1 1362195 69-70 HT350 - 41 TEETH - YELLOW

1 9780470 69 HT350 - 44 TEETH - BLUE

71-74 HT350 - 44 TEETH - BLUE

1 9775187 69 HT350 - 45 TEETH - BLUE

1 1362196 70-76 HT350 - 43 TEETH - PURPLE

1 1362195 70 HT400 - 41 TEETH - YELLOW

73-74 HT400 - 41 TEETH - YELLOW

1 486338 72 HT350 - 38 TEETH - BLUE

72 HT400 - 38 TEETH - BLUE

1 486339 72 HT350 - 39 TEETH - BROWN

72 HT400 - 39 TEETH - BROWN

1 486343 72 HT350 - 43 TEETH - PURPLE

72 HT400 - 43 TEETH - PURPLE

1 486344 72 HT350 - 44 TEETH - GRAY

1 486335 72 HT400 - 35 TEETH - PINK

1 486342 72 HT400 - 42 TEETH - GREEN

1 1362049 73-76 HT350 - 42 TEETH - GREEN

1 1359271 73-75 HT400 - 37 TEETH - RED

4.338 FITTING ASSEMBLY, SPEEDOMETER DRIVEN GEAR

1 345215 72 HT350 /SUP 6258100/

4.338 RING, SPEEDOMETER DRIVEN GEAR SHAFT OIL SEAL RETAINING

1 1361618 67-72 ALL HT

4.338 SEAL, SPEEDOMETER DRIVEN GEAR SHAFT OIL

1 1240382 67-72 ALL HT /SUP 1196792/

4.338 SEAL, SPEEDOMETER GEAR SLEEVE TO REAR BEARING RETAINER

1 6264904 67-76 ALL HT /SUP 1359319/ - /ILL. 4-2/

4.338 SEAL, SPEEDOMETER PINION

1 3869910 67-73 ALL HT - STEEL AND RUBBER

4.338 SLEEVE AND SEAL ASSEMBLY, SPEEDOMETER DRIVEN GEAR

1 1362293 67-71 ALL HT400 - USE WITH BLACK, GREEN, YELLOW, PURPLE, LIGHT BLUE AND DARK GRAY DRIVEN GEARS

1 1362294 67-71 ALL HT400 - USE WITH WHITE, PINK, RED, BLUE, BROWN AND ORANGE DRIVEN GEARS

1 1362284 69-74 ALL HT350 - WITH 34-35-36-37-38-39 TOOTH DRIVEN GEARS AND WILL BE STAMPED SAME

4.338 SLEEVE AND SEAL ASSEMBLY, SPEEDOMETER DRIVEN GEAR (Cont'd)

- 1 1362285 69-74 ALL HT350 - WITH 40-41-42-43-44-45 TOOTH DRIVEN GEARS AND WILL BE STAMPED SAME
- 1 6264903 73-76 ALL HT350 - FITTING SEAL / .647 ID X .103/

4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE

- 1 6454759 67-68 ALL - WITH CRUISE CONTROL - UPPER - TYPE #CC-284
- 1 6476587 67-68 ALL - WITH CRUISE CONTROL - LOWER - TYPE #CC-294
- 1 6478128 67 ALL /-37/ - EXC RAM AIR OR CRUISE CONTROL - TYPE #CC-511
- 1 6478128 67 ALL /-67/ - EXC RAM AIR OR CRUISE CONTROL - TYPE #CC-299 /SUP 6476724/
- 1 6478121 67 ALL /-37/ - WITH RAM AIR - EXC CRUISE CONTROL - UPPER - TYPE #CC-292 /SUP 6454482/
- 1 6476725 67 ALL /-67/ - WITH RAM AIR - EXC CRUISE CONTROL - UPPER - TYPE #CC-300
- 1 6454481 67 ALL - WITH RAM AIR - EXC CRUISE CONTROL - LOWER - TYPE #CC-291
- 1 6476725 68 ALL /-67/ - WITH RAM AIR - EXC CRUISE CONTROL - EXC ADAPTER - UPPER - TYPE #CC-300
- 1 6454481 68 ALL - EXC CRUISE CONTROL - WITH ADAPTER - LOWER - TYPE #CC-291
- 1 6478128 68 ALL /-67/ - EXC RAM AIR - EXC CRUISE CONTROL - EXC ADAPTER - TYPE #CC-299 / SUP 6476724/
- 1 6478128 68 ALL /-37/ - EXC RAM AIR - EXC CRUISE CONTROL - EXC ADAPTER - TYPE #CC-75 / SUP 1588291/
- 1 6478121 68 ALL /-67/ - EXC RAM AIR - EXC CRUISE CONTROL - WITH ADAPTER - UPPER - TYPE #CC-292 /SUP 6454482/
- 1 6478175 69 ALL HT - EXC ADAPTER, CRUISE CONTROL OR RAM AIR - TYPE #CC-534 /SUP 6477544/
- 1 6478169 69 ALL HT 8 CYL - EXC CRUISE CONTROL - UPPER - WITH ADAPTER - TYPE #CC-342 / SUP 6477421/
- 1 6454481 69 ALL HT 8 CYL - EXC CRUISE CONTROL - LOWER - WITH ADAPTER - TYPE #CC-291
- 1 6478170 69 ALL HT - WITH CRUISE CONTROL - UPPER - TYPE #CC-529 /SUP 6477531/
- 1 6476587 69 ALL HT - WITH CRUISE CONTROL - LOWER - TYPE #CC-294
- 1 6478170 70 ALL HT350 W/ADAPTER - UPPER - TYPE #CC-529 /SUP 6477531/
- 1 6454481 70 ALL HT350 W/ADAPTER - LOWER - TYPE #CC291 /SUP 6478245/
- 1 6478176 70 ALL HT350 EXC ADAPTER - TYPE #CC366

4.342 CABLE /WITH CASING/, SPEEDOMETER FLEXIBLE (Cont'd)

- 1 6478176 70 ALL HT400 - TYPE #CC366 / SUP 6477547/
- 1 6478177 71-76 6 CYL HT350 - TYPE #CC536
- 1 6478176 71-76 8 CYL HT350 - EXC ADAPTER - TYPE #CC535 - 64 IN LONG
- 1 6478177 71-74 HT400 - TYPE #CC536 - 68 IN LONG
- 1 6478880 73-74 ALL W/CRUISE CONTROL - TYPE CC430
- 1 6478170 76 TH WITH CRUISE CONTROL - UPPER
- 1 6478169 76 TH WITH CRUISE CONTROL - LOWER

4.342 CABLE KIT /LESS CASING/, SPEEDOMETER

NOTE. KIT INCLUDES CABLE, TIP AND STAKING TOOLS.

- 1 6477499 ALL MODELS/ALL YEARS - SERVICES CABLES UP TO 81 IN - LEFT HAND WOUND / DOES NOT INCL STAKING TOOL/ /SUP 846890/
- 1 6478825 ALL MODELS/ALL YEARS - SERVICES CABLES FROM 81 IN TO 172 IN /SUP 6451120/

4.342 CLIP, SPEEDOMETER CABLE

- AR 1380949 68-69 ALL HT400
- 1 479962 70-71 HT - TO CROSS SHAFT BRACKET
- 1 487120 72-74 ALL - TO CROSS SHAFT BRACKET
- 1 477704 75-76 ALL - TO CROSS SHAFT BRACKET

4.342 GROMMET, SPEEDOMETER FLEXIBLE SHAFT

- 1 332650 74-75 HT - USED IN 1 IN DIA HOLE - USE SEALANT MATERIAL AS REQD AROUND HOLE IN GROMMET

4.342 PLUG, CRUISE CONTROL SPEEDOMETER CABLE HOLE

- 1 4859119 67-69 ALL - FOR 1-1/2 IN HOLE
- 1 4410574 71-74 ALL - SPEEDO CABLE - FOR 1 IN HOLE

4.342 RETAINER, SPEEDOMETER CABLE TO SPEEDOMETER

- 1 6491006 69-71 ALL - FOR QUICK RELEASE TYPE CABLE

4.342 RETAINER, SPEEDOMETER CABLE TO TRANSMISSION CROSSMEMBER

- 1 481730 70-72 6 CYL HT350
- 70-72 8 CYL HT400

4.342 SHAFT, SPEEDOMETER FLEXIBLE

SEE CABLE, GROUP 4.342

4.343 GEAR, SPEEDOMETER DRIVE

- 1 8623311 67-68 ALL WITH TRANS CODED PQ, PS OR PX - 16 TEETH - ORANGE - /ILL. 4-1/
- 1 8623313 68 ALL WITH TRANS CODED PY - 18 TEETH - YELLOW - /ILL. 4-1/
- 1 6260039 69 ALL HT350 6 CYL - 16 TEETH - /ILL. 4-1/

4.343 GEAR, SPEEDOMETER DRIVE (Cont'd)

1	6260037	69	ALL HT350 8 CYL - 18 TEETH - /ILL. 4-1/
1	8623313	69-74	HT400 - 2BC - 18 TEETH - YELLOW - /ILL. 4-1/
1	8623311	69-74	HT400 - 4BC - 16 TEETH - ORANGE - /ILL. 4-1/
1	6260037	70-72	ALL HT350 - 18 TEETH - GREEN
1	6261785	71	HT350 - 10 TEETH - PURPLE
1	3708144	73	ALL - 8 TEETH
1	1242873	73	HT350 - 18 TEETH
1	1246222	74-76	6 CYL OR 350 ENG - 18 TEETH
		75	HT350 WITH 400 ENG - 18 TEETH
1	8640188	76	HT350 WITH 400 ENG - 19 TEETH - PLASTIC

**4.345 CLIP, SPEEDOMETER DRIVE GEAR
OUTPUT SHAFT TO GEAR**

1	6261781	69-75	HT350 - USED WITH PLASTIC DRIVE GEARS
1	8626089	70-74	HT400 W/NYLON DRIVE GEAR
1	6261781	76	HT350 - FIRST TYPE - HAS .3 IN TANG - USED WITH PLASTIC DRIVE GEARS
1	6261781	76	HT350 - SECOND TYPE - HAS .4 IN TANG /SUP 6260060/