


# GROUP 9.000 BODY MOUNTING AIR CONDITIONING

## ILLUSTRATION INDEX


<b>Description</b>	<b>Page</b>
1967-70 Gauges .....	1
Air Conditioning .....	2-28
Ventilation .....	29
Fitting Packages .....	30
Stereo .....	32-36
Antennas .....	37-38
Body Mounts .....	39

---

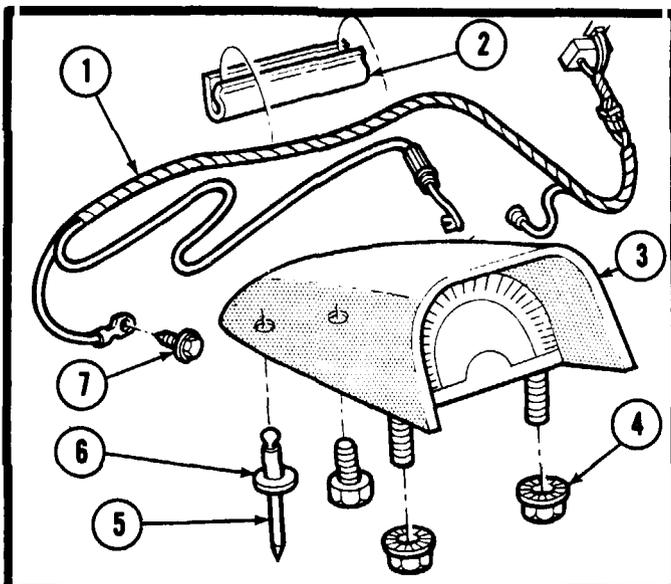


**1967-70 FIREBIRD HOOD MOUNTED TACHOMETER**

Key	Part Name	Group No.
1	WIRE ASM., Engine Tachometer . . . . .	9.750
2	RETAINER, Engine Wire Harness . . . . .	N.S.
3	TACHOMETER ASM., Engine . . . . .	9.750
4	NUT, Tachometer to Hood (#10-24). . . . .	8.915
	LOCKWASHER, Tachometer to Hood (#10 Ext. Tooth) . . . . .	8.932
5	RIVET, Tachometer to Hood . . . . .	N.S.
6	SCREW, Tachometer to Hood (#10-32 x 3/4") . . . . .	8.977
7	SCREW, Tachometer Wire Ground (1/4"-14 x 5/8") . . . . .	8.977

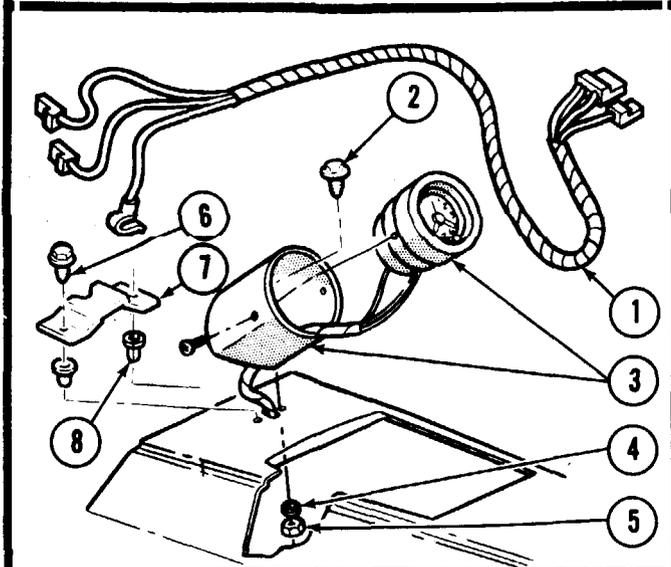


**1967 FIREBIRD FLOOR MOUNTED CLOCK  
1968 FIREBIRD FLOOR MOUNTED CLOCK  
(EXC. CONSOLE)**

Key	Part Name	Group No.
1	WIRE ASM., Floor Mounted Clock. . . . .	9.772
2	SCRFW, Clock to Console (#10-24 x 1") . . . . .	8.977
	SCREW, Clock to Floor Brkt. (#10-24 x 1/2") . . . . .	8.977
3	CLOCK ASSEMBLY, Floor Mounted . . . . .	9.772
4	WASHER, Clock to Console (1/4" I.D. x 9/16" O.D.) . . . . .	8.929
5	NUT, Clock to Console (#10-24) . . . . .	8.915
6	SCREW, Clock Bracket to Floor (#10-32 x 5/8") . . . . .	8.977
7	BRACKET, Floor Mounted Clock . . . . .	9.772
8	NUT, Clock Bracket to Floor (#10-32 Spec.) . . . . .	N.S.

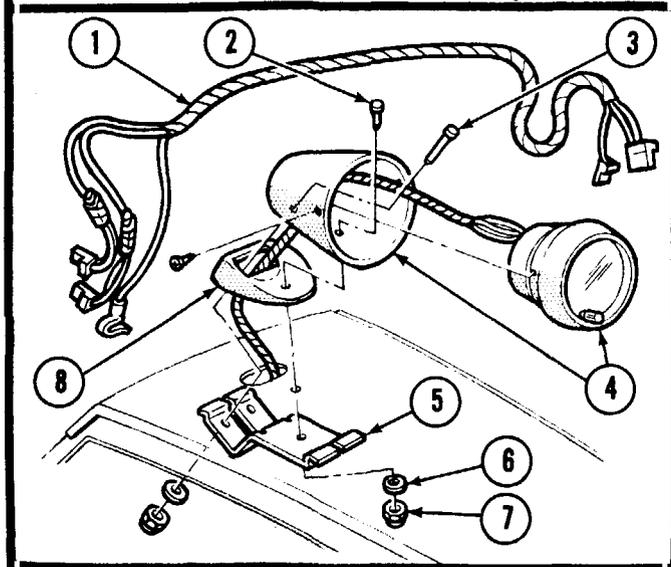

**1968 FIREBIRD FLOOR MOUNTED CLOCK-W/CONSOLE**

Key	Part Name	Group No.
1	WIRE ASM., Floor Mounted Clock . . . . .	9.772
2	SCREW, Clock to Console (#10-24 x 1") . . . . .	N.S.
3	SCREW, Clock to Console (#10-24 x 2") . . . . .	N.S.
4	CLOCK ASM., Floor Mounted . . . . .	9.772
5	BRACKET, Clock to Console . . . . .	9.772
6	WASHER, Clock to Console (7/32" I.D. x 1/2") . . . . .	8.929
7	NUT, Clock to Console (#10-24) . . . . .	8.915
8	ADAPTER, Clock to Console . . . . .	9.772

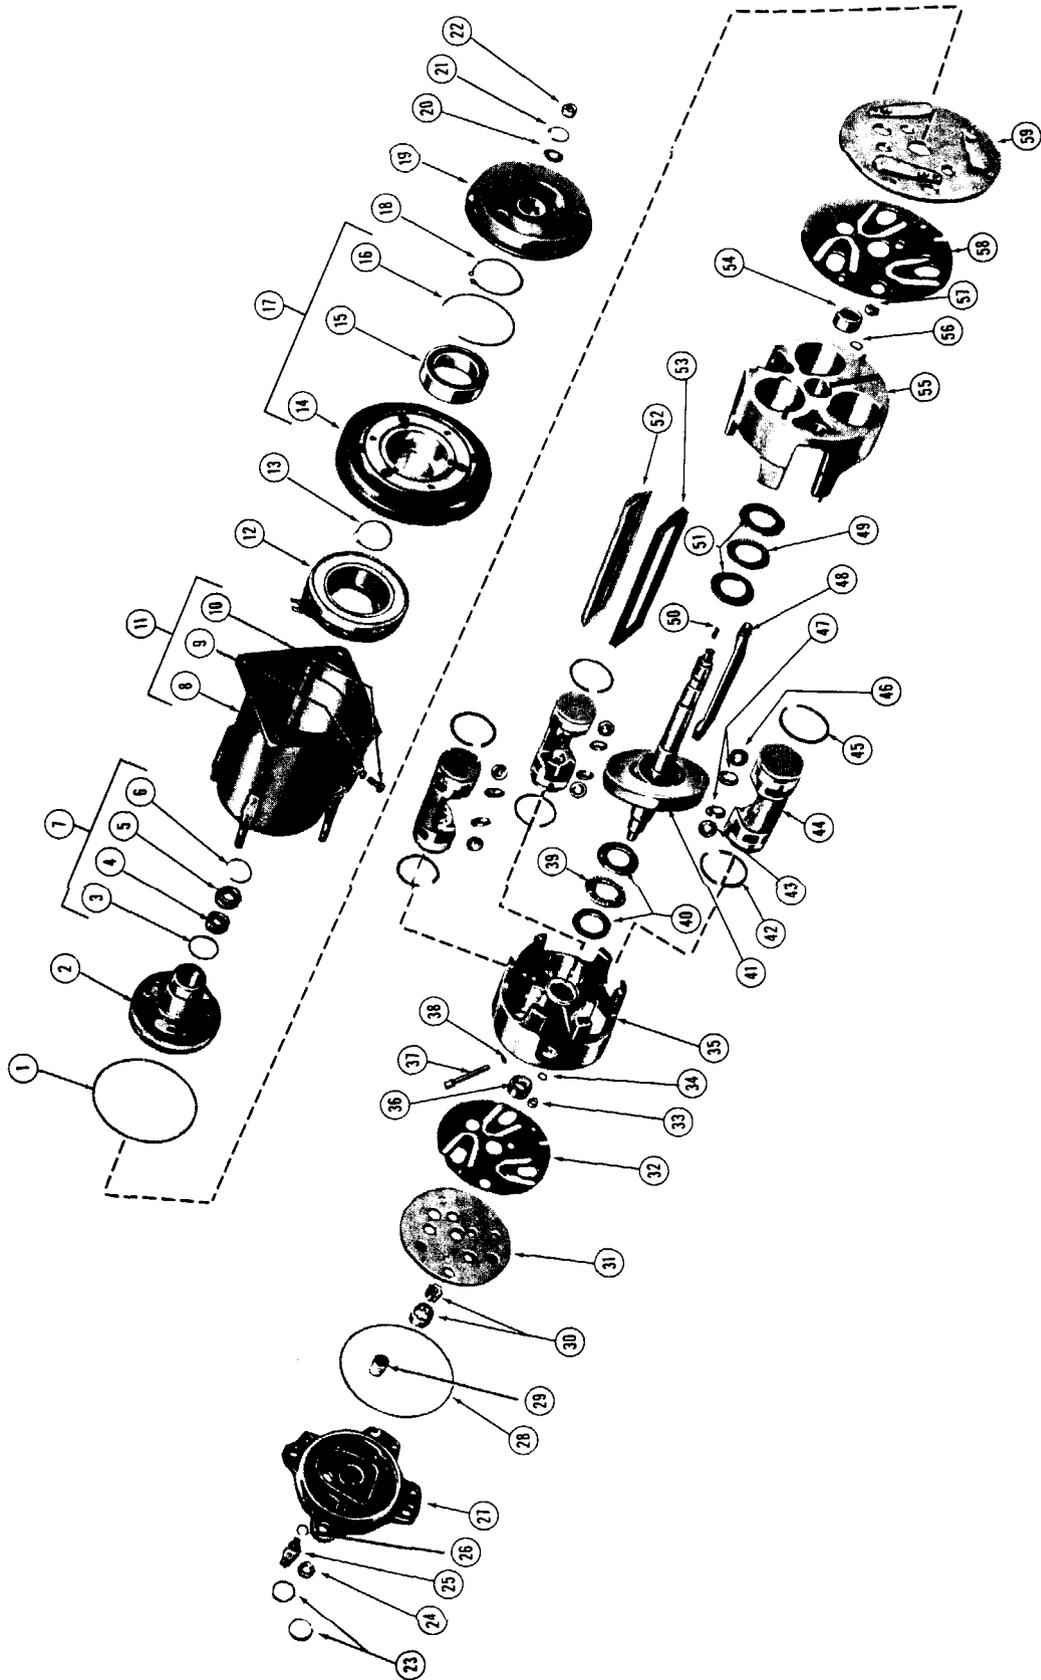

**AIR CONDITIONING COMPRESSOR PARTS**

## AIR CONDITIONING COMPRESSOR PARTS


Key	Part Name	Group No.
1	SEAL, "O" Ring . . . . .	(A) N.S.
2	HEAD, Compressor—Front . . . . .	9.174
3	SEAL, "O" Ring . . . . .	(A) N.S.
4	SEAL, Shaft Oil . . . . .	N.S.
5	SEAT, Oil Seal . . . . .	N.S.
6	SNAP RING, Oil Seal Seat . . . . .	9.175
7	SEAL KIT, Shaft Oil . . . . .	9.175
8	HOUSING, Compressor . . . . .	N.S.
9	GASKET, Oil Fitting Screw . . . . .	9.177
10	SCREW, Oil Fitting . . . . .	9.177
11	SHELL ASSY., Compressor . . . . .	9.170
12	COIL, Clutch . . . . .	9.186
13	SNAP RING, Coil . . . . .	9.175
14	PULLEY, Compressor . . . . .	N.S.
15	BEARING, Pulley . . . . .	9.181
16	RING, Pulley Bearing Ret. . . . .	9.181
17	PULLEY ASSY., Compressor . . . . .	9.180
18	SNAP RING, Bearing to Head Retainer . . . . .	9.181
19	PLATE ASSY., Clutch . . . . .	9.188
20	SPACER, Clutch Hub . . . . .	9.181
21	SNAP RING, Clutch Hub . . . . .	9.175
22	NUT, Shaft . . . . .	(B) 9.181
23	"O" Ring, Intake & Discharge Port . . . . .	(A) 9.240
24	NUT, Compressor Head . . . . .	(B) 9.174
25	VALVE, Pressure Relief . . . . .	9.178
26	GASKET, Pressure Relief . . . . .	9.178
27	HEAD, Cylinder—Rear . . . . .	9.174
28	"O" RING, Cylinder Head . . . . .	(A) N.S.
29	SCREEN, Suction . . . . .	9.172
30	PUMP PKG., Comp. Oil . . . . .	9.172
31	PLATE, Discharge Valve—Rear . . . . .	9.172
32	REED, Suction Valve . . . . .	9.172
33	BUSHING, Discharge Tube . . . . .	9.172
34	"O" RING, Discharge Tube . . . . .	(A) N.S.
35	CYLINDER & BEARING ASSY., (Includes Front & Rear Unit & No's. 36-54-55)	9.170
36	BEARING, Shaft . . . . .	9.172
37	TUBE, Oil Inlet . . . . .	9.172
38	"O" RING, Oil Inlet Tube . . . . .	(A) N.S.
39	BEARING, Needle Thrust . . . . .	9.172
40	RACE, Thrust Bearing . . . . .	9.172
41	SHAFT ASSY., Drive (No. 50 Included) . . . . .	9.170
42	RING, Piston . . . . .	9.172
43	BALL, Piston Drive . . . . .	9.172
44	PISTON . . . . .	9.172
45	RING, Piston . . . . .	9.172
46	BALL, Piston Drive . . . . .	9.172
47	DISC, Shoe . . . . .	9.172
48	TUBE PKG., Crossover Discharge (No. 33 Included) . . . . .	9.172
49	BEARING, Needle Thrust . . . . .	9.172
50	KEY, Clutch Hub . . . . .	9.188
51	RACE, Thrust Bearing . . . . .	9.172
52	COVER, Suction Passage . . . . .	(A) 9.172
53	SEAL, Suction Passage Cover (See Note Group 9.170) . . . . .	N.S.
54	BEARING, Shaft . . . . .	9.172
55	CYLINDER & BEARING ASSY., (Includes Front & Rear Unit & No's. 35-36-54)	9.170
56	"O" RING, Discharge Tube . . . . .	(A) N.S.
57	BUSHING, Discharge Tube . . . . .	9.172
58	REED, Suction Valve . . . . .	9.172
59	PLATE, Discharge Valve—Front . . . . .	9.172

NOTE: Cylinder & Shaft Assembly Includes No's. 35-36-39-40-41-42-43-44-45-46-47-48-49-51-54-55.

The parts indicated with letters are serviced in the following packages:

A Parts Serviced in Compressor Overhaul Seal Pkg.—9.170

B Parts Serviced in Nut Pkg.—9.170

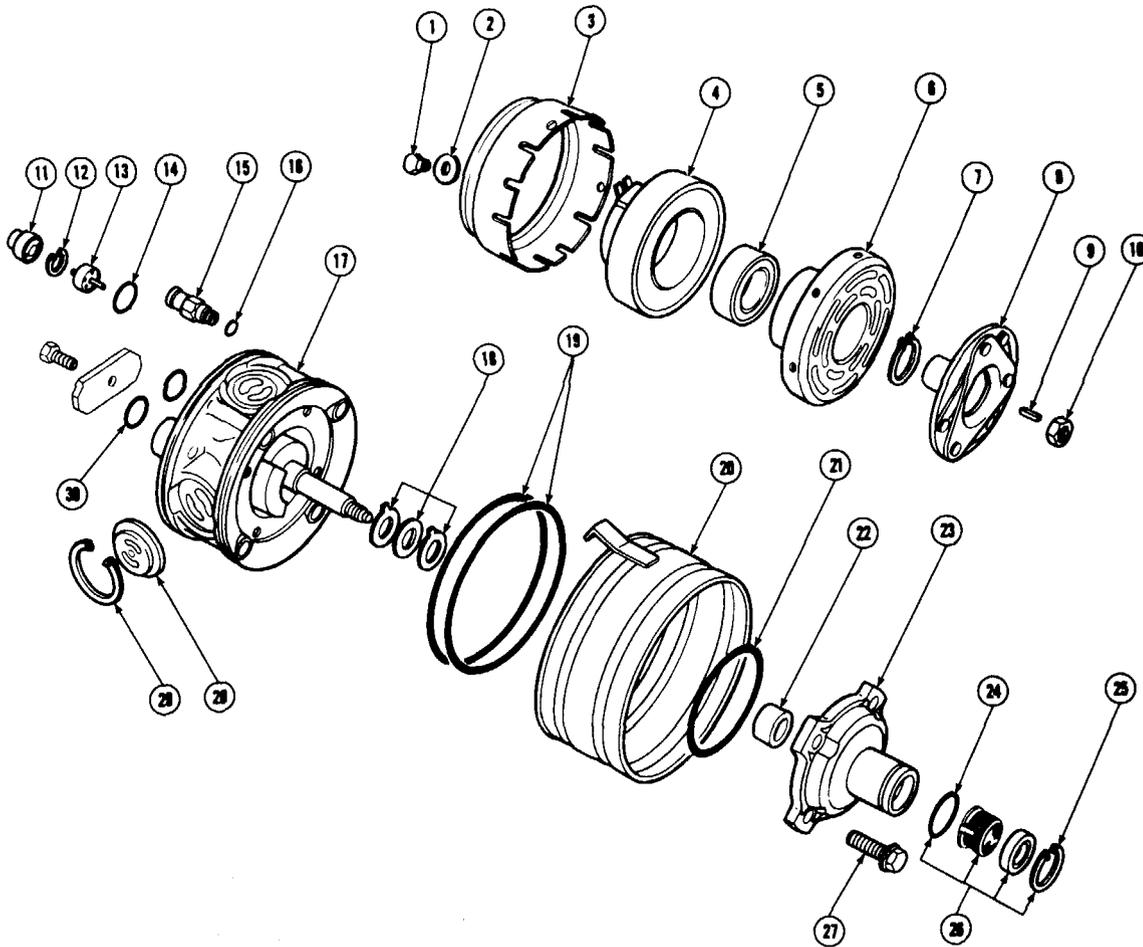


**RADIAL 4 CYLINDER AIR CONDITIONING COMPRESSOR**

Key	Part Name	Group No.	Key	Part Name	Group No.
1	SCREW, Pulley Rim Mounting	9.180	16	SEAL, Relief Valve (Part of #15)	N.S.
2	WASHER, Pulley Rim	9.180	17	CYLINDER & SHAFT ASM., Compressor	N.S.
3	RIM, Compressor Pulley	9.180	18	WASHER KIT, Compressor Thrust	9.170
4	COIL & HOUSING ASM., Compressor	9.186	19	"O" RING, Cylinder to Shell	9.172
5	BEARING, Pulley Rotor	9.181	20	SHELL ASM., Compressor	9.170
6	ROTOR & BEARING ASM., Compressor	9.172	21	SEAL, Front Head to Cylinder Ring	9.172
7	RING, Bearing to Front Head Retainer	9.172	22	BEARING, Front Head - Main	9.172
8	DRIVE ASM., Compressor Clutch	9.186	23	HEAD ASM., Compressor Front	9.174
9	KEY, Drive Hub to Shaft	9.188	24	SEAL, Seat "O" Ring	9.175
10	NUT, Drive Shaft Pulley	9.181	25	RING, Seal Seat Retainer	9.172
11	CAP, Thermal Switch Protective	N.S.	26	SEAL KIT, Compressor Shaft	9.170
12	RETAINER, Superheat Switch Ring	9.172	27	SCREW & WASHER ASM., Front Head	
13	SWITCH KIT, Superheat	9.172		Mounting	N.S.
14	"O" RING, Superheat Switch	9.172	28	PLATE ASM., Valve	9.172
15	VALVE ASM., Compressor Pressure Relief		29	RING, Valve Plate Retaining	9.172
	(Incl. #16)	9.178	30	"O" RING, Suction Disc Port	9.172




**GM FIREBIRD PARTS CATALOGUE**

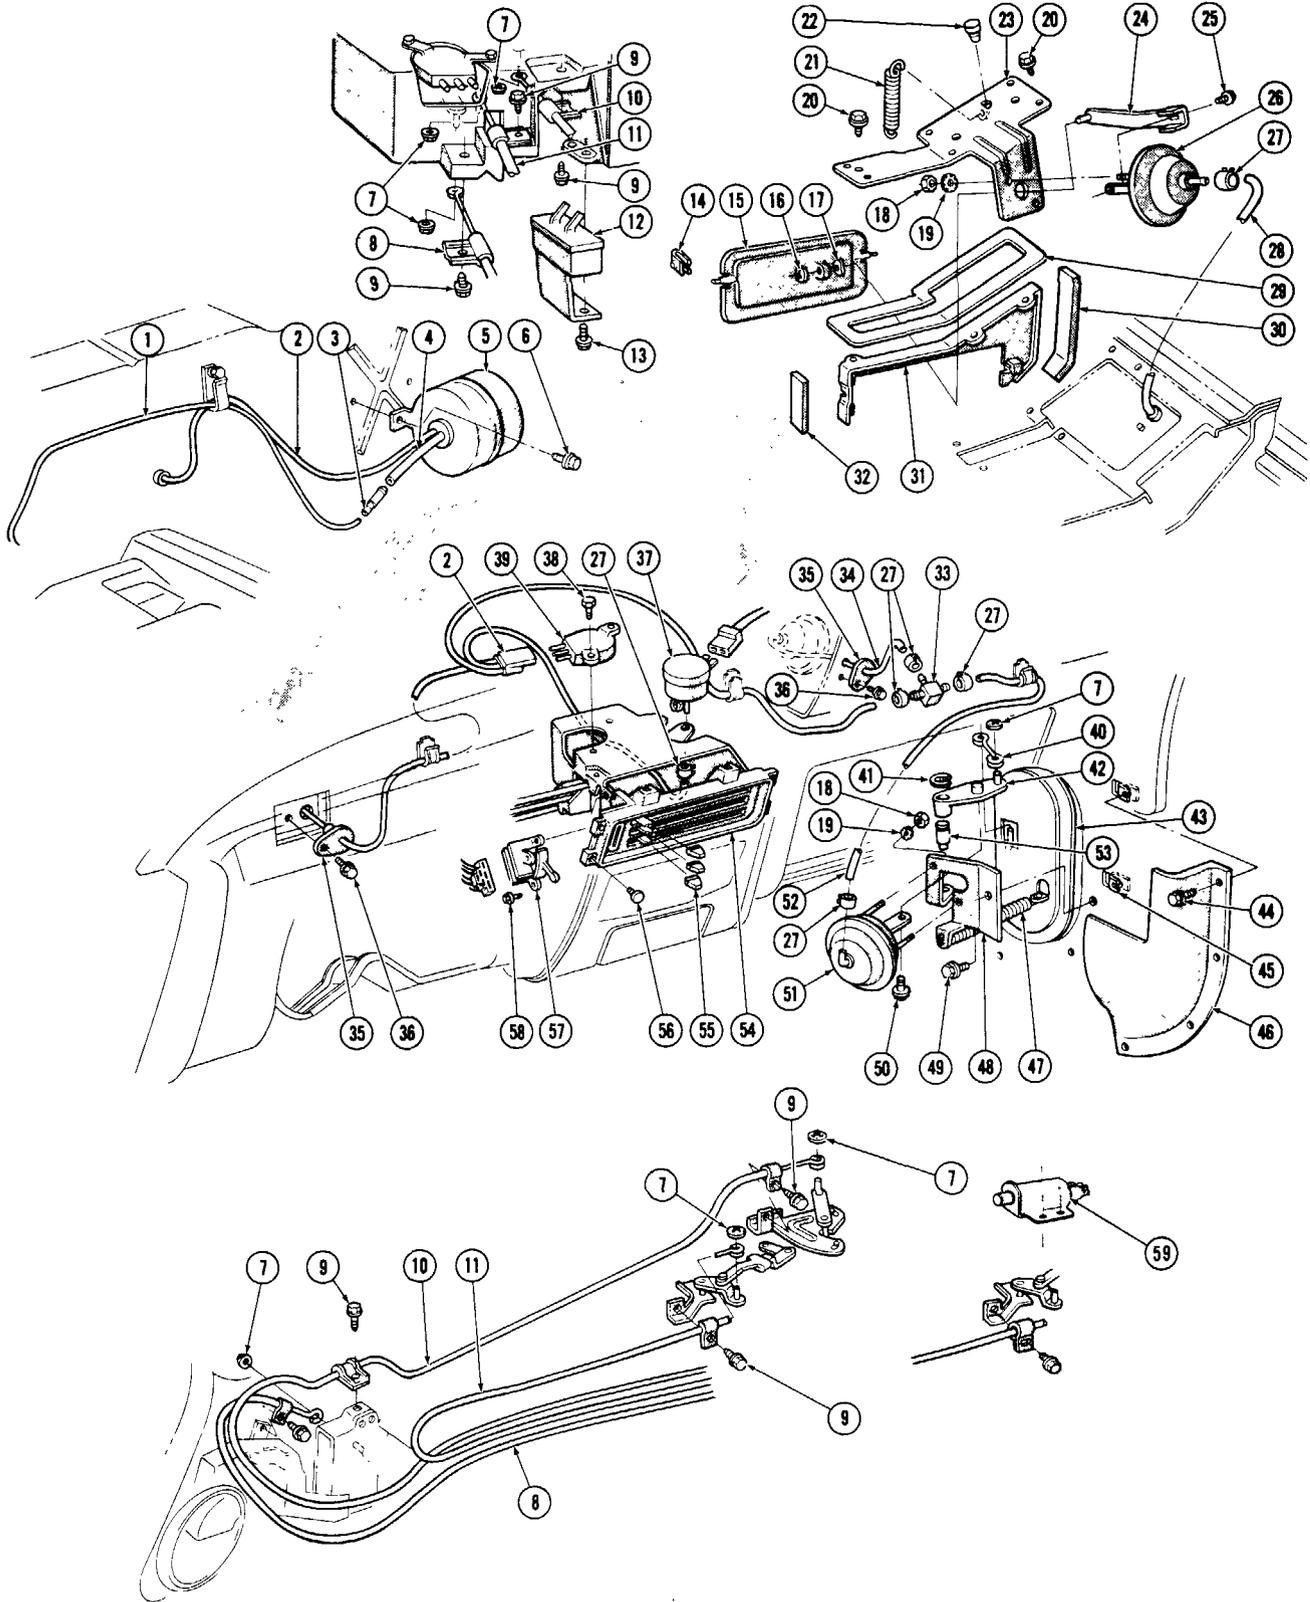

1967-68 FIREBIRD AIR CONDITIONING—CONTROLS

### 1967-68 FIREBIRD AIR CONDITIONING—CONTROLS

Key	Part Name	Group No.
1	— HOSE, Reducer to Engine Vacuum (5/32" I.D. 33" 6-Cyl.) (37" 8-Cyl.) . . . . .	9.281
2	— HARNESS ASM., Vacuum Hose . . . . .	9.281
3	— REDUCER, Carb. Vacuum Hose (1/4" to 3/16") . . . . .	3.765
4	— HOSE, Vacuum Control Tank to Reducer (7/32" I.D. x 6") . . . . .	9.281
5	— TANK ASM., Refrigerant Vacuum Control . . . . .	9.281
6	— SCREW, Tank to Fender Reinf. (1/4"-14 x 5/8") . . . . .	N.S.
7	— NUT, Heater Air Control Cable . . . . .	9.281
8	— CABLE ASM., Defroster Control . . . . .	9.779
9	— SCREW, Cables to Control (#10-16 x 5/8") . . . . .	8.977
10	— CABLE ASM., Heater Temperature Control . . . . .	9.281
11	— CABLE ASM., Heater Diverter Valve Control . . . . .	9.281
12	— SWITCH ASM., Heater Control Master . . . . .	9.275
13	— SCREW, Switch to Control (#10-24 x 3/8") . . . . .	N.S.
14	— CLIP, Air Inlet Plenum Valve Housing . . . . .	N.S.
15	— VALVE ASM., Air Inlet Plenum . . . . .	9.786
16	— NUT, Air Inlet Valve Link . . . . .	9.789
17	— WASHER, Plenum Valve Link to Valve . . . . .	9.786
18	— NUT, Vacuum Valve to Valve Housing Plate (#10-32) . . . . .	8.915
19	— LOCKWASHER, Vacuum Valve to Valve Housing Plate (#10-Ext.) . . . . .	8.932
20	— SCREW, Valve Housing Plate to Plenum Plate (#10-16 x 1/2") . . . . .	8.977
21	— SPRING, Air Inlet Plenum Valve to Plate . . . . .	9.786
22	— PLUG, Air Inlet Plenum Valve Plate . . . . .	N.S.
23	— PLATE, Air Inlet Plenum Valve Housing . . . . .	9.786
24	— LINK, Air Inlet Plenum Valve . . . . .	9.786
25	— SCREW, Vacuum Valve to Link (#8-18 x 3/8") . . . . .	8.977
26	— ACTUATOR ASM., Air Inlet Plenum Valve Vacuum . . . . .	9.215
27	— CLAMP, Vacuum Control Hose . . . . .	9.281
28	— HOSE, Vacuum Control Hose Tee to Plenum (7/64" I.D. x 6") . . . . .	9.281
29	— SEAL, Air Inlet Plenum Valve Housing Plate . . . . .	9.786
30	— SEAL, Air Inlet Plenum Valve Housing to Plenum - Rear . . . . .	N.S.
31	— HOUSING, Air Inlet Plenum . . . . .	9.789
32	— SEAL, Air Inlet Plenum Valve Housing to Plenum - Front . . . . .	N.S.
33	— TEE, Vacuum Control Hose . . . . .	9.281
34	— HOSE, Vacuum Control Hose Tee to Plenum (7/64" I.D. x 6") . . . . .	9.281
35	— GROMMET, Vacuum Control Hose . . . . .	9.775
36	— SCREW, Grommet to Dash (#10-16 x 1/2") . . . . .	8.977
37	— SWITCH, Compressor Vacuum - On Control . . . . .	9.275
38	— SCREW, Vacuum Valve to Control . . . . .	N.S.
39	— VALVE, Heater Control Vacuum . . . . .	9.279
40	— LINK, Air Inlet Side Shroud Vacuum Control . . . . .	9.789
41	— RING, Air Inlet Side Shroud Control Arm . . . . .	9.786
42	— ARM, Air Inlet Side Shroud Vacuum Control . . . . .	9.789
43	— DOOR ASM., Shroud Panel Air Outlet . . . . .	9.789
44	— SCREW & WASHER ASM., Cover to Shroud Side Panel . . . . .	14.810
45	— NUT, Side Shroud Control Cover to Panel . . . . .	9.789
46	— COVER, Shroud Side Vacuum Control . . . . .	9.789
47	— SPRING, Air Inlet Side Shroud Vacuum Control . . . . .	9.789
48	— BRACKET, Air Inlet Side Shroud Vacuum Control . . . . .	9.789
49	— SCREW, Bracket to Side Shroud Panel (1/4"-14 x 5/8") . . . . .	N.S.
50	— SCREW, Diaphragm Control Arm to Control (#8-18 x 3/8") . . . . .	8.977
51	— DIAPHRAGM ASM., Vacuum Air Inlet Side Shroud . . . . .	9.281
52	— HOSE, Control Hose Tee to Side Vent (7/64" I.D. x 20") . . . . .	9.281
53	— PIN, Air Inlet Side Shroud Vacuum Control . . . . .	9.786
54	— CONTROL ASM., Air Conditioner . . . . .	9.273
55	— KNOB, Heater & Air Conditioner Control . . . . .	8.852
56	— SCREW, Control to Inst. Panel (#10-16 x 3/4") . . . . .	8.977
57	— SWITCH ASM., Air Cond. Heater Control Master . . . . .	8.852
58	— SCREW, Switch to Control (#10-24 x 3/8") . . . . .	N.S.
59	— SWITCH ASM., Compressor Vacuum On Heater Case (1968) . . . . .	9.275

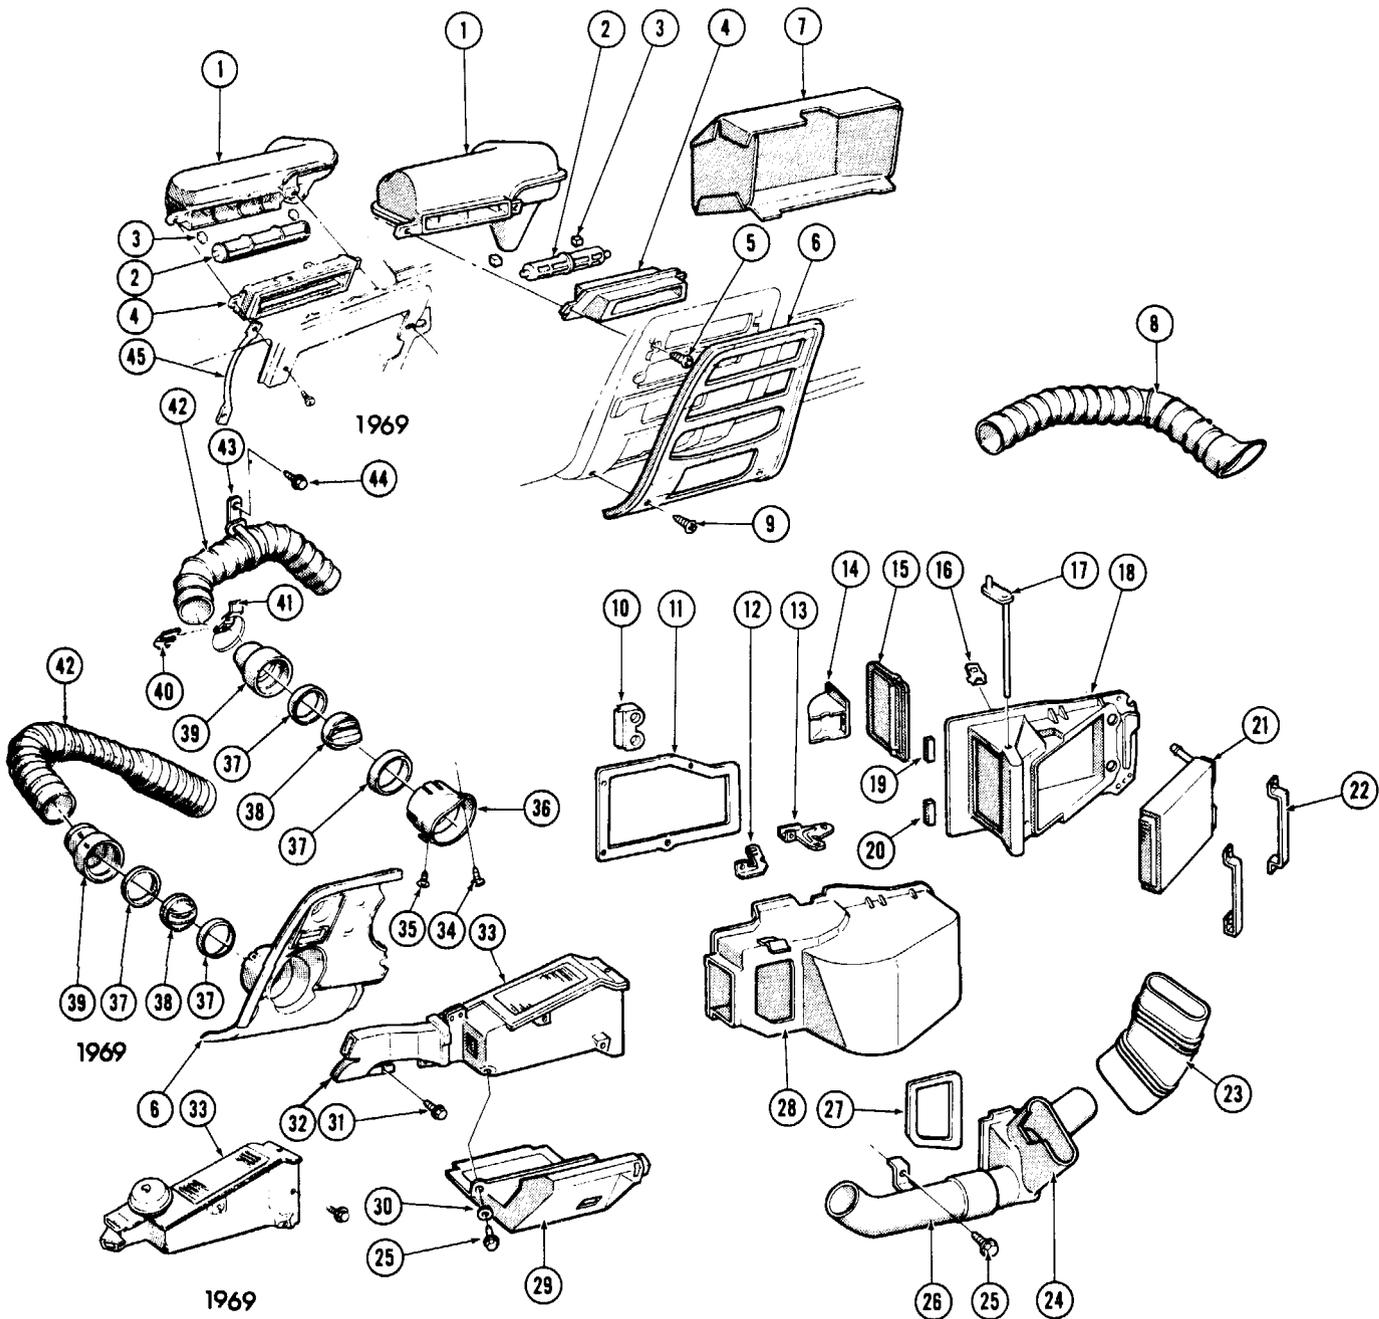


1967-69 FIREBIRD AIR CONDITIONING—INTERIOR AIR SYSTEM

### 1967-69 FIREBIRD AIR CONDITIONING—INTERIOR AIR SYSTEM

Key	Part Name	Group No.
1	— OUTLET ASM., Center Air—Upper . . . . .	9.262
2	— VALVE, Center Air Outlet . . . . .	9.264
3	— RETAINER, Center Air Outlet Valve (Felt) . . . . .	9.264
4	— BEZEL, Center Air Outlet . . . . .	9.264
5	— SCREW, Outlet to Inst. Panel . . . . .	N.S.
6	— PLATE, Inst. Panel Trim - With A.C. . . . .	10.256
7	— COMPARTMENT, Inst. Panel - With A.C. . . . .	10.260
8	— HOSE, Air Outlet - R.H. (2-3/4" Dia. x 19") . . . . .	9.260
9	— SCREW, Trim Plate to Inst. Panel (#8-18 x 1/2") . . . . .	N.S.
10	— SEAL, Heater Core Tubes to Dash . . . . .	8.846
11	— GASKET, Heater Asm. to Dash . . . . .	8.854
12	— BRACKET, Heater Diverter Valve Cable . . . . .	9.281
13	— BRACKET, Heater Temperature Cable - On Case . . . . .	9.281
14	— BAFFLE, Heater Temperature Valve - Linearity . . . . .	8.866
15	— VALVE & SHAFT ASM., Heater Temperature Control . . . . .	8.866
16	— CLIP, Temperature Valve Shaft Retainer . . . . .	9.786
17	— SHAFT, Temperature Control (Part of #15) . . . . .	N.S.
18	— HOUSING, Heater Temperature Control . . . . .	8.866
19	— SEAL, Heater Air Baffle - Upper . . . . .	8.866
20	— SEAL, Heater Air Baffle - Lower . . . . .	8.866
21	— CORE ASM., Heater - With Fittings . . . . .	8.854
22	— CLAMP, Heater Core . . . . .	N.S.
23	— DUCT, Distributor to Center Air Outlet . . . . .	9.262
24	— DUCT ASM., Air Distributor - R.H. . . . .	9.262
25	— SCREW, Distributor Duct to Distributor (#10-16 x 5/8") . . . . .	8.977
26	— DUCT ASM., Air Distributor - L.H. . . . .	9.262
27	— GASKET, Air Distributor Duct to Heater . . . . .	9.262
28	— CASE & CORE ASM., Heater (Less Dist. & Defroster Duct) . . . . .	8.854
29	— OUTLET ASM., Center Air - Lower . . . . .	9.264
30	— WASHER, Outlet to Dash . . . . .	N.S.
31	— SCREW, Duct to Dash (#10-16 x 3/4") . . . . .	N.S.
32	— DUCT ASM., Air Distributor to Defroster End . . . . .	9.262
33	— DISTRIBUTOR ASM., Heater Defroster. . . . .	9.779
34	— SCREW, Air Outlet Bezel to Retainer (#8-18 x 3/4") . . . . .	8.977
35	— SCREW, Air Outlet Bezel to Inst. Panel (#8-18 x 1/2") . . . . .	8.977
36	— BEZEL, Air Outlet Nozzle - L.H. . . . .	9.264
37	— SEAL, Air Outlet Adapter or Bezel . . . . .	9.264
38	— DEFLECTOR, Air Outlet. . . . .	9.262
39	— ADAPTER, Air Outlet Nozzle . . . . .	9.264
40	— NUT, Air Outlet Bezel to Retainer (#8-18 "J" Shape) . . . . .	N.S.
41	— RETAINER, Air Outlet Bezel . . . . .	9.262
42	— HOSE, Air Outlet - L.H. (2-3/4" Dia. x 24") . . . . .	9.260
43	— STRAP, Air Outlet Hose - L.H. . . . .	9.260
44	— SCREW, Strap to Plenum . . . . .	N.S.
45	— SUPPORT, Inst. Panel - Lower Centre . . . . .	10.230

**GM FIREBIRD PARTS CATALOGUE**

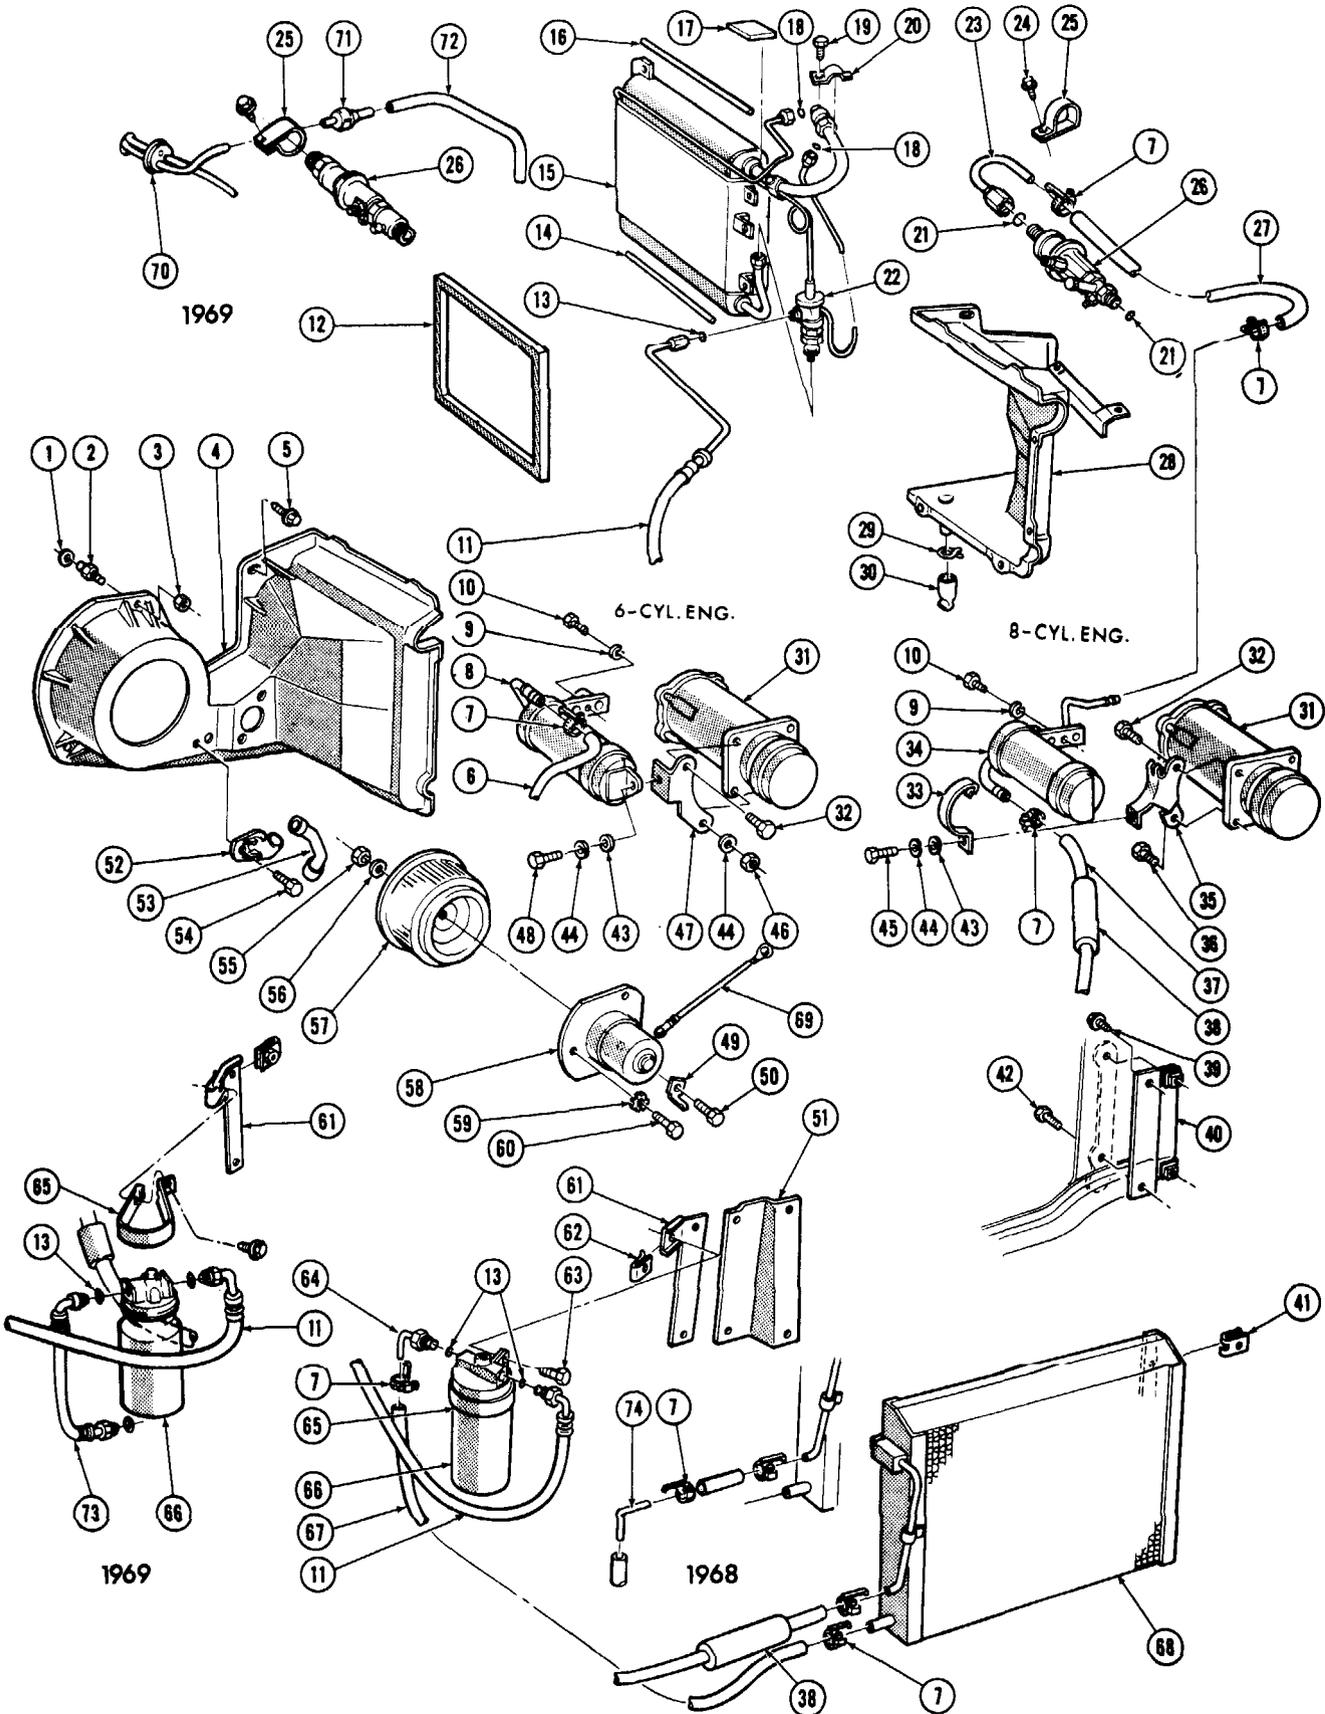


**1967-69 FIREBIRD AIR CONDITIONING-REFRIGERATION SYSTEM**




**1967-69 FIREBIRD AIR CONDITIONING—REFRIGERATION SYSTEM**

Key	Part Name	Group No.
1	— WASHER, Blower Case to Dash (19/64" I.D. x 1/2" O.D.) . . . . .	N.S.
2	— STUD ASM., Blower Motor & Inlet Asm. to Dash . . . . .	9.215
3	— NUT, Blower Case to Dash (1/4" - 20) . . . . .	8.915
4	— CASE, Evaporator Inlet . . . . .	9.211
5	— SCREW, Evaporator & Blower to Dash (1/4" - 14 x 1") . . . . .	8.977
6	— HOSE, Condenser to Compressor (1/2" I.D. x 42") . . . . .	9.227
7	— CLAMP, Freon Hose . . . . .	9.242
8	— FITTING ASM., Compressor - With Muffler (6-Cyl.) . . . . .	9.226
9	— LOCKWASHER, Fittings to Compressor (3/8") . . . . .	8.931
10	— BOLT, Fittings to Compressor (3/8"-24 x 1") . . . . .	8.900
11	— HOSE & COUPLING, Receiver to Evaporator . . . . .	9.231
12	— SEAL, Evaporator Core to Case . . . . .	9.211
13	— GASKET, Expansion Valve Inlet Tube . . . . .	9.214
14	— SEAL, Evaporator Case . . . . .	9.211
15	— CORE ASM., Evaporator - With Pipes . . . . .	9.210
16	— SEAL, Evaporator Case . . . . .	9.211
17	— INSULATION, Expansion Valve Bulb . . . . .	9.213
18	— GASKET, Refrigerant Control Valve "O" Ring . . . . .	9.198
19	— SCREW, Outlet Clamp Tube to Evaporator (#10-16 x 5/8") . . . . .	8.977
20	— CLAMP, Refrigerant Control Valve Tube . . . . .	9.198
21	— GASKET, Refrigerant Control Valve (3/4" "O" Ring) . . . . .	9.210
22	— VALVE ASM., Thermostatic Expansion . . . . .	9.213
23	— TUBE ASM., Suction Throttling Valve to Compressor Hose . . . . .	9.229
24	— SCREW, Control Valve Bracket to Evaporator (1/4"-14 x 5/8") . . . . .	8.977
25	— BRACKET, Refrigerant Control Valve . . . . .	N.S.
26	— VALVE ASM., Suction Throttling . . . . .	9.198
27	— HOSE, Control Valve Tube to Fittings (5/8" I.D. x 18" (8-Cyl.) 23"(6-Cyl.) . . . . .	9.229
28	— CASE, Evaporator Outlet . . . . .	9.211
29	— CLAMP, Evaporator Case Drain Tube . . . . .	9.211
30	— TUBE, Evaporator Case Drain . . . . .	9.211
31	— COMPRESSOR, Air Conditioner . . . . .	9.170
32	— BOLT, Support to Compressor (5/16"-24 x 3/4") . . . . .	8.900
33	— CLAMP, Muffler to Compressor Support . . . . .	9.242
34	— FITTING ASM., Compressor - With Muffler (8-Cyl.) . . . . .	9.226
35	— SUPPORT, Muffler to Compressor (8-Cyl.) . . . . .	9.242
36	— BOLT, Support to Compressor (5/16"-24 x 1-3/8") . . . . .	8.900
37	— HOSE, Condenser to Compressor (1/2" I.D. x 42") . . . . .	9.227
38	— SPACER, Compressor Condenser to Muffler Hose . . . . .	9.242
39	— SCREW & WASHER ASM., Condenser Bracket to Support (5/16"-18 x 7/8") . . . . .	N.S.
40	— BRACKET, Condenser Mounting - L.H. . . . .	9.190
41	— NUT, Condenser to Bracket (#10-12 "U" Shape) . . . . .	8.921
42	— SCREW, Bracket to Condenser (#10-16 x 1/2") . . . . .	8.977
43	— WASHER, Fittings to Support (5/16" I.D. x 5/8" O.D. x 1/16") . . . . .	N.S.
44	— LOCKWASHER, Fittings to Support (5/16") . . . . .	8.931
45	— BOLT, Fittings to Support (5/16"-24 x 1-1/4") . . . . .	8.900
46	— NUT, Fittings to Support (5/16"-24) . . . . .	8.915
47	— SUPPORT, Muffler to Compressor (6-Cyl.) . . . . .	9.242
48	— BOLT, Fittings to Support (5/16"-24 x 3/4") . . . . .	8.900
49	— TERMINAL, Blower Motor Ground - Male . . . . .	9.215
50	— SCREW, Terminal to Case (#8-18 x 1/2") . . . . .	8.977
51	— BRACKET, Condenser Mounting - R.H. . . . .	9.190
52	— ELBOW, Blower Motor Cooling Tube . . . . .	9.218
53	— TUBE, Blower Motor Cooling . . . . .	9.218
54	— SCREW, Elbow to Case (#8-18 x 1/2") . . . . .	8.977
55	— NUT, Impeller to Motor (#10-32) . . . . .	8.915
56	— LOCKWASHER, Impeller to Motor (#10) . . . . .	8.931
57	— IMPELLER, Heater Blower . . . . .	9.216
58	— MOTOR ASM., Blower . . . . .	9.215
59	— LOCKWASHER, Blower Motor to Case (#8) . . . . .	8.932
60	— SCREW, Blower Motor to Case (#8-18 x 1/2") . . . . .	8.977
61	— SUPPORT, Receiver & Liquid Indicator . . . . .	9.206
62	— NUT, Receiver to Support (1/4"-14) . . . . .	8.921
63	— SCREW, Receiver to Support (1/4"-14 x 3/4") . . . . .	8.977
64	— TUBE ASM., Receiver to Condenser Hose . . . . .	9.227
65	— BRACKET, Receiver . . . . .	9.206
66	— RECEIVER ASM., Refrigerant . . . . .	9.195
67	— HOSE, Receiver to Condenser (13/32" I.D. x 13-1/2") . . . . .	9.229
68	— CONDENSER ASM., Refrigerant . . . . .	9.190
69	— WIRE ASM., Blower Motor Ground (1968) . . . . .	9.215
70	— GROMMET, Wiring . . . . .	9.775
71	— VALVE, Vacuum Check . . . . .	9.281
72	— HOSE, Vacuum Control . . . . .	9.281
73	— HOSE, Condenser to Receiver . . . . .	9.227
74	— TUBE, Compressor Discharge . . . . .	9.225

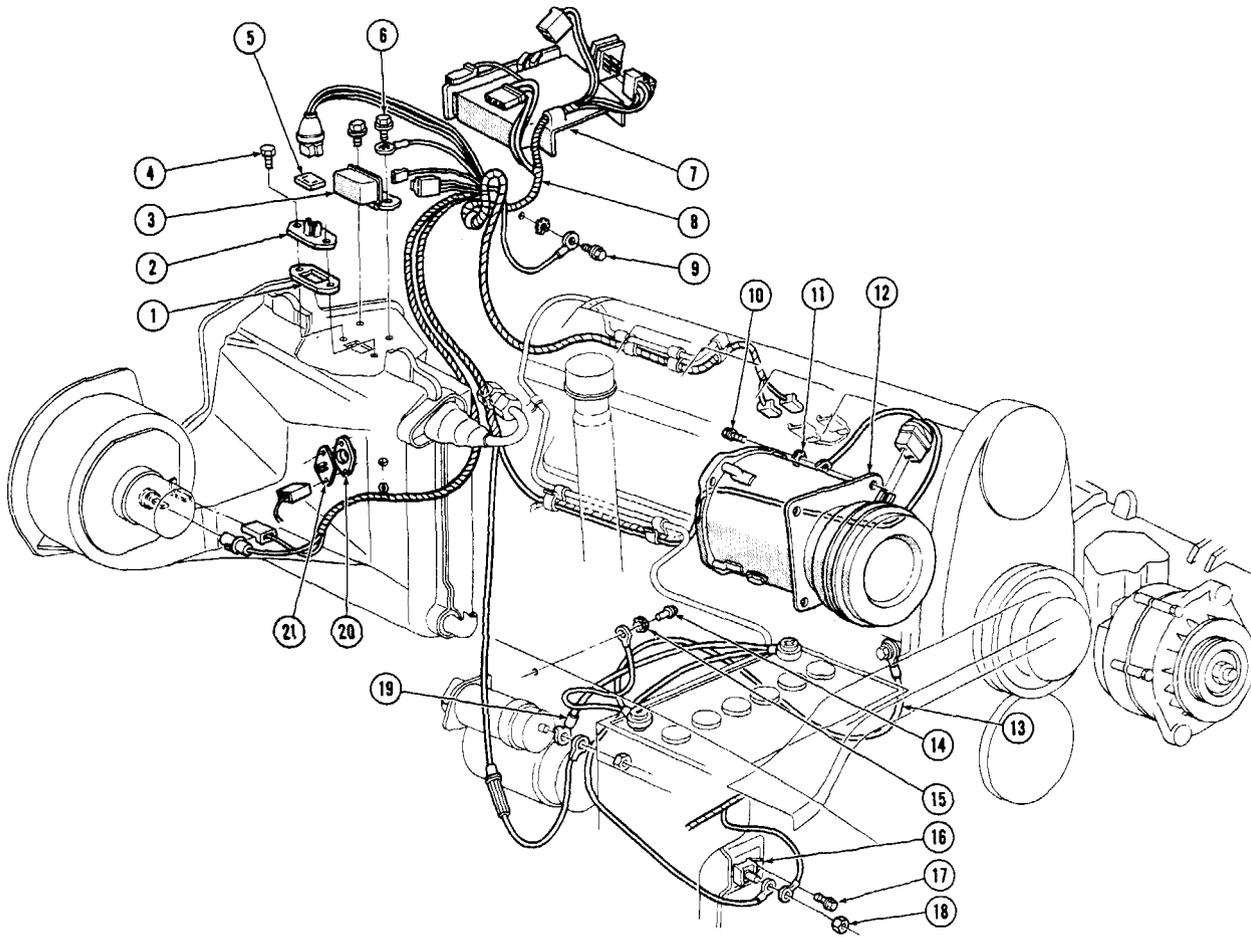


**1967-69 FIREBIRD AIR CONDITIONING—ELECTRICAL PARTS  
(O.H.C. 6 CYLINDER ENGINE)**

Key	Part Name	Group No.
1	GASKET, Heater Blower Motor Resistor	9.275
2	RESISTOR, Blower Motor	9.275
3	RELAY ASM., Blower Motor Cut-Out	9.275
4	SCREW, Resistor to Case (#10-16 x 5/8")	8.977
5	SEAL, Blower Motor Resistor	9.275
6	SCREW, Relay to Case (#10-16 x 5/8")	8.977
7	CONTROL ASM., Heater & Air Conditioner	9.273
8	HARNES ASM., Air Conditioner Main	9.276
9	SCREW, Ground Wire to Dash (1/4"-14 x 5/8")	8.977
10	BOLT, Compressor Mounting (5/16"-24 x 2")	8.900
11	LOCKWASHER, Wire to Compressor (5/16")	8.932
12	COMPRESSOR, Air Conditioner	9.170
13	CABLE, Battery Ground	2.341
14	SCREW, Battery Ground Wire (1/4"-14 x 5/8")	8.977
15	LOCKWASHER, Battery Ground Wire Screw (1/4")	8.932
16	BLOCK ASM., Junction	2.483
17	SCREW, Junction Block to Body (#8-18 x 1/2")	8.977
18	NUT, Cable to Junction Block (#10-24)	N.S.
19	CABLE ASM., Battery to Starter Motor - Positive	2.342
20	GASKET, Ambient Switch to Evaporator (1968)	9.275
21	SWITCH ASM., Compressor Ambient Sensor (1968)	9.275

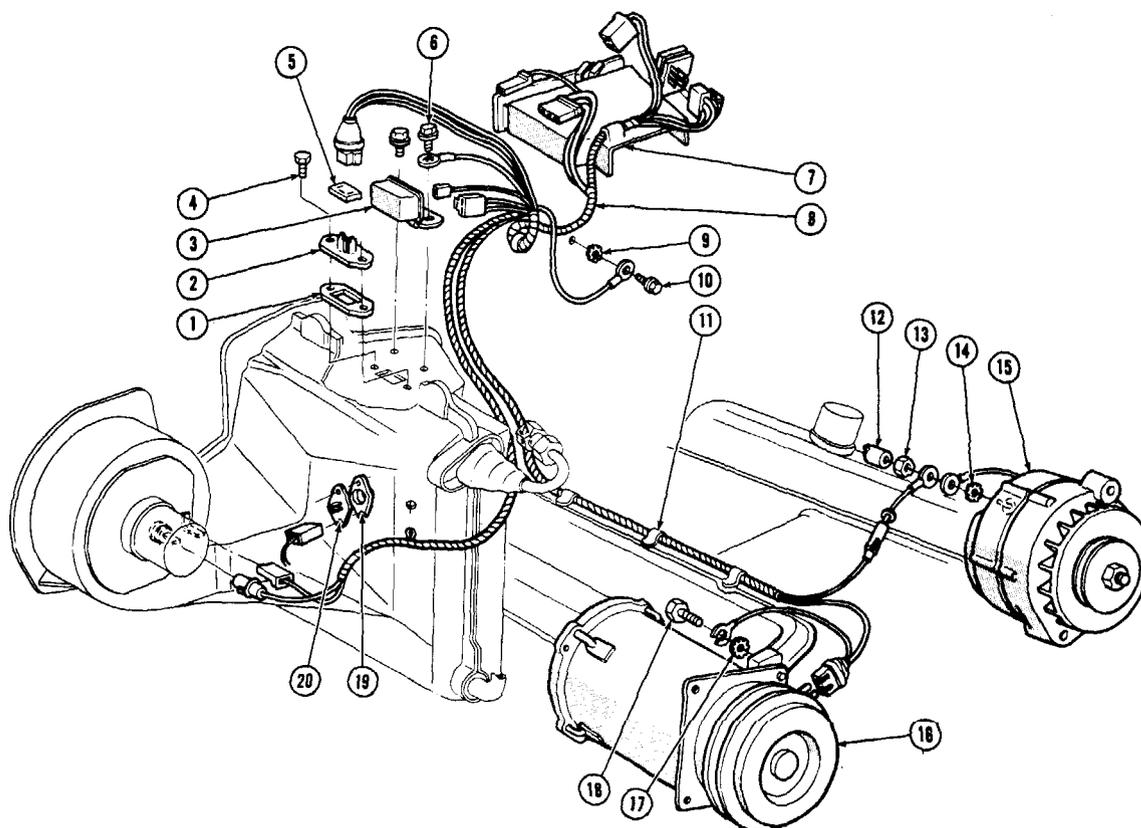


**1967-69 FIREBIRD AIR CONDITIONING—ELECTRICAL PARTS  
(8 CYLINDER ENGINE)**

Key	Part Name	Group No.
1	GASKET, Heater Blower Motor Resistor . . . . .	9.275
2	RESISTOR, Blower Motor . . . . .	9.275
3	RELAY ASM., Blower Motor Cut-Out . . . . .	9.275
4	SCREW, Resistor to Case (#10-16 x 5/8") . . . . .	8.977
5	SEAL, Blower Motor Resistor . . . . .	9.275
6	SCREW, Relay to Case (#10-16 x 5/8") . . . . .	8.977
7	CONTROL ASM., Heater & Air Conditioner . . . . .	9.273
8	HARNESS ASM., Air Conditioner Main . . . . .	9.276
9	LOCKWASHER, Ground Wire to Dash (1/4") . . . . .	8.932
10	SCREW, Ground Wire to Dash (1/4"-14 x 5/8") . . . . .	8.977
11	RETAINER, Alt. Wires to Rocker Arm Covers . . . . .	2.482
12	COVER, Delcotron Battery Protective . . . . .	2.313
13	NUT, Wire to Delcotron (#12-24) . . . . .	8.915
14	LOCKWASHER, Wire to Delcotron . . . . .	N.S.
15	DELCO TRON ASM. . . . .	2.275
16	COMPRESSOR, Air Conditioner . . . . .	9.170
17	LOCKWASHER, Wire to Compressor (5/16") . . . . .	8.932
18	BOLT, Compressor Mounting (5/16"-24 x 2") . . . . .	8.900
19	GASKET, Ambient Switch to Evaporator (1968) . . . . .	9.275
20	SWITCH ASM., Compressor Ambient Sensor (1968) . . . . .	9.275

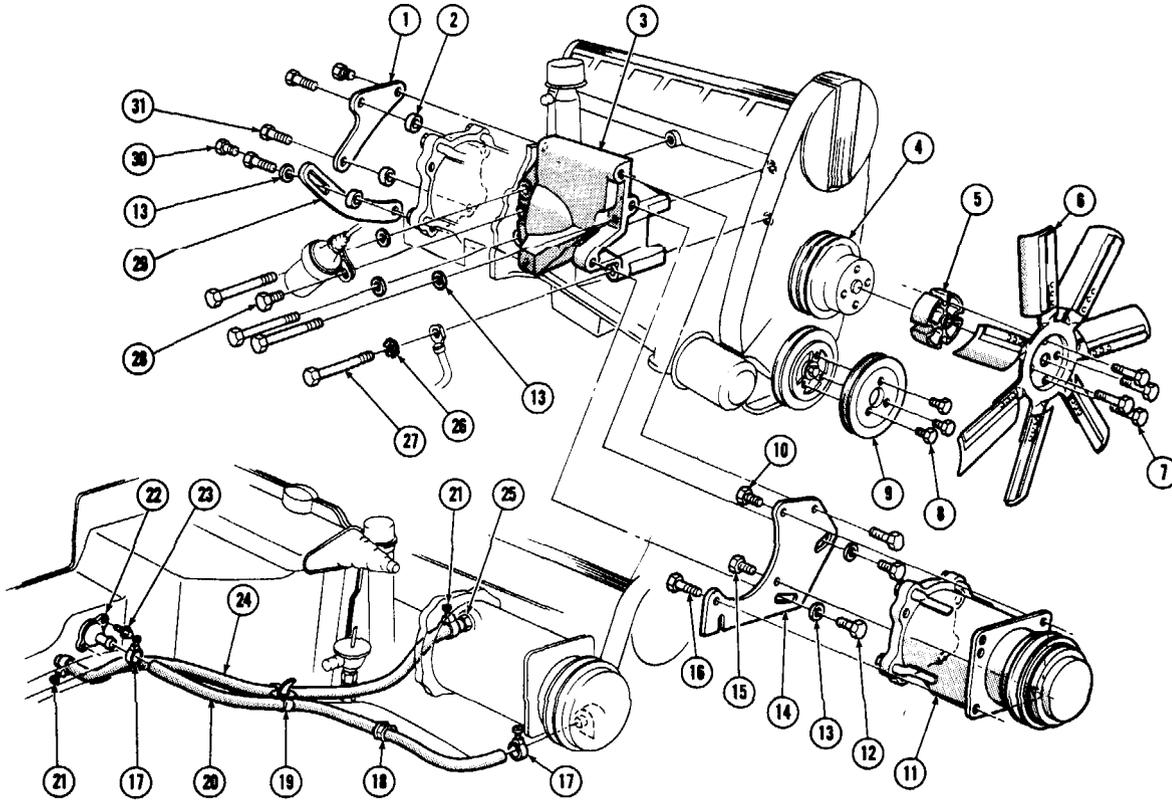


**1967-69 FIREBIRD AIR CONDITIONING—COMPRESSOR MOUNTING AND DRIVE PARTS  
(O.H.C. 6 CYLINDER ENGINE)**

Key	Part Name	Group No.
1	PLATE, Compressor Mounting - Rear	9.171
2	SPACER, Compressor & Clutch to Rear Plate	9.171
3	BRACKET, Compressor Mounting	9.171
4	PULLEY, Water Pump and Fan (6-1/4" dia.)	1.062
5	SPACER, Fan	1.064
6	FAN, 7-Blade (18" dia.)	1.064
7	BOLT, Fan to Pulley (5/16"-24 x 1-3/4")	8.900
8	BOLT, Pulley to Balancer (3/8"-16 x 1/2")	8.900
9	PULLEY, Harmonic Balancer	0.659
10	BOLT, Plate to Compressor (5/16"-24 x 5/8")	8.900
11	COMPRESSOR, Air Conditioner	9.170
12	BOLT, Compressor Mounting Plate to Bracket (3/8"-16 x 1-1/4")	8.900
13	WASHER, Compressor Mounting Plate to Bracket (13/32" x 3/4")	8.929
14	PLATE, Compressor Mounting-Front	9.171
15	BOLT, Front Mounting Plate to Compressor (5/16"-24 x 1/2")	8.900
16	BOLT, Front Mounting Plate to Compressor (5/16"-24 x 1-1/4")	8.900
17	CLAMP, Heater Hose Outlet	1.166
18	CLIP, Heater Hose to Skirt	N.S.
19	STRAP, Heater Water Hose	8.846
20	HOSE, Heater Water Outlet (3/4" I.D. x 38-1/2")	8.846
21	CLAMP, Heater Hose Inlet	1.166
22	GROMMET, Heater Core Pipe	9.775
23	SCREW, Core Pipe Grommet to Case (#10-16 x 5/8")	8.977
24	HOSE, Heater Water Inlet (5/8" I.D. x 30")	8.846
25	NIPPLE, Heater Hose to Cylinder Head	8.866
26	LOCKWASHER, Mounting Bracket to Block (3/8" Ext.)	8.932
27	BOLT, Mounting Bracket to Block (3/8"-16 x 4")	8.900
28	BOLT, Coil to Mounting Bracket (3/8"-16 x 5/8")	8.900
29	STRAP, Compressor	9.171
30	BOLT, Strap and Plate to Bracket (3/8"-16 x 1")	8.900
31	BOLT, Strap and Plate to Bracket (3/8"-16 x 3/8")	8.900

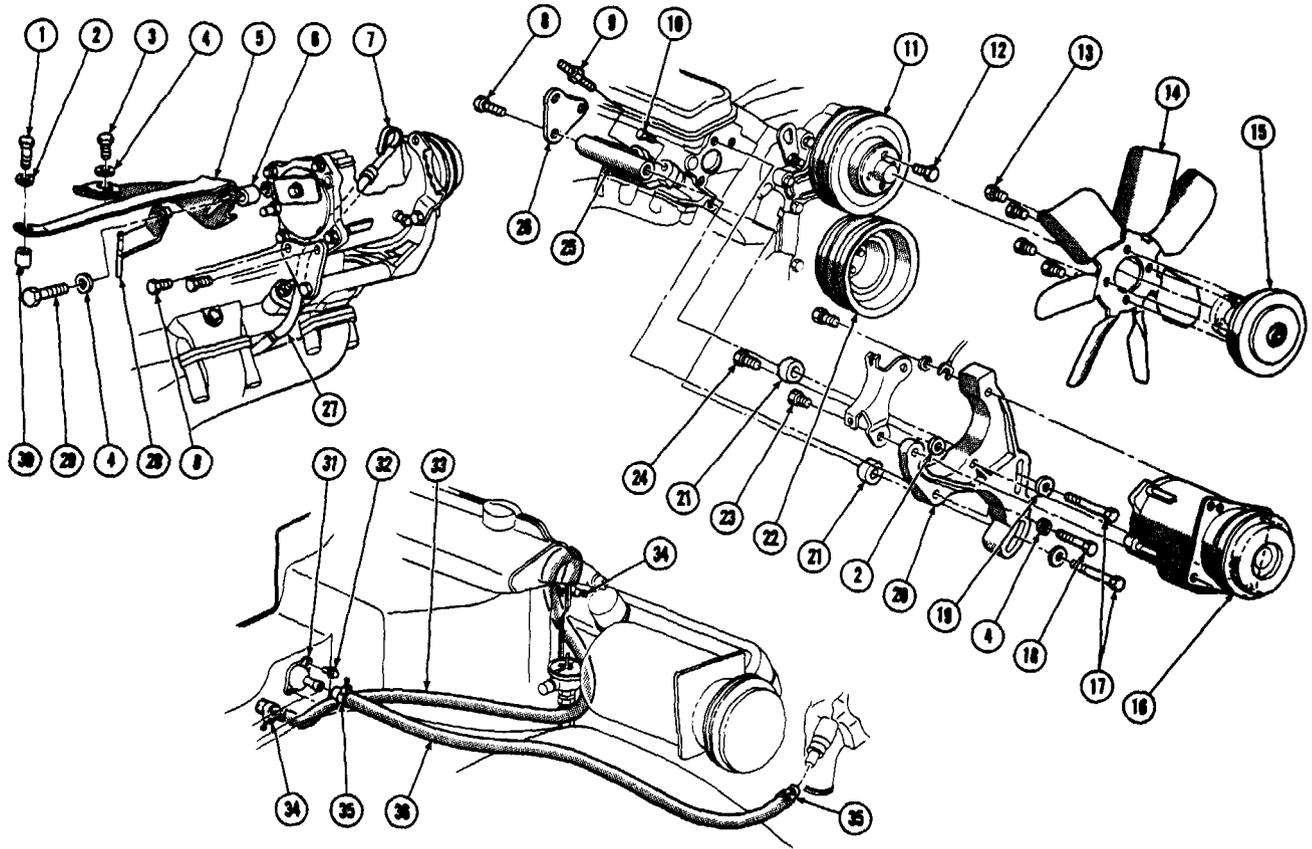

## 1967-69 FIREBIRD AIR CONDITIONING—COMPRESSOR MOUNTING AND DRIVE PARTS (8 CYLINDER ENGINE)


Key	Part Name	Group No.	Key	Part Name	Group No.
1	BOLT, Compressor Rear Brace-Rear-To Intake Manifold (5/16"-18 x 1-3/8") . . . . .	8.900	19	WASHER, Compressor Front Support to Cyl. Hd. Bolt (13/32" x 1-1/8" x 3/16") . . . . .	9.173
2	WASHER, Compressor Rear Brace to Intake Manifold (11/32" I.D. x 3/4" O.D. x 3/32") . . . . .	9.173	20	SUPPORT, Compressor Front . . . . .	9.171
3	BOLT, Compressor Rear Brace-Side-To Intake Manifold (3/8"-16 x 3/4") . . . . .	8.900	21	SPACER, Compressor Frnt. Support to Cyl. Head (13/32" I.D. x 1-1/4" O.D. x 1") . . . . .	9.171
4	WASHER, Compressor Rear Brace-Side-To Intake Manifold (13/32" I.D. x 3/4" O.D. x 1/8") . . . . .	9.173	22	BALANCER ASM., Harmonic . . . . .	0.659
5	BRACE, Compressor Rear to Intake Manifold . . . . .	9.171	23	BOLT, Compressor Muffler Support-Lower-To Frt. Support (5/16"-24 x 1-3/8") . . . . .	8.900
6	SPACER, Compressor Rear Brace to Compressor (13/32" I.D. x 3/4" O.D. x 3/4") . . . . .	9.171	24	BOLT, Compressor to Front Support (5/16"-24 x 2") . . . . .	8.900
7	INDICATOR ASM., Engine Oil Level . . . . .	1.516	25	BRACKET, Compressor Mounting . . . . .	9.171
8	BOLT, Compressor Mtg. Plate-Rear-To Bracket (3/8"-16 x 7/8") . . . . .	8.900	26	PLATE, Compressor Mounting-Rear . . . . .	9.171
9	BOLT, Cyl. Head & Comp. Mtg. Bracket-Rear (1/2"-13 x 4-5/8" Stud Hd.) . . . . .	0.293	27	TUBE ASM., Oil Level Indicator . . . . .	1.516
10	BOLT, Comp. Brkt. to Cyl. Head-Front (1/2"-13 x 4-5/8") . . . . .	0.293	28	BRACKET, Spark Plug Wires at Compressor Brace . . . . .	2.251
11	PULLEY, Water Pump & Fan . . . . .	1.062	29	BOLT, Plug Wire Brkt. & Rear Brace to Compressor (3/8"-16 x 1-3/4") . . . . .	8.900
12	BOLT, Pulley to Water Pump (5/16"-24 x 3/4") . . . . .	8.900	30	SPACER, Compressor Rear Brace-Rear-To Intake Manif. (21/64" I.D. x 3/4" O.D. x 5/8") . . . . .	9.173
13	BOLT, Fan to Fan Clutch Asm. (5/16"-18 x 5/8") . . . . .	8.900	31	GROMMET, Heater Core Pipe . . . . .	9.775
14	FAN ASM., Engine . . . . .	1.064	32	SCREW, Heater Core Pipe Grommet to Case (#10-16 x 5/8") . . . . .	8.977
15	CLUTCH ASM., Engine Fan Fluid . . . . .	1.050	33	HOSE, Heater Water-Inlet (Formed) . . . . .	8.846
16	COMPRESSOR & CLUTCH ASM., Air Conditioner . . . . .	9.170	34	CLAMP, Heater Water Hose-Inlet . . . . .	1.166
17	BOLT, Compressor Front Support to Cyl. Head (3/8"-16 x 3-1/2") . . . . .	8.900	35	CLAMP, Heater Water Hose-Outlet . . . . .	1.166
18	BOLT, Compressor Front Support to Cyl. Hd. Brkt. (3/8"-16 x 2-1/4") . . . . .	8.900	36	HOSE, Heater Water-Outlet (3/4" I.D. x 47") . . . . .	8.846

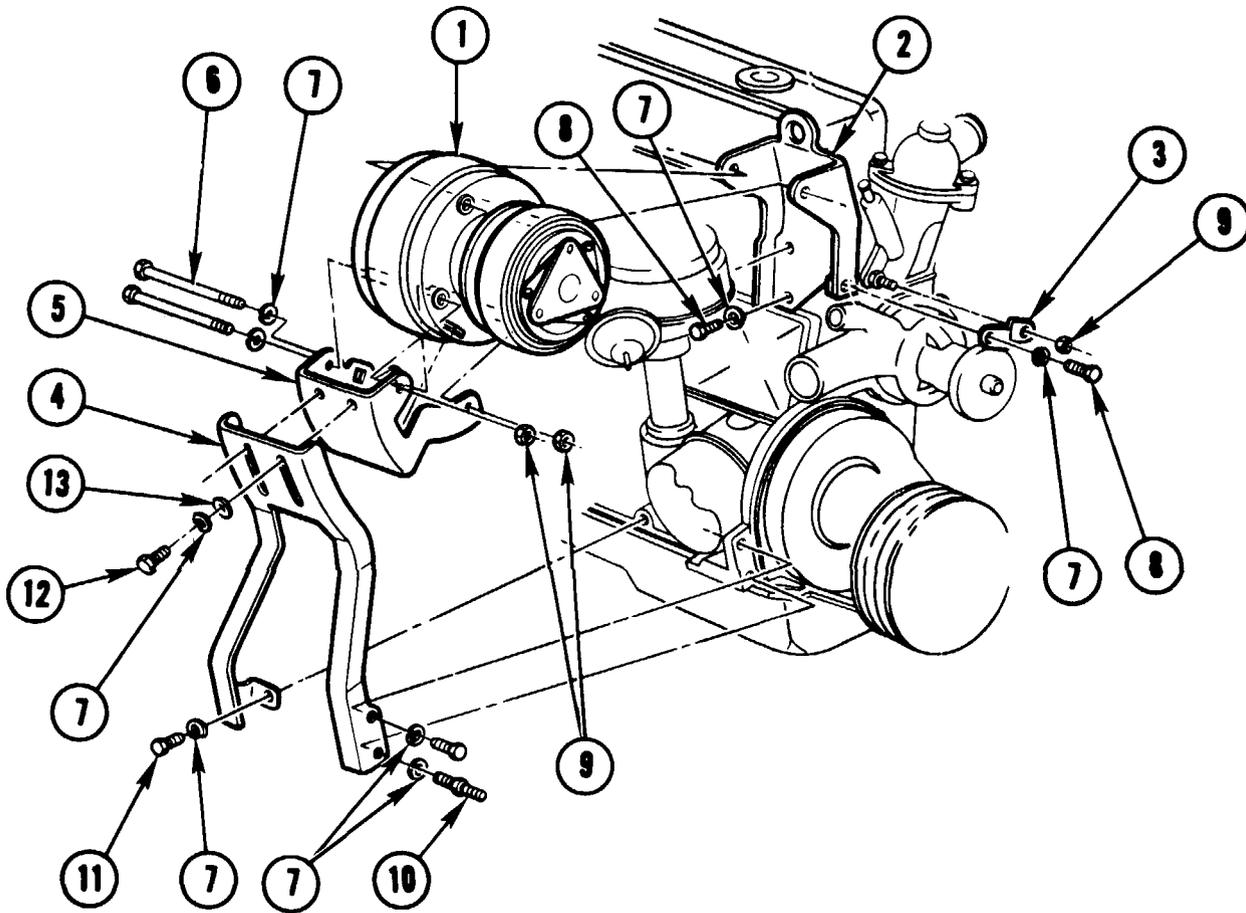

**1975 6 CYL. ENGINE AIR CONDITIONING RADIAL  
COMPRESSOR MOUNTING**

Key	Part Name	Group No.
1	COMPRESSOR, Air Conditioner - A, F, X	9.170
2	BRACKET ASM., Compressor - A, X	9.171
	BRACKET ASM., Compressor - F	9.171
3	SUPPORT, Bracket - A, F, X	9.171
4	BRACE, Compressor Adjusting - A, X	9.171
	BRACE, Compressor Adjusting - F	9.171
5	BRACKET ASM., To Brace Adjusting - A, X	9.171
	BRACKET ASM., To Brace Adjusting - F	9.171
6	BOLT (3/8"-16 x 4")	8.900
7	LOCKWASHER (3/8")	8.931
8	BOLT (3/8"-16 x 3/4")	8.900
9	NUT (3/8"-16)	8.915
10	STUD, Front Bracket to Cyl. Head	9.173
11	BOLT (3/8"-16 x 1")	8.900
12	BOLT (3/8"-16 x 7/8")	8.900
13	WASHER, Flat (3/8")	8.929



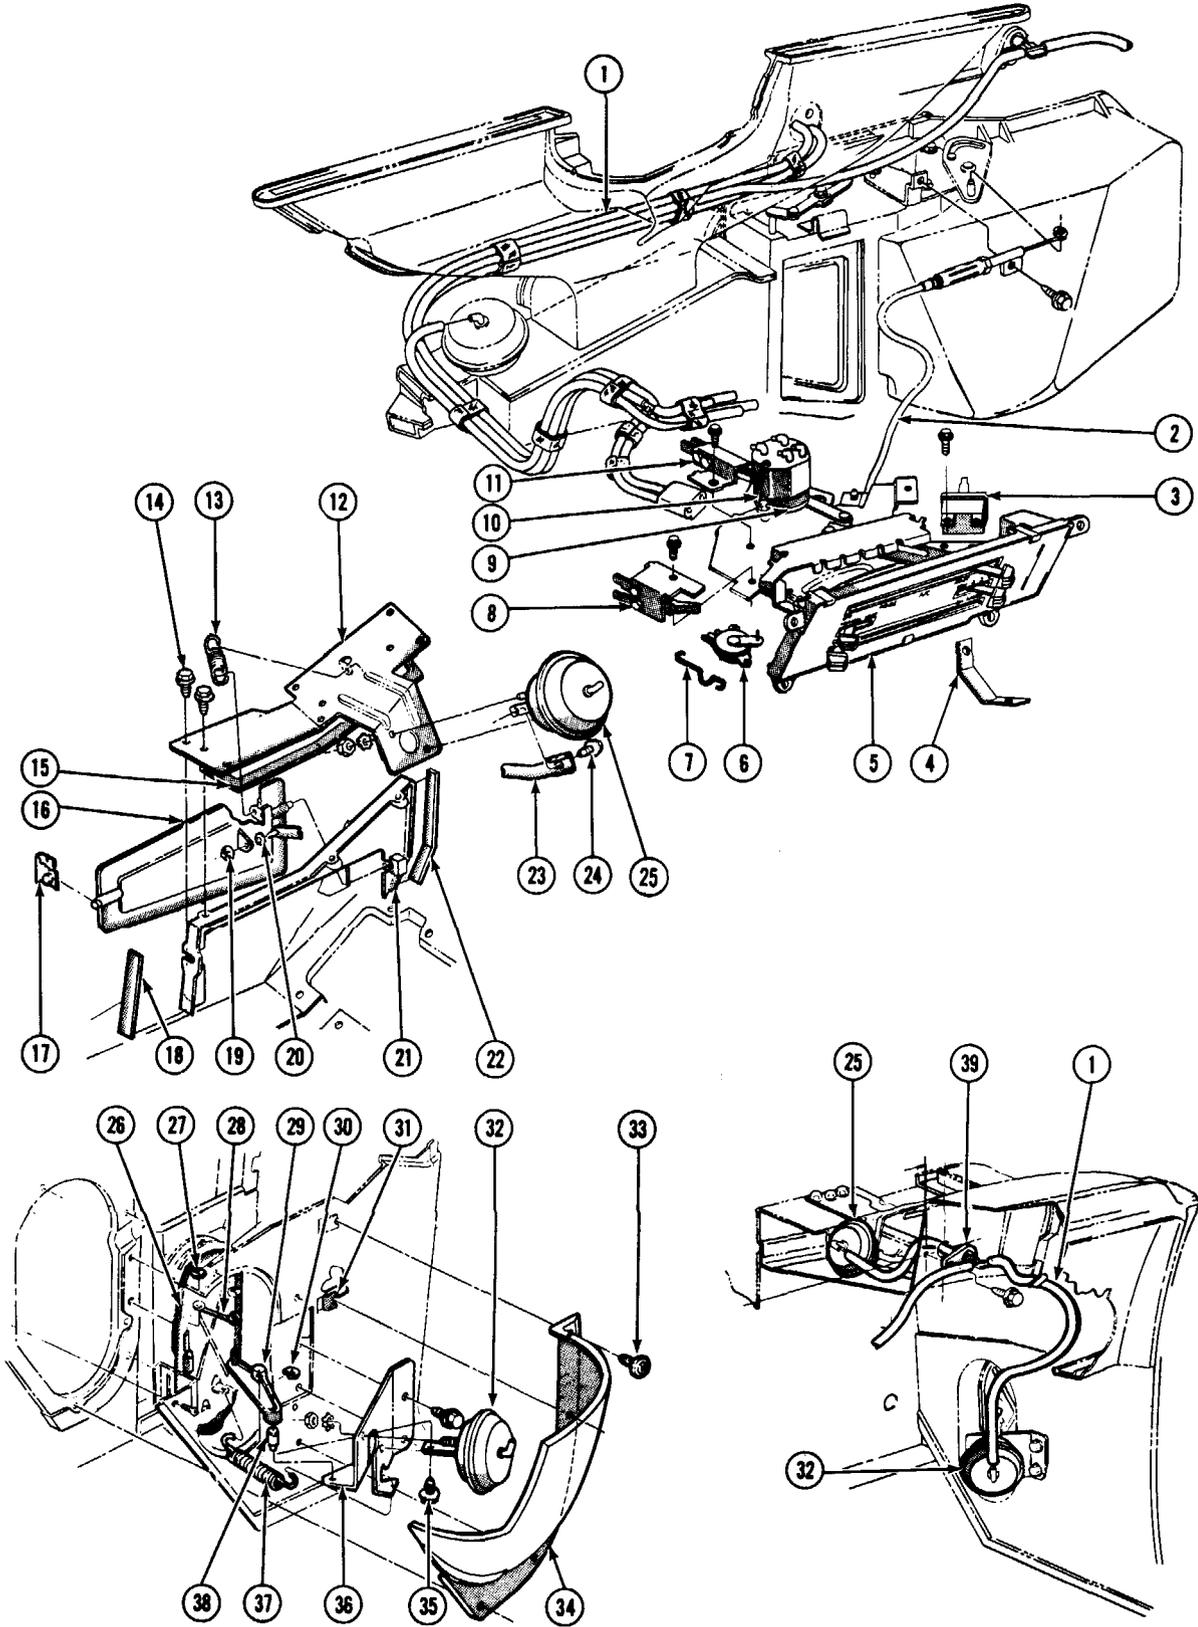


1969 FIREBIRD AIR CONDITIONING—CONTROLS




**1969 FIREBIRD AIR CONDITIONING—CONTROLS**

Key	Part Name	Group No.
1	HARNESSES, Vac. Hose . . . . .	9.281
2	CABLE, Temp. Control . . . . .	8.849
3	SWITCH, Blower Motor . . . . .	8.852
4	SUPPORT, Control . . . . .	8.852
5	CONTROL, Air Conditioner . . . . .	8.849
6	VALVE, Heater Cont. Vacuum (Lower) . . . . .	9.279
7	CLIP, Vac. Hose Retaining (Long) . . . . .	9.281
8	SWITCH, Heater Cont. - Vent . . . . .	9.275
9	VALVE, Heater Cont. Vacuum (Upper) . . . . .	9.279
10	CLIP, Vac. Hose Retaining (Short) . . . . .	9.281
11	SWITCH, Master . . . . .	8.852
12	PLATE, Valve Hsg. . . . .	9.786
13	SPRING, Valve to Plate . . . . .	9.786
14	SCREW, Hsg. Plate to Plenum Plate (#10-16 x 1/2") . . . . .	8.977
15	SEAL, Valve Hsg. Plate . . . . .	9.786
16	VALVE, Plenum . . . . .	9.786
17	CLIP, Plenum Valve Hsg. . . . .	N.S.
18	SEAL, Valve Hsg. to Plenum - Front . . . . .	N.S.
19	NUT, Inlet Valve Link . . . . .	9.789
20	WASHER, Valve Link to Valve . . . . .	9.786
21	HOUSING, Plenum . . . . .	9.786
22	SEAL, Valve Hsg. to Plenum - Rear . . . . .	N.S.
23	LINK, Plenum Valve . . . . .	9.786
24	SCREW, Vac. Valve to Link (#8-18 x 3/8") . . . . .	8.977
25	DIAPHRAGM, Plenum Valve Vac. . . . .	9.281
26	DOOR, Air Outlet - R.H. . . . .	9.789
	DOOR, Air Outlet - L.H. . . . .	9.789
27	NUT, Cable to Door . . . . .	9.281
28	LINK, Shroud Vac. Cont. . . . .	9.789
29	ARM, Shroud Vac. Cont. . . . .	9.789
30	RING, Control Arm (5/16" dia.) . . . . .	8.934
31	NUT, Cover to Panel . . . . .	9.789
32	DIAPHRAGM, Inlet Side Shroud . . . . .	9.281
33	SCREW, Cover to Panel . . . . .	N.S.
34	COVER, Side Vac. Control . . . . .	9.789
35	SCREW, Cont. Arm to Cont. (#8-18 x 3/8") . . . . .	8.977
36	BRACKET, Shroud Vac. Cont. . . . .	9.789
37	SPRING, Shroud Vac. Cont. . . . .	9.789
38	PIN, Shroud Vac. Cont. . . . .	9.786
39	GROMMET, Vac. Cont. Hose . . . . .	9.775

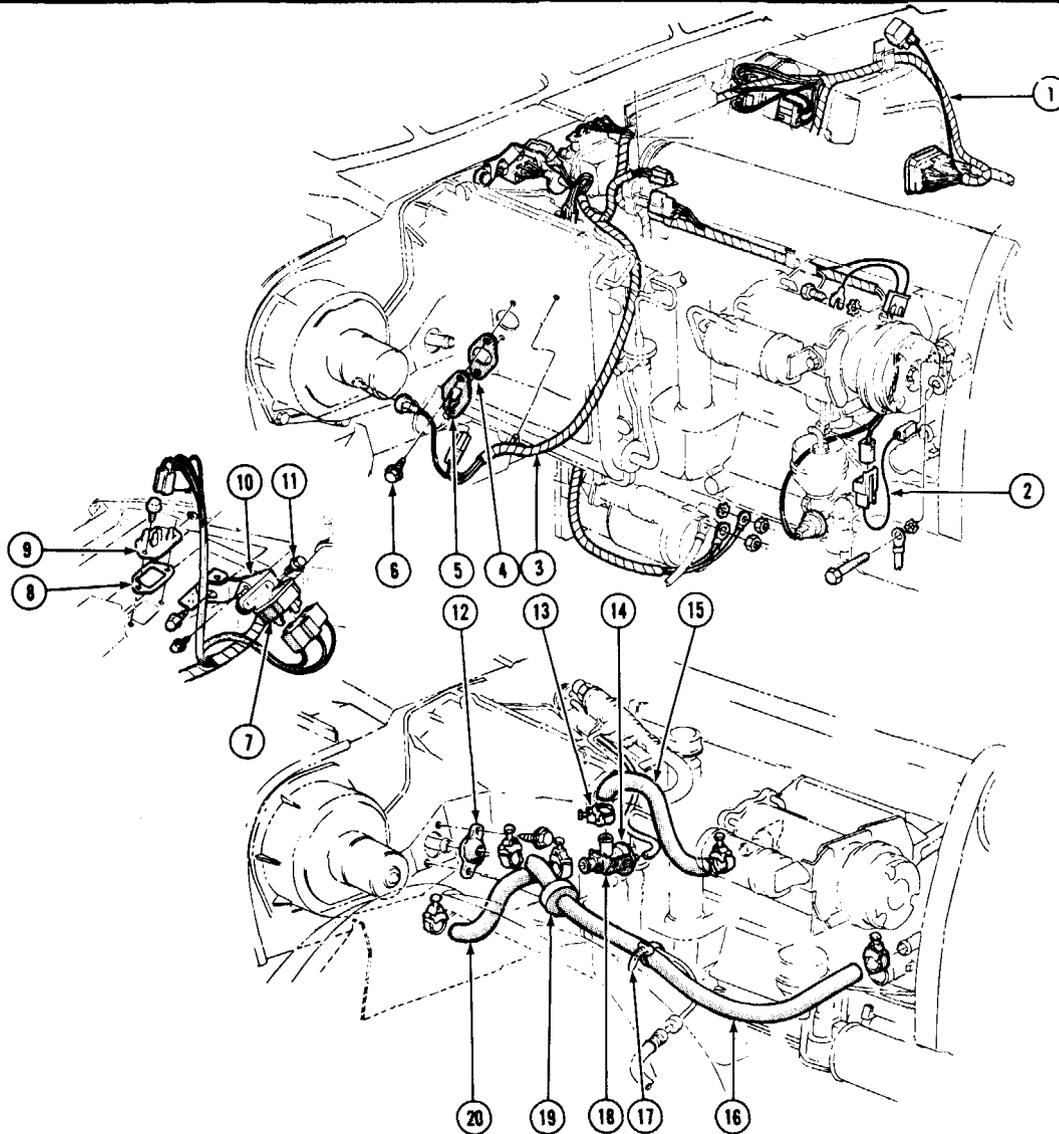


**1969 FIREBIRD AIR CONDITIONING—ELECTRICAL PARTS & WATER HOSE  
(6 CYL. ENGINE)**

Key	Part Name	Group No.
1	HARNES, Engine Wire .....	2.480
2	WIRE, Temp. Gauge Jumper .....	2.480
3	WIRE, Blower & Relays to Cont. Wire .....	9.276
4	GASKET, Switch to Evap. ....	9.275
5	SWITCH, Ambient Sensor .....	9.275
6	SCREW, Switch to Case (#10—16 x 5/8") .....	8.977
7	RELAY, Hi—Blower .....	9.275
8	GASKET, Motor Resistor .....	9.275
9	RESISTOR, Blower Motor .....	9.275
10	BRACKET, Relay Mounting .....	9.216
11	SCREW, Relay to Brkt. (#10—16 x 1/2") .....	8.977
12	GROMMET, Heater Core Pipe .....	9.775
13	CLAMP, Water Hose .....	8.948
14	VALVE, Heater Water .....	9.795
15	HOSE, Valve to Engine .....	8.846
16	HOSE, Heater Outlet (3/4" I.D.) .....	8.962
17	STRAP, Hose to Pipe .....	2.559
18	BRACKET, Water Valve .....	9.795
19	SPACER, Water Hose .....	8.846
20	HOSE, Heater to Valve (5/8" I.D.) .....	8.962

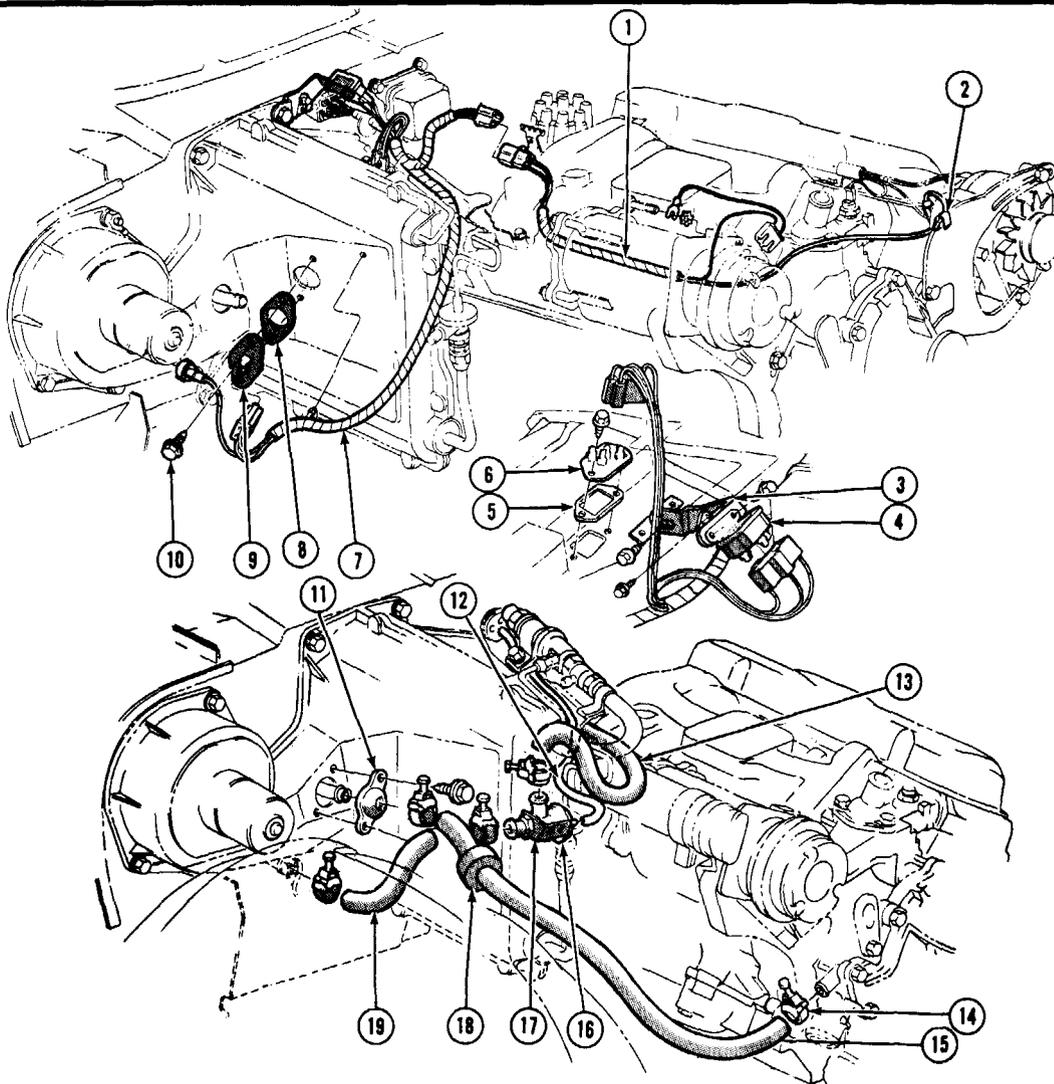


**1969 FIREBIRD AIR CONDITIONING—ELECTRICAL PARTS & WATER HOSE  
(8 CYL. ENGINE)**

Key	Part Name	Group No.
1	— WIRE, Engine Jumper .....	9.276
2	— CLIP, Wire to Strap .....	N.S.
3	— BRACKET, Relay Mounting .....	9.216
4	— RELAY, Hi-Blower .....	9.275
5	— GASKET, Motor Resistor .....	9.275
6	— RESISTOR, Blower Motor .....	9.275
7	— WIRE, Blower & Relays to Cont. Wire .....	9.276
8	— GASKET, Switch to Evap. ....	9.275
9	— SWITCH, Ambient Sensor .....	9.275
10	— SCREW, Switch to Case (#10-16 x 5/8") .....	8.977
11	— GROMMET, Heater Core Pipe .....	9.775
12	— HARNESS, Vacuum Hose .....	9.281
13	— HOSE, Valve to Engine .....	8.846
14	— CLAMP, Water Hose .....	8.948
15	— HOSE, Heater Outlet (3/4" I.D.) .....	8.962
16	— VALVE, Heater Water .....	9.795
17	— BRACKET, Water Valve .....	9.795
18	— SPACER, Heater Hose .....	8.846
19	— HOSE, Heater to Valve (5/8" I.D.) .....	8.962

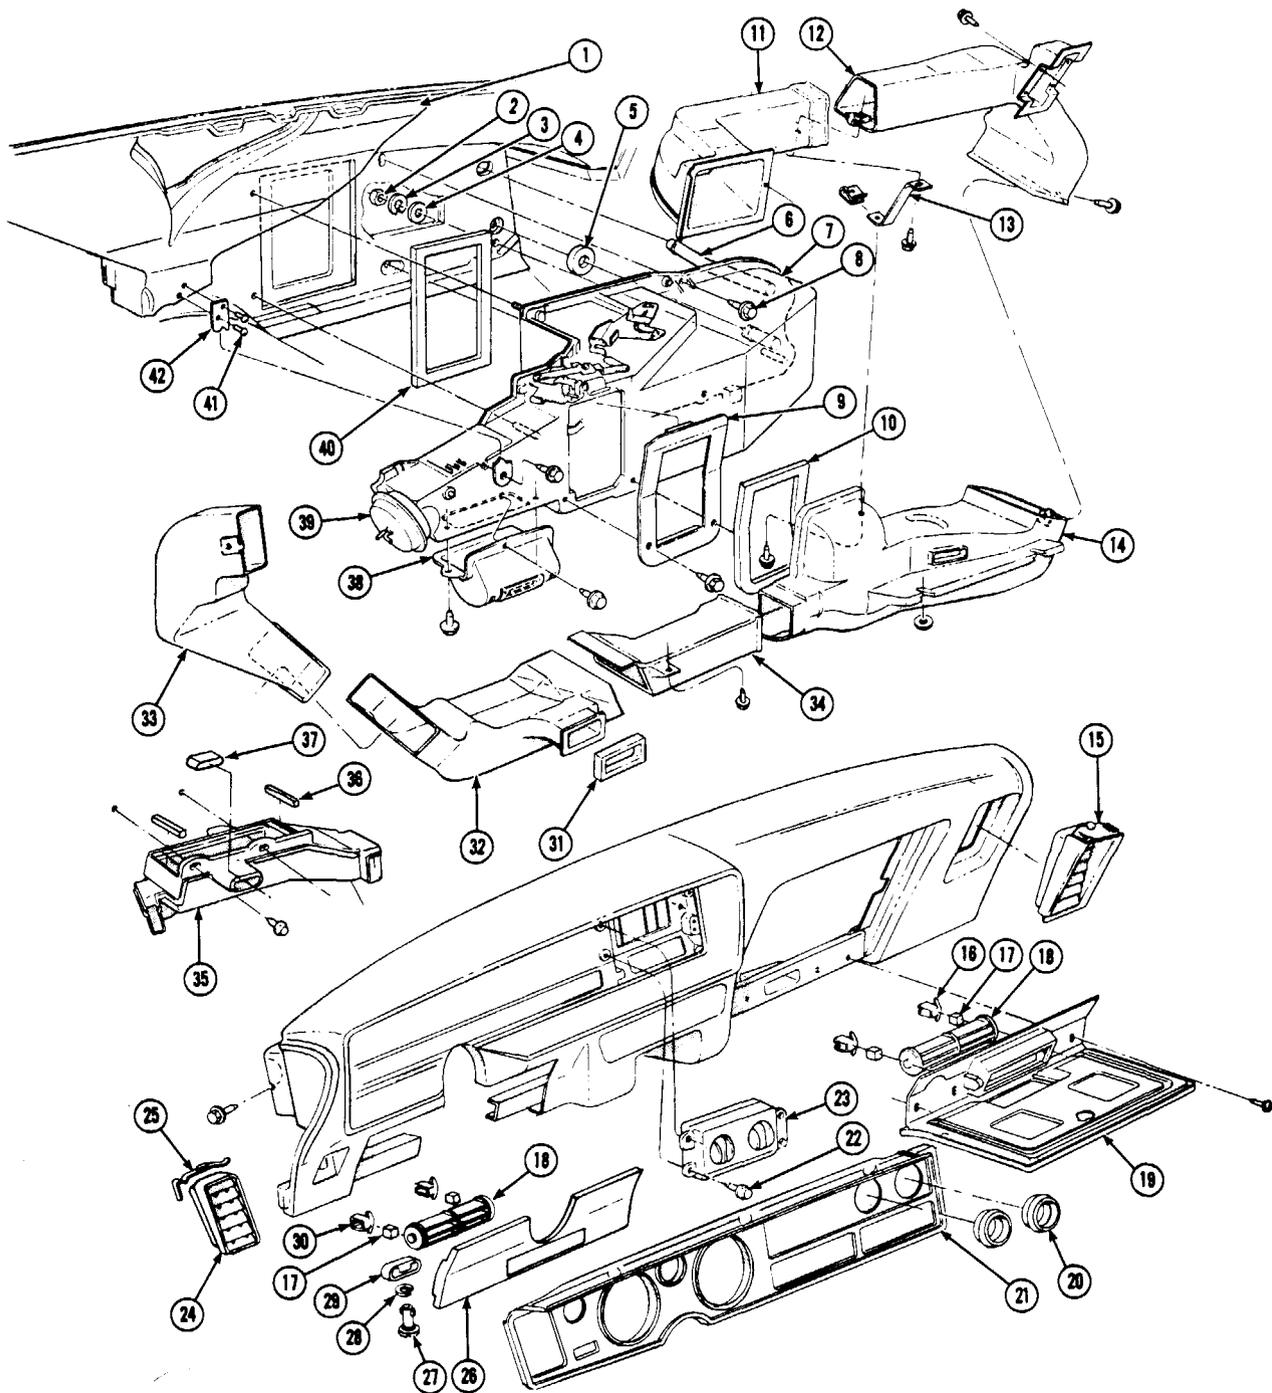**1970-76 FIREBIRD AIR CONDITIONING — INTERIOR AIR SYSTEM**

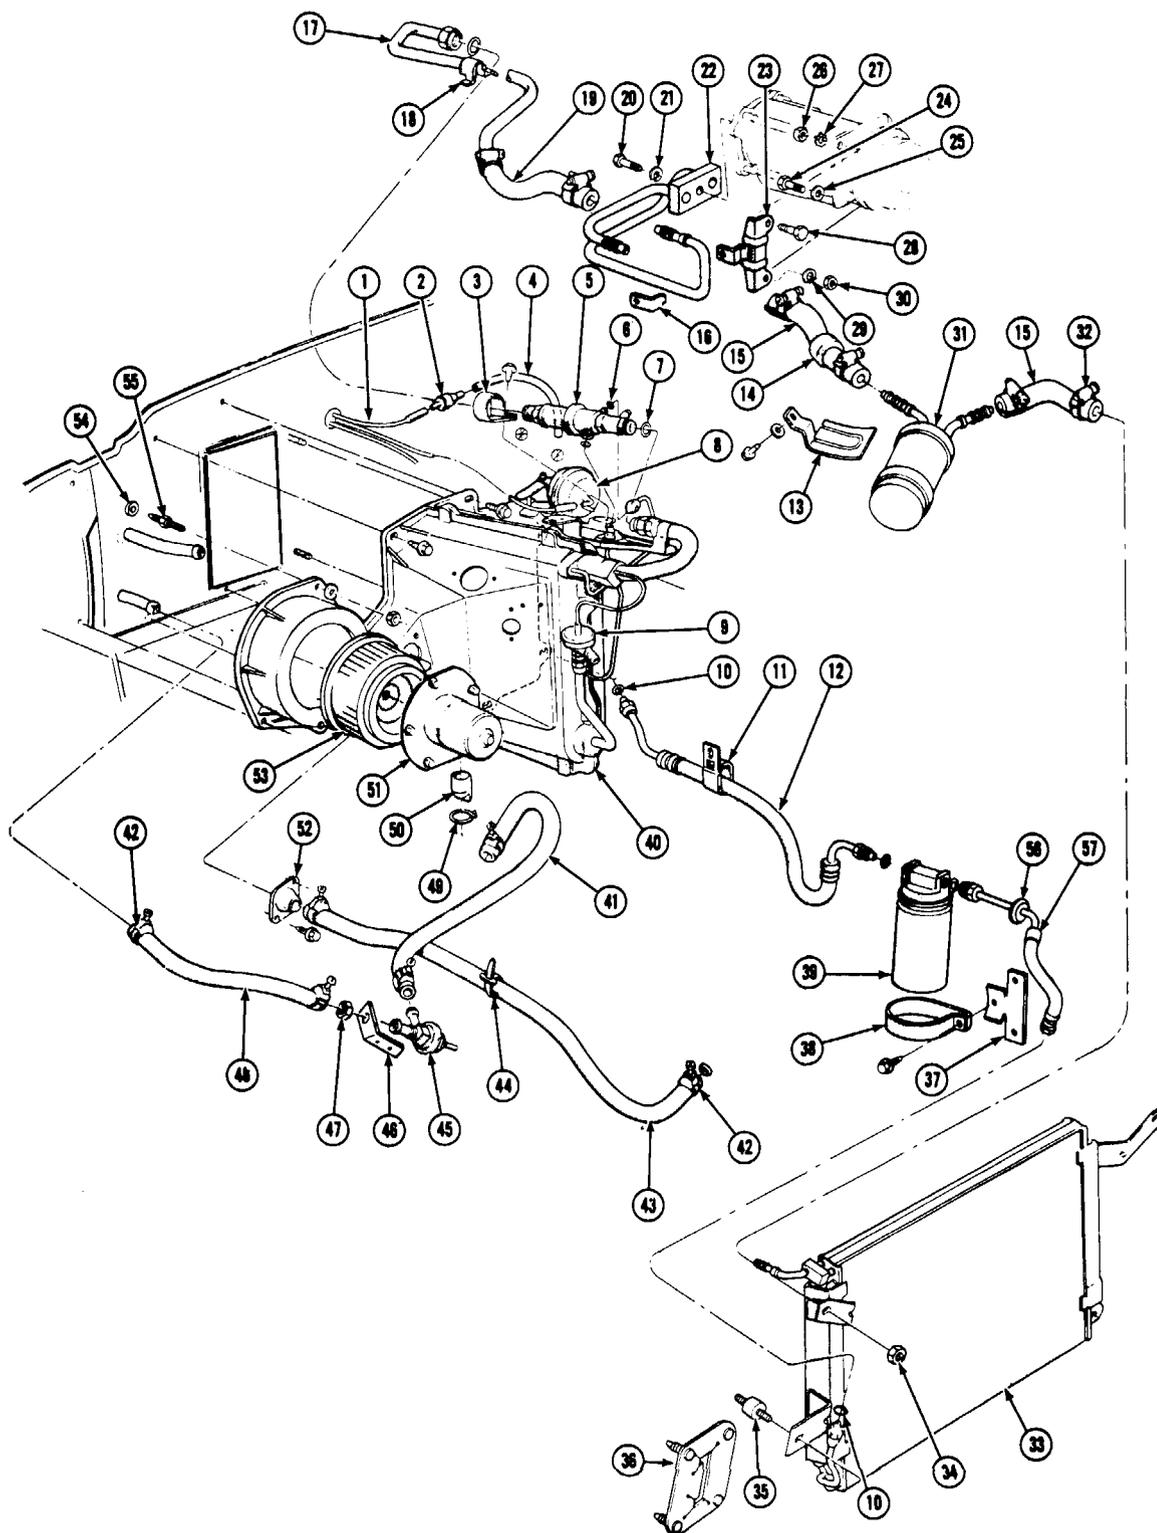


**1970-74 FIREBIRD AIR CONDITIONING — REFRIGERATION SYSTEM (EXC. V.I.R.)**



**1970-74 FIREBIRD AIR CONDITIONING — REFRIGERATION SYSTEM (EXC. V.I.R.)**


Key	Part Name	Group No.
1	HARNESS, Vacuum Hose (F/8)	9.281
2	VALVE ASM., Vacuum Check	9.281
3	CLAMP, Valve	9.198
4	HOSE, Vacuum Check Valve (3/16" I. D. x 8" lg.)	N.S.
5	VALVE ASM., Suction Throttle (P.O.A.)	9.198
6	GASKET, Refrigerant Control Valve	9.198
7	GASKET, "O" Ring (3/4" O. D.)	9.214
8	DIAPHRAGM, Evap. Purge Valve	9.211
9	VALVE, Refrigerant Expansion	9.213
10	GASKET, Hose to Valve	9.214
11	CLIP, Hose & Coupling	9.281
12	HOSE & COUPLING ASM., Receiver to Evap.	9.222
13	BRACKET, Muffler Mtg.	9.242
14	SPACER, Hose	9.242
15	HOSE, Freon (1/2" I. D. - 17" req'd.)	8.962
16	CLAMP, Fittings to Brkt.	N.S.
17	TUBE ASM., P.O.A. Valve to Suction Hose	9.229
18	CLAMP, Valve Tube	9.198
19	HOSE, Freon (5/8" I. D. - 15 1/2" req'd.)	8.962
20	BOLT, Fittings to Comp. (3/8"-24 x 1 1/8")	N.S.
21	LOCKWASHER, Fittings to Comp. (3/8")	8.931
22	FITTING ASM., Compressor	9.226
23	BRACKET, Muffler to Compressor	9.242
24	BOLT, Fitting to Comp. (5/16"-24 x 1 3/4")	8.900
25	WASHER, Fitting to Comp.	9.173
26	NUT, Fitting to Comp. (5/16"-24)	N.S.
27	LOCKWASHER, Fitting to Comp. (5/16" Ext. Tooth)	8.932
28	BOLT, Fitting to Comp. (5/16" - 24 x 1")	8.900
29	LOCKWASHER, Fitting to Comp. (5/16")	8.931
30	NUT, Fitting to Comp. (5/16"-24)	N.S.
31	MUFFLER ASM., Compressor—1970-71 All, 1972 1st Type —1972 2nd Type, 1973 All	9.226 9.226
32	CLAMP, Hose	9.242
33	CONDENSER ASM., Refrigerent	9.190
34	NUT, Condenser to Baffle (5/16"-18)	8.915
35	INSULATOR, Condenser	9.190
36	SEAL ASM., Rad. Baffle Frame Bar Opening	1.274
37	SUPPORT, Receiver	9.206
38	BRACKET, Receiver	9.206
39	RECEIVER & DEHYDRATOR ASM.	9.195
40	EVAPORATOR ASM.	9.210
41	HOSE, Heater (5/8" I. D. - 23" req'd.)	8.962
42	CLAMP, Water Hose	8.948
43	HOSE, Heater Outlet (3/4" I. D.)	8.962
44	STRAP, Hose to Pipe	8.846
45	VALVE ASM., Water Temp. Control	9.795
46	BRACKET, Temp. Control Valve	9.795
47	NUT, Valve to Brkt. (13/16"-20)	N.S.
48	HOSE, Heater to Valve (5/8" I. D.)	8.962
49	CLAMP, Drain Hose	9.211
50	HOSE, Drain	9.211
51	MOTOR ASM., Blower	9.215
52	GROMMET, Heater Core Tube—Upper	8.846
53	IMPELLER, Blower Motor	9.216
54	STUD, Motor & Inlet to Dash	9.215
55	WASHER (Spec. 19/64" I. D. x 1/2" O. D.)	N.S.
56	GROMMET, Condenser to Receiver Hose	9.775
57	HOSE & COUPLING ASM., Condenser to Receiver	9.227

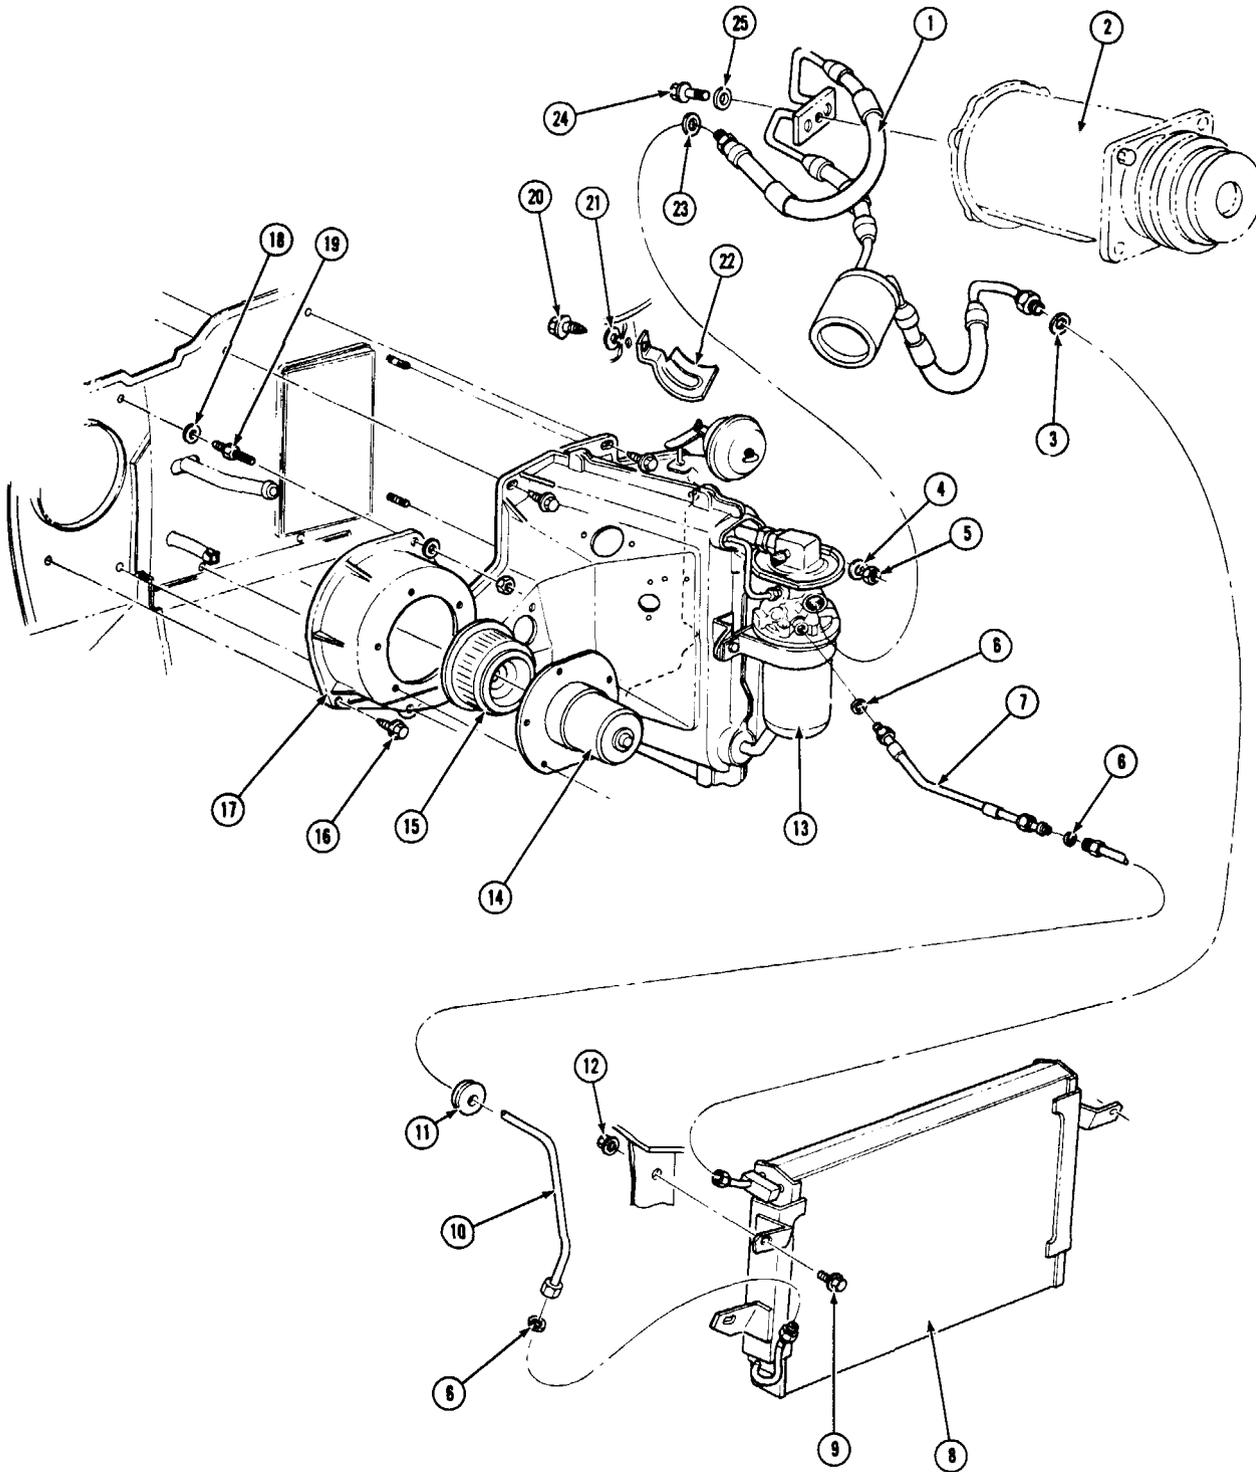

**1973-76 FIREBIRD AIR CONDITIONING — REFRIGERATION SYSTEM (WITH V.I.R.)**

**1973-76 FIREBIRD AIR CONDITIONING — REFRIGERATION SYSTEM (WITH V.I.R.)**




Key	Part Name	Group No.
1	FITTING ASM., Muffler (w/Hoses & Muffler) . . . . .	9.226
2	COMPRESSOR, Air Conditioner . . . . .	9.170
3	GASKET, "O" Ring (27/64" I.D. x 1" O.D.) . . . . .	9.214
4	WASHER (5/16" I.D. x 3/4" O.D.) . . . . .	8.929
5	NUT (1/4"-20) . . . . .	8.915
6	GASKET, "O" Ring (3/8" O.D.) . . . . .	9.214
7	TUBE ASM., VIR to Condenser . . . . .	9.227
8	CONDENSER, Refrigerant . . . . .	9.190
9	SCREW (5/16"-18 x 3/4") . . . . .	1.276
10	TUBE ASM., Condenser to VIR Tube . . . . .	9.227
11	GROMMET, Cond. to Receiver Tube . . . . .	9.775
12	NUT (5/16"-18) . . . . .	N.S.
13	RECEIVER ASM., Refrigerant (VIR) . . . . .	9.195
14	MOTOR, Blower . . . . .	9.215
15	FAN, Blower . . . . .	9.216
16	SCREW (1/4"-14 x 1") . . . . .	N.S.
17	EVAPORATOR, Refrigerant . . . . .	9.210
18	WASHER (9/32" I.D. x 1/2" O.D.) . . . . .	N.S.
19	STUD, Evaporator . . . . .	9.275
20	SCREW (1/4"-14 x 1/2") . . . . .	N.S.
21	WASHER (9/32" I.D. x 1" O.D.) . . . . .	N.S.
22	BRACKET, Muffler Mtg. . . . .	9.242
23	GASKET, "O" Ring (3/4" O.D.) . . . . .	9.214
24	BOLT (3/8"-24 x 1-3/8") . . . . .	N.S.
25	LOCKWASHER (3/8") . . . . .	8.931

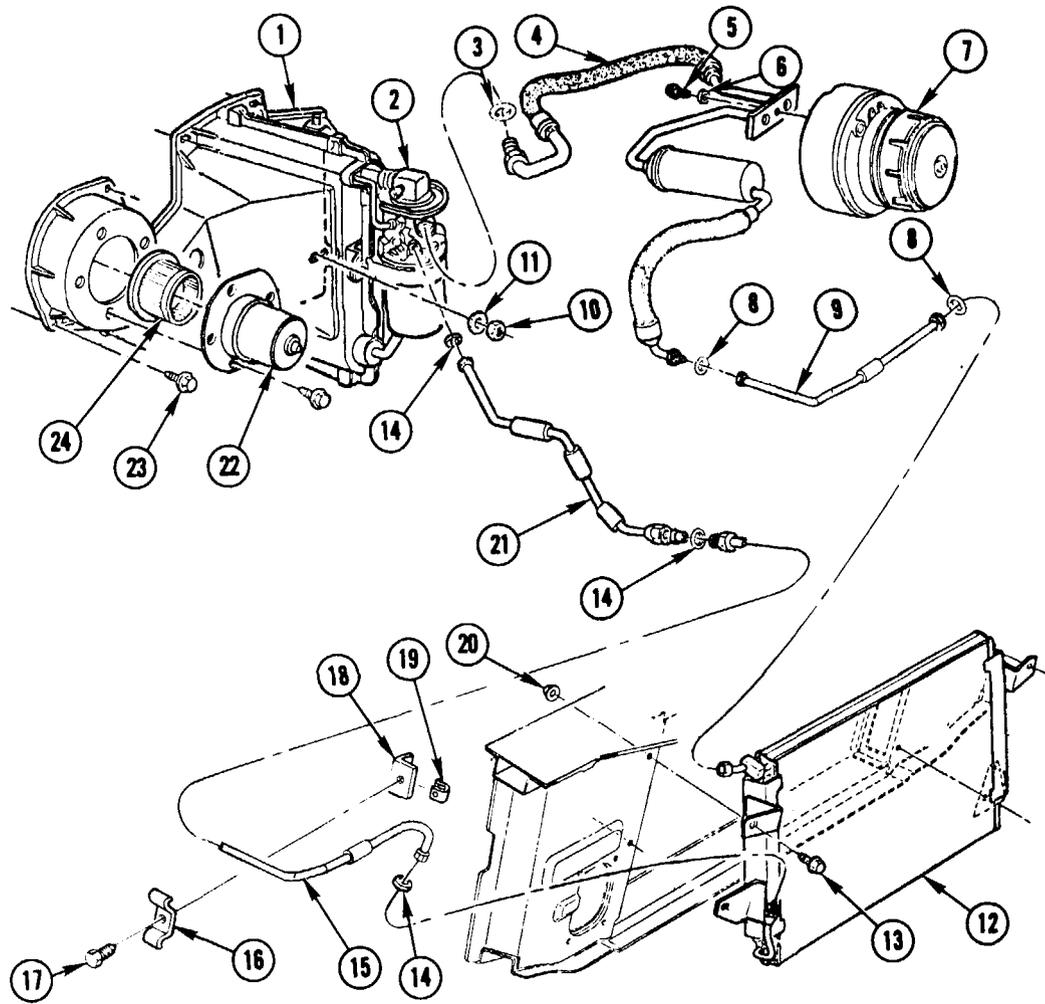

**1975-76 AIR CONDITIONING — 6 CYL. ENGINE REFRIGERATION SYSTEM**


Key	Part Name	Group No.
1	EVAPORATOR ASM., Refrigerant	9.210
2	RECEIVER ASM., Refrigerant	9.195
3	GASKET, Pipe to Receiver (3/4" O.D. "O" Ring)	9.214
4	FITTINGS, Compressor (w/Muffler & Fittings)	9.226
5	BOLT (3/8"-16 x 1-5/8")	N.S.
6	WASHER (1/8" I.D.)	N.S.
7	COMPRESSOR, A.C.	9.170
8	GASKET (27/64" I.D. x 1" O.D. "O" Ring)	9.214
9	TUBE ASM., Condenser to Muffler	9.227
10	NUT (1/4"-20)	8.915
11	WASHER (5/16" I.D. x 3/4" O.D.)	8.929
12	CONDENSER, Refrigerant	9.190
13	SCREW (5/16"-18 x 13/16")	N.S.
14	GASKET (3/8" O.D. "O" Ring)	9.214
15	TUBE ASM., Condenser to V.I.R. Tube	9.227
16	CLIP, A.C. Tubes Condenser Mtg. Brkt.	9.190
17	SCREW (1/4"-14 x 3/4")	8.977
18	BRACKET, Condenser Tubes Mtg.	9.190
19	NUT (1/4"-14)	8.921
20	NUT (5/16"-18)	8.915
21	TUBE ASM., V.I.R. to Condenser Tube	9.227
22	MOTOR, Blower	9.215
23	SCREW (1/4"-14 x 1")	N.S.
24	FAN, Blower Motor	9.216



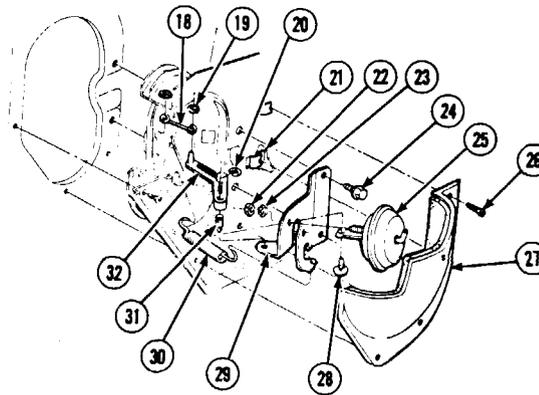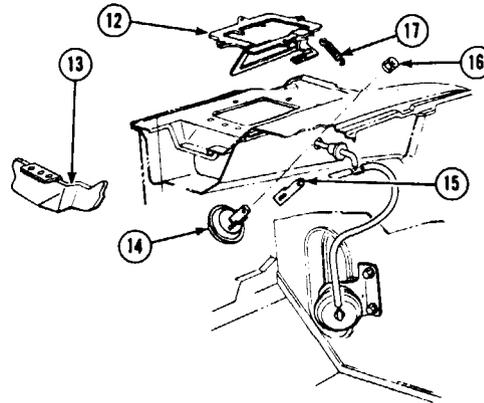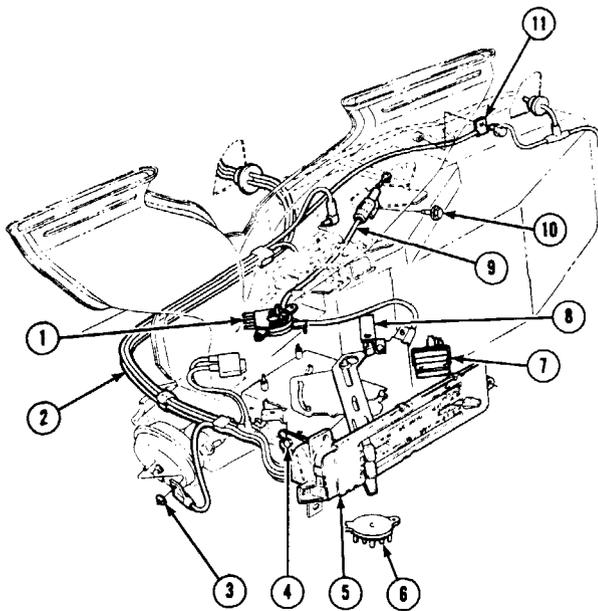


**1970 FIREBIRD AIR CONDITIONING—CONTROLS**

Key	Part Name	Group No.
1	VALVE, Heater Control Vacuum (3 Opening)	9.279
2	HARNFSS, Vacuum Hose	9.781
3	NUT, Hose to Diaphragm	9.789
4	SWITCH, Heater Control Vent	9.275
5	CONTROL ASM. Heater & Air Conditioning	9.273
6	VALVE, Heater Control Vacuum (9 Opening)	9.279
7	SWITCH, Blower Motor	9.275
8	SWITCH, Master	9.275
9	CABLE, Temp. Control	9.281
10	SCREW, Cable Clip Retaining (#10-16 x 1/2")	8.977
11	CLIP, Hose Retaining	N.S.
12	INLET, Plenum Air	9.786
13	BAFFLE, Side Shroud Vacuum Control	9.218
14	DIAPHRAGM, Air Inlet Valve	9.281
15	LINK, Inlet Valve	9.786
16	NUT, Inlet to Panel (#10-24)	8.921
17	SPRING, Valve to Plate	9.786
18	LINK, Shroud Vacuum Control	9.786
19	NUT, Link Retaining	9.789
20	RETAINER, Pin to Arm (5/16")	8.934
21	NUT, Shroud Side Control Cover to Panel	9.789
22	NUT, Diaphragm to Bracket	8.915
23	WASHER, Diaphragm to Bracket Lock	8.932
24	SCREW, Inlet Bracket Attaching (1/4"-14 x 5/8")	N.S.
25	DIAPHRAGM, Inlet Side Shroud	9.281
26	SCREW, Cover to Panel	N.S.
27	COVER, Side Vacuum Control	9.789
28	SCREW, Diaphragm to Arm (#8-18 x 3/8")	8.977
29	BRACKET, Inlet Side Shroud	9.786
30	SPRING, Side Shroud Vacuum Control	9.789
31	PIN, Shroud Vacuum Control	9.786
32	ARM, Side Shroud Vacuum Control	9.786

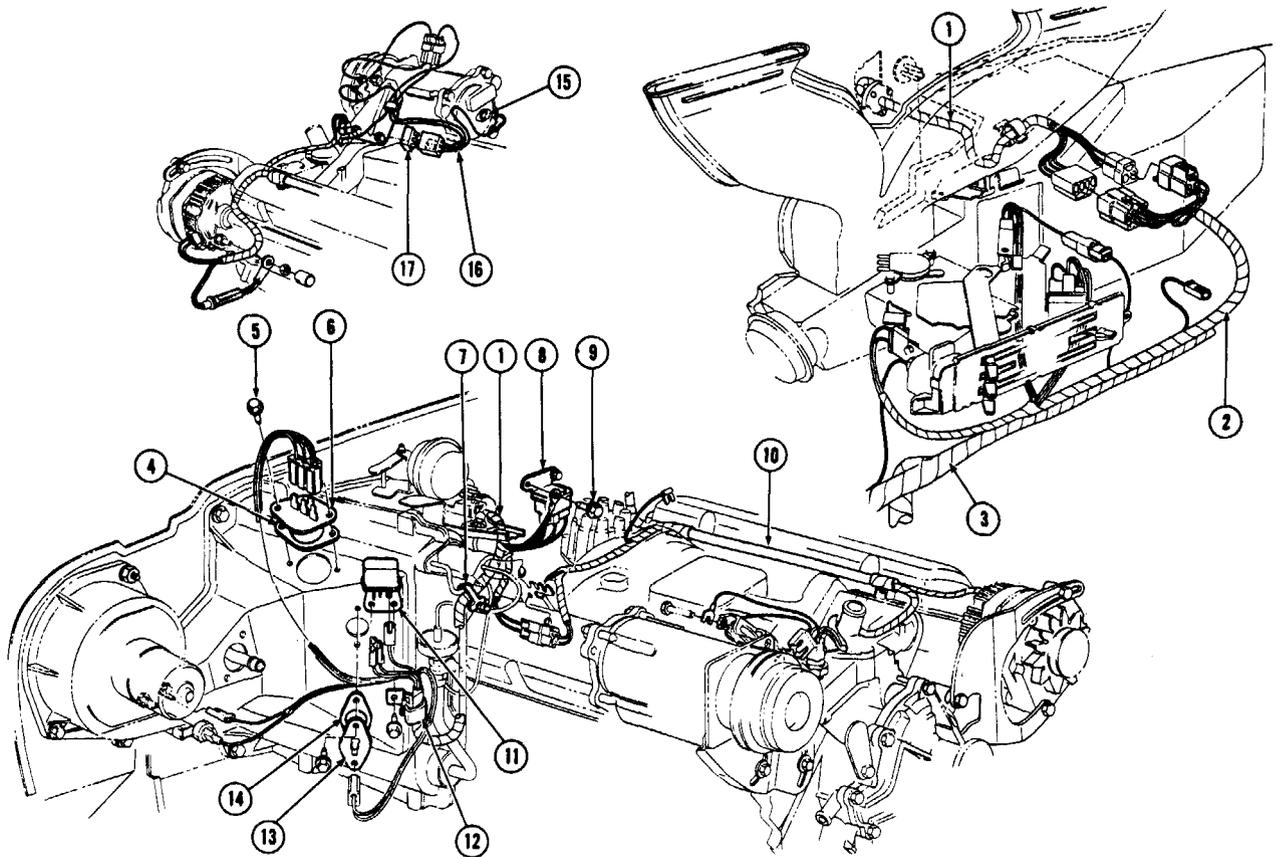


**1970-73 FIREBIRD AIR CONDITIONING ELECTRICAL PARTS**

Key	Part Name	Group No.
1	WIRE HARNESS ASM., Blower & Relays (Exc. Elec. Def.) (1970-71)	9.276
	WIRE HARNESS ASM., A/C Dash (1972)	9.276
	(1973)	9.276
2	WIRE HARNESS ASM., A.C. & Heater Control (Exc. Elec. Def.)	9.276
3	WIRE HARNESS ASM., Inst. Panel	2.480
4	GASKET, Blower Resistor	N.S.
5	SCREW, Blower Resistor Mtg. (#10-16 x 5/8")	8.977
6	RESISTOR, Blower Motor (1970-71)	9.275
	RESISTOR, Blower Motor (1972-73)	9.275
7	CLIP, Harness (Adj.-plastic)	2.482
8	RELAY, Interlock (1970)	9.778
9	SCREW, Relay Mtg. (#10-16 x 1/2")	8.977
10	WIRE HARNESS	2.480
11	RELAY, Hi-Blower (1970-71)	9.275
	RELAY, Hi-Blower (1972-73)	9.275
12	CLIP, Blower & Relay Harness	2.482
13	SWITCH, Comp. Ambient Sensor	9.275
14	GASKET, Ambient Switch to Evap. (1970)	9.275
15	SWITCH KIT, Super Heat Shut-Off (1971-73)	9.172
16	HARNESS ASM., Compressor Protection (1971-72)	9.172
17	FUSE, Compressor Protection Thermal (1971-73)	9.172

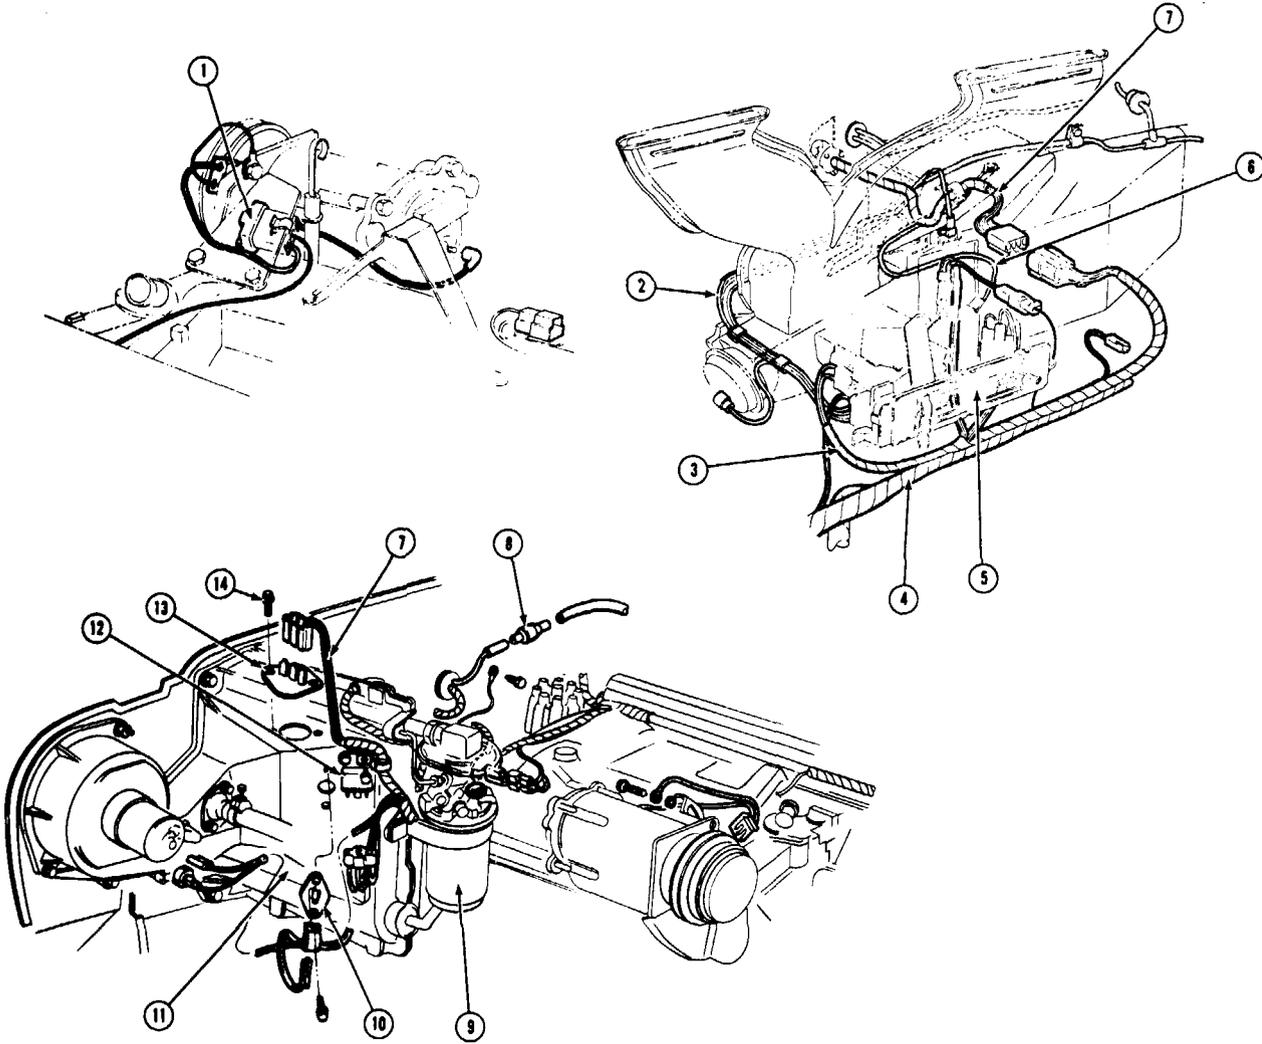


**1974 FIREBIRD AIR CONDITIONING—ELECTRICAL & VACUUM**

Key	Part Name	Group No.
1	FUSE, Comp. Protection Thermal	9.172
2	HARNASS, Vacuum Hose	9.281
3	WIRE, A.C. & Heater Control	9.276
4	WIRE, Inst. Panel	2.480
5	CONTROL, A.C. (Exc. Trans Am)	8.849
	CONTROL, A.C. (Trans Am)	8.849
6	CABLE, Temp. Control	9.787
7	WIRE, A.C. Dash	9.276
8	VALVE, Vacuum Check	9.281
9	RECEIVER ASM., Refrigerant (VIR)	9.195
10	SWITCH, Compressor Ambient	9.275
11	EVAPORATOR, Refrigerant	9.210
12	RESISTOR, Blower Motor	9.275
13	RELAY, Hi-Blower	9.275
14	SCREW (#10-15 x 5/8")	8.977

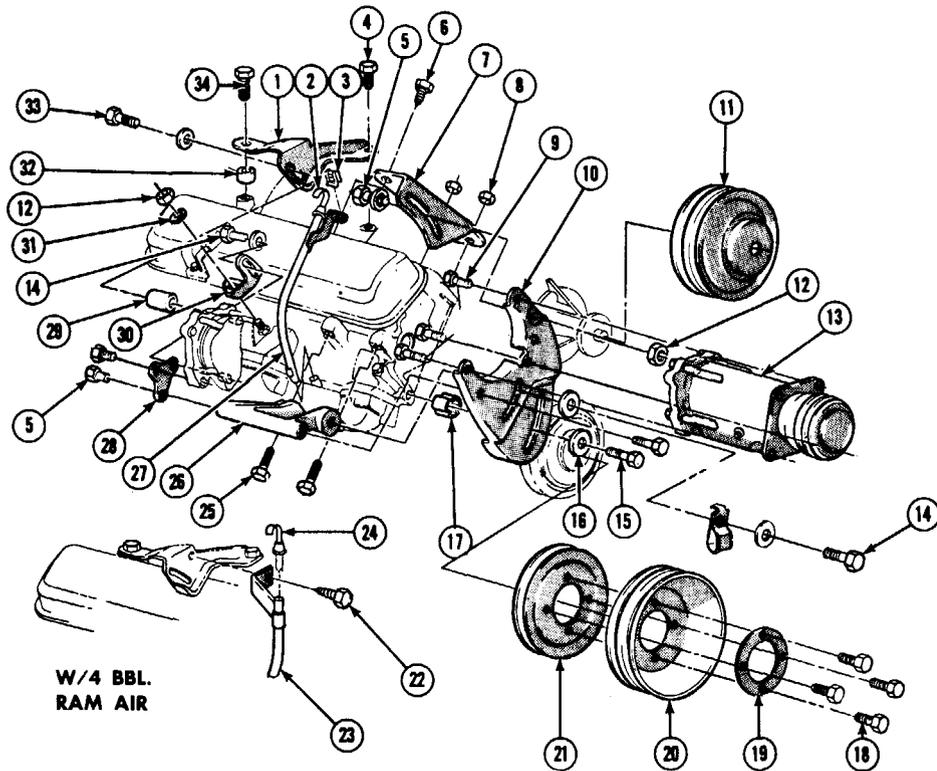


**1970-72 FIREBIRD A/C COMPRESSOR MOUNTING AND DRIVE PARTS**

Key	Part Name	Group No.
1	BRACE, Compressor-Rear	9.171
2	ROD, Engine Oil Level Indicator	1.516
3	NUT, Tube Asm. to Comp. Brace (1/4"-14 "U")	8.921
4	BOLT, Comp. Rear Brace to Mfld. (3/8"-16 x 5/8")	8.900
5	BOLT, Comp. Front Brace to Supt. (3/8"-16 x 7/8")	8.900
6	SCREW, Comp. Brace to Tube Asm. (1/4"-14 x 3/4")	8.977
7	BRACE, Compressor Front—1970-72	9.171
8	NUT, Comp. Frt. Brace to Mfld. Bolt (5/16"-18)	8.915
9	BOLT, Comp. to Frt. Supt. (5/16"-24 x 5/8")	8.900
10	SUPPORT, Compressor-Front	9.171
11	PULLEY, Water Pump & Fan (5 9/16" dia.)—double groove	1.062
12	NUT, Comp. Lower Rear Brace to Head Bolt (3/8"-16)	8.915
13	COMPRESSOR ASM., Air Conditioning	9.170
14	BOLT, Comp. to Rear Mtg. Plate (3/8"-16 x 1 1/8")	8.900
15	BOLT, Comp. Frt. Supt. to Head (3/8"-16 x 1 7/8")	8.900
16	WASHER, Comp. Frt. Supt. to Head (13/32" I. D.)	9.173
17	SPACER, Comp. Frt. Supt. to Head	9.171
18	BOLT, Crankshaft Pulley Plate (5/16"-24 x 3/4")	8.900
19	PLATE, Crankshaft Pulley Reinforcement	0.660
20	PULLEY, Crankshaft-(7 3/16" dia.)—double groove	0.659
21	PULLEY, Crankshaft-(7 7/16" dia.)—single groove	0.659
22	SCREW, Oil Tube to Brace (5/16"-12 x 5/8")	8.977
23	TUBE ASM., Oil Level Indicator—Upper	1.516
24	INDICATOR ASM., Engine Oil Level	1.516
25	BOLT, Comp. Mtg. Brkt. to Head (3/8"-16 x 1 1/4")	8.900
26	BRACKET, Compressor Mtg.—1970-72	9.171
27	TUBE ASM., Engine Oil Level Ind.—Upper	1.516
28	PLATE, Compressor Mtg.—Rear	9.171
29	SPACER, Comp. Rear Brace to Comp.—1970	9.171
30	BRACE, Comp. Lower Rear—to Head	9.171
31	WASHER, Comp. Frt. (13/32" I. D.)	9.173
32	SPACER, Comp. Rear Brace to Comp. (3/8"-16 x 2 1/4")	9.171
33	BOLT, Comp. Rear Brace to Comp. (3/8"-16 x 2 1/4")	8.900
34	BOLT, Comp. Rear Brace to Mfld. (5/16"-18 x 1 1/8")	8.900

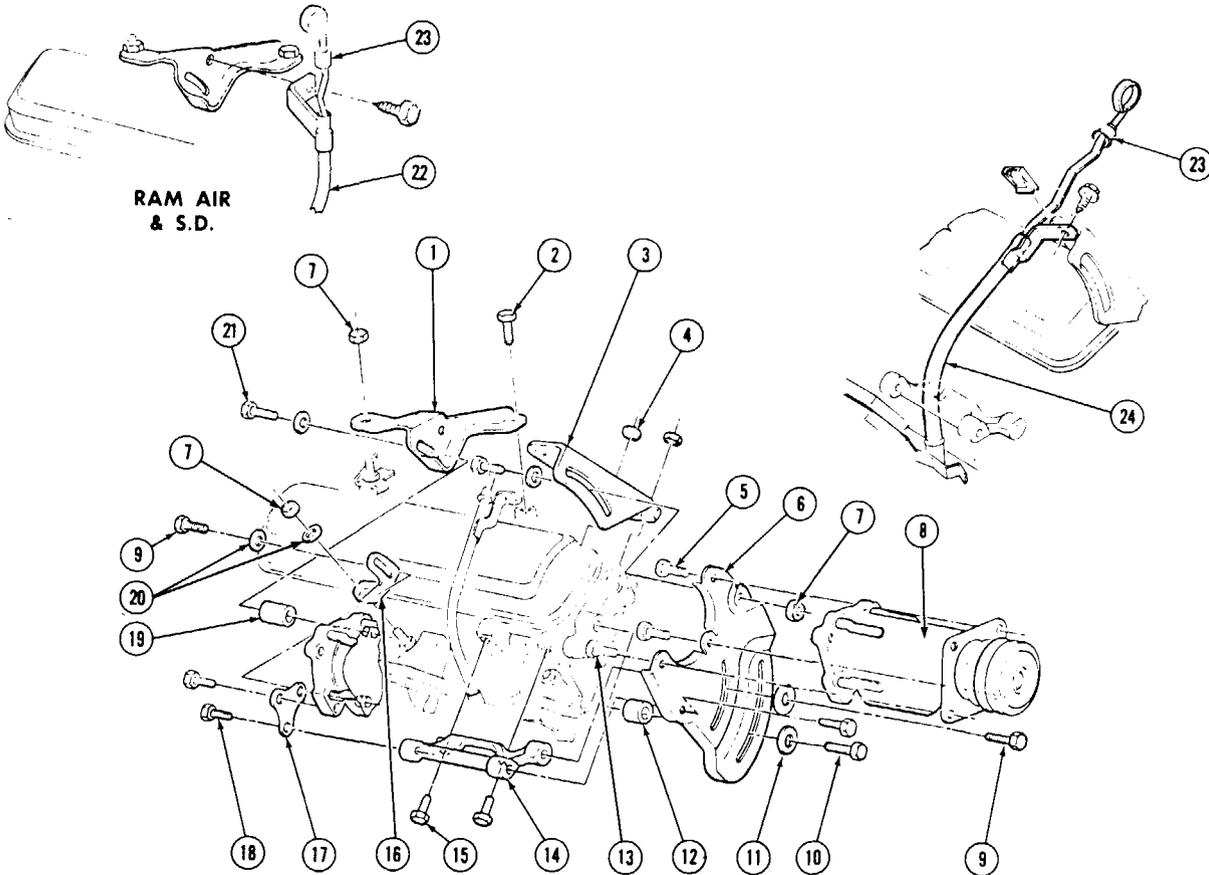
**1973-74 A/C COMPRESSOR MOUNTING**

Key	Part Name	Group No.
1	BRACE, Comp. Rear - Upper	9.171
2	BOLT (3/8"-16 x 5/8")	8.900
3	BRACE, Comp. Front	9.171
4	NUT (5/16"-18)	8.915
5	BOLT (5/16"-24 x 3/4")	8.900
6	SUPPORT, Comp. Front	9.171
7	NUT (3/8"-16)	8.915
8	COMPRESSOR, A.C.	9.170
9	BOLT (3/8"-16 x 1-1/8")	8.900
10	BOLT (3/8"-16 x 1-7/8")	8.900
11	WASHER, Supt. to Head (13/32" I.D.)	9.173
12	SPACER, Supt. to Hose	9.171
13	BOLT (5/16"-24 x 3/4")	8.900
14	BRACKET, Comp. Mounting	9.171
15	BOLT (3/8"-16 x 1-1/4")	8.900
16	BRACE, Comp. Lower Rear (All exc. 455 H.O. or S.D.)	9.171
	BRACE, Comp. Lower Rear (455 H.O. or S.D.)	9.171
17	PLATE, Comp. -Rear	9.171
18	BOLT (3/8"-16 x 7/8")	8.900
19	SPACER, Rear Brace to Comp.	9.171
20	WASHER, Comp. Mtg. (13/32" I.D. x 3/4" O.D.)	6.606
21	BOLT (3/8"-16 x 2-1/8")	N.S.
22	TUBE ASM., Indicator - Upper (455 S.D.)	1.516
	TUBE ASM., Indicator - Upper (Ram Air)	1.516
23	INDICATOR ASM., Oil Level	1.516
24	TUBE ASM., Indicator - Upper (Exc. 455 or Ram Air)	1.516

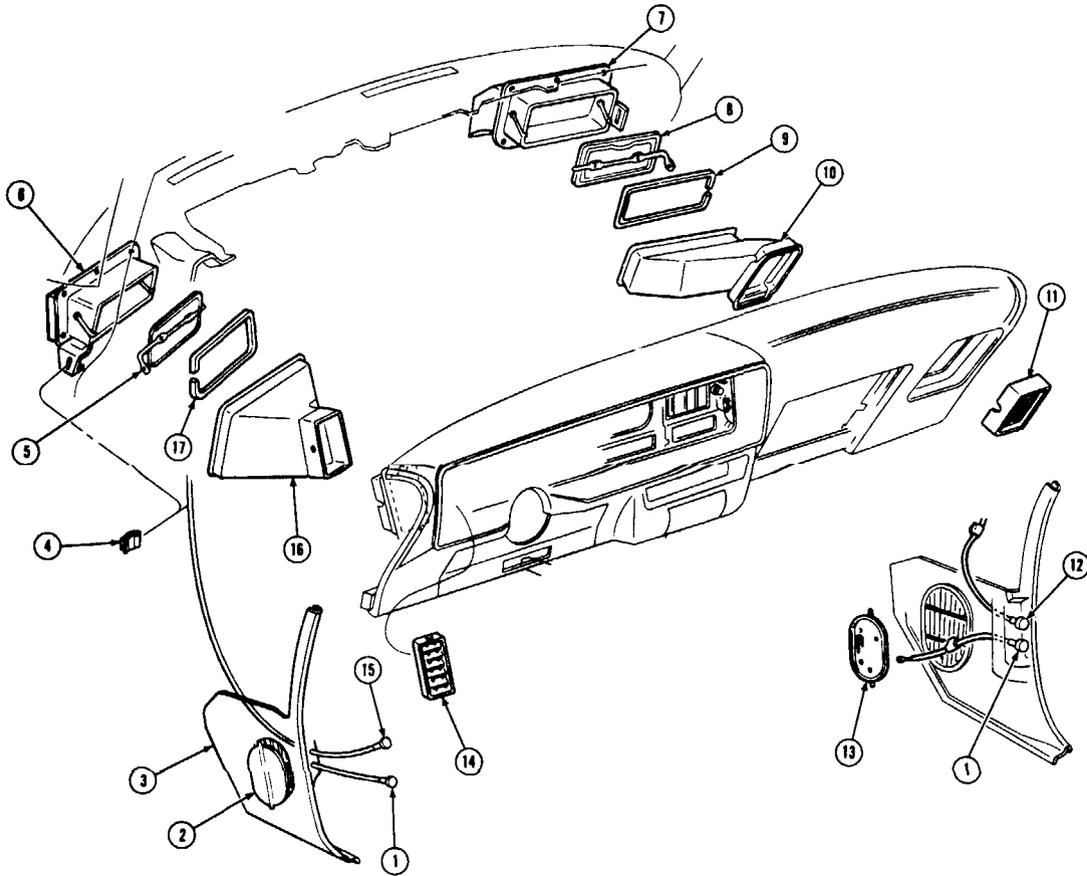


**1970-74 VENTILATION CONTROL (EXC. A.C.)**

Key	Part Name	Group No.
1	CONTROL, Shroud Duct Air—Lower (10½" Long)	9.787
2	DOOR, Shroud Lower Air Outlet—L.H.	9.789
3	PANEL, Shroud Side Trim Finish	14.630
4	CLIP, Upper Level Control Cable to Outlet Asm.	9.787
5	DOOR, Upper Level Vent—L.H.	9.789
6	OUTLET, Upper Level Air—L.H.	9.789
7	OUTLET, Upper Level Air—R.H.	9.789
8	DOOR, Upper Level Vent—R.H.	9.789
9	SEAL, Inst. Panel Side Vent Duct—R.H.	9.784
10	DUCT, Inst. Panel Side—R.H.	9.784
11	DEFLECTOR, Outer Air—R.H.	9.262
12	CONTROL, Shroud Duct Air—Upper	9.787
13	DOOR, Shroud Lower Air Outlet—R.H.	9.789
14	DEFLECTOR, Outer Air—L.H.	9.262
15	CONTROL, Shroud Duct Air—Upper	9.787
16	DUCT, Inst. Panel Side—L.H.	9.784
17	SEAL, Inst. Panel Side Vent Duct—L.H.	9.784

**Hose Fitting Packages and Related Parts, Air Conditioning Refrigerant**

HOSE FITTINGS PACKAGES INCLUDE "O" RINGS AND CLAMPS REQ'D. FOR INSTALLATION.

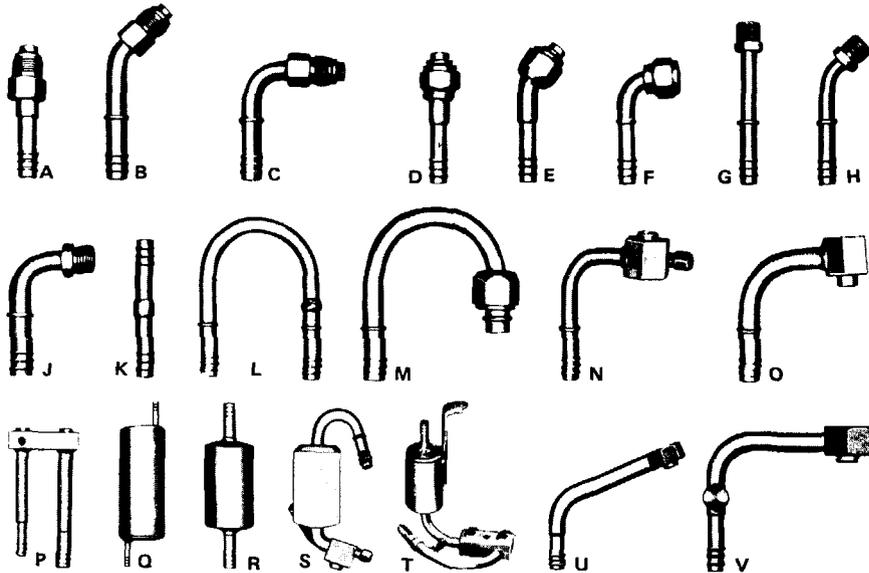

PART NO.	TYPE	THREAD SIZE	HOSE I. D.	PART NO.	TYPE	THREAD SIZE	HOSE I. D.	PART NO.	TYPE	THREAD SIZE	HOSE I. D.
3024535	A	11/16-16	5/16	3023674	E	5/8-18	5/16	3023686	K		5/16
3023691	A	5/8-16	5/16	3023675	E	3/4-16	13/32	3023687	K		13/32
3023692	A	3/4-18	13/32	3023676	E	7/8-14	1/2	3023688	K		1/2
3023693	A	7/8-18	1/2	3023677	E	1 1/16-14	5/8	3023689	K		5/8
3023694	A	1- 1/16-16	5/8	3023678	E	5/8-18	13/32	3023718	L		1/2
3023695	A	5/8-18	13/32	3023679	E	3/4-16	1/2	3023719	L		5/8
3023696	A	3/4-18	1/2	3023680	E	7/8-14	5/8				
3023668	B	5/8-18	5/16	3023657	F	5/8-18	5/16	3024791	M	5/8-18(Male)	5/16
3023669	B	3/4-18	13/32	3023658	F	3/4-16	13/32	3023722	M	1 1/16-14 (Female)	5/8
3023670	B	7/8-18	1/2	3023659	F	7/8-14	1/2				
3023671	B	1 1/16-16	5/8	3023660	F	1 1/16-14	5/8	3023715	N		13/32
3023672	B	5/8-18	13/32	3023661	F	5/8-18	13/32	3023716	N		1/2
3023673	B	3/4-18	1/2	3023662	F	3/4-16	1/2	3023717	O		5/8
3024537	C	11/16-16	5/16	3023663	F	7/8-14	5/8	3023721	P		13/32-5/8
3023651	C	5/8-18	5/16	3024534	G	5/8-18	5/16	3023720	Q		13/32
3925751	C	11/16-16	13/32	3023711	G	5/8-18	13/32	*3981880	R		1/2
3023652	C	3/4-18	13/32	3023712	G	3/4-16	1/2	*3923139	S		1/2-5/8
3023653	C	7/8-18	1/2	3023713	G	7/8-14	5/8	*3970541	T		1/2-5/8
3023654	C	1 1/16-16	5/8	3023714	G	1 1/16-14	5/8	3024788	U		5/8
3023655	C	5/8-18	13/32	3023682	H	5/8-18	13/32	3024789	V		13/32
3023656	C	3/4-18	1/2	3023683	H	3/4-16	1/2				
3023697	D	5/8-18	5/16	3023684	H	7/8-14	5/8				
3023698	D	3/4-16	13/32	3023685	H	1- 1/16-14	5/8				
3023699	D	7/8-14	1/2	3024536	J	5/8-18	5/16				
3023700	D	1 1/16-14	5/8	3023664	J	5/8-18	13/32				
3023701	D	5/8-18	13/32	3023665	J	3/4-16	1/2				
3023709	D	3/4-16	1/2	3023666	J	7/8-14	5/8				
3023710	D	7/8-14	5/8	3023667	J	1 1/16-14	5/8				

\*FITTING ONLY


**HOSE, CLAMP, O'RINGS**

230882	Hose, Refrig.	(5/16" I.D. x 15')	8526398	O'Ring (3/8" I.D.)
230883	Hose, Refrig.	(13/32" I.D. x 15')	3140600	O'Ring (1/2" I.D.)
230884	Hose, Refrig.	(1/2" I.D. x 15')	3140748	O'Ring (5/8" I.D.)
230885	Hose, Refrig.	(5/8" I.D. x 15')	3140852	O'Ring (3/4" I.D.)
3909030	Clamp, Adj. Hose (with Locator Tab)		5887997	O'Ring, Fitting to Comp.









**FIREBIRD**  
PARTS CATALOGUE

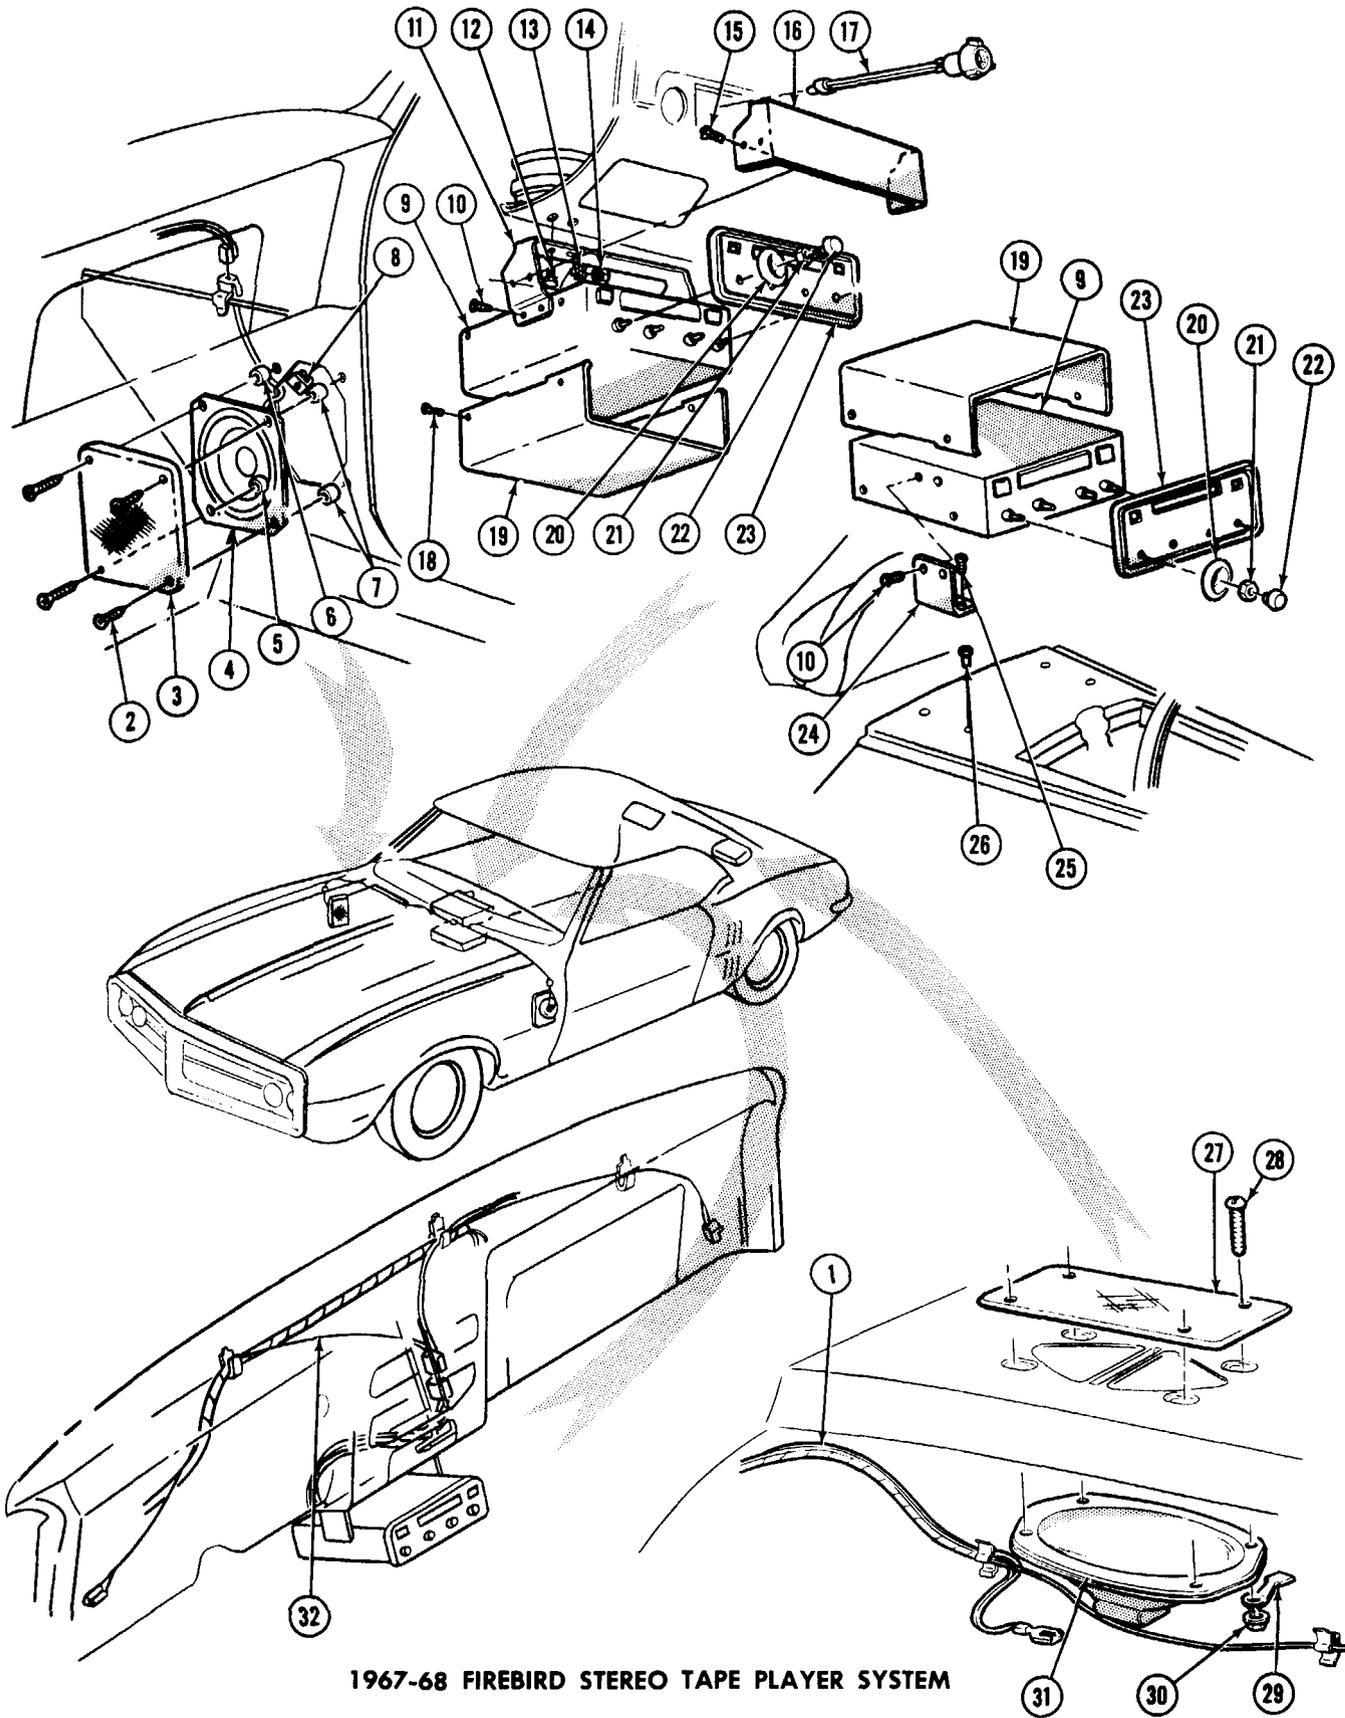


### 1967-68 FIREBIRD STEREO TAPE PLAYER SYSTEM

<u>Key</u>	<u>Part Name</u>	<u>Group No.</u>
1	— WIRE HARNESS, Rear Seat Speaker Stereo Tape . . . . .	9.670
2	— SCREW, Front Speaker and Grille Attaching (#10-16 x 7/8") . . . . .	N.S.
3	— GRILLE, Stereo Tape Front Speaker . . . . .	9.670
4	— SPEAKER, Front Stereo Tape Player . . . . .	9.650
5	— SPACER, Front Stereo Tape Speaker to Grille . . . . .	9.655
6	— SPACER, Front Stereo Tape Speaker to Panel . . . . .	9.655
7	— SPACER, Front Stereo Tape Speaker to Panel . . . . .	9.655
8	— "U" NUT, Speaker Grille to Panel Attaching (#10-16) . . . . .	N.S.
9	— TAPE PLAYER, Stereo . . . . . (Serviced in Accessory Package Only)	
10	— SCREW, Top Cover to Tape Player (#6-20 x 7/16") . . . . .	N.S.
11	— BRACKET, Stereo Tape Player Mtg. (Exc. Console) . . . . .	9.670
12	— SCREW, Mounting Bracket to Inst. Panel (#10-24 x 1/2") . . . . .	N.S.
13	— LOCKWASHER, Mounting Bracket Plate to Bracket (#8 - Ext.) . . . . .	N.S.
14	— NUT, Mounting Bracket Plate to Bracket (#8-32) . . . . .	9.670
15	— SCREW, Mounting Plate to Mounting Bracket (#8-32 x 1/2") . . . . .	N.S.
16	— PLATE, Stereo Tape Mounting Bracket . . . . .	9.670
17	— KNOB, Stereo Tape Switch (w/Wire) . . . . .	9.670
18	— SCREW, Bottom Cover to Tape Player (#6-20 x 7/16") . . . . .	N.S.
19	— COVER, Stereo Tape Player (Top and Bottom) . . . . .	9.670
20	— BEZEL, Stereo Tape Control Knob . . . . .	9.670
21	— NUT, Trim Plate to Tape Player . . . . .	9.670
22	— KNOB, Stereo Tape Player . . . . .	9.670
23	— PLATE, Stereo Tape Player Trim . . . . .	9.670
24	— BRACKET, Stereo Tape Player Mounting (w/Console) . . . . .	9.670
25	— SCREW, Mounting Bracket to Console (#10-32 x 5/8") . . . . .	8.977
26	— NUT, Mounting Bracket to Console (#10-32) . . . . .	N.S.
27	— GRILLE, Rear Seat Speaker . . . . .	9.655
28	— SCREW, Rear Seat Speaker Grille Attaching (#8-32 x 1 1/4" Oval Hd.) . . . . .	N.S.
29	— SPRING, Ground . . . . .	N.S.
30	— NUT, Rear Seat Speaker Grille Attaching (#8-32 Stamped) . . . . .	8.921
31	— SPEAKER, Rear Seat . . . . .	9.665
32	— WIRE ASM., Front Speaker Stereo Tape . . . . .	9.670

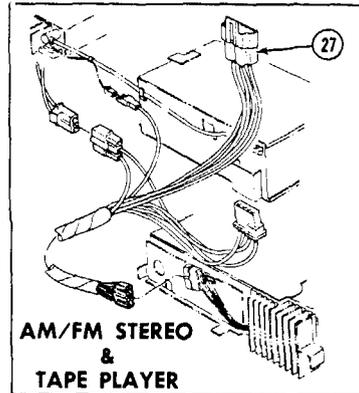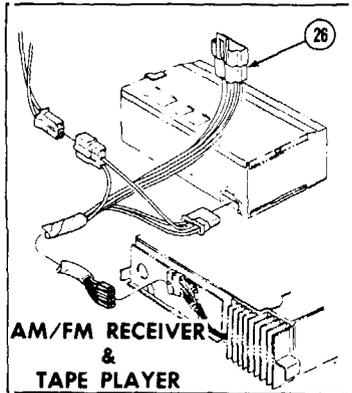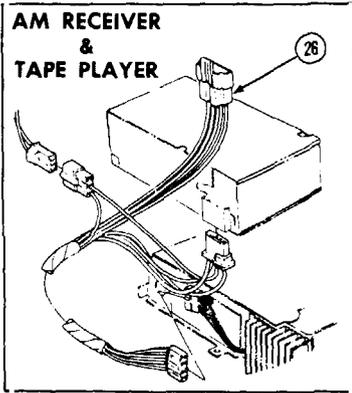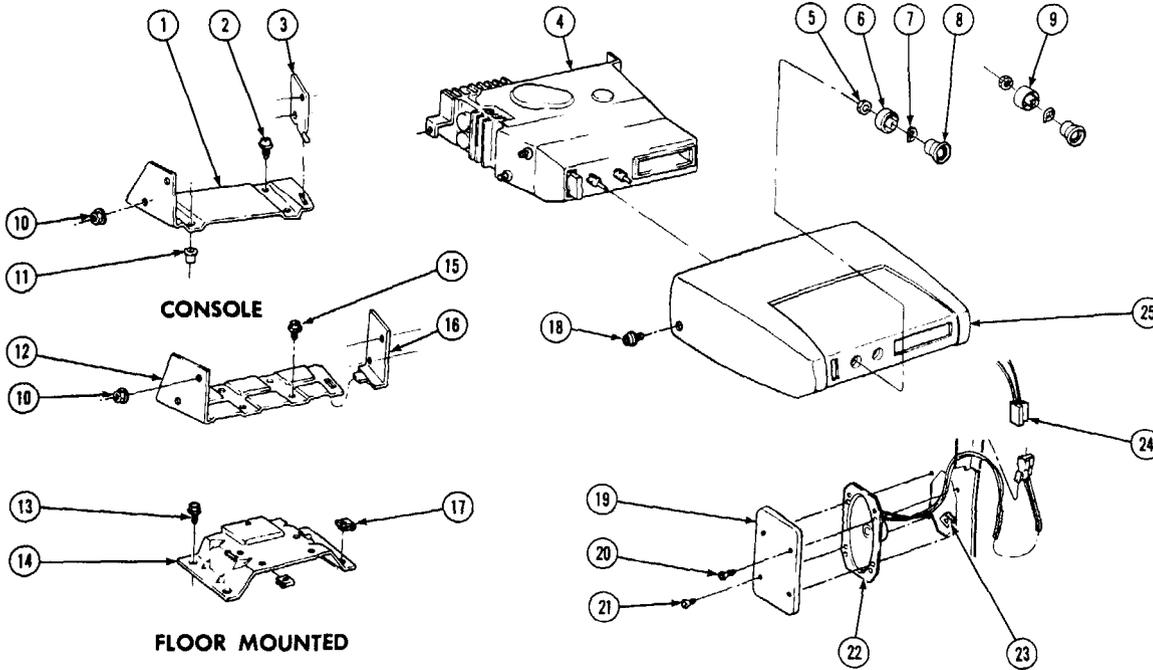


**1969 FIREBIRD STEREO TAPE PLAYER SYSTEM**

Key	Part Name	Group No.	Key	Part Name	Group No.
1	BRACKET, Stereo Tape Player to Console . . . . .	9.670	15	SCREW, Upper Bracket to Lower Bracket & Console (#8 - 18 x 5/8") . . . . .	N.S.
2	SCREW, Tape Player to Console (#10-32 x 7/8") . . . . .	N.S.	16	RETAINER, Tape Player to Mtg. Bracket - (exc. Console) . . . . .	9.670
3	RETAINER, Tape Player to Mtg. Bracket (w/Console) . . . . .	9.670	17	NUT, Upper Brkt. to Lower Brkt. - (#8-18) . . . . .	8.921
4	PLAYER, Stereo Tape (Serviced in Accessory Package Only)	9.670	18	SCREW, Housing to Tape Player - (#8 - 18 x 1/2") . . . . .	8.977
5	NUT, Tape Player Housing to Player . . . . .	9.670	19	GRILLE, Stereo Front Speakers . . . . .	9.670
6	BEZEL, Stereo Tape Player Control Knob . . . . .	9.670	20	SCREW, Grille to Speaker - (#10 - 16 x 3/4") . . . . .	8.977
7	WASHER, Stereo Tape Player Knobs . . . . .	9.649	21	SCREW, Grille to Speaker - (#10 - 16 x 1") . . . . .	8.977
8	KNOB, Stereo Tape Control . . . . .	9.649	22	SPEAKER, Stereo Tape - (Front) . . . . .	9.650
9	BEZEL, Stereo Tape Balance Control Knob . . . . .	9.670	23	NUT, Speaker to Shroud Panel - (#10 - 16) . . . . .	8.921
10	NUT, Tape Player to Bracket - (#10-24) . . . . .	8.915	24	WIRE ASM., Stereo Tape Player . . . . .	9.670
11	NUT, Bracket to Console (#10-32-special) . . . . .	N.S.	25	HOUSING, Stereo Tape Player . . . . .	9.670
12	BRACKET, Stereo Tape Player Mtg. - (Upper) . . . . .	9.670	26	WIRE ASM., Stereo Tape Player (AM & AM/FM) . . . . .	9.670
13	SCREW, Lower Mtg. Bracket to Pan - (1/4"-14 x 3/4") . . . . .	8.977	27	WIRE ASM., Stereo Tape Player (AM/FM Stereo) . . . . .	9.670
14	BRACKET, Stereo Tape Player Mtg. - (Lower) . . . . .	9.670			

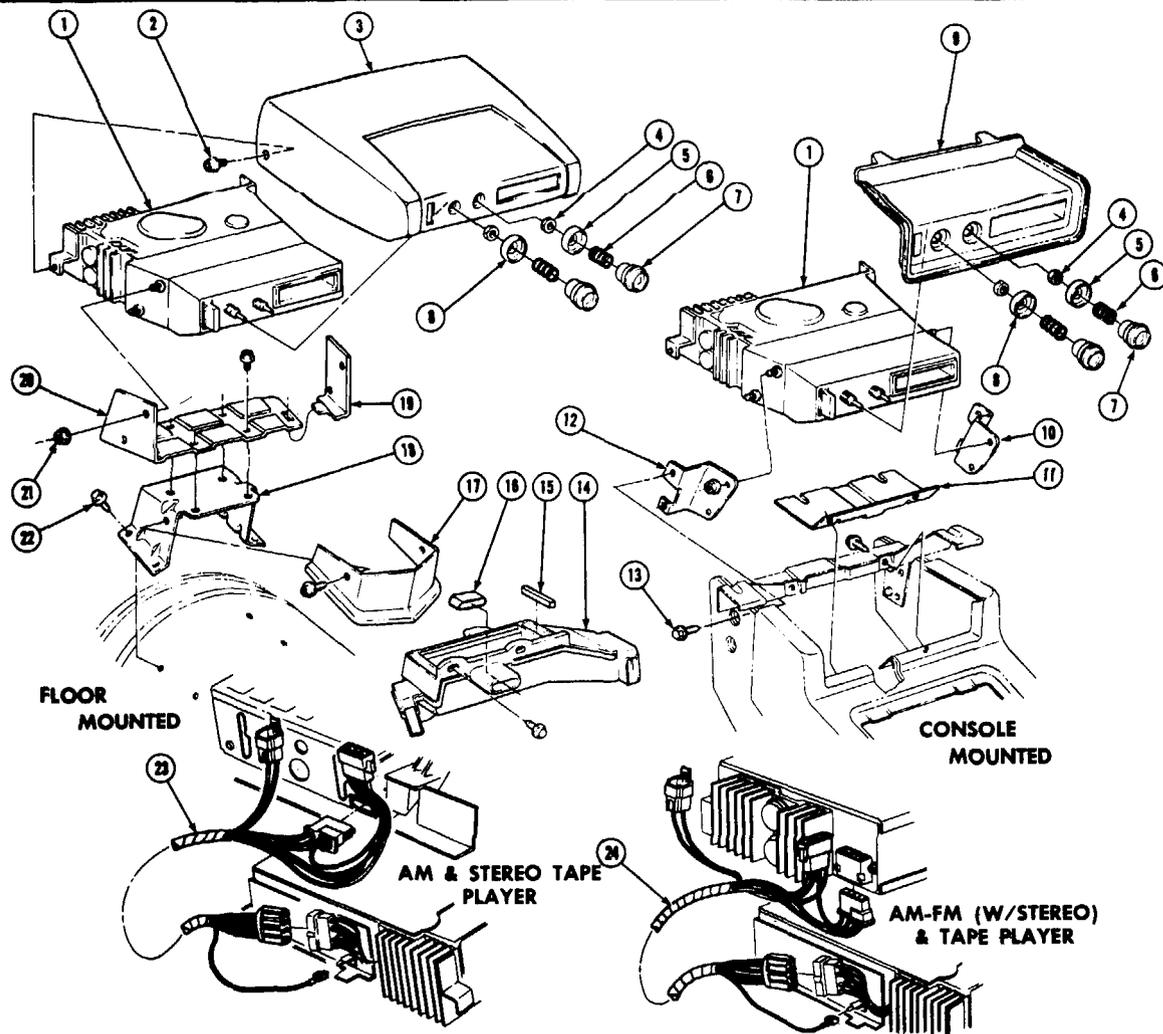

**FIREBIRD STEREO TAPE SYSTEM (TYPICAL)**


Key	Part Name	Group No.	Key	Part Name	Group No.
1	— TAPE PLAYER, Stereo . . . . .	9.670	13	— SCREW, Lower Brkt. to Console (#10-16 x 1/2") . . .	8.977
2	— SCREW, Housing to Tape Player (#8-18 x 1/2") . . . . .	8.977	14	— DUCT ASM., Air Distributor . . . . .	9.786
3	— HOUSING, Player. . . . .	9.670	15	— SEAL, Air Distributor . . . . .	N.S.
4	— NUT, Player to Housing. . . . .	9.670	16	— SEAL, Air Outlet . . . . .	N.S.
5	— BEZEL, Control Knob . . . . .	9.670	17	— BASE, Player Housing (exc. console) . . . . .	9.670
6	— SPRING, Control Knob . . . . .	9.670	18	— BRACKET, Player Lower Mtg. . . . .	9.670
7	— KNOB, Control . . . . .	9.670	19	— RETAINER, Player to Upper Mtg. Brkt. . . . .	9.670
8	— BEZEL, Tone Control Knob . . . . .	9.670	20	— BRACKET, Player Upper Mtg. . . . .	9.670
9	— PLATE, Trim. . . . .	9.670	21	— NUT, Player to Bracket (#10-24) . . . . .	8.915
10	— BRACKET, Player Supt. - RH (w/console). . . . .	9.670	22	— SCREW, Lower Bracket to Pan (1/4" - 14 x 5/8") . . . . .	N.S.
11	— BRACKET, Player Mtg. - Lower (w/console). . . . .	9.670	23	— WIRE ASM., Tape Player (exc. stereo radio). . . . .	9.670
12	— BRACKET, Player Supt. - LH (w/console) . . . . .	9.670	24	— WIRE ASM., Tape Player (w/stereo radio) . . . . .	9.670

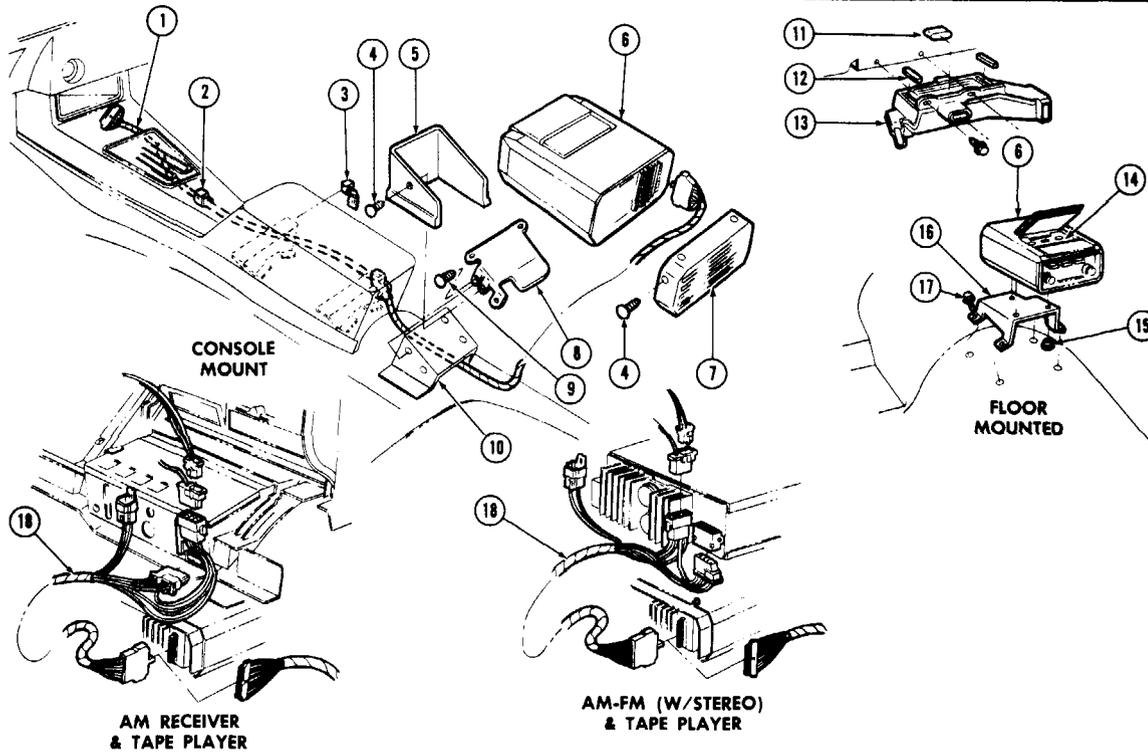

**FIREBIRD CASSETTE TAPE PLAYER (TYPICAL)**


Key	Part Name	Group No.
1	WIRE, Rear Mounted Tape Player - w/Console	9.670
2	CLIP, Control Feed to Cluster & Clock	2.482
3	CLIP, Wire to Mounting Brkt.	N.S.
4	SCREW, Cover to Mounting Brkt. (#8-18 x 1/2")	8.977
5	COVER, Tape Player Mounting Brkt.	9.670
6	TAPE PLAYER, Stereo	9.670
7	COVER, Tape Player - Rear	9.670
8	BRACKET, Tape Player Mounting - Upper (w/Console)	9.670
9	SCREW, Upr. Brkt. to Lwr. Brkt. (1/4"-14 x 5/8")	N.S.
10	BRACKET, Player Mounting - On Floor Pan	N.S.
11	SEAL, Heater Air Outlet	9.262
12	SEAL, Main Air Distributor Outlet	9.262
13	DUCT ASM., Air Distributor	9.786
14	CARTRIDGE, Stereo Cassette	9.670
15	NUT, Player to Mtg. Brkt. (#10-24)	8.915
16	BRACKET, Player Mounting (exc. Console)	9.670
17	SCREW, Bracket to Pan (1/4"-14 x 5/8")	N.S.
18	WIRE, Tape Player Jumper	9.670

**1967-68 FIREBIRD MANUAL ANTENNAS**

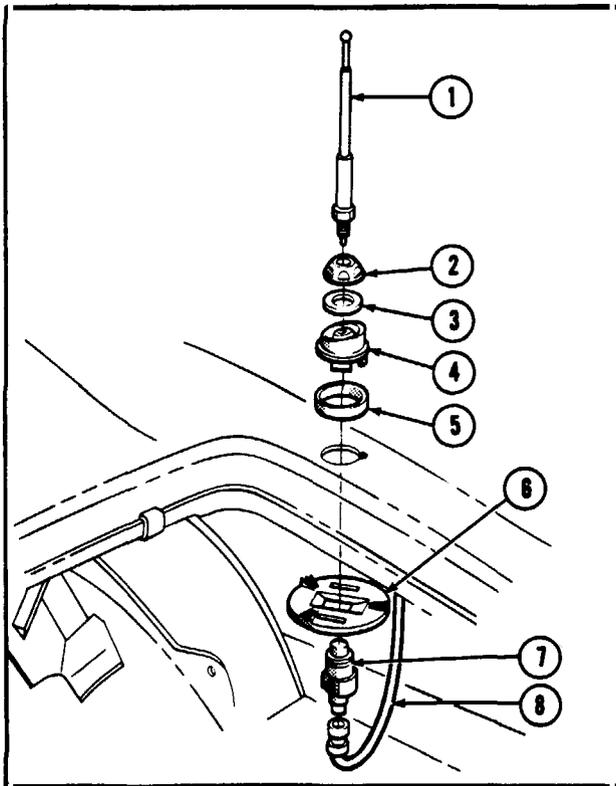


**REAR MOUNTED**

Key	Description	Part No.	Qty.	Group
1	Antenna Assy. — 1967.....	3934224	1	9.647
	— 1968 with AM/FM .....	3875700	1	9.647
	— 1968 Exc. AM/FM .....	3934224	1	9.647
2	Nut, Antenna Mounting .....	3863499	1	9.647
3	Gasket, Antenna Mounting Nut to Bezel .....	3138635	1	9.647
4	Bezel, Antenna to Fender — 1967.....	3869517	1	9.647
	—1968 .....	3903424	1	9.647
5	Gasket, Antenna Bezel to Fender .....	3820672	1	9.647
6	Ring, Antenna Ground .....	3903406	1	9.647
7	Body Assy., Antenna .....	3880695	1	9.647
8	Lead-in Assy., Antenna .....	3897311	1	9.647

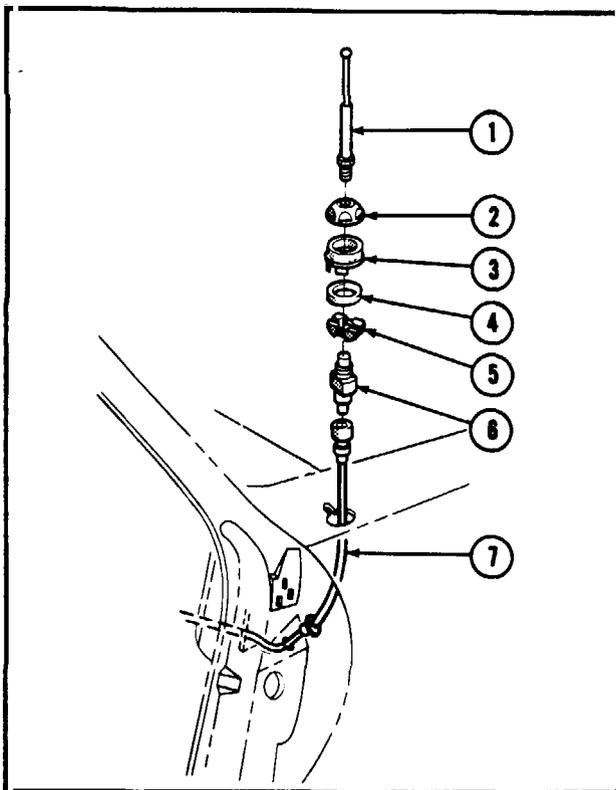


**FRONT MOUNTED**


Key	Description	Part No.	Qty.	Group
1	Antenna Assy., — 1967 .....	3934224	1	9.647
	— 1968 with AM/FM .....	3875700	1	9.647
	—1968 Exc. AM/FM .....	3934224	1	9.647
2	Nut, Antenna Mounting .....	3863499	1	9.647
3	Bezel, Antenna to Fender .....	3897333	1	9.647
4	Gasket, Antenna Bezel to Fender .....	3820672	1	9.647
5	Ring, Antenna Ground .....	3863239	1	9.647
6	Body Assy., Antenna .....	3880695	1	9.647
7	Lead-in Assy., Antenna .....	3897334	1	9.647

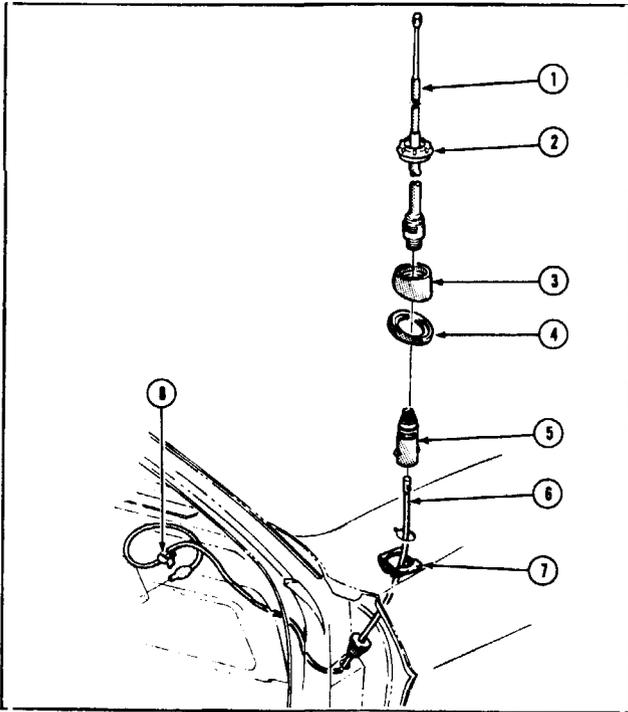
**MANUAL ANTENNA**

Key	Description	Part No.	Qty.	Group
1	Rod and Mast Assy., Manual .....	9794673	1	9.647
2	Nut, Antenna Mounting .....	536343	1	9.647
3	Adapter, Antenna to Fenders .....	9795979	1	9.647
4	Pad, Antenna to Fender .....	9774043	1	9.647
5	Body Assy., Antenna .....	9784386	1	9.647
6	Lead-in Assy., Antenna .....	9796809	1	9.647
7	Ring, Antenna Ground .....	9784334	1	9.647
8	Clip, Lead-in to Defroster Duct .....	9798933	1	9.647

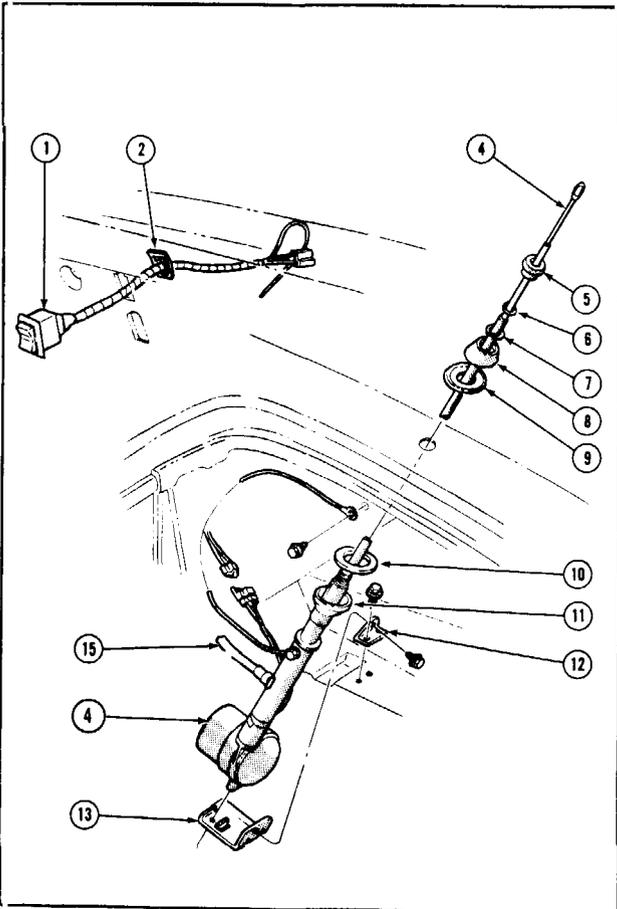
**ELECTRICAL**

Key	Description	Part No.	Qty.	Group
1	Switch and Wire, Power Antenna Control .....	9797084	1	9.647
2	Clip, Power Antenna Control Switch Retaining .....	9796965	1	9.647
4	Antenna Assy., Includes Motor .....	9796289	1	9.647
5	Nut, Antenna Mounting—Upper Adapter .....	9796252	1	9.647
6	Seal, Power Antenna—Antenna Mounting Nut to Fender .....	9796326	1	9.647
7	Seal, Power Antenna—Mounting Nut .....	9796325	1	9.647
8	Adapter, Antenna to Fender —Upper .....	9796516	1	9.647
9	Pad, Antenna to Fender—To Upper Adapter .....	9782911	1	9.647
10	Seal, Power Antenna—Mounting Lower Adapter .....	9779667	1	9.647
11	Adapter, Antenna to Fender—Lower .....	9796515	1	9.647
12	Bracket, Antenna—Mounting .....	9796374	1	9.647
13	Bracket, Antenna—Anti-Twist .....	9796373	1	9.647
15	Lead-in Assy., Antenna .....	9793107	1	9.647

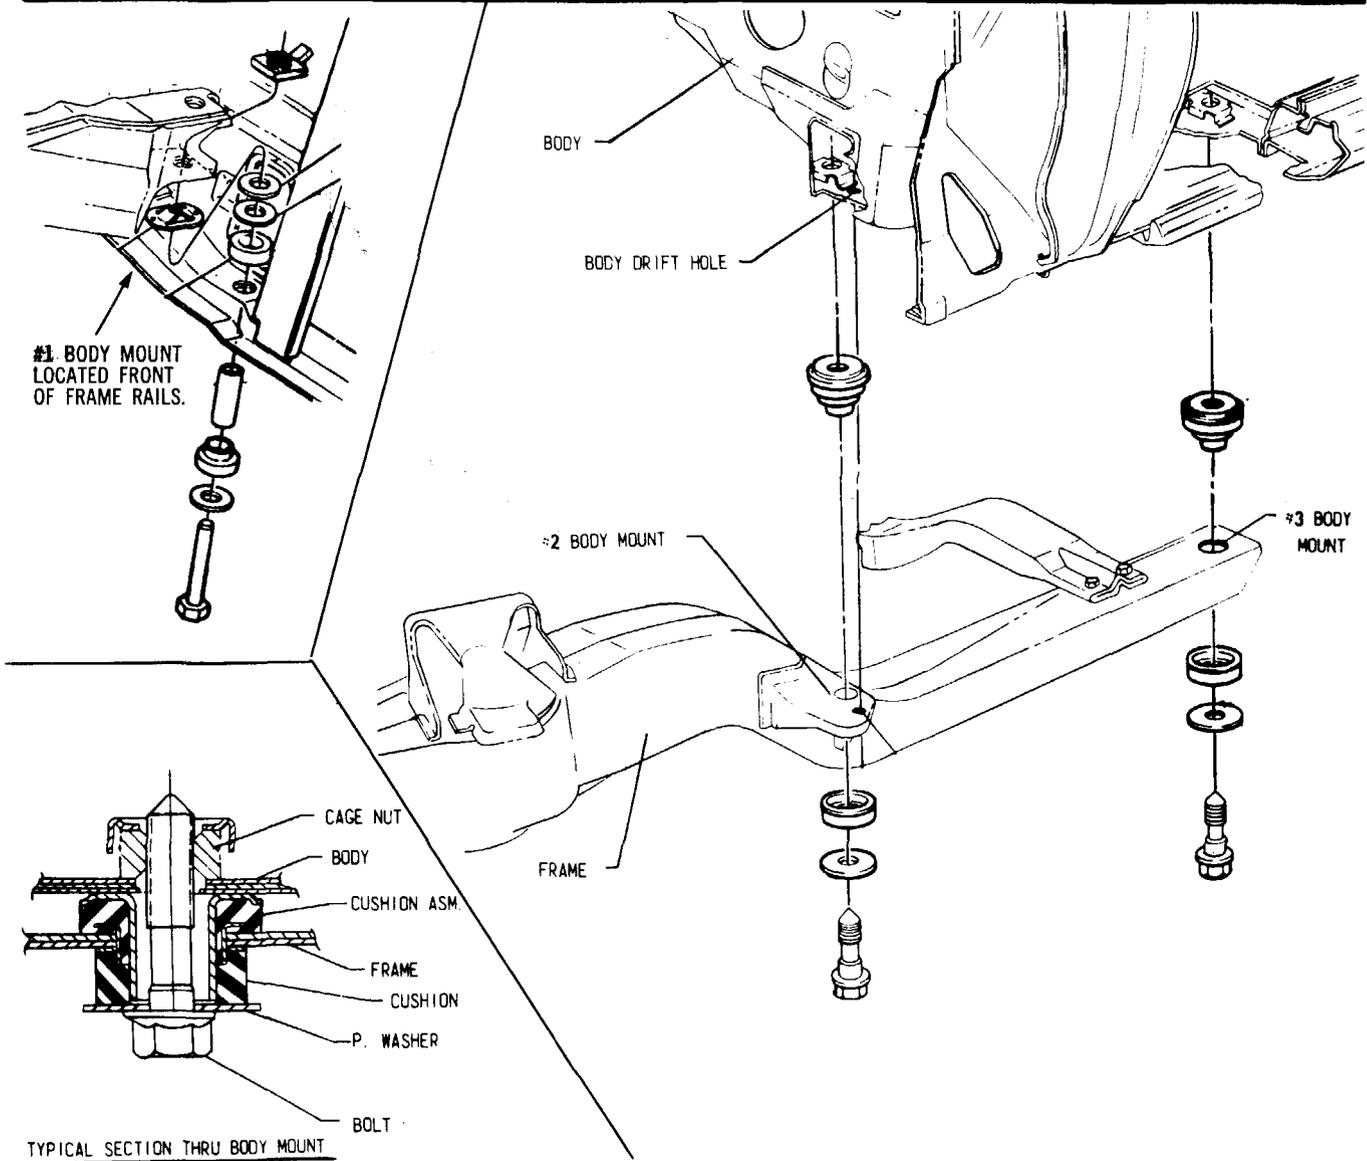

**1967-75 BODY MOUNTS — GROUP 9.023**

Position Cushion	#1		#2		#3	
	Upper	Lower	Upper	Lower	Upper	Lower
1967	3893159	3893156	3893161	3914802	3901361	3914802
1968	3893159	3893156	3928380	3914802	3901361	3914802
1969	3893159	3893156	3928380	3914802	3901361	332654
1970	3893159	3893156	3928380	332654	3901361	332654
1971	478779	478778	3928380	332654	3901361	332654
1972	478779	478778	3928380	332654	3901361	332654
1973	478779	478778	332608	332654	332609	332654
1974-76	478779	478778	332608	332654	332609	332654