


GROUP 10.000


INDEX

- 10- 1 1967-68 WINDSHIELD WIPER AND WASHER
- 10- 2 1968-76 WINDSHIELD WASHER PUMP
1967-75 WINDSHIELD WIPER TRANS.
- 10- 3 1976 WINDSHIELD WIPER MOTOR (NONDEPRESSED)
- 10- 4 1976 WINDSHIELD WIPER MOTOR (DEPRESSED)
- 10- 5 1967 DOOR VENTILATOR PARTS
- 10- 6 1968-69 DOOR HARDWARE
- 10- 8 1970-76 DOOR HARDWARE
- 10-10 1967-68 INSTRUMENT PANEL HARDWARE
- 10-12 1967-68 INSTRUMENT PANEL ELECTRICAL PARTS
- 10-14 1969 INSTRUMENT PANEL — PART I
- 10-16 1969 INSTRUMENT PANEL — PART II
- 10-18 1970-76 INSTRUMENT PANEL — PART I
- 10-20 1970-76 INSTRUMENT PANEL — PART II
- 10-22 1967 CONSOLE PARTS
- 10-24 1968-69 CONSOLE PARTS
- 10-26 1970-76 CONSOLE — TYPICAL
- 10-27 1976 TYPICAL WEATHERSTRIPS
- 10-28 1976 TYPICAL WEATHERSTRIP RETAINERS

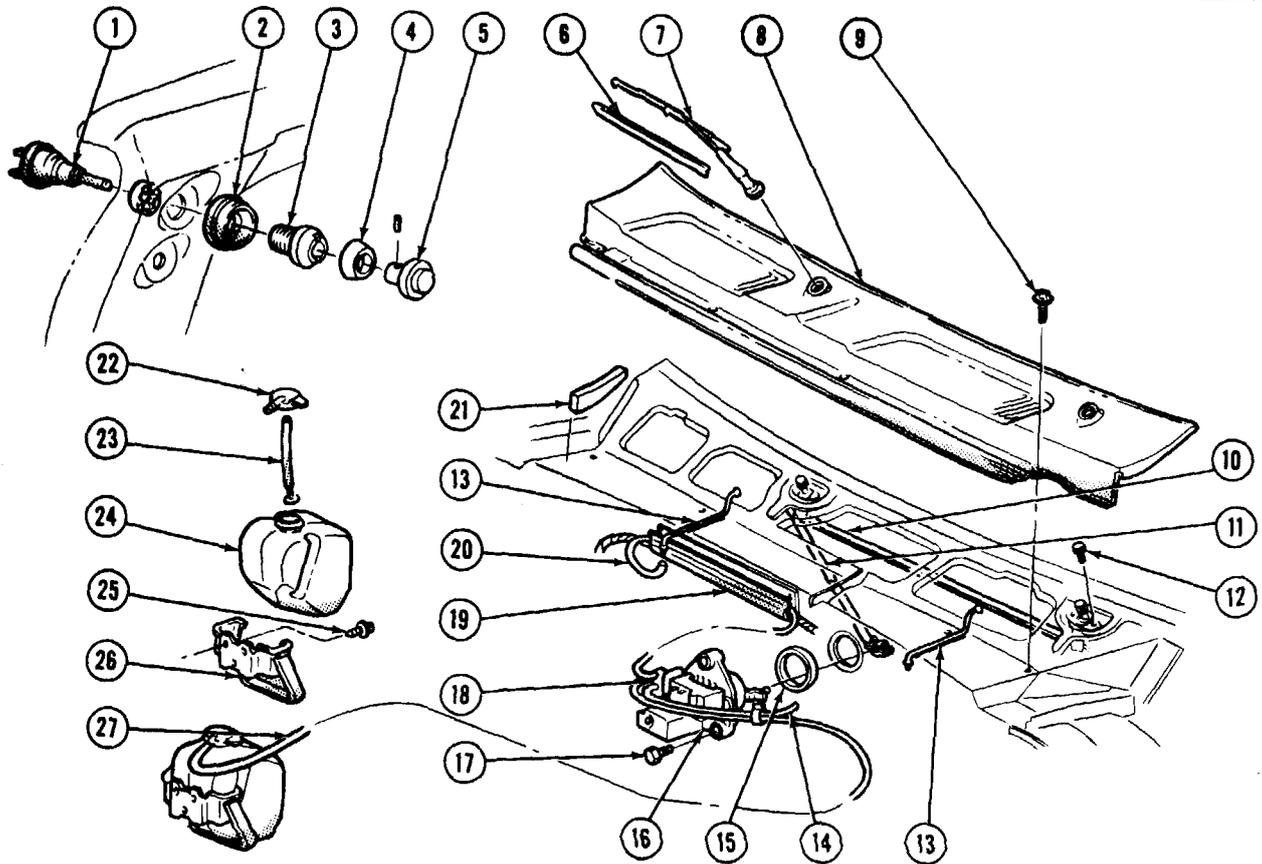

1967-68 FIREBIRD WINDSHIELD WIPER & WASHER


Key	Part Name	Group No.
1	SWITCH ASM., Wiper & Washer	10.150
2	BEZEL, Windshield Wiper Switch	10.166
3	NUT, Windshield Wiper Control	10.166
4	EXTENSION, Windshield Wiper Switch Bezel	10.166
5	KNOB ASM., Windshield Wiper & Washer	10.164
6	BLADE ASM., Windshield Wiper	10.146
7	ARM, Windshield Wiper	10.147
8	PANEL, Cowl Top Vent	12.800
9	SCREW & WASHER, Cowl Top Vent (#8-18 x 9/16")	8.977
10	HOUSING & LINK, Wiper Trans. - L.H.	10.159
11	HOUSING & LINK, Wiper Trans. - R.H.	10.159
12	SCREW, Windshield Trans. to Cowl & Dash	10.160
13	NOZZLE, Washer Spray	10.156
14	HOSE, Pump to Nozzle	10.155
15	GASKET, Wiper Motor to Shroud	10.152
16	MOTOR ASM., Windshield Wiper	10.150
17	SCREW & WASHER, Wiper Motor to Shroud	10.152
18	PUMP PKG., Windshield Washer	10.153
19	RETAINER, Engine Wire Harness	N.S.
20	HOSE, Pump to Nozzle R.H.	10.155
21	SEAL, Cowl Top Vent Grille	12.800
22	CAP, Washer Jar	10.154
23	FILTER ASM., Washer Jar	10.154
24	JAR, Washer	10.154
25	SCREW, Bracket to Rad. Supt. (1/4"-14 x 5/8")	N.S.
26	BRACKET ASM., Washer Jar	10.154
27	HOSE, Pump to Jar	10.155

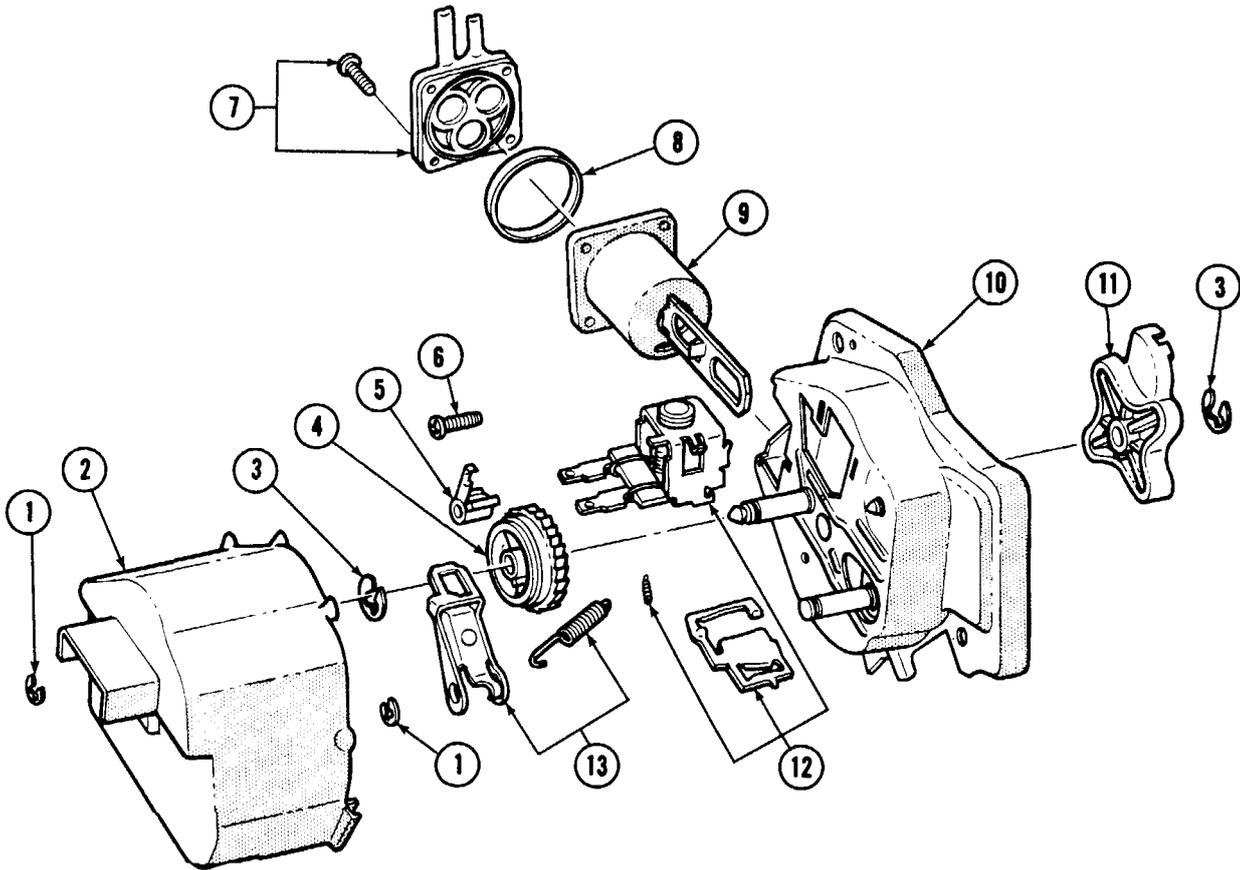


1968-76 WINDSHIELD WASHER PUMP

Key	Part Name	Group No.	Key	Part Name	Group No.
1	RING, Pump Ratchet Pawl Retaining	10.153	8	GASKET, Washer Pump Piston	10.153
2	COVER, Washer Pump	10.153	9	PISTON ASM., Washer Pump	10.153
3	RING, Rotor Cam Retainer	10.153	10	FRAME ASM., Washer Pump	N.S.
4	RATCHET, Washer Pump	10.153	11	CAM, Pump Rotor Drive	10.153
5	SPRING, Pump Ratchet Wheel Dog	10.153	12	TERMINAL BOARD PKG., Washer Pump	10.153
6	SCREW, Dog Spring	N.S.	13	PAWL PKG., Washer Pump	10.153
7	VALVE PKG., Windshield Washer	10.153			

1967-75 WINDSHIELD WIPER TRANSMISSION

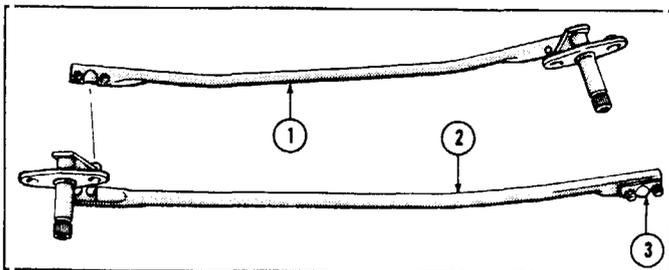


Key	Part Name	Group No.
1	HOUSING & LINK ASM., Wiper Trans. - R.H.	10.159
2	HOUSING & LINK ASM., Wiper Trans. - L.H.	10.159
3	REPAIR KIT, Wiper Drive Ball Socket	10.159

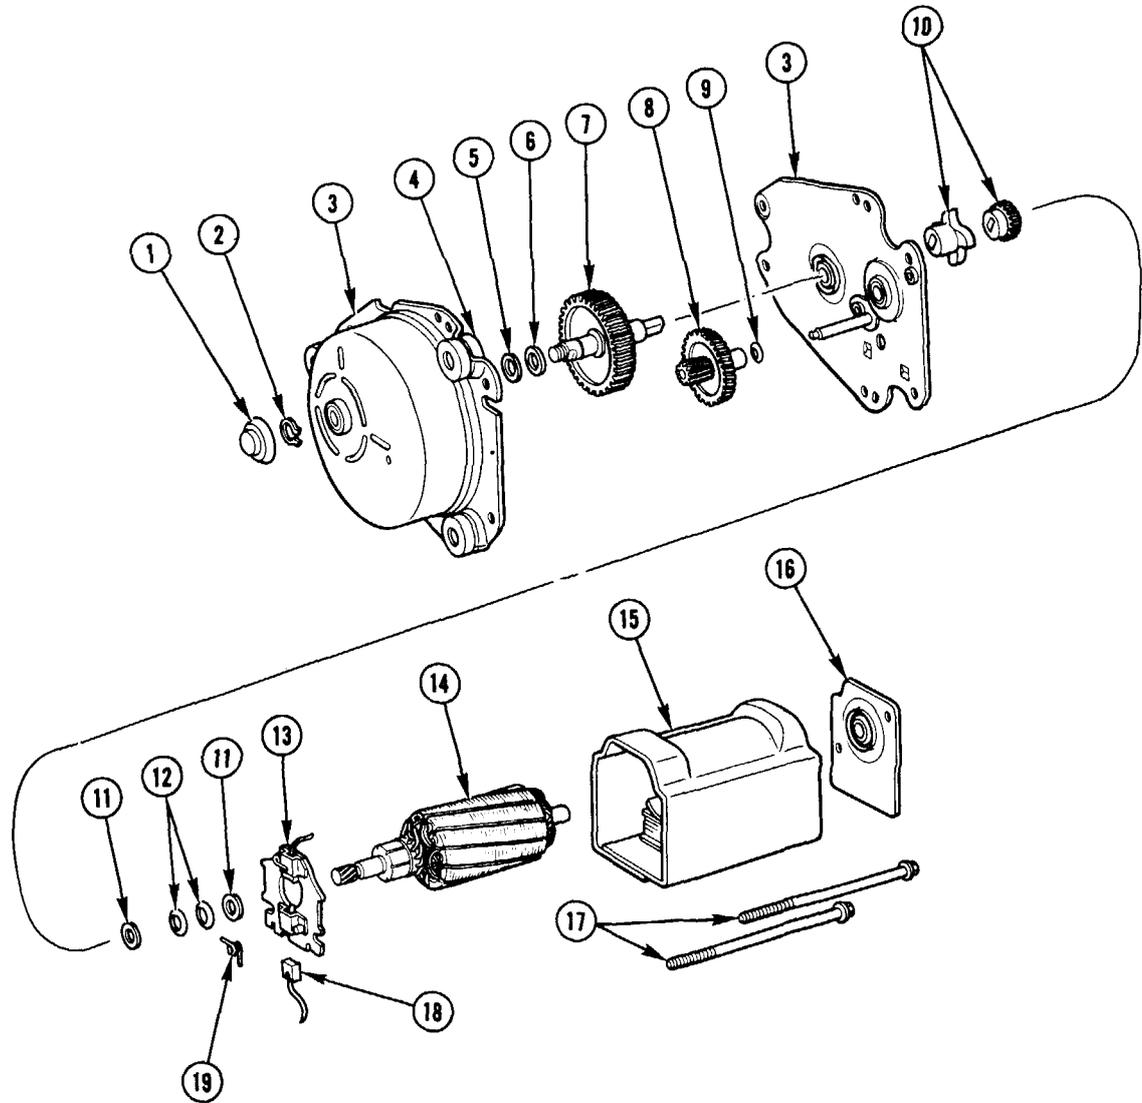

1976 WINDSHIELD WIPER MOTOR (NON-DEPRESSED)


1. CAP, Motor Seal	10.151	10. CAM & RING PKG., Pump	10.153
2. RING, Gear & Shaft Ret.	10.151	11. WASHER, Spr. Flat	10.150
3. COVER PKG., Motor Gear	10.151	12. WASHER, Wave	10.150
4. GROMMET, Motor Mtg. Spacer	10.152	13. HOLDER, Brush	10.150
5. WASHER, End Play	10.151	14. ARMATURE, Motor	10.150
6. WASHER, Gr. & Shaft End Play	N.S.	15. CASE & FIELD, Motor	N.S.
7. GEAR & SHAFT ASM., Motor	10.151	16. CAP, Motor End	10.150
8. GEAR & PINION ASM., Intermediate	10.151	17. BOLT, Tie	10.150
9. WASHER, Gr. & Pinion Spr.	10.151	18. BRUSH, Motor	10.150
		19. SPRING, Brush	10.150

NOTE: Not all original equipment and/or service replacement w/s wiper motors have identical serviceable parts. Refer to catalog group listings for specific service part application.

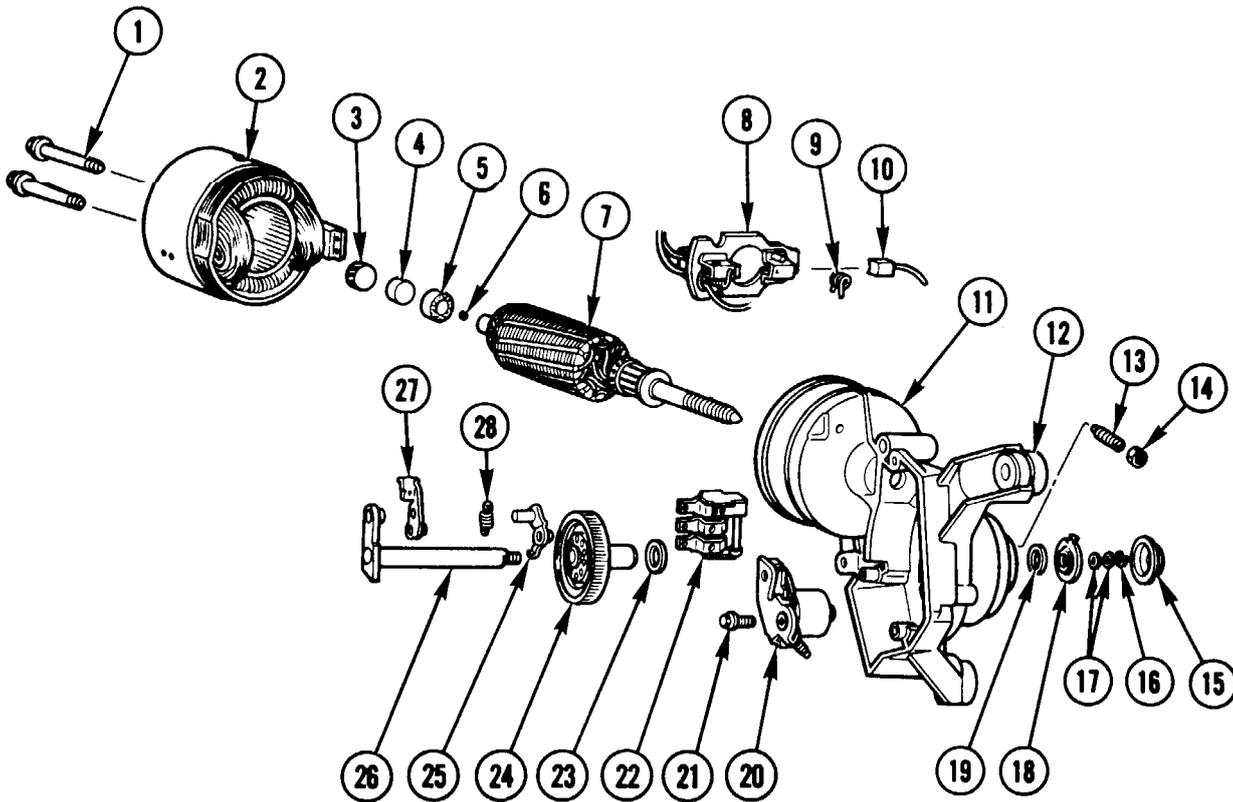
1976 WINDSHIELD WIPER MOTOR (DEPRESSED)

1. BOLT, Tie	10.150	15. CAP, Motor Seal	10.151
2. CASE, W/Coil, Motor Field	10.150	16. RING, Retaining (8.934)	10.151
3. DISC, Thrust (Rubber)	10.150	17. WASHER, End Play	10.150
4. DISC, Thrust (Steel)	10.150	18. CAP, Crank Arm Protector	10.151
5. WASHER, Thrust (Felt)	10.150	19. WASHER, Motor	10.151
6. BALL, Thrust	N.S.	20. MAGNET & SWITCH ASM., Motor	10.150
7. ARMATURE, Motor	10.150	21. SCREW, Switch to Hsg.	N.S.
8. HOLDER, Brush	10.150	22. SWITCH & TERMINAL BOARD ASM., Motor	10.150
9. SPRING, Brush	10.150	23. WASHER, Motor	10.151
10. BRUSH, Motor	10.150	24. GEAR & SHAFT ASM., Motor	10.151
11. HOUSING, Motor	N.S.	25. PAWL, Lock	10.151
12. GROMMET, Motor Mtg. Spacer	10.150	26. SHAFT & RING PKG., Drive	10.151
13. SCREW, End Play Adj.	10.151	27. PAWL, Drive	10.151
14. NUT, Adj. Screw Jamb (1/4"-28)	8.915	28. SPRING, Pawl	10.151


NOTE: Not all original equipment and/or service replacement w/s wiper motors have identical serviceable parts. Refer to catalog group listings for specific service part application.

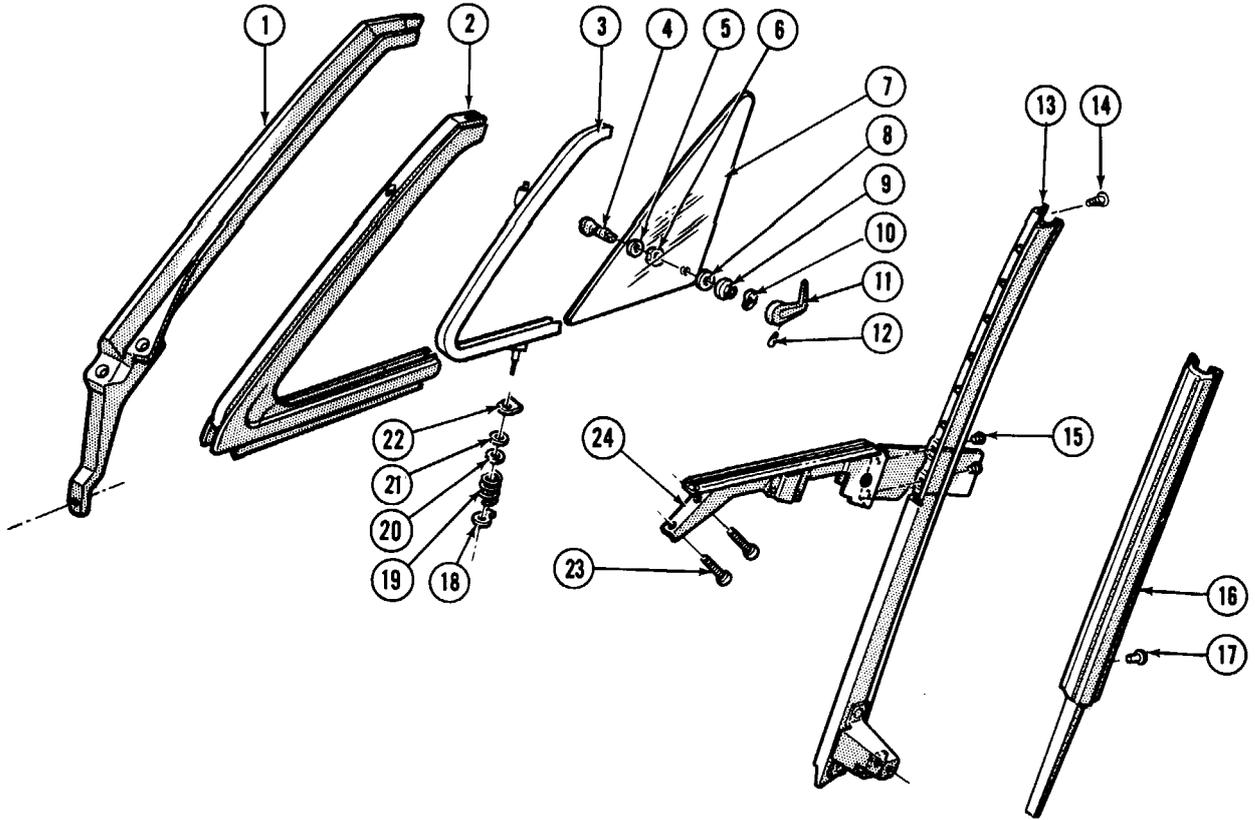

1967 FIREBIRD DOOR VENTILATOR PARTS

<u>Key</u>	<u>Part Name</u>	<u>Group No.</u>
1	FRAME, Door Vent	10.656
2	WEATHERSTRIP, Door Vent	10.652
3	CHANNEL, Door Vent	10.655
4	STUD & CAP ASM., Door Vent Glass Channel Handle	10.664
5	GASKET, Door Vent Glass Channel Handle	10.664
6	INSERT, Door Vent Glass Channel Handle	10.664
7	GLASS, Door Vent	10.658
8	WASHER, Door Vent Glass Channel Handle - Plastic	10.664
9	SPACER, Door Vent Glass Channel Handle	10.664
10	WASHER, Door Vent Glass Channel Handle - Spring	10.664
11	HANDLE, Door Vent Glass Channel	10.664
12	PIN, Door Vent Glass Channel Handle (3/32" x 5/8")	8.939
13	CHANNEL & SCALP ASM., Vent Division	10.688
14	SCREW, Vent Division Channel to Frame	10.688
15	RIVET, Vent Division Channel to Support	10.688
16	CHANNEL, Door Window Glass Run - Front	10.688
17	RIVET, Division Channel to Glass Run Channel	10.688
18	WASHER, Vent Friction Unit Tab	10.660
19	SPRING, Vent Friction Unit	10.660
20	STOP, Vent Friction Unit	10.660
21	WASHER, Vent Friction Unit	10.660
22	WASHER, Vent Spring Retainer	10.660
23	SCREW, Vent Support to Frame	N.S.
24	SUPPORT, Division Channel (inc. as part of #13)	N.S.

GM FIREBIRD
PARTS CATALOGUE

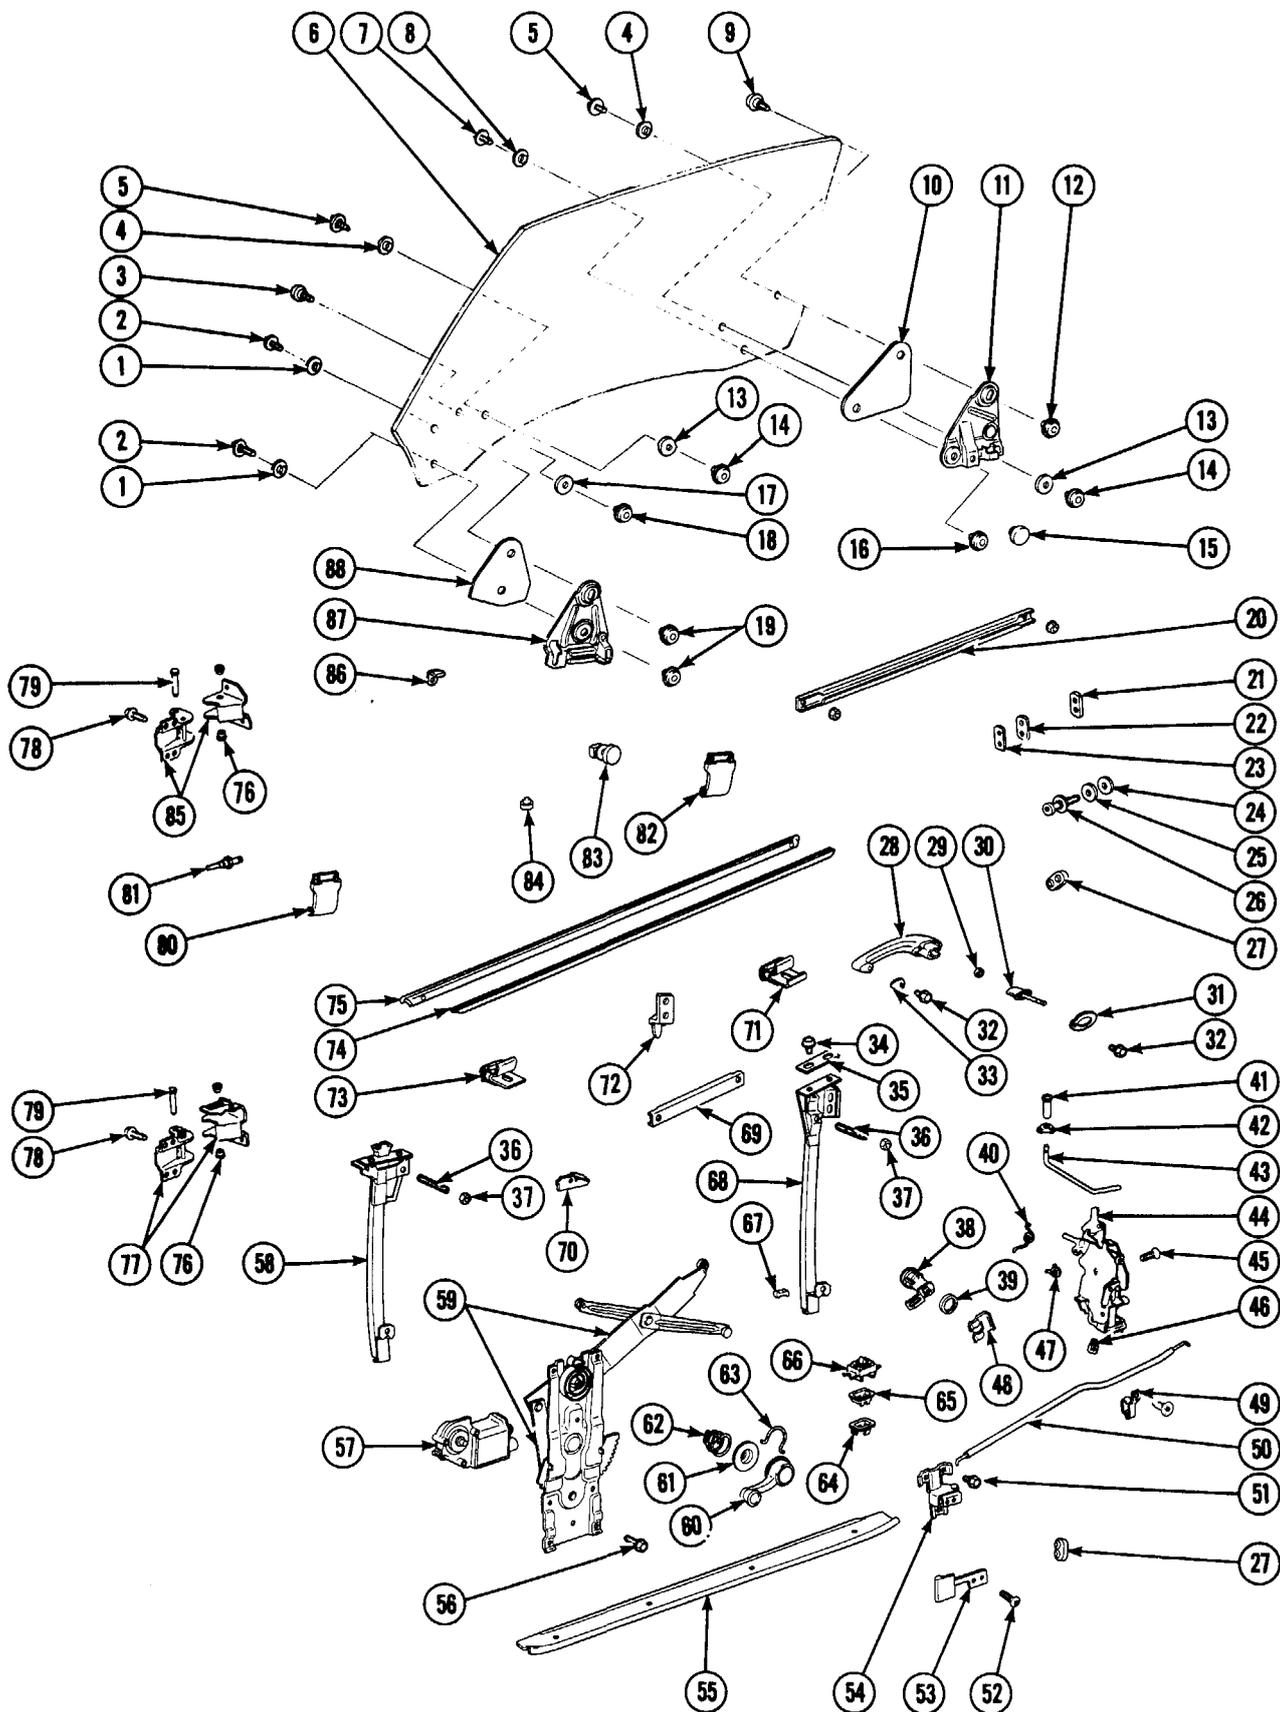


1968-69 FIREBIRD DOOR HARDWARE



1968-69 FIREBIRD DOOR HARDWARE

Key	Part Name	Group No.	Key	Part Name	Group No.
1	— SPACER, Front Lower Sash Channel to Glass	10.685	39	— GASKET, Door Lock Cylinder	10.551
2	— BOLT, Front Lower Sash Channel to Glass	10.685	40	— SPRING, Door Lock Over Center.	10.474
3	— BOLT, Glass Front Stabilizer.	10.685	41	— KNOB, Door Inside Locking Rod	10.559
4	— SPACER, Window Glass Regulator Cam to Glass.	10.792	42	— FERRULE, Locking Rod Knob	10.560
5	— BOLT, Window Glass Regulator Cam to Glass.	10.792	43	— ROD, Inside Locking to Lock	10.563
6	— GLASS, Window	10.681	44	— LOCK ASM., Door	10.470
7	— BOLT, Rear Lower Sash Channel to Glass-Lower.	10.685	45	— SCREW, Door Lock to Inner Panel	10.474
8	— SPACER, Rear Lower Sash Channel to Glass-Lower.	10.685	46	— CLIP, Door Lock Spring	10.474
9	— BOLT, Rear Lower Sash Channel to Glass-Upper.	10.685	47	— SPRING, Door Lock Push Button Return.	10.474
10	— FILLER, Rear Lower Sash Channel.	10.685	48	— RETAINER, Lock Cylinder.	10.551
11	— CHANNEL ASM., Lower Sash-Rear.	10.685	49	— CLIP, Lock Remote Control Rod to Panel.	10.565
12	— NUT, Rear Lower Sash Channel to Glass-Upper.	10.685	50	— ROD, Remote Control to Lock.	10.506
13	— WASHER, Window Glass Regulator Cam to Glass.	10.792	51	— SCREW, Lock Remote Control to Panel	10.506
14	— NUT, Window Glass Regulator Cam to Glass.	10.792	52	— SCREW, Lock Remote Control Handle	10.512
15	— ROLLER, Rear Lower Sash Channel.	10.685	53	— HANDLE, Lock Remote Control	10.512
16	— NUT, Rear Lower Sash Channel to Glass-Lower.	10.685	54	— CONTROL ASM., Door Lock Remote	10.500
17	— WASHER, Glass Front Stabilizer.	10.685	55	— PLATE, Door Sill.	11.175
18	— NUT, Glass Front Stabilizer	10.685	56	— SCREW, Regulator to Inner Panel.	10.783
19	— NUT, Front Lower Sash Channel to Glass	10.685	57	— MOTOR ASM., Door Window Regulator-Electric	10.783
20	— CAM, Window Glass Regulator.	10.792	58	— CAM ASM., Window Guide-Front	10.792
21	— PLATE, Wedge-Body Side (67 Styles).	10.584	59	— REGULATOR ASM., Door Window	10.783
22	— PLATE, Wedge-Door Side (67 Styles).	10.584	60	— HANDLE ASM., Window Regulator.	10.797
23	— SPACER, Wedge Plate to Door (67 Styles).	10.584	61	— PLATE, Regulator Handle Bearing.	10.515
24	— WASHER, Lock Striker-Metal	10.571	62	— SPRING, Regulator Handle	10.516
25	— WASHER, Lock Striker-Plastic	10.571	63	— SPRING, Regulator Handle Retaining	10.513
26	— STRIKER ASM., Door Lock	10.569	64	— RETAINER, Window Switch Escutcheon	10.777
27	— BUMPER, Lock Pillar-On Door.	10.587	65	— REINFORCEMENT, Trim at Window Switch	10.777
28	— HANDLE, Door Outside-Less Button	10.527	66	— SWITCH & ESCUTCHEON, Door Window.	10.777
29	— RING, Door Handle Push Button Sealing.	10.529	67	— BUMPER, Window Guide Rear Cam.	10.792
30	— BUTTON & SHAFT, Door Handle Push	10.529	68	— CAM ASM., Window Guide-Rear.	10.792
31	— GASKET, Door Outside Handle-Rear.	10.537	69	— CAM ASM., Inner Panel.	10.792
32	— SCREW, Door Outside Handle to Door	10.527	70	— STOP, Window Regulator Sector.	10.716
33	— GASKET, Door Outside Handle-Front	10.537	71	— STRIP, Window Anti-Rattle-Rear.	10.710
34	— SCREW, Window Guide Cam.	N.S.	72	— STOP, Window Cam-Rear	10.716
35	— PLATE, Window Rear Guide Cam Adjusting	10.792	73	— STRIP, Window Anti-Rattle-Front	10.710
36	— STUD, Window Guide Cam Adjusting (Front & Rear).	10.792	74	— STRIP, Window Inner-At Belt.	10.710
37	— NUT, Window Guide Cam Adjusting (Front & Rear).	10.792	75	— STRIP, Window Outer-At Belt	10.710
38	— CYLINDER KIT, Door Lock	10.550	76	— BUSHING, Hinge (Oilless)	10.464
			77	— HINGE ASM., Door-Lower	10.454
			78	— SCREW, Hinge to Body & Door	10.463
			79	— PIN, Upper & Lower Hinge.	10.466
			80	— PLATE, Window Guide-Front.	10.792
			81	— SWITCH ASM., Door Jamb	11.950
			82	— PLATE, Window Guide-Rear	10.792
			83	— ROLLER, Front Lower Sash Channel	10.685
			84	— BUMPER, Window Stop.	10.716
			85	— HINGE ASM., Door-Upper	10.450
			86	— STOP, Window Cam-Front.	10.716
			87	— CHANNEL ASM., Lower Sash-Front	10.685
			88	— FILLER, Front Lower Sash Channel	10.685

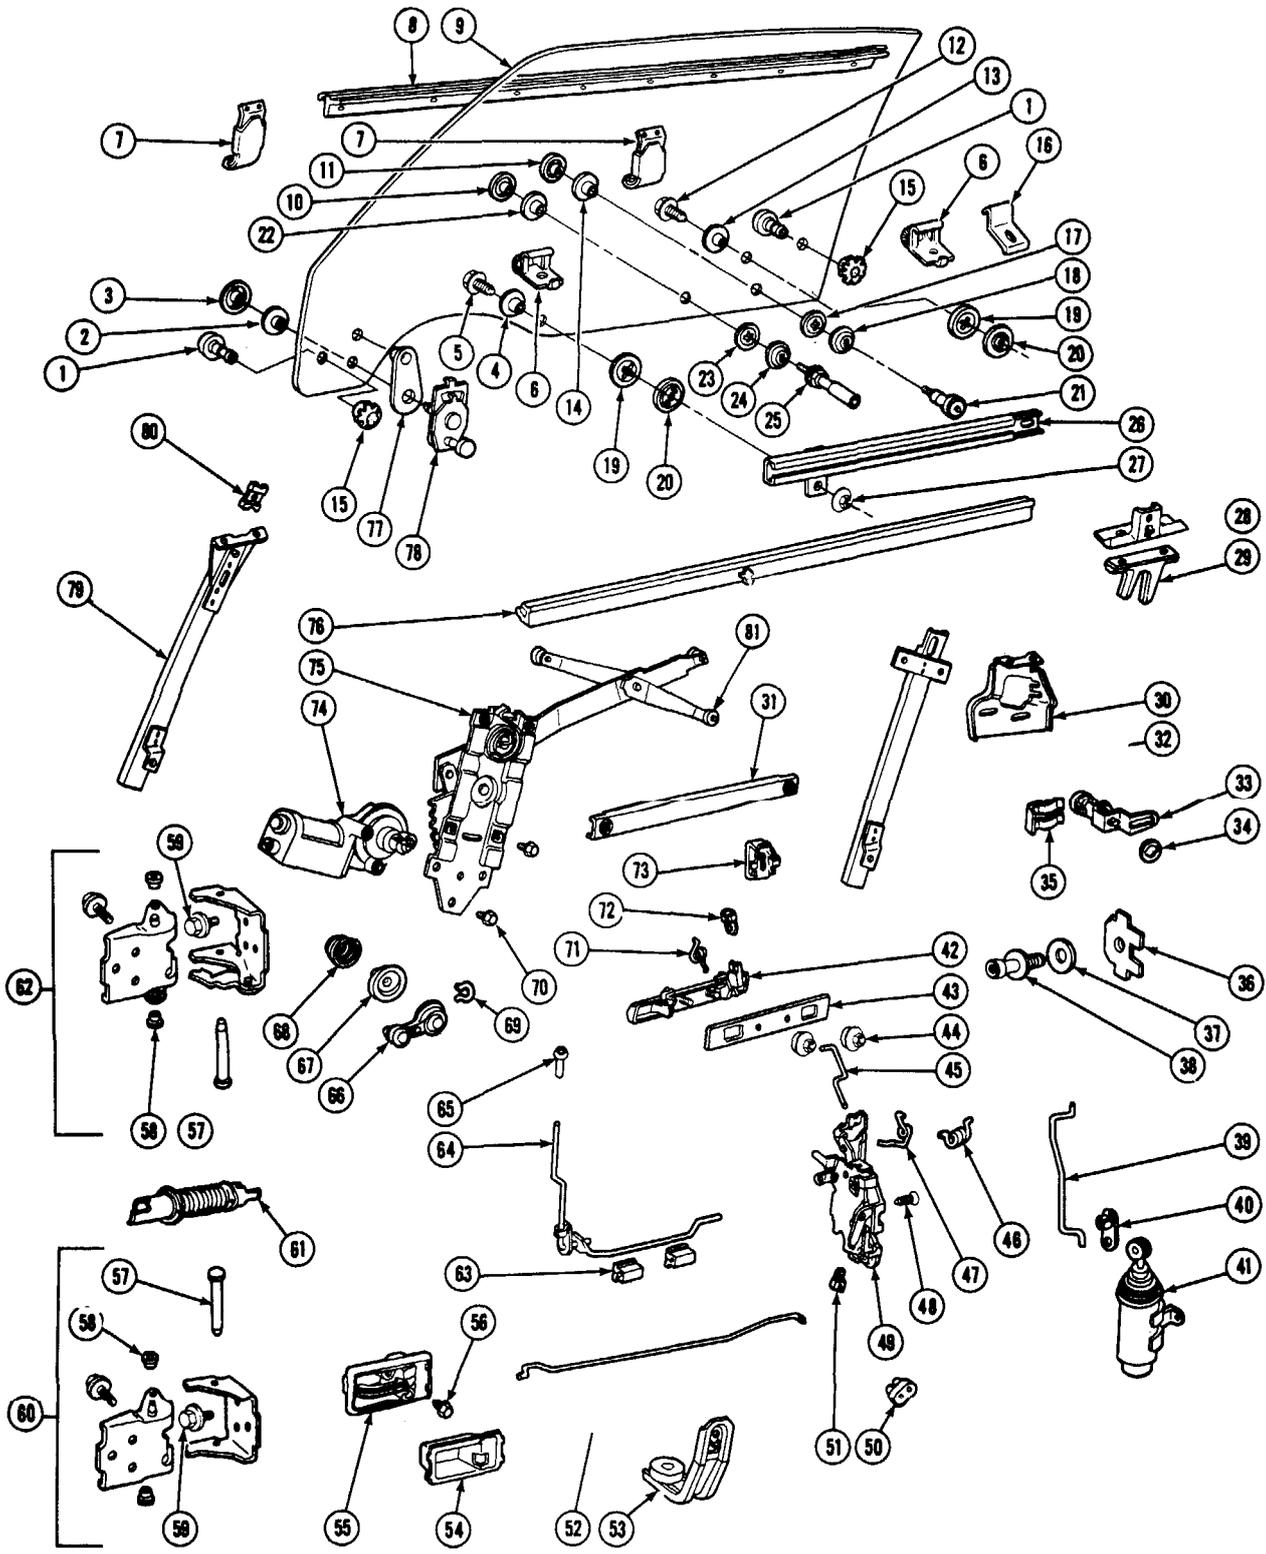


1970-76 FIREBIRD DOOR HARDWARE



1970-76 FIREBIRD DOOR HARDWARE

Key	Part Name	Group No.
1	FASTENER, Window Glass Bearing	10.685
2	BUSHING, Window Front Roller to Glass	10.685
3	NUT, Window Guide Front Roller to Glass	10.792
4	BUSHING, Window Cam to Glass - Front	10.685
5	BOLT, Window Cam to Glass - Front	10.792
6	PLATE ASM., Door Trim Support Hanger	14.685
7	PLATE ASM., Door Window Guide	10.792
8	STRIP ASM., Window Outer - Sealing - At Belt	10.710
9	GLASS, Door Window	10.681
10	NUT, Window Rear Up Stop to Glass	10.685
11	NUT, Window Guide Rear Roller to Glass	10.792
12	BOLT, Window Cam to Glass - Rear	10.792
13	BUSHING, Window Cam to Glass - Rear	10.685
14	BUSHING, Window Rear Roller to Glass	10.685
15	CAP, Window Glass Bearing Fastener	10.685
16	PLATE, Door Trim Support Hanger	14.685
17	WASHER, Window Guide Rear Roller to Glass	10.792
18	WASHER, Window Guide Rear Roller to Glass	10.792
19	WASHER, Window Cam to Glass	10.792
20	NUT, Window Cam to Glass	10.792
21	ROLLER ASM., Window Guide - Rear	10.792
22	BUSHING, Window Rear Up Stop to Glass	10.685
23	WASHER, Window Rear Up Stop to Glass	10.685
24	WASHER, Window Rear Up Stop to Glass	10.685
25	STOP ASM., Window Rear Up - On Glass	10.716
26	CAM ASM., Window Glass Regulator	10.792
27	NUT, Window Glass Regulator Cam to Glass	10.792
28	SUPPORT, Window Rear Up Stop Guide	10.687
29	GUIDE, Window Rear Up Stop	10.685
30	SUPPORT, Window Guide Rear Cam - Upper	10.687
31	CAM ASM., Door Inner Panel	10.792
32	CAM ASM., Window Guide Rear	10.792
33	CYLINDER KIT, Door Lock	10.550
34	GASKET, Lock Cylinder to Door	10.551
35	RETAINER, Door Lock Cylinder	10.551
36	PLATE, Door Lock Striker Anchor	10.571
37	WASHER, Door Lock Striker	10.571
38	STRIKER ASM., Door Lock	10.569
39	ROD, Electric Actuator to Lock	10.485
40	CLIP, Electric Actuator to Lock Rod	10.485
41	ACTUATOR ASM., Electric Door Lock	10.485
42	HANDLE ASM., Door Outside	10.527
43	ESCUTCHEON, Door Outside Handle	10.537
44	NUT, Outside Handle to Panel	10.529
45	ROD, Outside Handle to Lock	10.529
46	SPRING, Door Lock Over Center	10.474
47	SPRING, Lock Push Button Return	10.474
48	SCREW, Lock to Panel	10.474
49	LOCK ASM., Front Door	10.470
50	BUMPER, Lock Pillar - Door Side	10.587
51	CLIP, Door Lock Spring	10.474
52	ROD, Lock Remote Control to Lock	10.563
53	SUPPORT ASM., Door Window Bumper	10.716
54	ESCUTCHEON, Lock Remote Control Handle	10.515
55	HANDLE ASM., Lock Remote Control	10.512
56	SCREW, Lock Remote Control Handle to Inner Panel	N.S.
57	PIN, Upper & Lower Hinge	10.466
58	BUSHING, Upper & Lower Hinge	10.464
59	SCREW, Upper & Lower Hinge to Door & Body	10.463
60	HINGE ASM., Door Lower	10.454
61	CONDUIT, Door Electric	10.778
62	HINGE ASM., Door Upper	10.450
63	CLIP, Inside Locking Rod to Inner Panel	10.565
64	ROD ASM., Inside Locking to Lock	10.563
65	KNOB, Inside Locking Rod	10.559
66	HANDLE ASM., Window Regulator	10.797
67	SPACER, Window Regulator Handle	10.806
68	SPRING, Window Regulator Handle	10.806
69	SPRING, Window Inside Handle Retainer	10.513
70	SCREW, Regulator to Panel	10.783
71	SPRING, Door Outside Handle	10.529
72	CLIP, Outside Handle Spring	10.529
73	CLIP, Lock Remote Control Rod to Panel	10.565
74	MOTOR ASM., Window Regulator	10.783
75	REGULATOR ASM., Window Electric - Less Motor	10.783
76	STRIP ASM., Window Inner Sealing - At Belt	10.710
77	WASHER, Window Guide Front Roller to Glass	10.792
78	ROLLER ASM., Window Guide - Front	10.792
79	CAM ASM., Window Guide - Front	10.792
80	STOP, Window Upper - On Cam	10.716
81	ROLLER, Regulator Lower Balance Arm	10.783


GM FIREBIRD
PARTS CATALOGUE

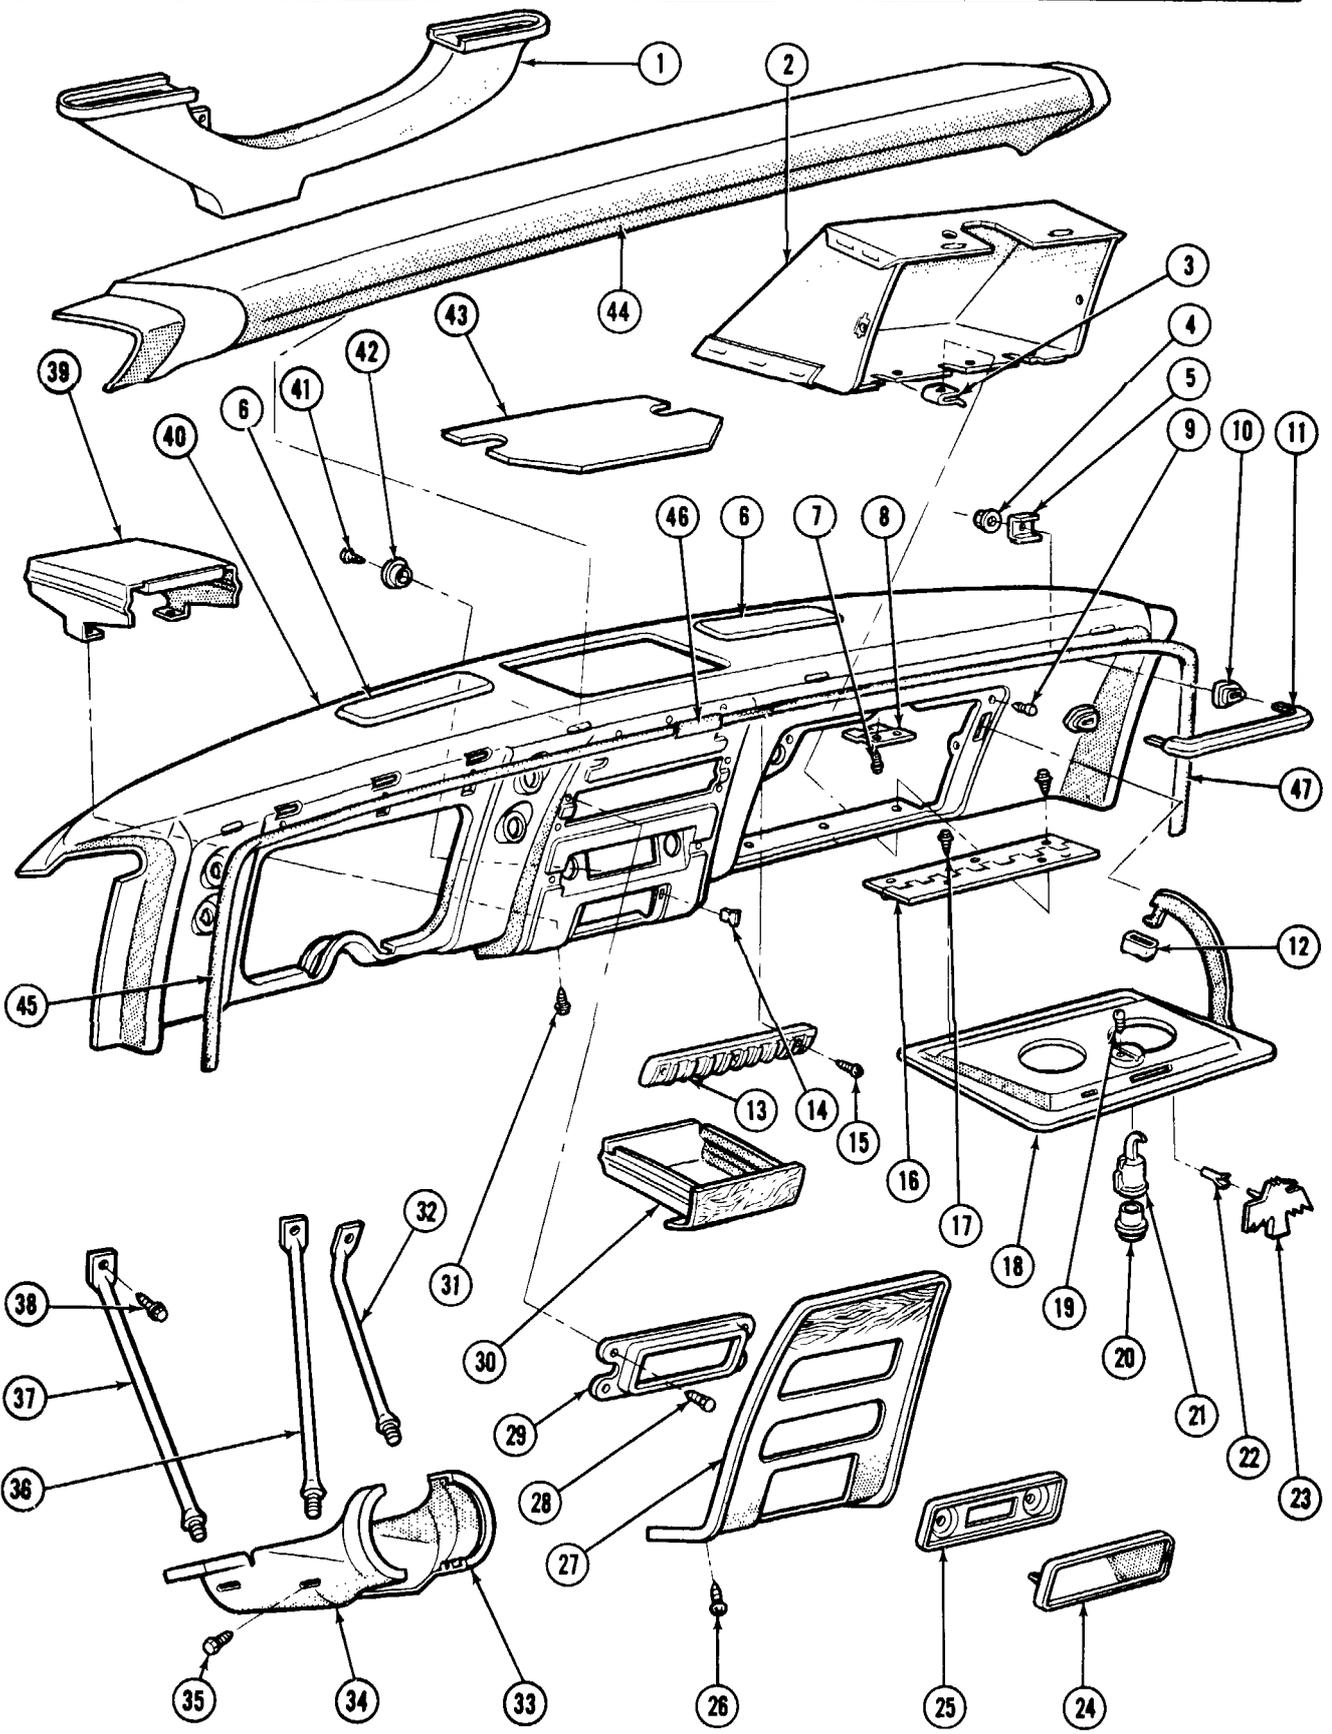

1967-68 INSTRUMENT PANEL HARDWARE

1967-68 INSTRUMENT PANEL HARDWARE

Key	Part Name	Group No.
1	NOZZLE ASM., Defroster Air	9.779
2	COMPARTMENT ASM., Instrument Panel	10.260
3	"U" NUT, Inst. Panel Compt. to Inst. Panel (#10-24)	8.921
4	NUT, Assist Grip Retaining (#10-24)	8.921
5	SPACER, Instrument Panel Assist Grip Mounting	14.660
6	PLATE, Instrument Panel Defroster Opening (Exc. Heater)	10.256
7	SCREW AND WASHER, Compt. Door Striker to Inst. Panel (#10-24 x 3/8")	N.S.
8	STRIKER, Instrument Panel Compt. Door Lock	10.268
9	BUMPER, Instrument Panel Compt. Door	10.263
10	BEZEL, Instrument Panel Assist Grip Mounting	14.660
11	HANDLE AND PAD, Inst. Panel Assist Grip	14.660
12	BUMPER, Instrument Panel Compt. Door Stop	10.268
13	RETAINER, Instrument Panel Trim Plate (Nylon)	10.252
14	BUMPER, Instrument Panel Ash Tray	12.009
15	SCREW, Inst. Panel Trim Plate Retainer (#8-18 x 1/2" Pan Hd.)	N.S.
16	HINGE, Instrument Panel Compt. Door	10.262
17	SCREW AND WASHER, Compt. Door to Hinge (#10-24 x 3/8")	N.S.
18	DOOR ASM., Instrument Panel Compt.	10.261
19	SCREW, Inst. Panel Compt. Door Lock Cyl. Case to Door (#6-32 x 5/16")	N.S.
20	CYLINDER ASM., Inst. Panel Compt. Lock	10.266
21	CASE & BOLT ASM., Instrument Panel Compt. Lock	10.266
22	CLIP, Inst. Panel Compt. Door Frame	10.252
23	EMBLEM, Inst. Panel Compt. Door (Firebird)	10.254
24	COVER, Radio Control Opening	10.256
25	PLATE, Radio Trim (w/Radio)	10.256
26	SCREW, Inst. Panel Trim Plate to Inst. Panel (#8-18 x 1/2")	N.S.
27	PLATE, Inst. Panel Trim	10.252
28	SCREW, Inst. Panel Control to Cover (#10-16 x 3/4")	8.977
29	COVER, Heater Control Opening (Exc. Heater)	10.256
30	ASH TRAY ASM., Instrument Panel	12.009
31	SCREW, Ash Tray Retainer to Inst. Panel (#8-18 x 1/2")	N.S.
32	SUPPORT, Steering Column Inner Rear	6.760
33	COVER, Steering Gear Jacket - Inner	6.518
34	COVER, Steering Gear Jacket - Outer	6.518
35	SCREW, Outer Cover to Inner Cover (#8-32 x 7/16")	8.977
36	SUPPORT, Steering Column Inner - Front	6.760
37	SUPPORT, Steering Column - Outer	6.760
38	SCREW AND WASHER, Outer Support to Dash (5/16" - 18 x 3/4")	8.977
39	RETAINER, Instrument Panel Ash Tray	12.009
40	PANEL ASM., Instrument	10.230
41	SCREW, Radio Control Opening Cover Retainer	N.S.
42	RETAINER, Radio Control Opening Cover	10.256
43	COVER, Instrument Panel Speaker Opening (exc. Radio)	10.256
44	PAD ASM., Instrument Panel	14.655
45	MOLDING, Inst. Panel Cover Finish - L.H.	10.252
46	ESCUTCHEON, Cover Finish Molding	N.S.
47	MOLDING, Inst. Panel Cover Finish - R.H.	10.252

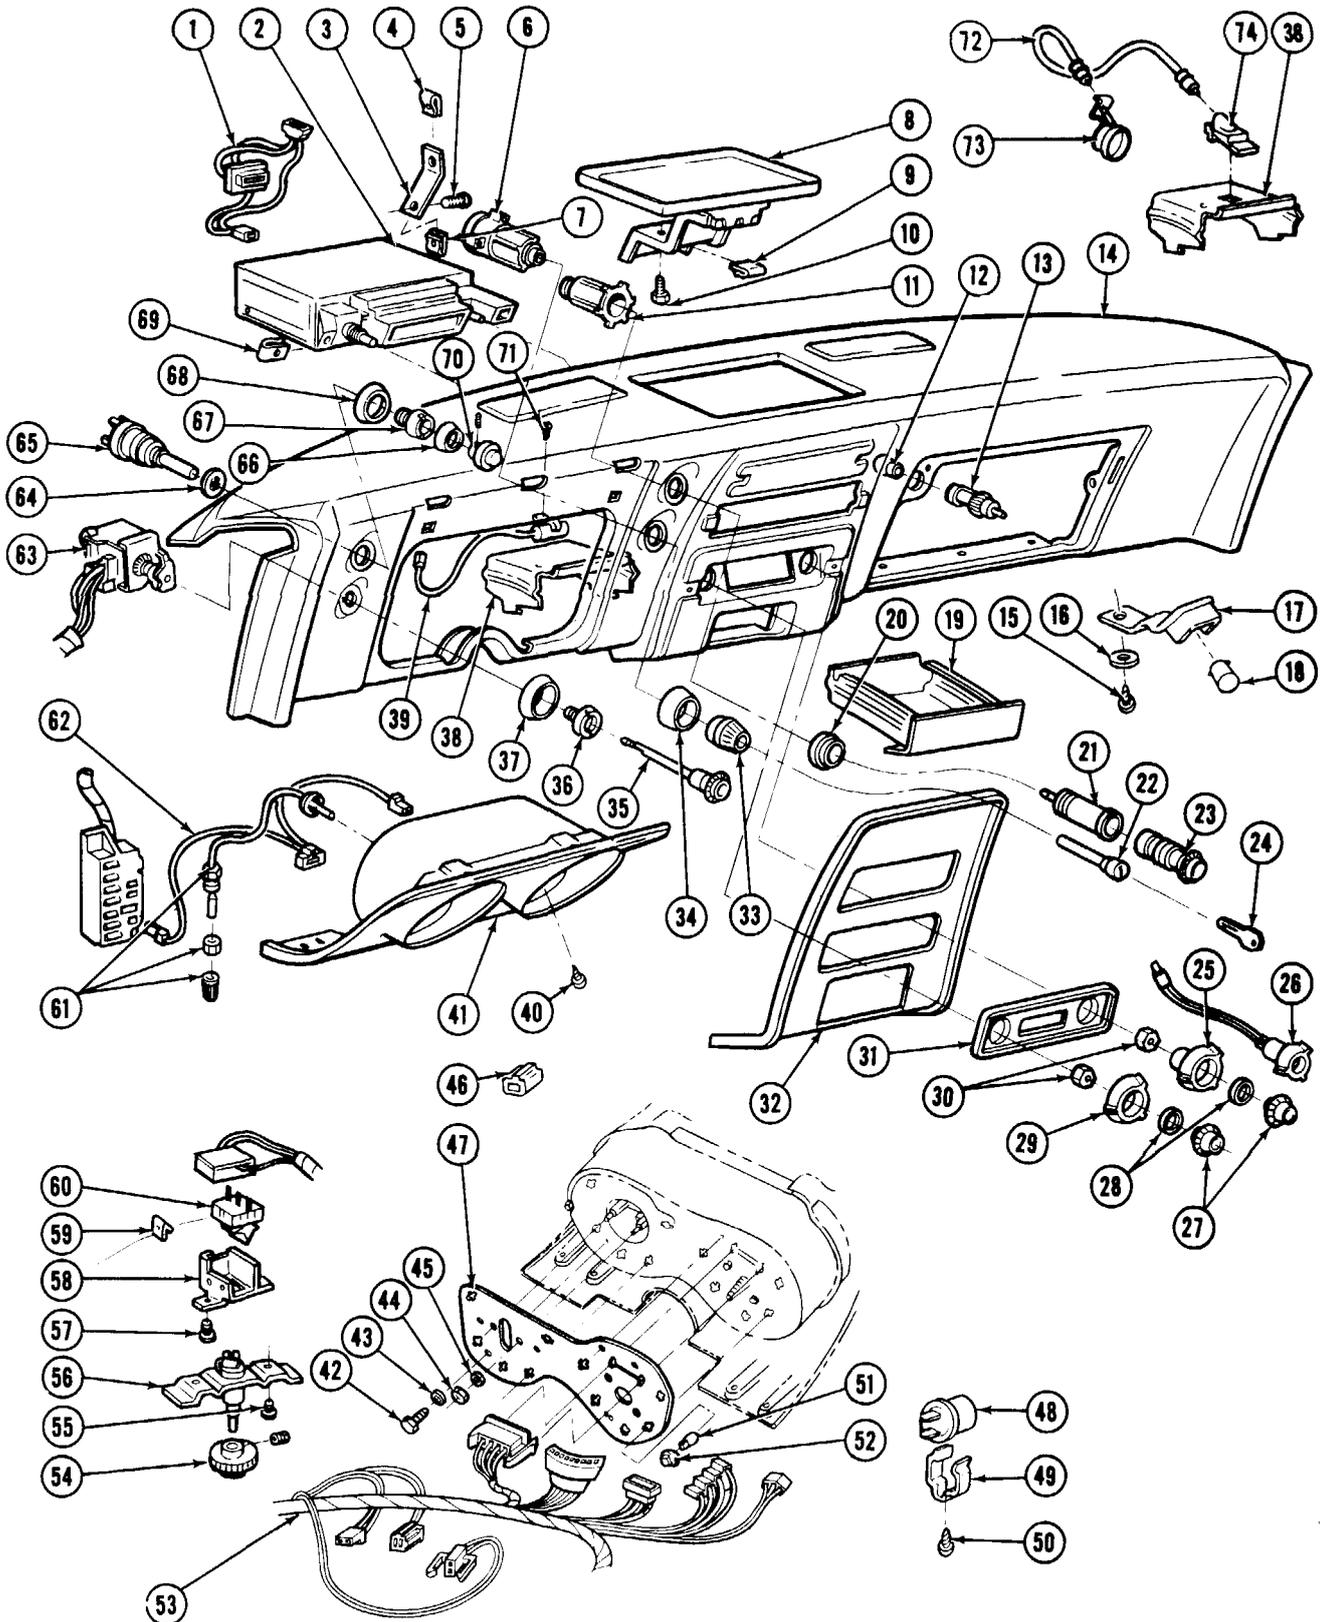


1967-68 FIREBIRD INSTRUMENT PANEL ELECTRICAL PARTS



1967-68 FIREBIRD INSTRUMENT PANEL ELECTRICAL PARTS


<u>Key</u>	<u>Part Name</u>	<u>Group No.</u>
1	- HARNESS ASM., Rear Seat Speaker	9.665
2	- RECEIVER ASM., Radio (Serviced in Accessory Package Only)	9.667
3	- BRACKET, Radio Receiver Mtg.	9.667
4	- NUT, Radio Mtg. Brkt. (1/4" - 14 "U" Shape)	8.921
5	- SCREW, Bracket to Receiver (1/4"-14 x 5/8" Hex. Hd.)	N.S.
6	- SWITCH ASM., Ignition	2.188
7	- NUT, Bracket to Receiver (1/4"-14 "U" Shape)	8.921
8	- SPEAKER ASM., Radio - Front	9.650
9	- NUT, Speaker Asm. to Inst. Panel Bracket (1/4"-14 "J" Shape)	8.921
10	- SCREW, Speaker Asm. to Inst. Panel Bracket (1/4"-14 x 3/8")	N.S.
11	- RETAINER, Cigar Lighter to Inst. Panel	9.709
12	- BULB, Inst. Panel Compt. Lamp (No. 1895)	8.991
13	- SWITCH ASM., Inst. Panel Compt.	10.275
14	- PANEL, Instrument	10.230
15	- SCREW, Inst. Panel Courtesy Lamp Supt. (#10-16 x 5/8" Pan. Hd.)	N.S.
16	- WASHER, Inst. Panel Courtesy Lamp Supt. (7/32" I.D. x 3/4" O.D.)	N.S.
17	- SUPPORT, Inst. Panel Courtesy Lamp	10.275
18	- BULB, Inst. Panel Courtesy Lamp (No. 631)	8.991
19	- ASH TRAY ASM., Instrument Panel	12.009
20	- BEZEL, Cigar Lighter to Inst. Panel	9.709
21	- HOUSING, Cigar Lighter	9.709
22	- CYLINDER, Ignition Lock - Uncoded	2.188
23	- KNOB, ELEMENT & SHIELD, Cigar Lighter	9.709
24	- KEY, Ignition	2.187
25	- SPACER, Radio Selector Control Knob	9.649
26	- KNOB ASM., Rear Speaker Wire and Control	9.649
27	- KNOB ASM., Tuning and Volume Control	9.649
28	- WASHER, Selector and Volume Control Knob	9.649
29	- KNOB, Tone Control	9.649
30	- NUT, Radio Trim Plate to Inst. Panel	9.667
31	- PLATE, Radio Trim (w/Radio)	10.256
32	- PLATE, Instrument Panel Trim	10.252
33	- NUT, Ignition Switch	2.198
34	- BEZEL, Ignition Switch	2.192
35	- KNOB, Headlamp Switch Control	2.486
36	- NUT & BUSHING ASM., Headlamp Switch Mtg.	2.487
37	- BEZEL, Headlamp Switch	2.487
38	- RETAINER, Inst. Panel Ash Tray	12.009
39	- LAMP ASM., Inst. Panel Ash Tray	12.009
40	- SCREW, Inst. Cluster to Panel (#10-16 x 5/8 Oval Hd.)	8.977
41	- BEZEL, Instrument Cluster	9.743
42	- SCREW, Inst. Cluster Wiring Circuit to Cluster (# 8-18 x 1/4")	N.S.
43	- WASHER, Inst. Cluster Wiring Circuit to Cluster (3/4" I.D. x 1 43/64" O.D.)	N.S.
44	- NUT, Inst. Cluster Wiring Circuit to Cluster (# 6-32)	8.915
45	- WASHER, Inst. Cluster Wiring Circuit to Cluster (5/32" I.D. x 3/8" O.D.)	8.929
46	- INSULATOR, Inst. Panel Compt. Light Switch Terminal	N.S.
47	- CIRCUIT, Inst. Cluster Printed Wiring	2.480
48	- FLASHER ASM., Direction Signal	2.892
49	- CLIP, Direction Signal Lamp Flasher	2.892
50	- SCREW, Direction Signal Flasher Clip to Panel (#10-16 x 1/2" Pan Hd.)	8.977
51	- BULB, Direction Signal & Illumination Lamps (#194 Wedge Base)	8.991
52	- SOCKET ASM., Direction Signal & Illumination Lamps	9.743
53	- HARNESS ASM., Inst. Panel Wire	2.480
54	- KNOB ASM., Rear Window Defogger	9.778
55	- SCREW, Rear Window Defogger Switch Mtg. (#10-16 x 3/4")	N.S.
56	- SWITCH ASM., Rear Window Defogger Blower	9.778
57	- SCREW, Folding Top Switch Housing to Panel (#10-16 x 3/4")	N.S.
58	- HOUSING, Folding Top Switch	14.483
59	- CLIP, Folding Top Switch to Housing	14.483
60	- SWITCH ASM., Folding Top	14.483
61	- CABLE ASM., Speed Warning Buzzer	9.762
62	- WIRE ASM., Speed Warning Buzzer	9.762
63	- SWITCH ASM., Lighting	2.485
64	- LOCKWASHER, Windshield Wiper Switch Grounding (1/2" Ext. Tooth)	N.S.
65	- SWITCH ASM., Windshield Wiper	10.150
66	- EXTENSION, Windshield Wiper Switch Bezel	10.166
67	- NUT, Windshield Wiper Control (1/2" - 28 Chrome)	10.166
68	- BEZEL, Windshield Wiper Switch	10.166
69	- NUT, Radio Receiver to Inst. Panel (#10-12 "U" Shape)	8.921
70	- KNOB ASM., Windshield Wiper & Washer	10.164
71	- SCREW, Ash Tray Lamp to Retainer (#6-20 x 1/2")	N.S.
72	- GUIDE, Ash Tray-Fiber Optic (1968)	12.009
73	- SOCKET & BRACKET ASM., Ash Tray Fiber Optic Guide (1968)	12.009
74	- RETAINER, Ash Tray Fiber Optic Guide (1968)	12.009

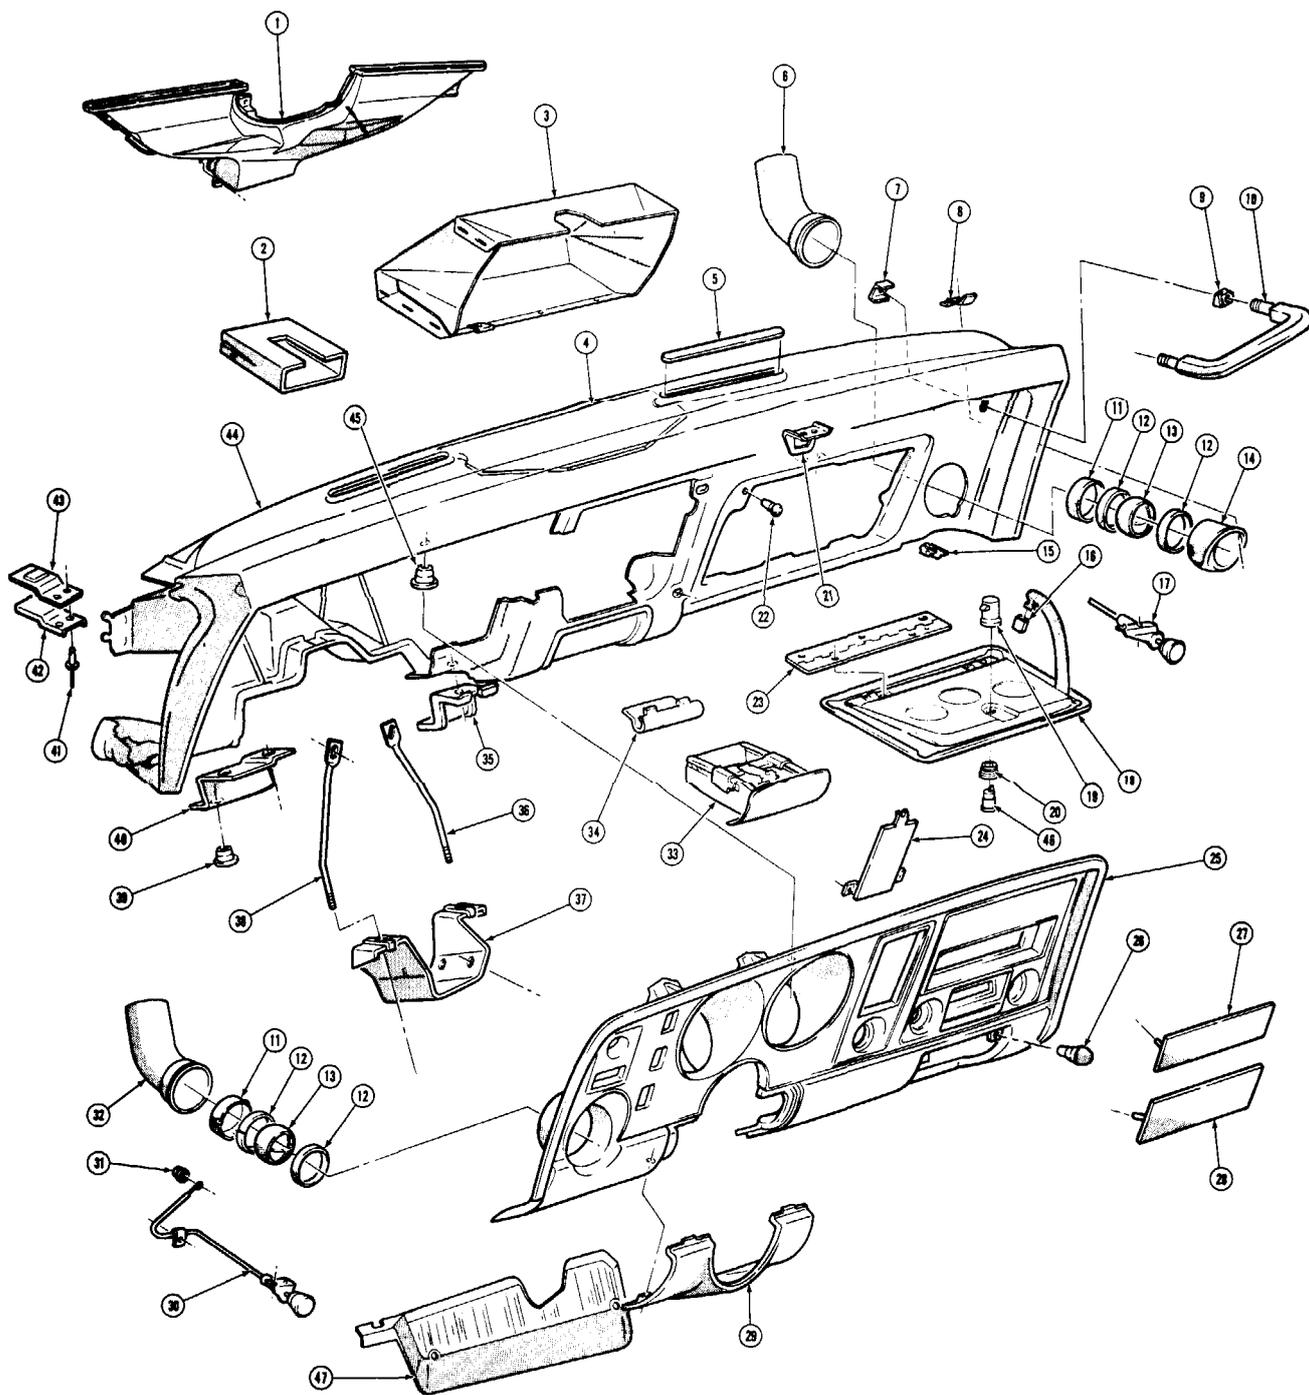

1969 FIREBIRD INSTRUMENT PANEL—PART I


1969 FIREBIRD INSTRUMENT PANEL—PART I

Key	Part Name	Group No.
1	— NOZZLE ASM., Defroster Air.	9.779
2	— RETAINER & BRACKET, Instrument Panel Ash Tray	12.009
3	— COMPARTMENT, Instrument Panel.	10.260
4	— PLATE, Instrument Panel Speaker Opening (exc. Radio).	10.256
5	— PLATE, Instrument Panel Defroster Opening (exc. Heater)	10.256
6	— DUCT, Instrument Panel Side Vent - R.H.	9.786
7	— SPACER, Instrument Panel Assist Grip.	14.660
8	— RETAINER, Air Outlet Bezel	9.264
9	— BEZEL, Instrument Panel Assist Grip.	14.660
10	— HANDLE AND PAD, Instrument Panel Assist Grip	14.660
11	— ADAPTER, Instrument Panel Side Vent Deflector	9.786
12	— SEAL, Air Side Outlet Bezel.	9.264
13	— DEFLECTOR, Air Side Outlet	9.264
14	— BEZEL, Air Outlet Nozzle.	9.264
15	— NUT, Bezel to Instrument Panel (#8-18 "U")	8.921
16	— BUMPER, Instrument Panel Compt. Door Stop	10.268
17	— CONTROL, Upper Level Air Vent - R.H.	9.787
18	— DOOR ASM., Instrument Panel Compartment	10.261
19	— CASE & BOLT, Compartment Door Lock	10.266
20	— ESCUTCHEON, Inst. Panel Compartment Door Knob	10.267
21	— STRIKER, Instrument Panel Compt. Door Lock	10.268
22	— BUMPER, Instrument Panel Compt. Door.	10.268
23	— HINGE, Instrument Panel Compt. Door	10.262
24	— PLATE, Instrument Panel Clock Opening (Exc. Clock).	10.256
25	— PLATE, Instrument Panel	10.252
26	— BUMPER, Instrument Panel Ash Tray	12.009
27	— PLATE, Heater Opening Cover (exc. Heater)	10.256
28	— PLATE, Radio Opening Cover (exc. Radio).	10.256
29	— COVER, Steering Column Opening.	6.760
30	— CONTROL, Upper Level Air Vent - L.H.	9.787
31	— NUT, Air Outlet Control to Valve.	9.789
32	— DUCT, Instrument Panel Side Vent - L.H.	9.786
33	— ASH TRAY ASM., Instrument Panel.	12.009
34	— GUARD, Ash Tray Opening	12.009
35	— BRACKET, Inst. Panel Trim Plate Mtg. - Inner	10.252
36	— SUPPORT, Steering Column - Inner	6.760
37	— BRACKET, Steering Column Support	6.760
38	— SUPPORT, Steering Column - Outer.	6.760
39	— NUT, Trim Pad to Plate (Plastic)	10.252
40	— BRACKET, Inst. Panel Trim Plate Mtg. - Outer	10.252
41	— RIVET, Reinforcement Plate	N.S.
42	— REINFORCEMENT, Identification Plate.	N.S.
43	— PLATE, Identification	N.S.
44	— PLATE, Instrument	10.230
45	— NUT, Trim Pad to Bracket (Plastic)	10.252
46	— CYLINDER, Compartment Door Lock.	10.266
47	— COVER, Strg. Gear Jacket to Dash Trim (Plastic)	6.758

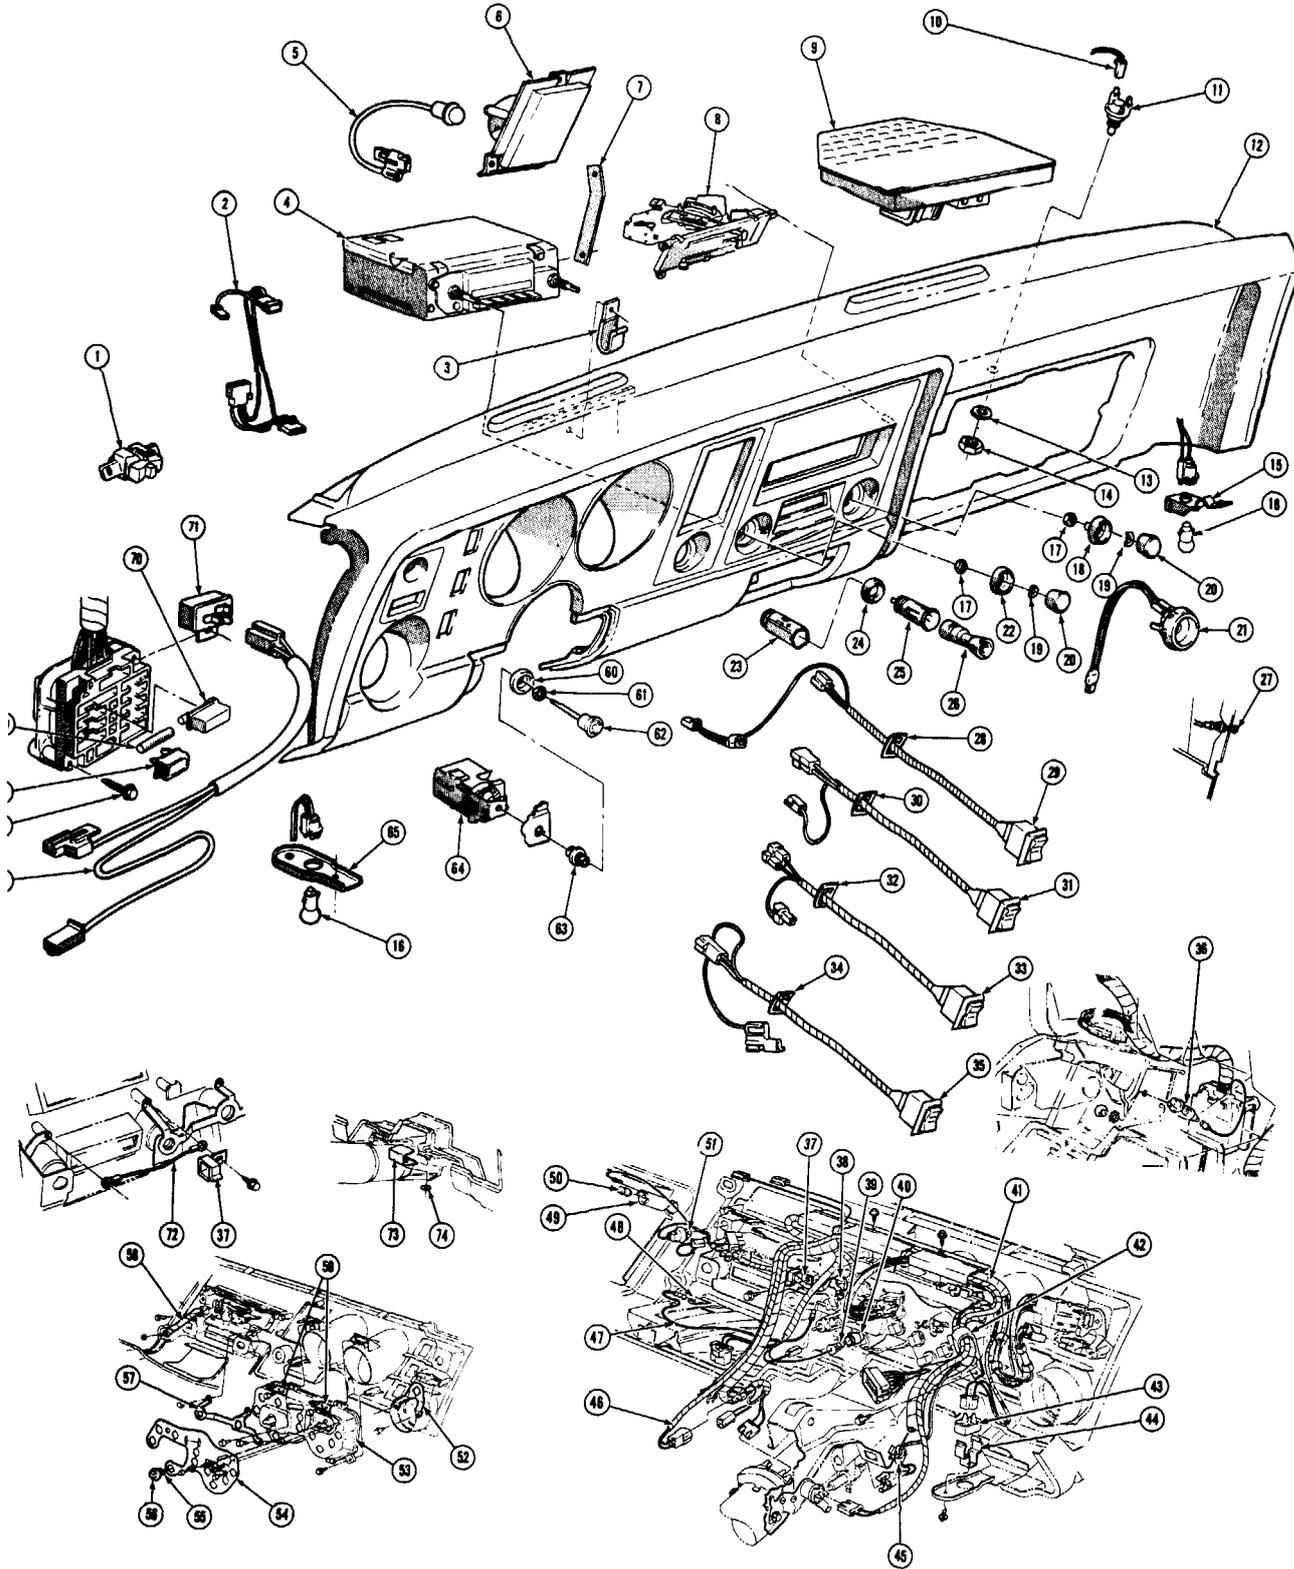**1969 FIREBIRD INSTRUMENT PANEL—PART II**

1969 FIREBIRD INSTRUMENT PANEL—PART II


Key	Part Name	Group No.
1	— SWITCH, Windshield Wiper & Washer Control	10.150
2	— WIRE, Rear Speaker Fader Control to Radio	9.665
3	— CLIP, Main Wire Harness to Firewall	2.482
4	— RECEIVER & ADAPTER, (Serviced in Accessory Package Only)	
5	— WIRE ASM., Clock Light	9.772
6	— CLOCK ASM., Instrument Panel	9.772
7	— BRACKET, Radio Receiver Mounting	9.667
8	— CONTROL, Heater	8.849
9	— SPEAKER & BRACKET, Front	9.650
10	— WIRE, Electric Deck Lid Release to Switch	12.243
11	— SWITCH, Rear Compt. Lid Release	12.243
12	— PANEL, Instrument	10.230
13	— WASHER, Switch to Inst. Panel Compt.	12.243
14	— NUT, Switch to Inst. Panel Compt.	12.243
15	— SUPPORT, Inst. Panel Courtesy Lamp	10.275
16	— BULB, Inst. Panel (#631)	8.991
17	— NUT, Radio Receiver to Trim Plate	9.667
18	— BEZEL, Radio Selector Knob	9.649
19	— WASHER, Radio Knobs	9.647
20	— KNOB, Radio Tuning and Volume	9.649
21	— KNOB ASM., Rr. Speaker Wire & Fader Control	9.649
22	— KNOB, Radio Tone Control	9.649
23	— RETAINER, Cigar Lighter (Rochester)	9.709
24	— BEZEL, Cigar Lighter	9.709
25	— HOUSING, Cigar Lighter	9.709
26	— KNOB, ELEMENT & SHIELD, Cigar Lighter	9.709
27	— SWITCH, Door Jamb	11.950
28	— CLIP, Rear Speaker Switch	9.665
29	— SWITCH & WIRE, Rear Seat Speaker	9.665
30	— CLIP, Power Antenna Switch Retaining	9.647
31	— SWITCH & WIRE, Power Antenna	9.647
32	— CLIP, Top Control Switch	14.483
33	— SWITCH & WIRE, Power Top or Window Defogger	9.778 - 14.483
34	— CLIP, Power Flo Vent Switch	9.790
35	— SWITCH & WIRE, Power Flo Ventilation	9.790
36	— SWITCH & BRACKET ASM., Parking Brake Alarm	4.589
37	— CLIP, Inst. Panel Wire Retainer	2.482
38	— SOCKET & BRACKET ASM., Ash Tray Lamp	12.009
39	— BULB, Instrument Panel (#1445)	8.991
40	— HOOD, Cigar Lighter Lamp	9.709
41	— HARNESS, Instrument Panel Wire	2.480
42	— CLIP, Inst. Panel Wire Harness	2.482
43	— FLASHER, Directional Signal	2.892
44	— CLIP, Directional Signal Flasher Mtg.	2.892
45	— CLIP, Inst. Panel Wire Harness	2.559
46	— WIRE, Trans. Neutralizer Switch	4.054
47	— LIGHT GUIDE, Ash Tray	2.480
48	— RETAINER, Ash Tray Fiber Optic Guide	12.009
49	— SWITCH, Inst. Panel Compt.	10.275
50	— BULB, Instrument Panel (#1891)	8.991
51	— BULB, Instrument Panel (#1895)	8.991
52	— STRAP, Instrument Panel Ground	9.735
53	— CASE, Instrument Cluster	9.743
54	— PANEL, Printed Wiring	2.480
55	— BULB, Instrument Cluster (#194)	8.991
56	— SOCKET, Illumination Lamp	9.743
57	— STRAP, Instrument Panel Ground	9.743
58	— STRAP, Heater Control Ground	8.852
59	— BRACKET, Inst. Panel Wire Harness	2.482
60	— BEZEL, Headlamp Switch	2.487
61	— NUT, Light Switch Rod	2.487
62	— KNOB ASM., Headlamp Control Switch	2.486
63	— NUT, Headlamp Switch	N.S.
64	— SWITCH, Headlamp	2.485
65	— BRACKET, Signal Flasher and Courtesy Lamp	2.892
66	— WIRE HARNESS, Safeguard Speedo.	2.480
67	— SCREW, Fuse Block to Dash (#10-16 x 2-1/4")	N.S.
68	— FLASHER ASM., Traffic Hazard	2.575
69	— SHORTING BAR, Circuit Breaker By-Pass	10.777
70	— CIRCUIT BREAKER, Power Window	10.777
71	— BUZZER ASM., Safeguard Speedo.	9.762
72	— STRAP, Cluster Ground (Exc. Heater)	9.743
73	— INSULATOR, Cluster Reinforcement to Support	6.760
74	— NUT, Insulator to Support (3/8"-16)	N.S.

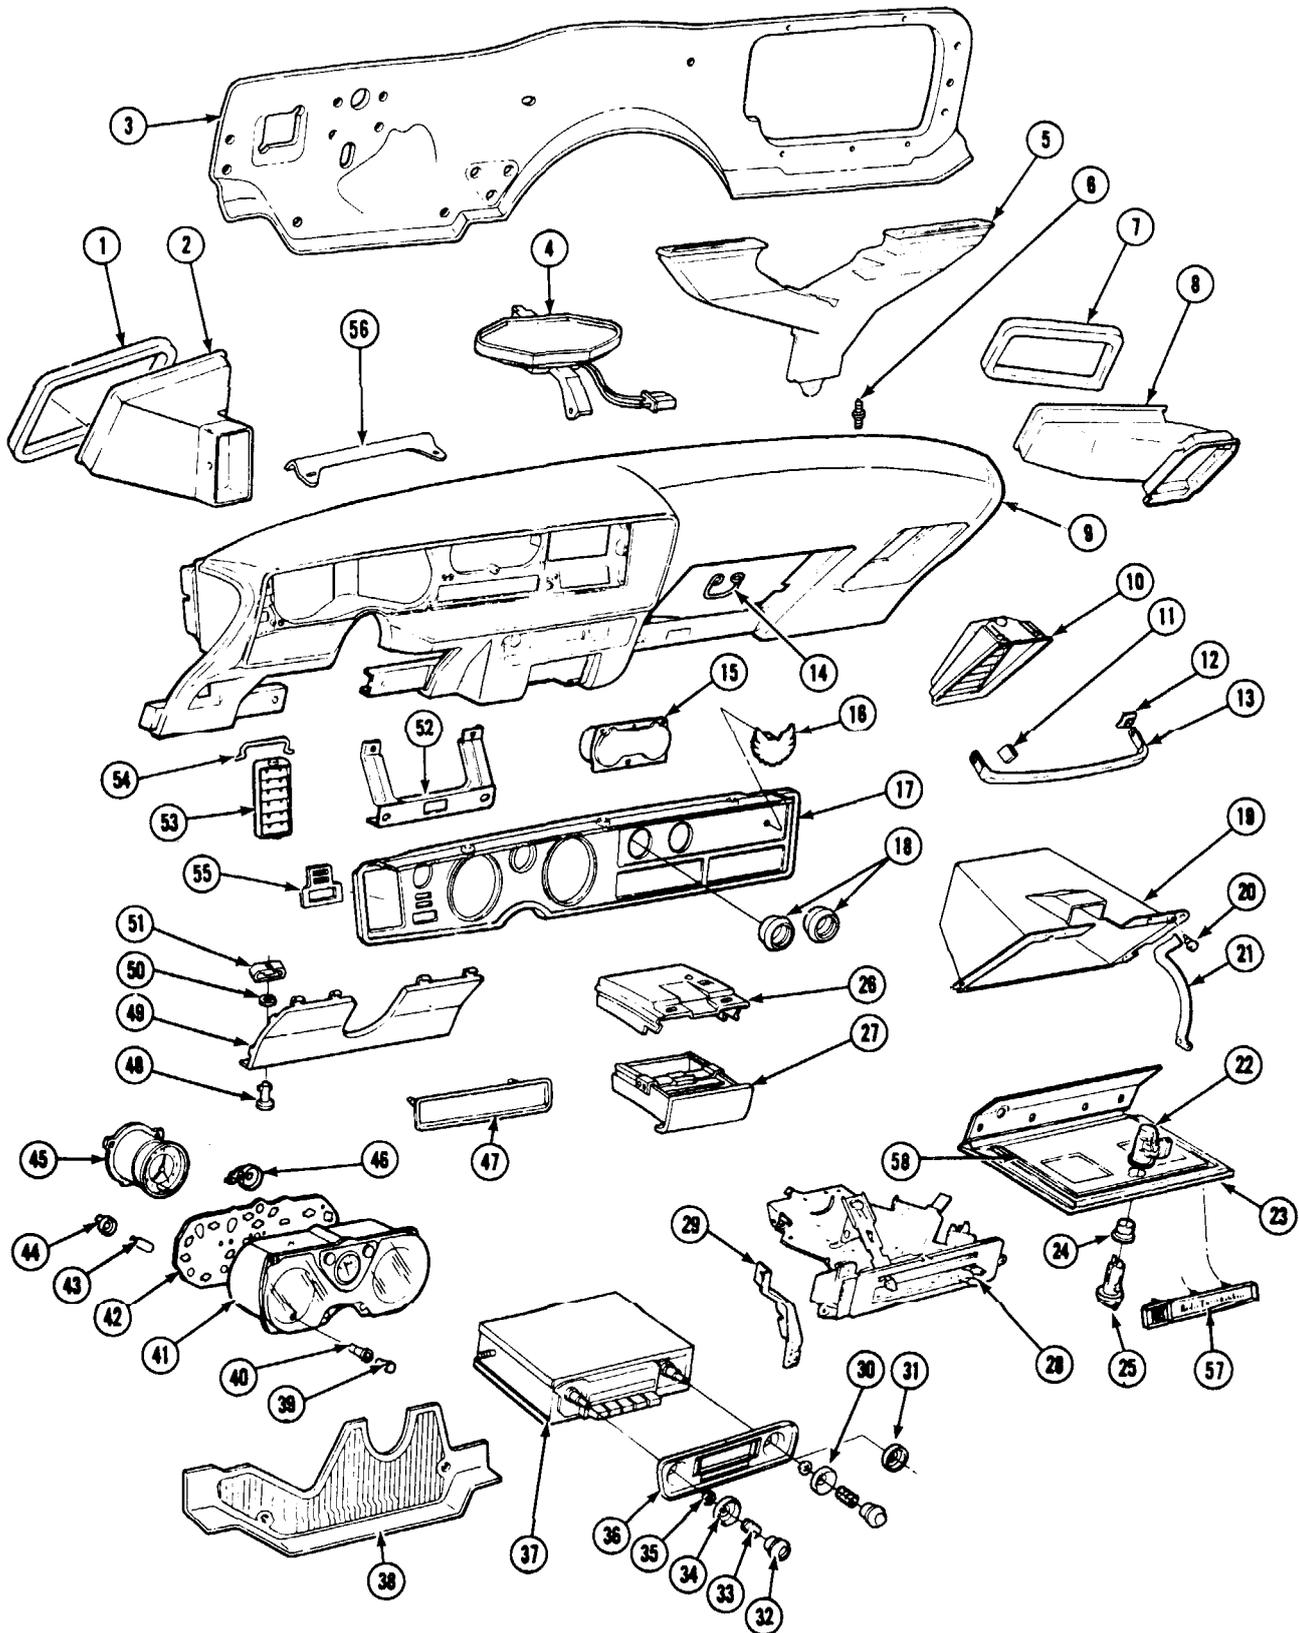

1970-76 FIREBIRD INSTRUMENT PANEL — PART I

1970-76 FIREBIRD INSTRUMENT PANEL — PART I

1. SEAL, Inst. Panel Side Vent Duct-LH	9.784
2. DUCT, Inst. Panel Side Vent-LH	9.784
3. MAT, Dash	15.280
4. SPEAKER, Radio-Front	9.650
5. NOZZLE, Defroster Air	9.779
6. CLIP PKG., Inst. Panel Pad	14.655
7. SEAL, Inst. Panel Side Duct Vent	9.784
8. DUCT, Inst. Panel Side Vent-RH	9.784
9. PAD, Instrument Panel	14.655
10. DEFLECTOR, Outer Air-RH	9.262
11. SLEEVE, Inst. Panel Compt. Door Stop	10.268
12. BEZEL, Inst. Panel Assist Grip (Black)	14.660
13. HANDLE, Inst. Panel Assist Grip (Black)	14.660
14. STRIKER, Inst. Panel Compt. Door Lock	10.268
15. GAUGE, Rally (Use Components)	N.S.
16. EMBLEM, Inst. Panel Plate	10.254
17. PLATE, Instrument Panel	10.252
18. BEZEL, Inst. Panel Trim Plate Opening	10.252
19. COMPARTMENT, Instrument Panel	10.260
20. BUMPER, Inst. Panel Compartment Door	10.268
21. STOP, Inst. Panel Compt. Door	10.268
22. CASE & BOLT, Compartment Door Lock	10.266
23. DOOR, Inst. Panel Compt. (Black)	10.261
24. ESCUTCHEON, Inst. Panel Door Knob	10.267
25. CYLINDER, Compartment Door Lock	10.266
26. RETAINER, Inst. Panel Ash Tray	12.009
27. TRAY AND DOOR, Inst. Panel Ash	12.009
28. CONTROL, Heater	8.849
29. BEZEL, Radio Tone Control Knob	9.649
30. BEZEL, Radio Tuning Knob	9.649
31. BEZEL, Rear Speaker Fader Knob	9.649
32. KNOB, Radio Tuning & Volume	9.649
33. SPRING, Radio Knobs	9.647
34. BEZEL, Balance Knob	9.649
35. NUT, Radio Receiver to Trim Plate	9.667
36. PLATE, Radio Opening Trim	10.256
37. RECEIVER & ADAPTER, Radio-(Serviced in Accessory Pkg. Only)	
38. COVER, Steering Gear Jacket to Dash Trim	6.758
39. RETAINER, Clock Reset Knob	9.772
40. KNOB, Clock Reset	9.772
41. CASE, Instrument Cluster	9.743
42. PANEL, Printed Wiring Circuit	9.744
43. BULB, Instrument Cluster (#194)	8.991
44. SOCKET, Illumination Lamp	9.744
45. CLOCK, Instrument Panel (Exc. Rally Gauge)	9.772
46. SOCKET, Illumination Lamp	9.744
47. SUPPORT, Heater, A.C. & Radio Receiver	8.852
48. STUD, Inst. Panel Strg. Col. Cover to Pad (Plastic)	6.760
49. COVER, Inst. Panel Strg. Col. Opening (Plastic)	6.760
50. RETAINER, Inst. Panel Strg. Col. Cover to Pad (Plastic)	6.760
51. RECEPTACLE, Inst. Panel Strg. Col. Cover to Pad (Plastic)	6.760
52. SUPPORT, Instrument Panel Lower	10.230
53. DEFLECTOR, Air Side Outlet-LH	9.262
54. RETAINER, Inst. Panel Side Vent Deflector-LH	9.262
55. LENS, Headlamp and Washer Switch	2.487
56. SUPPORT, Shroud Upper Panel to Inst. Panel Retainer	12.804
57. PLATE, Inst. Panel Name-"RTS"	10.254
58. PANEL, Compartment Door-Inner	10.261

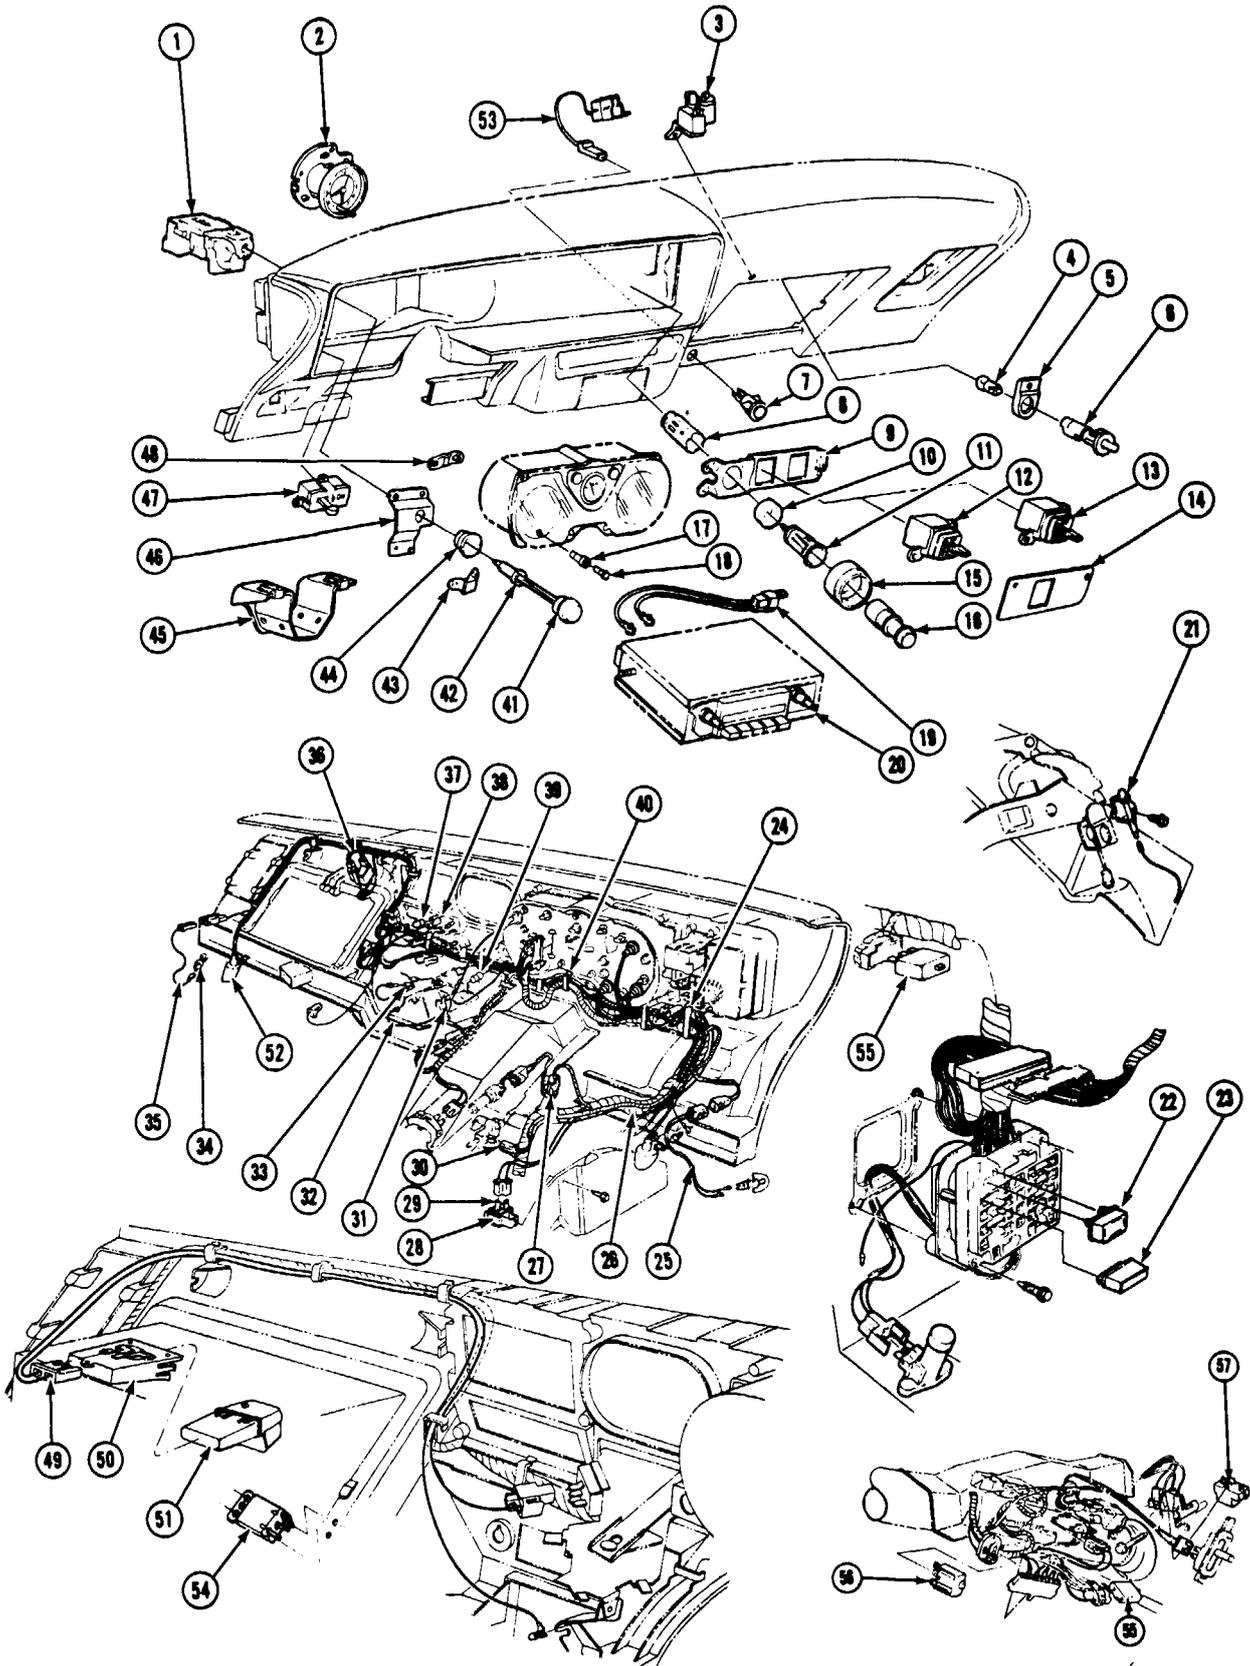


1970-76 FIREBIRD INSTRUMENT PANEL — PART 2

1970-76 FIREBIRD INSTRUMENT PANEL — PART 2

Key	Part Name	Group No.
1	— SWITCH, Headlamp	2.485
2	— CLOCK, Instrument Panel (w/Rally Gauge)	9.772
3	— RELAY, Seat Belt & Headlamp Warning	9.765
4	— BULB, Inst. Panel (#631)	8.991
5	— BRACKET, Instrument Panel Compt. Lamp	10.275
6	— SWITCH, Instrument Panel Compt. Lamp	10.275
7	— SWITCH, Rear Compt. Lid Release	12.243
8	— RETAINER, Cigar Lighter	9.709
9	— BRACKET, Cigar Lighter Mtg.	9.709
10	— RETAINER, Cigar Lighter Bezel	9.709
11	— CASE, Cigar Lighter	9.709
12	— SWITCH, Rear Window Defogger	9.778
13	— SWITCH, Electric Door Locking	10.485
14	— PLATE, Inst. Panel Switch Opening Cover	10.256
15	— BEZEL, Cigar Lighter Bezel	9.709
16	— KNOB, ELEMENT & SHIELD, Cigar Lighter	9.709
17	— KNOB, Clock Reset	9.772
18	— RETAINER, Clock Reset	9.772
19	— WIRE, Rear Speaker to Radio	9.665
20	— RECEIVER & ADAPTER, Radio (Serviced in Accessory Pkg. Only)	4.589
21	— SWITCH & BRACKET, Parking Brake Alarm	2.575
22	— FLASHER, Hazard	13.090
23	— CIRCUIT BREAKER, Fuse Block	2.482
24	— CLIP, Inst. Panel Harness to Inst. Panel (1 7/16" lg.)	13.090
25	— WIRE, Door Jamb Switch Jumper	2.480
26	— HARNESS, Instrument Panel Wire	2.482
27	— CLIP, Instrument Panel Wire Retainer	2.892
28	— CLIP, Directional Signal Flasher Mtg.	2.892
29	— FLASHER, Directional Flasher	4.054
30	— WIRE, Trans. Neutralizer Switch	2.559
31	— CLIP, Inst. Panel Wire Harness	2.480
32	— LIGHT GUIDE, Fiber Optic	12.009
33	— RETAINER, Ash Tray Fiber Optic Guide	11.950
34	— SWITCH, Door Jamb	13.090
35	— WIRE, Door Jamb Switch Jumper	9.765
36	— RELAY, Seat Belt & Headlamp Warning	8.991
37	— BULB, Instrument Panel (#1445)	9.709
38	— CASE, Cigar Lighter	8.991
39	— BULB, Instrument Panel (#1895)	2.482
40	— CLIP, Inst. Panel Wire Harness (1 1/16" lg.) (blue)	2.486
41	— KNOB, Headlamp Switch	2.487
42	— NUT, Headlamp Switch Mtg.	2.480
43	— GUIDE, W/shield Washer & Headlamp Switch Light	2.487
44	— BEZEL, Headlamp Switch	6.760
45	— BRACKET, Steering Column Support	2.487
46	— PLATE, Headlamp Switch Mtg.	10.150
47	— SWITCH, Windshield Wiper & Washer Control	2.487
48	— STRAP, Headlamp Switch Mtg. to Inst. Panel Cluster	8.890
49	— WIRE ASM., Travelite	8.890
50	— RECEPTACLE, Travelite	N.S.
51	— LAMP, Rechargeable Travelite	10.275
52	— WIRE ASM., Courtesy, Glove Box & Deck Lid Release	12.243
53	— WIRE ASM., Deck Lid Release	13.095
54	— RELAY ASM., Seat Belt Warning Isolation (M.T.)	2.195
55	— BUZZER ASM., Key Alarm & Seat Belt Warning	2.195
56	— BUZZER, Seat Belt and Starter Motor Interlock	2.195
57	— RELAY, Seat Belt and Starter Motor Interlock	2.100

MANUAL


A.T. & H.M.T.

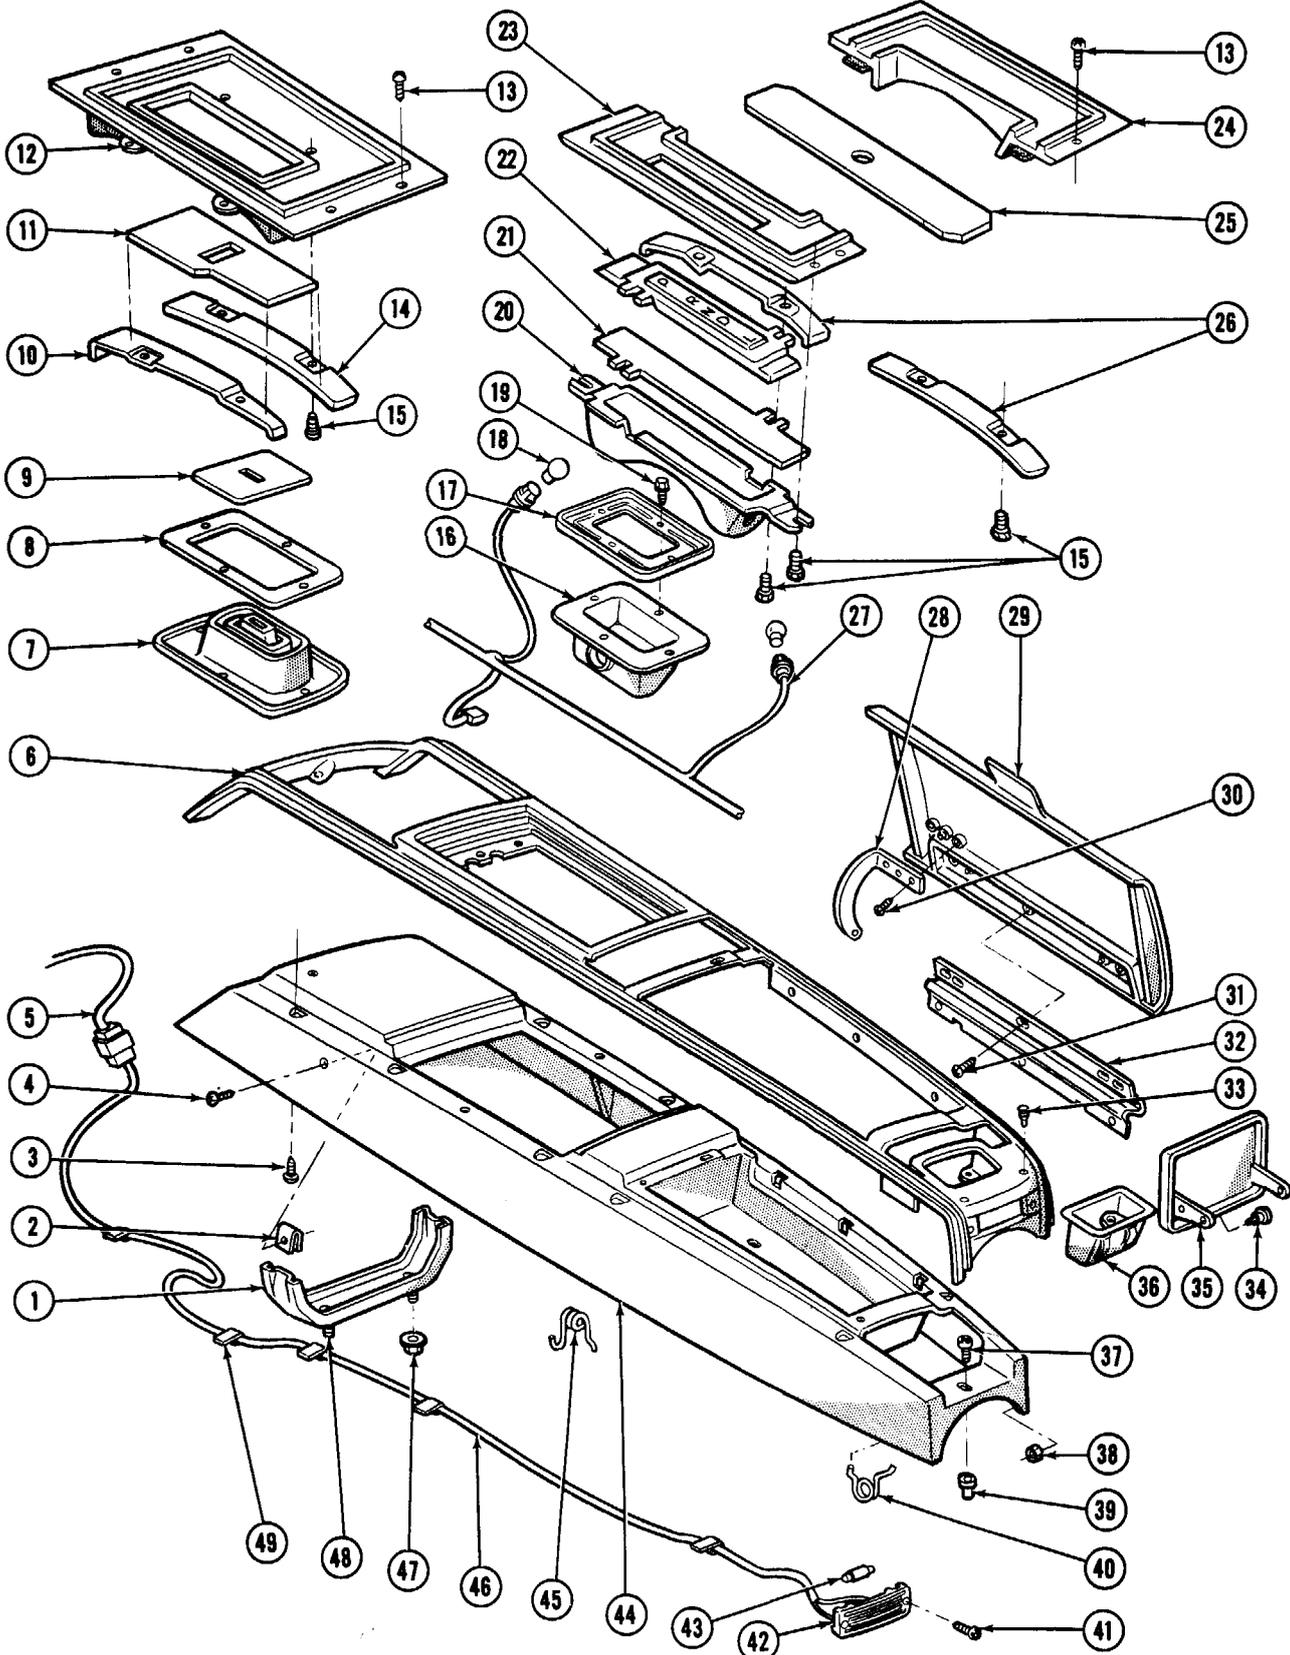

1967 FIREBIRD CONSOLE PARTS

1967 CONSOLE


Key	Description	Group
1	Bracket Assy. Console Compartment.....	10.240
2	Nut.....	Cat. 907A
3	Screw No. 8-32 x 3/8 Pan HD	S.S.
4	Screw.....	AR
5	Harness Instrument Panel.....	2.480
6	Molding Console Top.....	10.240
7	Seal Underbody Control Lever..... *Retainer 3893877 must be used with this seal	4.015
8	Retainer Underbody Control Lever Seal.....	4.015
9	Cover Underbody Control Lever Seal.....	4.015
10	Retainer Trans Control Lever Seal - Left.....	4.015
11	Seal Trans Control Lever.....	4.015
12	Plate Trans Control Lever Hole Trim.....	4.017
13	Screw.....	AR
14	Retainer Trans Control Lever Seal - Right.....	4.015
15	Screw.....	AR
16	Seal Trans Control Lever and Bracket.....	4.015
17	Retainer Trans Control Lever Bracket Seal.....	4.015
18	Bulb No. 1445	Cat. 907A
19	Screw.....	AR
20	Retainer Trans Control Indicator Dial.....	4.020
21	Plate Trans Control Indicator Dial.....	4.020
22	Dial Trans Control Indicator - AT..... -HT.....	4.020 4.020
23	Plate Trans Control Lever Hole Trim - Left.....	4.017
24	Plate Trans Control Lever Hole Trim - Right.....	4.017
25	Seal Trans Control Lever.....	4.015
26	Retainer Trans Control Lever Seal.....	4.015
27	Harness Console Compartment.....	13.090
28	Arm Console Compartment Door Spring.....	10.242
29	Door Console Compartment.....	10.242
30	Screw.....	AR
31	Screw.....	AR
32	Hinge Console Compartment Door.....	10.242
33	Bumper Console Compartment Door.....	10.242
34	Rivet Console Ash Tray Door.....	10.242
35	Door Console Ash Tray.....	10.242
36	Tray Assy. Console Ash.....	10.242
37	Screw Console or Console Bracket To Floor.....	10.242
38	Nut Console Ash Tray Cover.....	10.242
39	Nut.....	AR
40	Spring Console Ash Tray Cover.....	10.242
41	Screw.....	AR
42	Lens Console Courtesy Lamp.....	10.275
43	Bulb No. 212	Cat. 907A
44	Console Trans Floor.....	10.240
45	Spring Console Compartment Door	10.242
46	Harness Console Compartment.....	13.090
47	Use - Nut	Cat. 907A
	Washer.....	AR
48	Screw Console or Console Bracket To Floor.....	10.242
49	Clip.....	AR

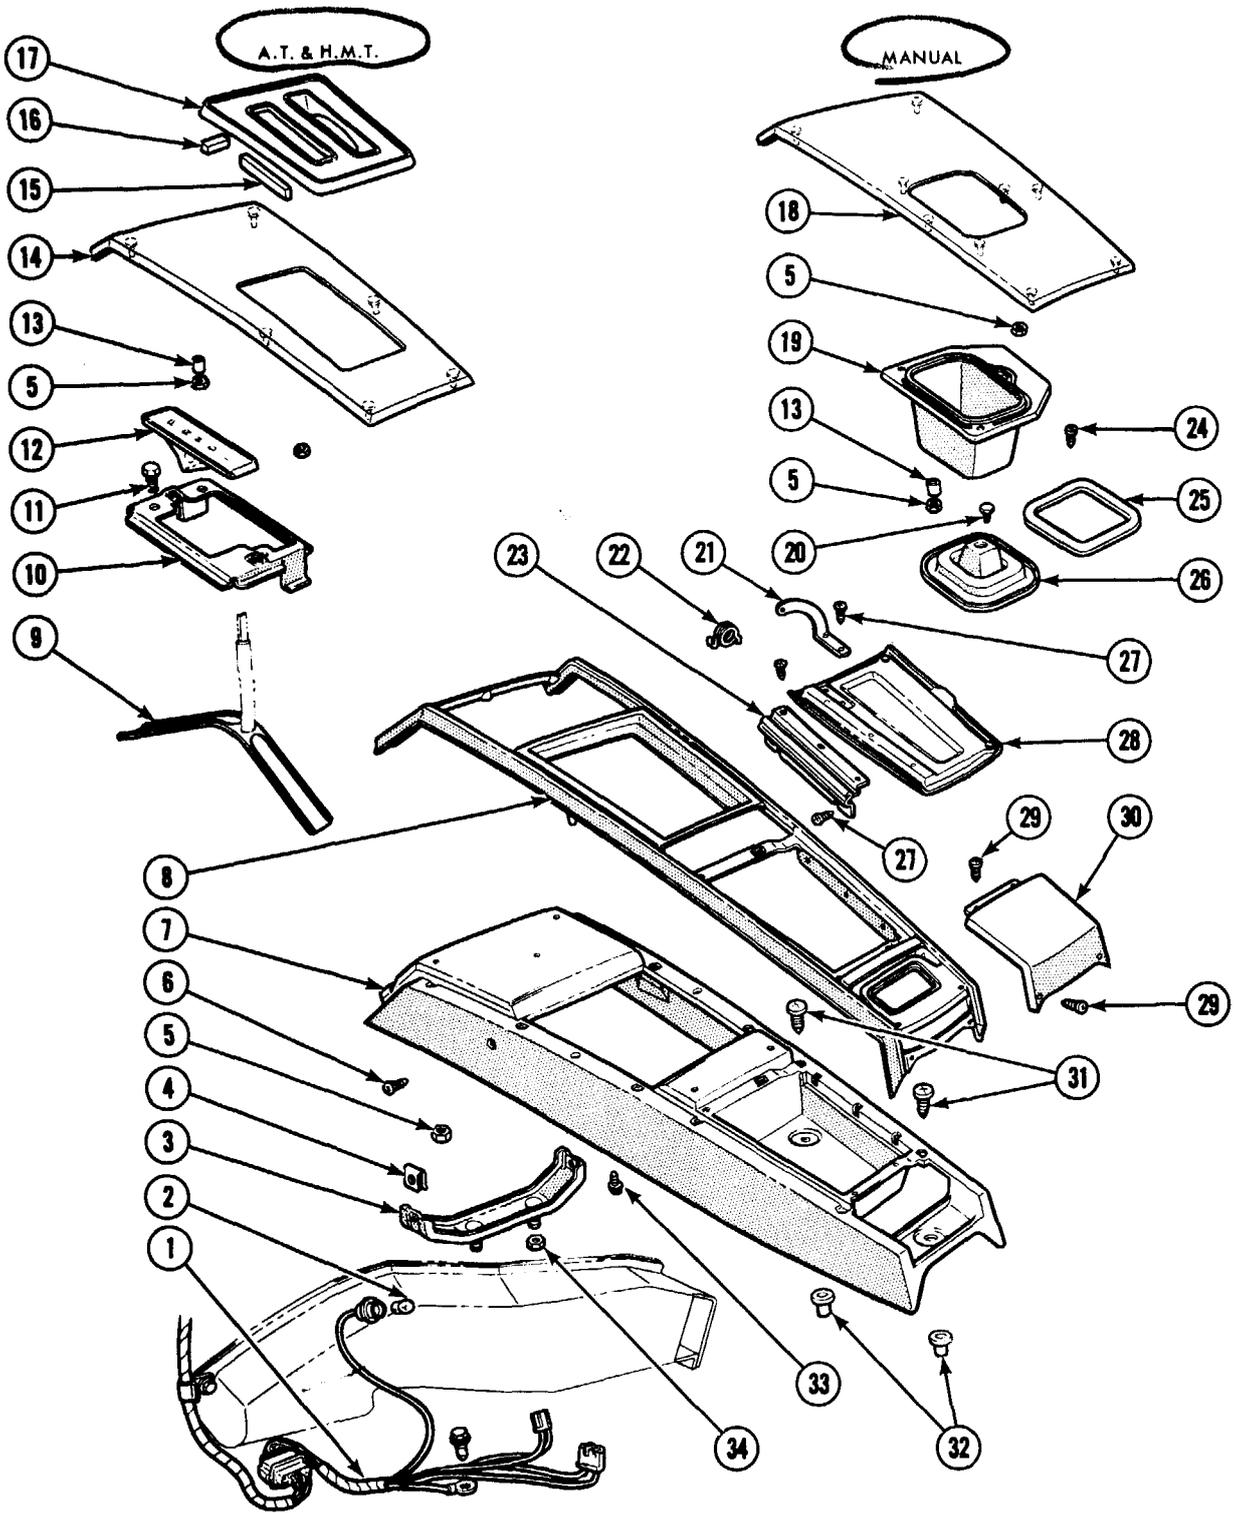


1968-69 FIREBIRD CONSOLE PARTS

1968-69 CONSOLE


Key	Description	Group
1	Harness, Console Compartment.....	13.090
2	Bulb, No. 1445 — 1968.....	Cat. 907A
	No. 1893 — 1969.....	Cat. 907A
3	Bracket Assy., Console Compartment.....	10.240
4	Nut.....	Cat. 907A
5	Nut.....	AR
6	Screw.....	AR
7	Console, Trans Floor — Paint To Match.....	10.240
8	Molding, Console Top.....	10.240
9	Seal, Trans Control Lever — 1968.....	4.015
10	Bracket, Console Gearshift Opening Escutcheon	10.240
11	Bolt.....	Cat. 907A
12	Housing Assy., Console Shift Lever Indicator	
	AT.....	4.020
	HT.....	4.020
13	Spacer, Console Insert To Molding.....	10.240
14	Insert Assy., Console—Front—With Clock — 1968..	10.240
	EXC—Clock — 1968.....	10.240
	— 1969.....	10.240
15	Seal, Console Gearshift Opening Escutcheon To Lens Side.....	10.240
16	Seal, Console Gearshift Opening Escutcheon To Lens Front.....	10.240
17	Escutcheon, Console Gearshift Opening — 1968.....	10.240
	1969 AT.....	10.240
	1969 HT.....	10.240
18	Insert Assy., Console—Front—With Clock — 1968..	10.240
	EXC Clock — 1968.....	10.240
	— 1969.....	10.240
19	Escutcheon, Console Gearshift Opening.....	10.240
20	Screw No. 8-18 x 7/8.....	S.S.
21	Arm, Console Compartment Door Spring.....	10.242
22	Spring, Console Compartment Door.....	10.242
23	Hinge, Console Compartment Door.....	10.242
24	Screw.....	AR
25	Plate, Trans Control Lever Hole Trim.....	4.017
26	Seal, Trans Shift Lever Rod To Floor.....	4.015
27	Screw.....	AR
28	Door, Console Compartment.....	10.242
29	Screw.....	AR
30	Insert Assy., Console — Rear.....	10.240
31	Screw, Console or Console Bracket To Floor.....	10.242
32	Nut.....	AR
33	Screw No. 8-32 x 1/2 HEX. HD.....	S.S.
34	Use-Nut.....	Cat. 907A
	Washer.....	AR

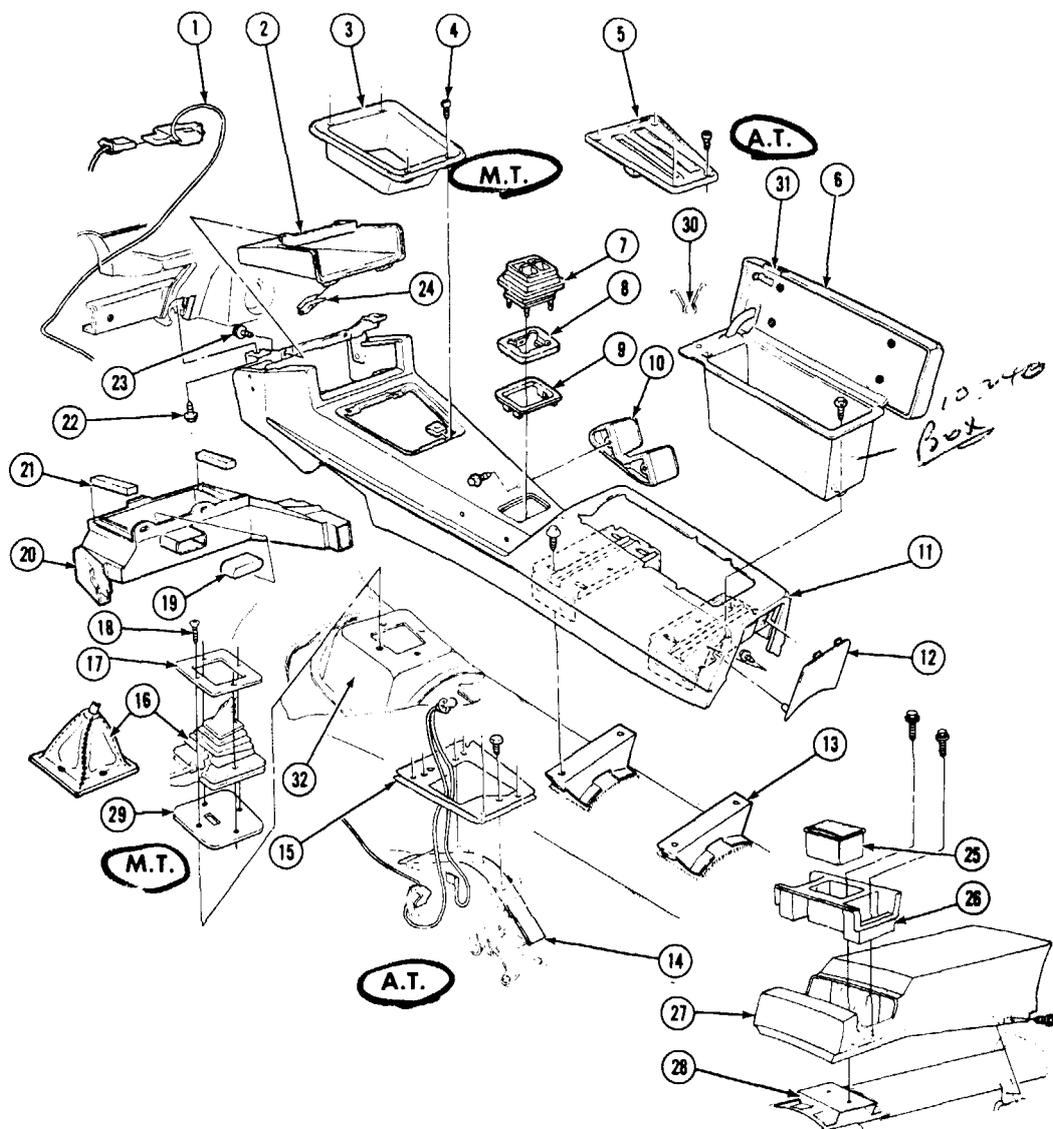
1970-76 FIREBIRD CONSOLE — TYPICAL

1. WIRE HARNESS, Console	13.090	17. PLATE, Control Lever Seal	4.015
2. MAP POCKET, Console	10.240	18. SCREW, Seat Retainer (#8—18 x 7/8") ..	N.S.
3. ESCUTCHEON, Gearshift Opening	10.240	19. SEAL, Heater Duct	9.262
4. SCREW, Escutcheon Mtg. (#8—18 x 3/8" Socket Hd.)	10.240	20. DUCT ASM., Heater Air Distributor	9.786
5. ESCUTCHEON, Gearshift Opening	10.240	21. SEAL, Air Distributor Duct	9.262
6. BOX, Compartment	10.240	22. SCREW, Console to Inst. Panel (#10—16 x 3/4")	8.977
7. SWITCH ASM., Power Window (2 Button)	10.777	23. SCREW, Console to Map Pocket (#10—16 x 1/2")	8.977
8. RETAINER, Switch Escutcheon	10.777	24. NUT, Map Pocket to Console (#10—16 "U" Shape)	N.S.
9. REINFORCEMENT, Switch	10.777	25. TRAY, Rear Seat Console Ash	10.242
10. RETAINER, Seat Belt	14.875	26. ESCUTCHEON, Rear Seat Console & Seat Belt	10.240
11. CONSOLE ASM., Trans. Floor	10.240	27. CONSOLE ASM., Trans. Floor-Rear	10.240
12. PLATE, Console Rear Cover	10.240	28. SUPPORT, Floor Pan Console	10.240
13. SUPPORT, Floor Pan to Console (Rear) ..	10.240	29. SEAL, Trans. Shift Control Lever-Lwr. ...	4.015
14. SEAL, Trans. Shift Lever	4.015	30. SPRING, Compt. Door Hold-Open	10.242
15. BRACKET, Console to Shifter Housing ..	10.240	31. LATCH, Compt. Door Lock	10.268
16. SEAL, Trans. Shift Control Lever-Upr. ...	4.015	32. COVER, Floor Pan Trans. Opng.	12.980

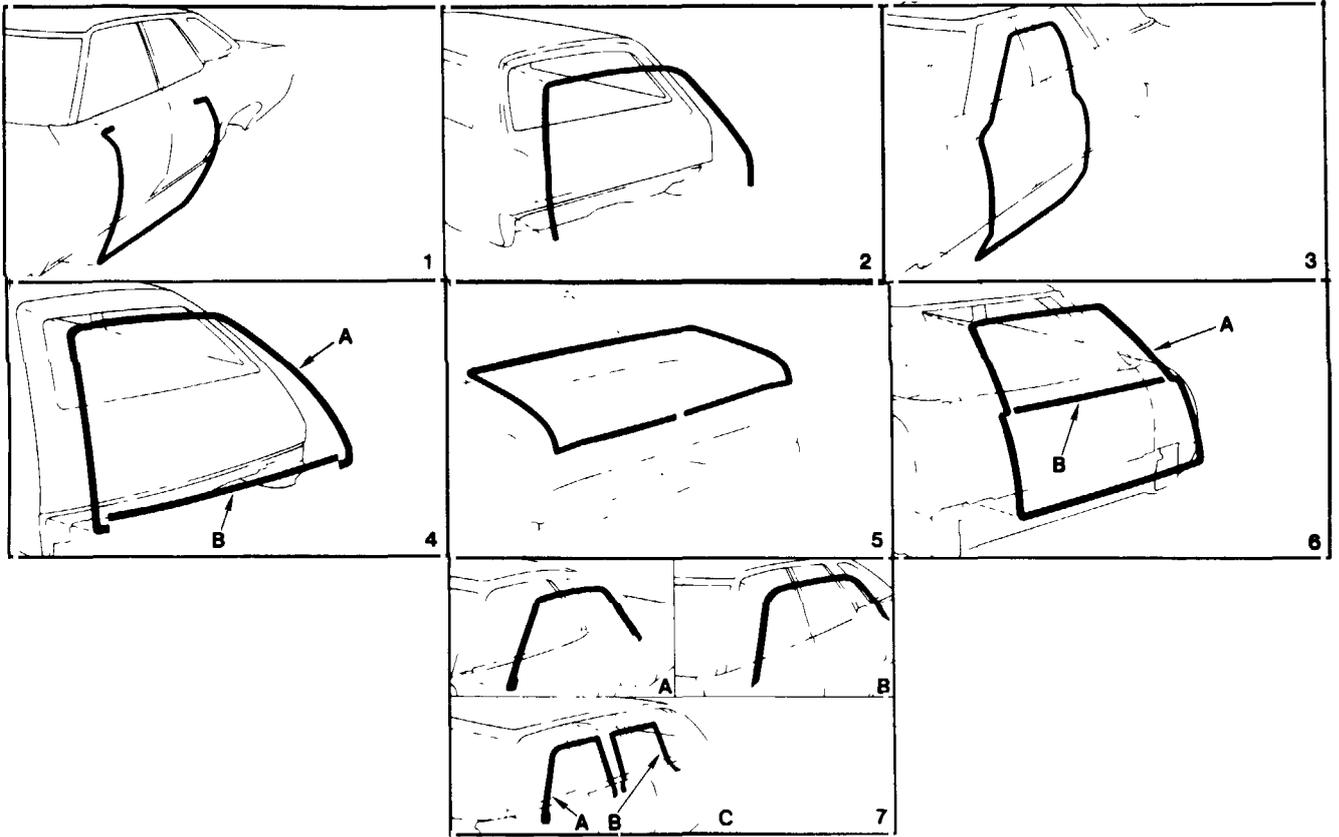
1976 TYPICAL WEATHERSTRIPS

Key	Styles	Description	Group	Key	Styles	Description	Group
1	A-29, 35, 37, 57, 80 B-39, 49, 47, 57 C-37, 47, 39, 49, 69 D-23, 33 E-57, 87, 67 F-87	WEATHERSTRIP ASSY., Front Door	10.694	6	B-35, 45	a. WEATHERSTRIP, Tailgate Opening — Complete	12.269
2	H-05, 15	WEATHERSTRIP ASSY., Back Door Body Side	12.269	7A	All Coupes	b. WEATHERSTRIP, Tailgate—at Belt WEATHERSTRIP ASSY., Side Roof Rail	12.269
3	B-35, 45, 69 X-ALL H-All TB08 KS69	WEATHERSTRIP ASSY., Front Door	10.694	7B	B-39, 49 C-39	WEATHERSTRIP ASSY., Side Roof Rail	10.721
4	A-35	a. WEATHERSTRIP, Tailgate Opening — Complete	12.269	7C	A-29, 35 C-69	a. WEATHERSTRIP, Side Roof Rail b. WEATHERSTRIP, Side Roof Rail	10.721
5	Typical All	b. WEATHERSTRIP, Tailgate—Lower WEATHERSTRIP, Compartment Lid Gutter (25 ft. roll)	12.269 12.269		D-23, 33 C 69	a. WEATHERSTRIP, Side Roof Rail — Front	10.721
					D-23, 33	b. WEATHERSTRIP, Side Roof Rail — Rear b. WEATHERSTRIP, Rear Door Window Frame	10.721 10.764

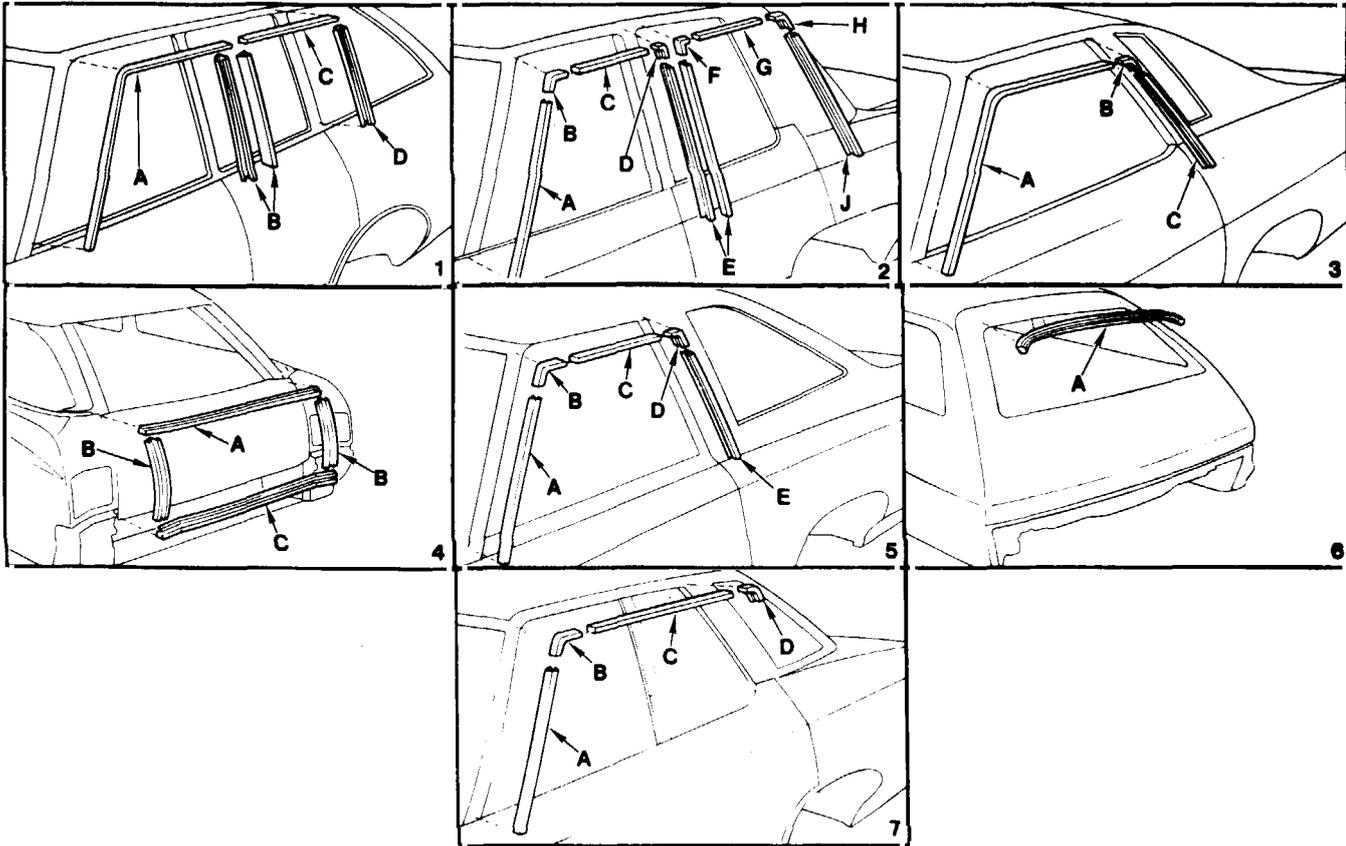

1976 TYPICAL WEATHERSTRIP RETAINERS

Key	Styles	Description	Group	Key	Styles	Description	Group
1	A-29, 35	a. RETAINER ASSY., Side Roof Rail Front	10.721	3	A-37, 57, 80 G-57	a. RETAINER, Side Roof Rail—Front	10.721
		b. RETAINER, Centre Pillar — Front and Rear	10.730			b. RETAINER, Side Roof Rail —Upper Corner (F-87 Only)	10.721
		c. RETAINER ASSY., Side Roof Rail — Rear	10.721			c. RETAINER, Body Lock Pillar — Above Belt (F-87 Only)	10.721
		d. SIDE ROOF RAIL LOCK PILLAR	10.721			RETAINER, Side Roof Rail — Rear (A-80 Only)	10.721
2	C-69 D-23, 33	a. RETAINER, Windshield Pillar Upper Corner	10.093			RETAINER, Side Roof Rail — Lock Pillar (A-37, 57)	10.721
		b. RETAINER ASSY., Windshield Pillar Upper Corner	10.093	4	B-35, 45 (Rear View)	a. RETAINER, Tail Gate — At Belt	12.269
		c. RETAINER, Side Roof Rail — Upper Front	10.721			b. RETAINER, Opening—Side—Lower	12.269
		d. RETAINER, Center Pillar Front Upper Rear Corner	10.730			c. RETAINER, Tailgate Opening — On Cross Bar	12.269
		e. RETAINER, Center Pillar Front and Rear Belt	10.730	5	B-47 C-37, 47, 39, 49	a. RETAINER, Windshield Pillar	10.093
		f. RETAINER ASSY., Center Pillar Rear Upper Front Corner (C-69)	10.730			b. RETAINER ASSY., Windshield Pillar Upper Corner	10.093
		RETAINER ASSY., Rear Door Window Frame Upper Front Corner (D-23, 33)	10.763			c. RETAINER ASSY., Side Roof Rail	10.721
		g. RETAINER ASSY., Side Roof Rail Upper Rear (C-69)	10.730			d. RETAINER ASSY., Body Lock Pillar Upper Corner	10.721
		RETAINER ASSY., Rear Door Window Frame Upper (D-23, 33)	10.763			e. RETAINER, Body Lock Pillar Upr.	10.721
		h. RETAINER ASSY., Side Roof Rail Upper Rear Corner (C-69)	10.730	6	A-35 (Rear View)	a. RETAINER, Back Body Opening — Upper	12.269
		RETAINER ASSY., Rear Door Window Frame Upper Rear Corner (D-23, 33)	10.763			a. RETAINER, Windshield Pillar	10.093
		i. RETAINER, Side Roof Rail Lower Rear (C-69)	10.721	7	B-39, 57	b. RETAINER ASSY., Windshield Pillar Upper — Corner	10.093
		RETAINER, Rear Door Window Frame Rear (D-23, 33)	10.764			c. RETAINER ASSY., Side Roof Rail	10.721
						d. RETAINER ASSY., Body Lock Pillar — Upper Corner	10.721